




# THORN

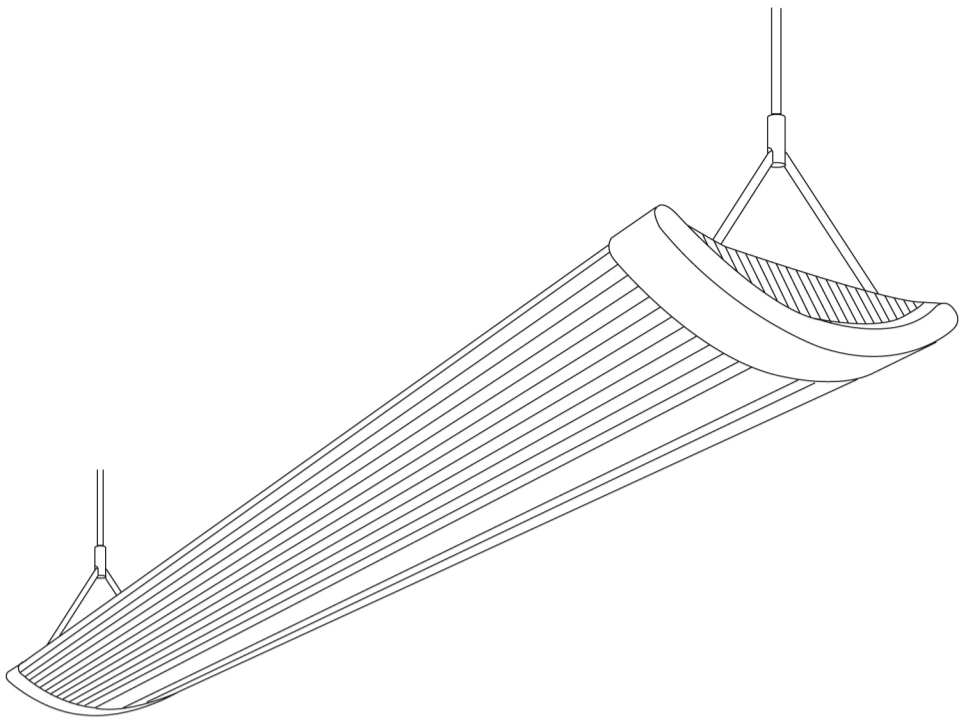

## IQ WAVE SUSPENDED

CE IP20

- [CZ] Montážní návod
- [DE] Montageanleitung
- [DK] Monteringsvejledning
- [EE] Paigaldusjuhend
- [FI] Asennusohje
- [FR] Notice de montage
- [HU] Szerelési útmutató
- [IT] Istruzioni di montaggio

- [LT] Montavimo Instrukcijos
- [LV] Instalācijas instrukcija
- [NO] Monteringsanvisning
- [PL] Instrukcja montażu
- [RU] Инструкция по монтажу
- [SE] Installationsanvisning
- [UK] Installation Instructions

1

DO NOT REMOVE FILM

x x4

2 3 4 7

?

2 3 5 6? 7 4

?

2

!

3

1450mm MAX

90°

880mm

7mm MIN  
8.5mm MAX

4

i





ii

iii




3mm

?



5 Optic Fitting

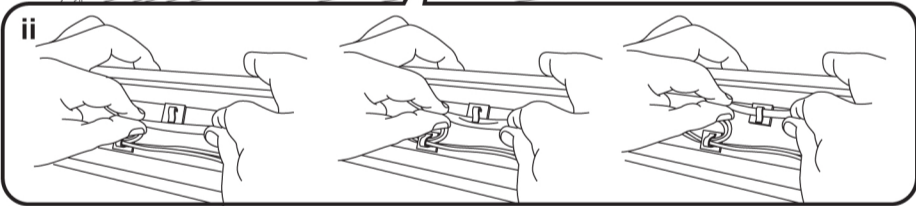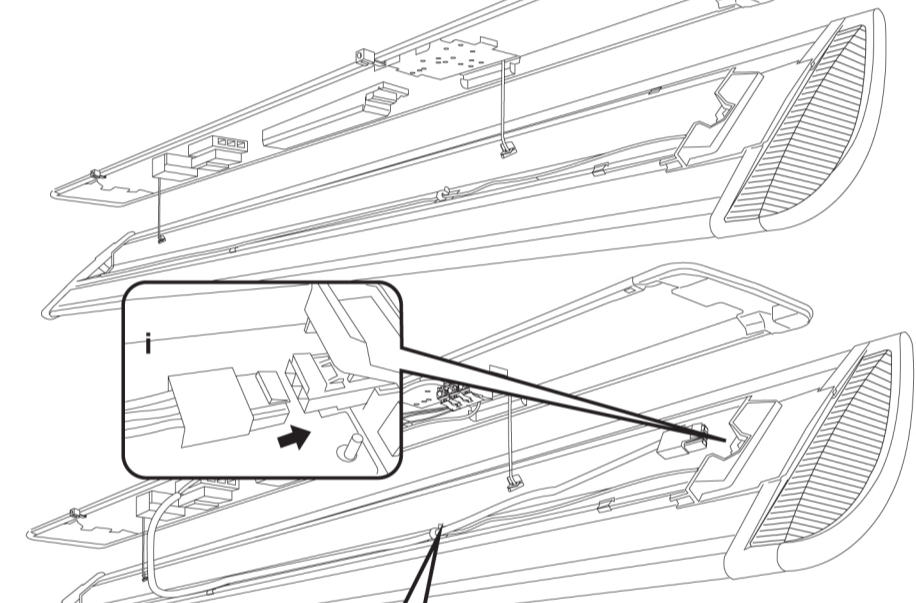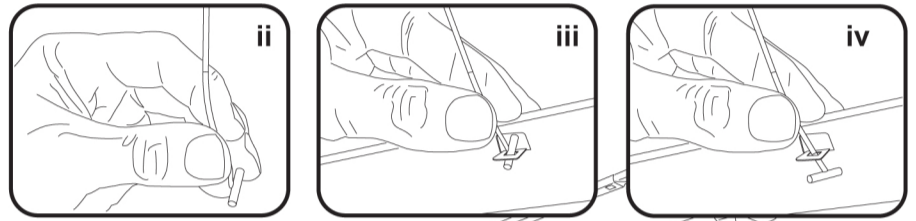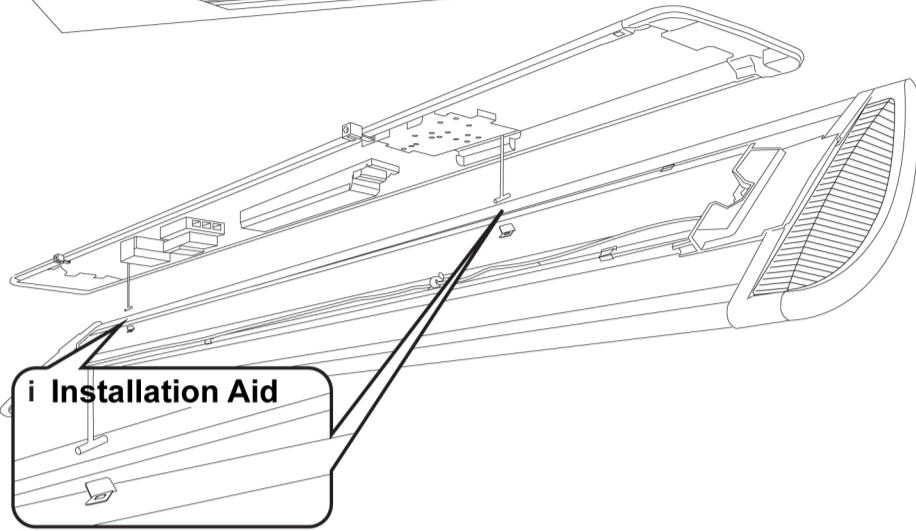







6 HFSX ?

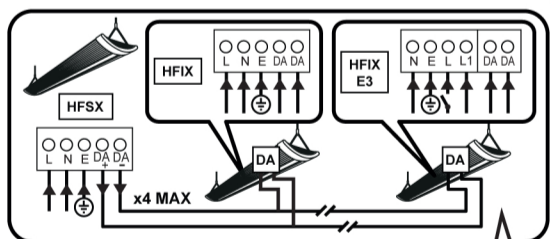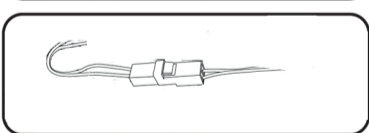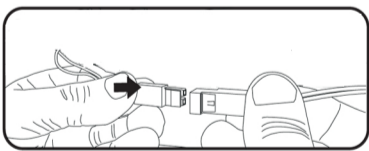

MWS ?

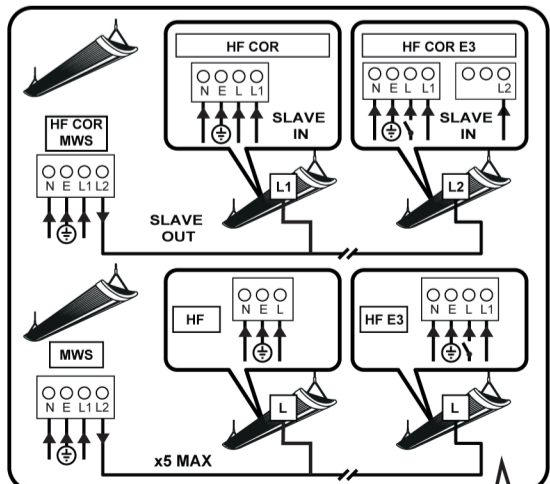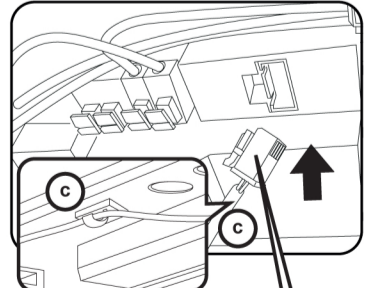

7 Close Geartray

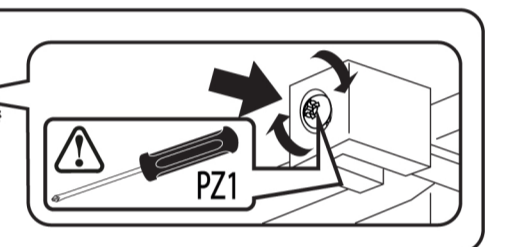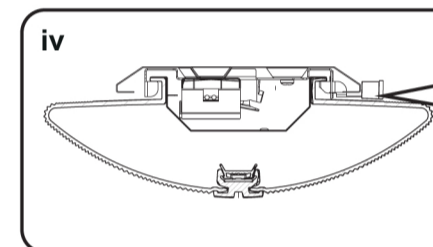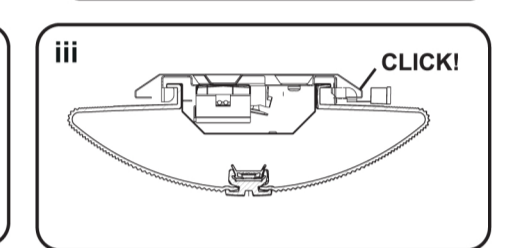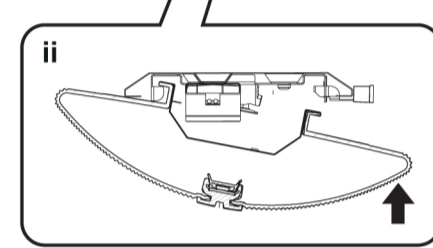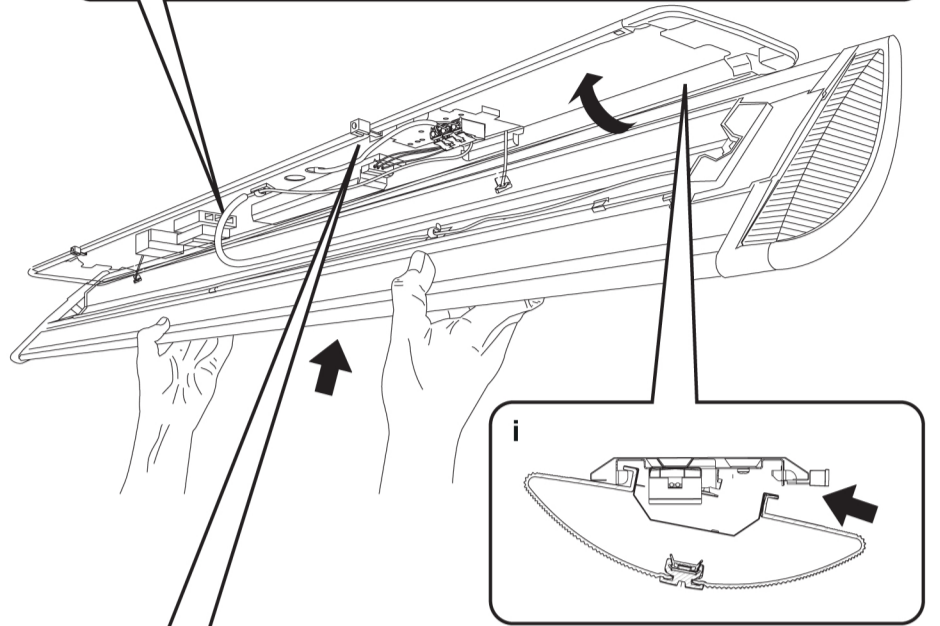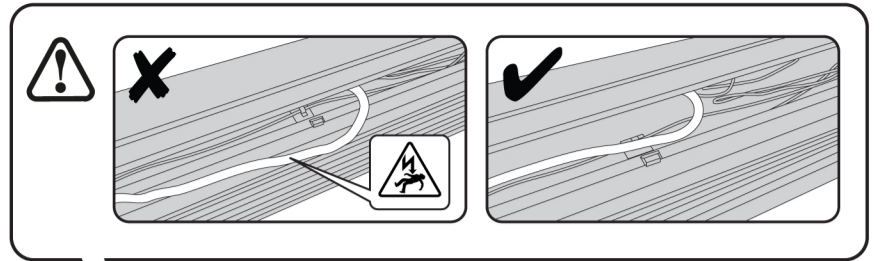

8 Open Geartray

