

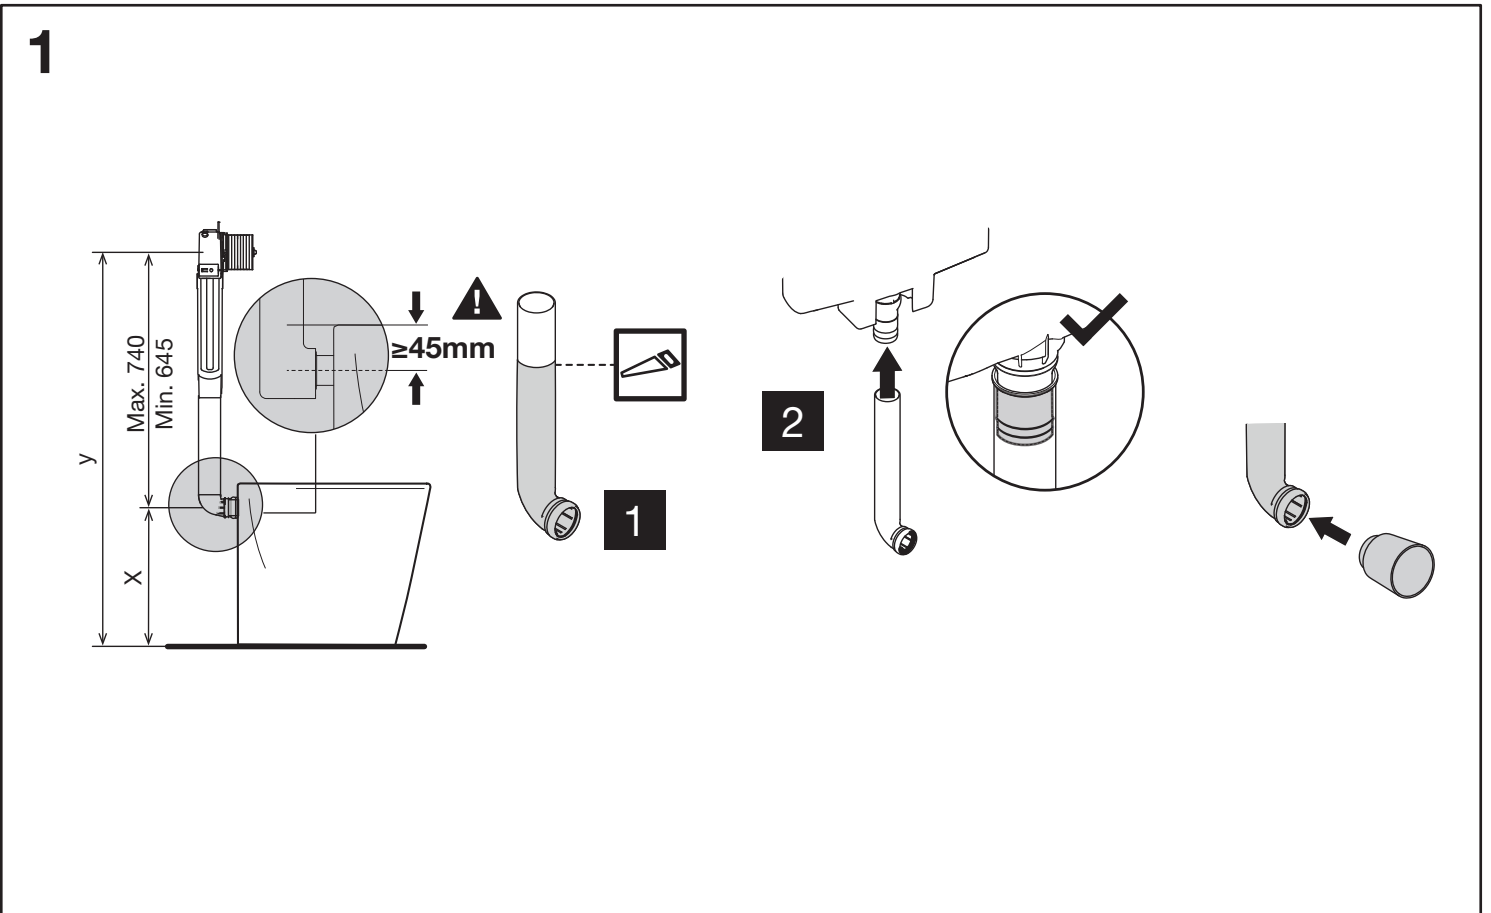
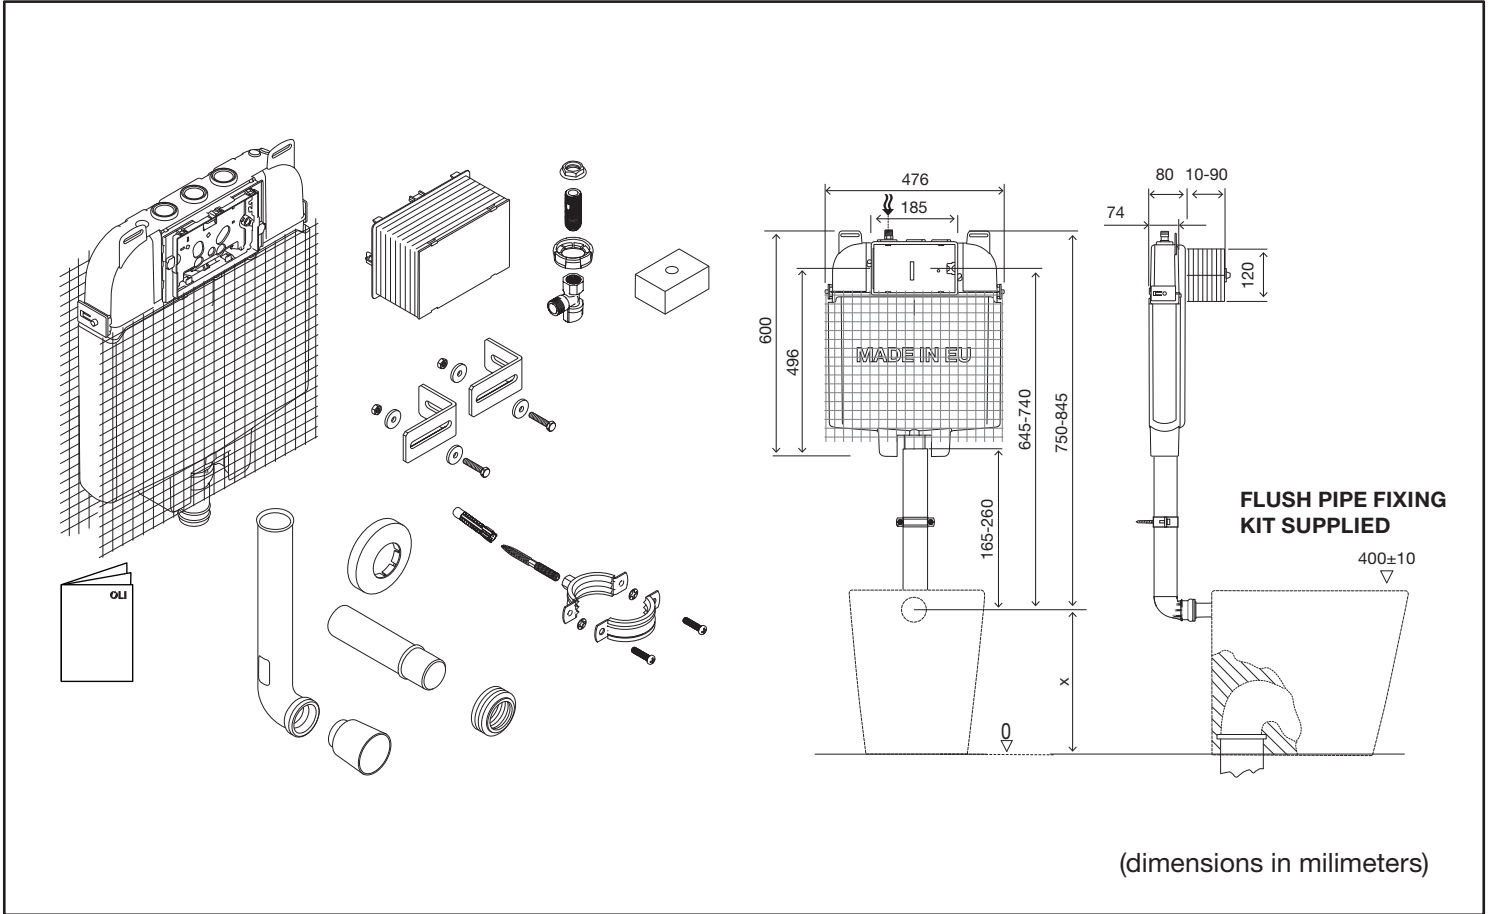
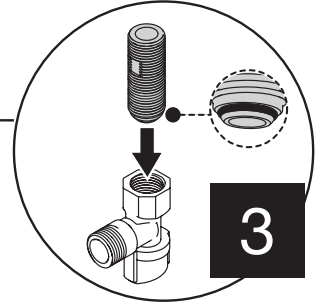
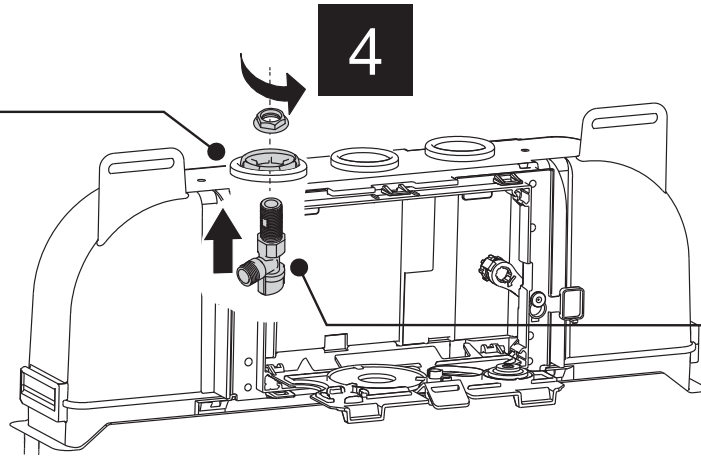


# OLI74 PLUS


AU - NZ

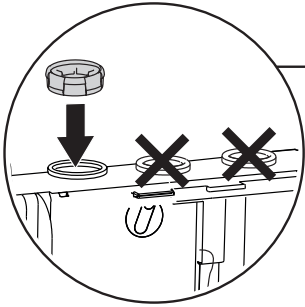


2

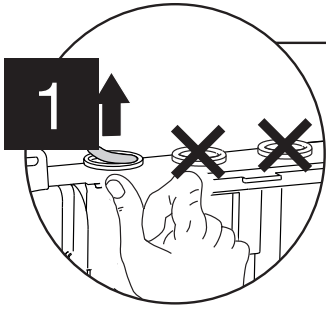


3

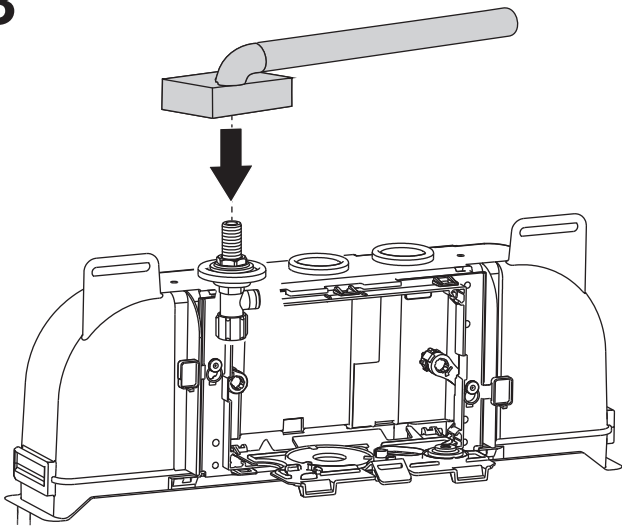


4

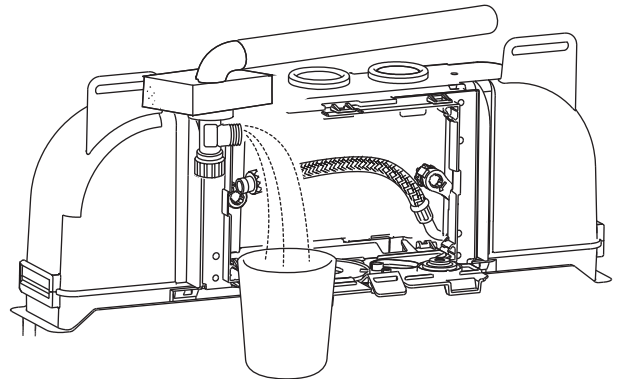


5

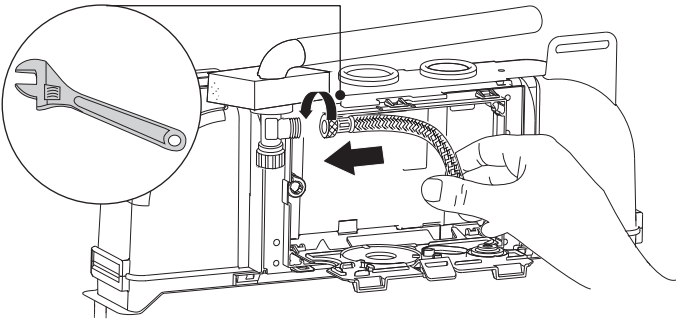

6

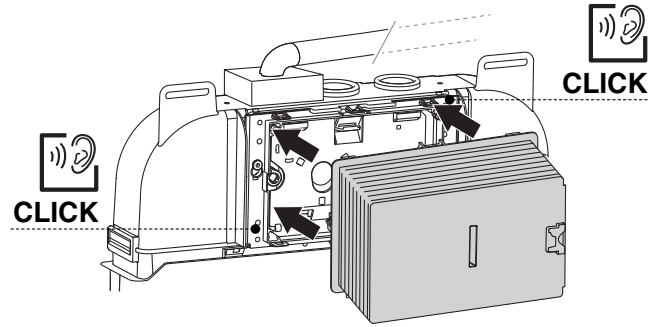


7

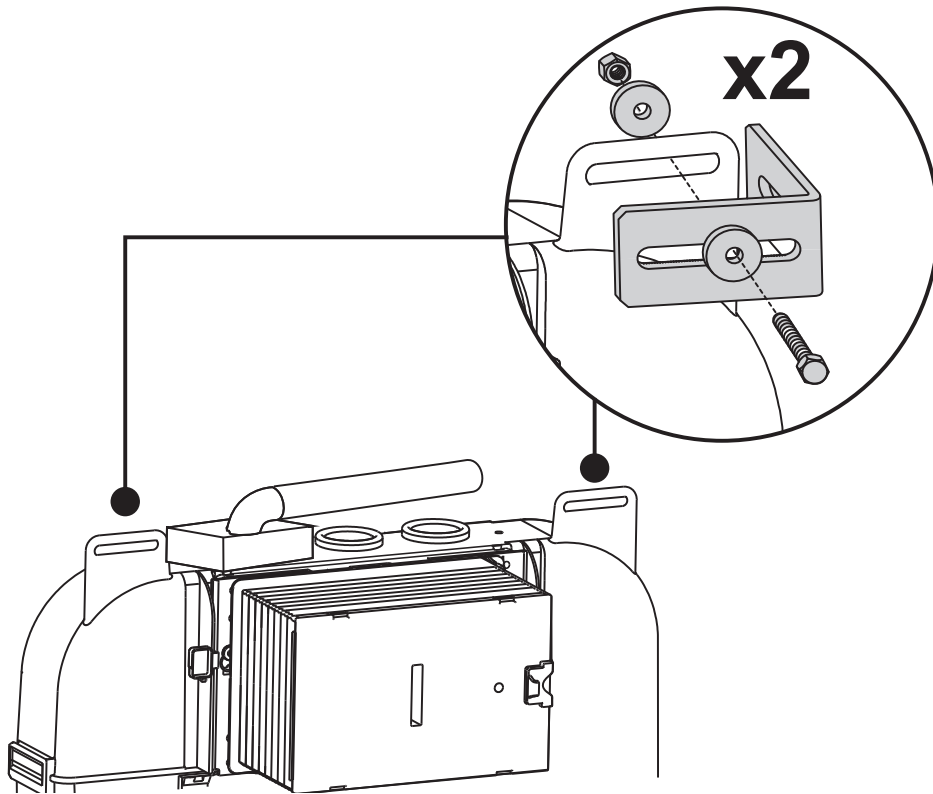







# FOR TIMBER/STUD WALL INSTALLATIONS

**IF CAVITY EXCEEDS 90MM THE BACK OF THE TANK WILL REQUIRE SUPPORTING**

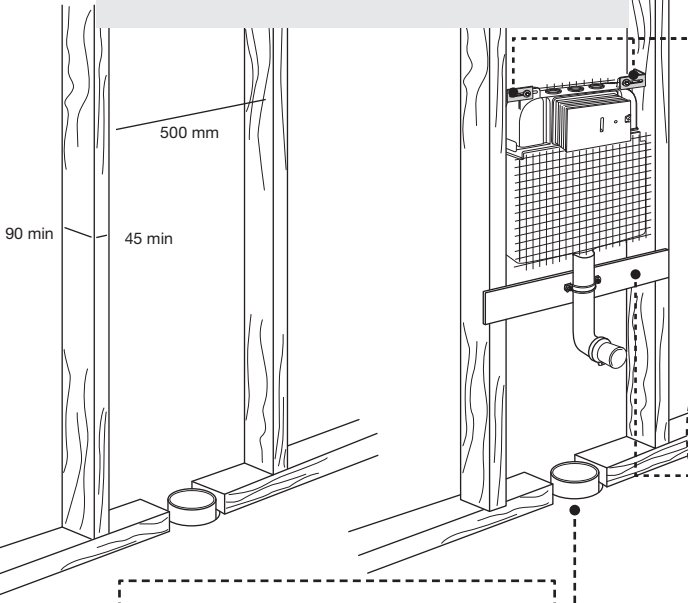



**100mm REQUIRED AT FLOOR LEVEL  
PIPE TO BE CUT OFF AT THE FLOOR  
LEVER**

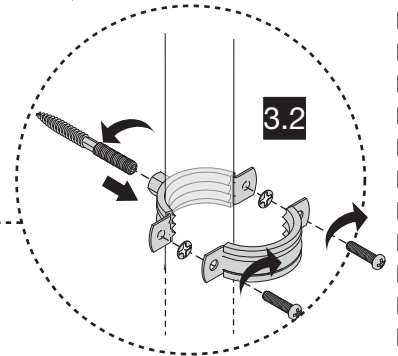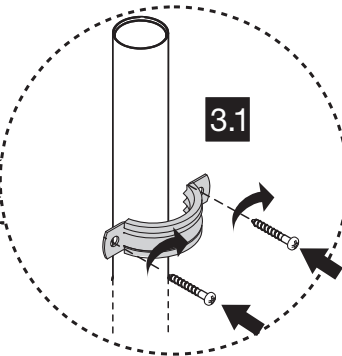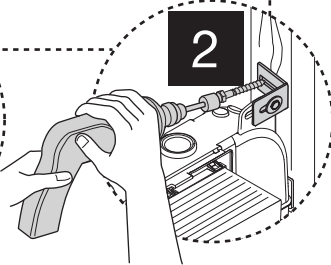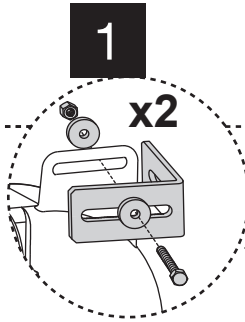

**3.1 - Take care not to over-tighten  
when fixing the flushpipe to a batten  
located below the cistern.  
NB - Screw fixings to be provided by  
installer.**



**3.2 - Alternatively, if fixing di-  
rectly to rear wall rather than  
to a batten, please use both  
halves of the saddles and lag  
screw provided.**

# 8

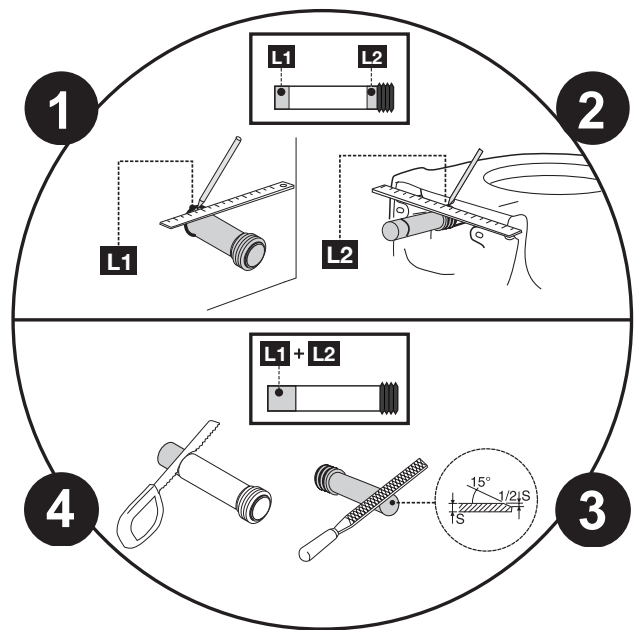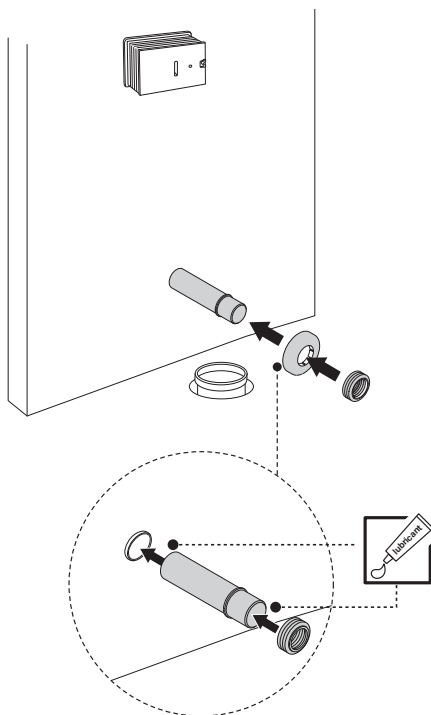



FOR DOUBLE BRICK  
WALL INSTALLATIONS

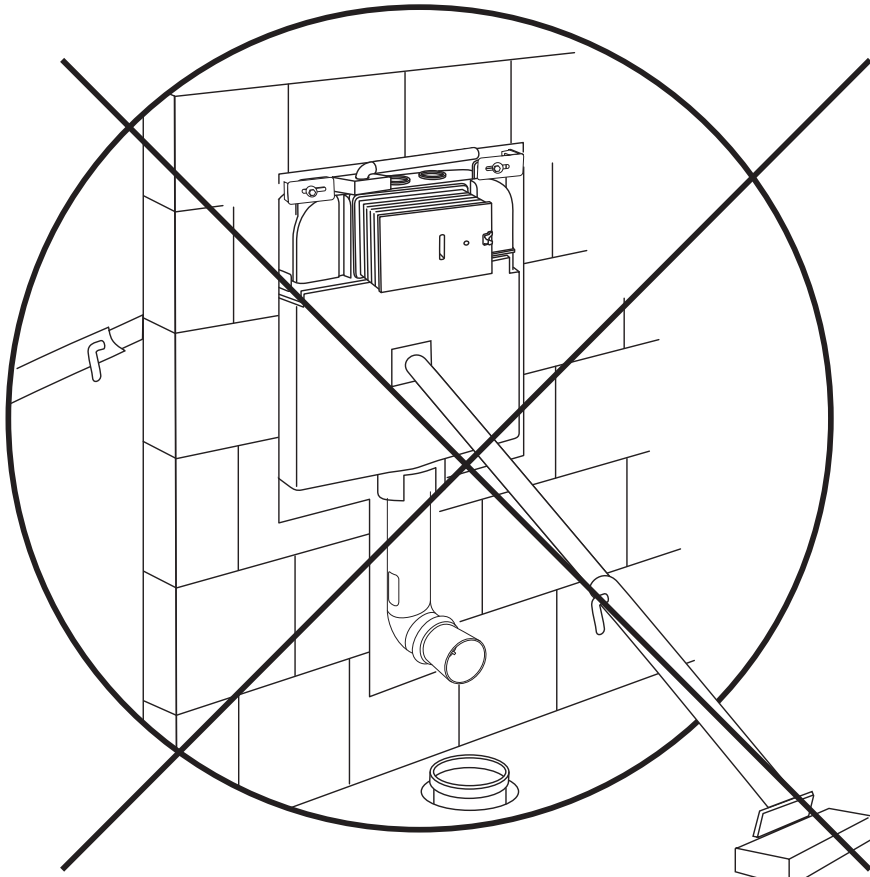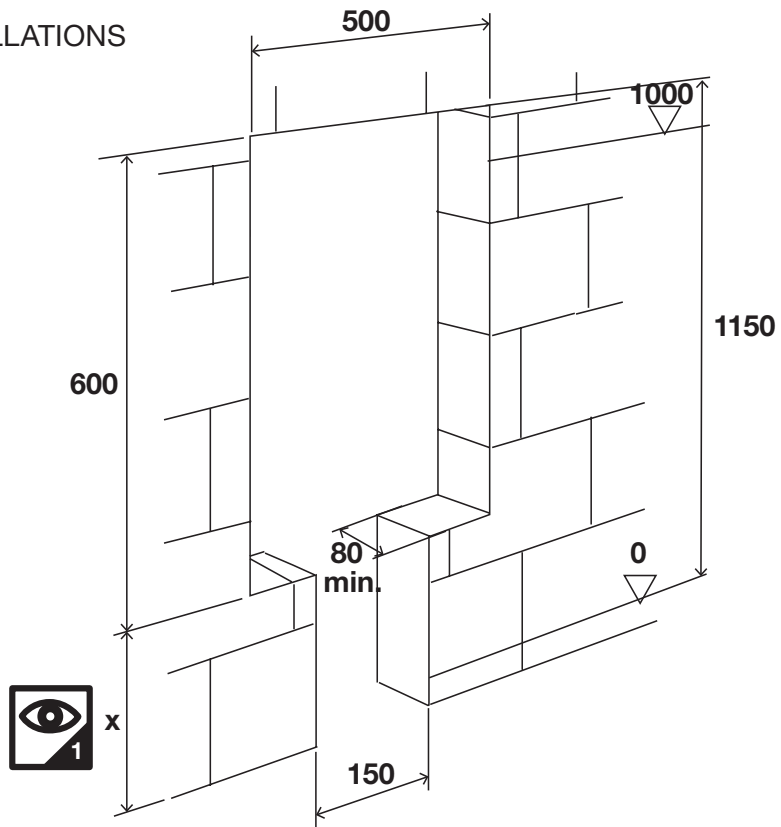

9

