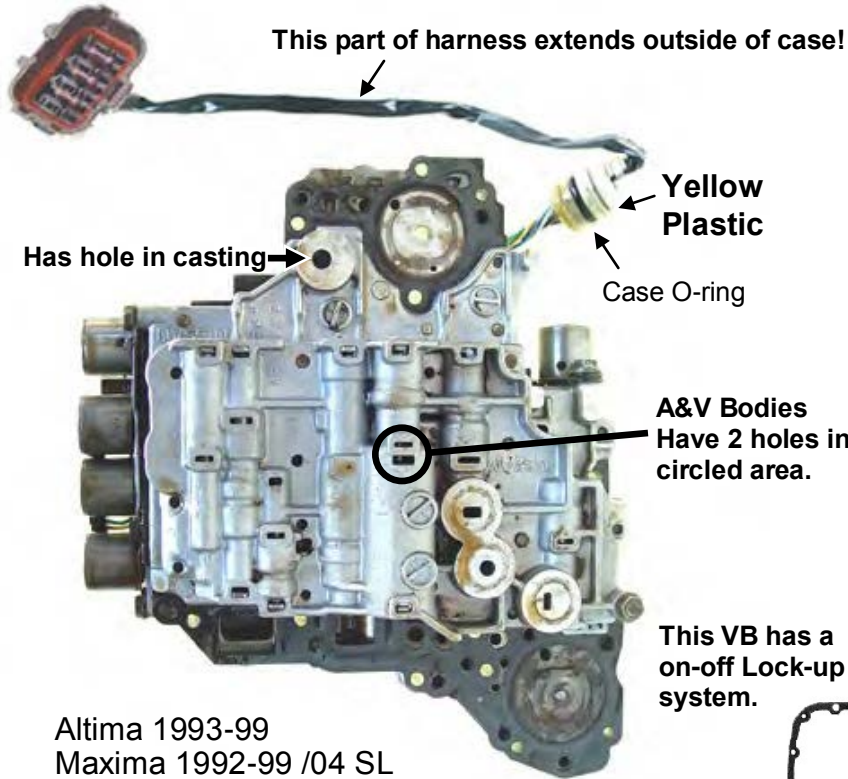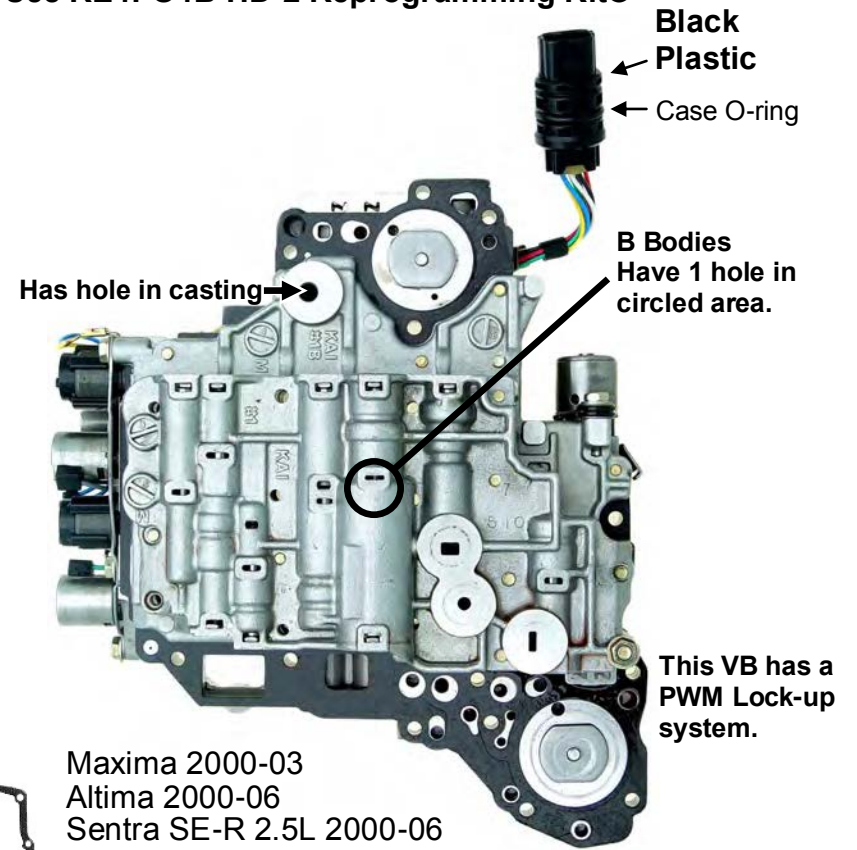# HOLD IT! Identify the valve body first!

For RE4FO3 (Small Case) VB's See next page.

RE4FO4 A&V models: The internal solenoid wires extend outside of the case as shown below.
Use **SK® RE4FO4A**
For **Hot Rods** Only:
Use **RE4FO4A HD-2 Reprogramming Kit®**

This part of harness extends outside of case!

Has hole in casting →

Yellow Plastic

Case O-ring

A&V Bodies Have 2 holes in circled area.
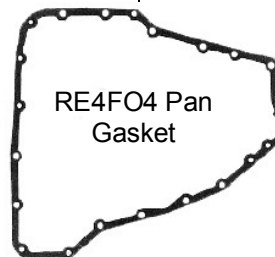
This VB has a on-off Lock-up system.

Altima 1993-99
Maxima 1992-99 /04 SL
Quest 1993-02 /04 S&SL /05-06 S
Infinity i30 1995-99
Mercury Villager 1993-02

RE4FO4 B models: The internal solenoid wiring harness **DOES NOT** extend outside of the case!
Use **SK® RE4FO4B**
For **Hot Rods** Only:
Use **RE4FO4B HD-2 Reprogramming Kit®**

Black Plastic

← Case O-ring

Has hole in casting →

B Bodies Have 1 hole in circled area.

This VB has a PWM Lock-up system.

Maxima 2000-03
Altima 2000-06
Sentra SE-R 2.5L 2000-06
Infinity i30 2000-01
Infinity i35 2002

RE4FO4 Pan Gasket

Over

HOLD IT! Identify the valve body first!

For RE4FO4 (Large Case) VB's See previous page.

RE4FO3 A models: The internal solenoid wires extend outside of the case as shown below.
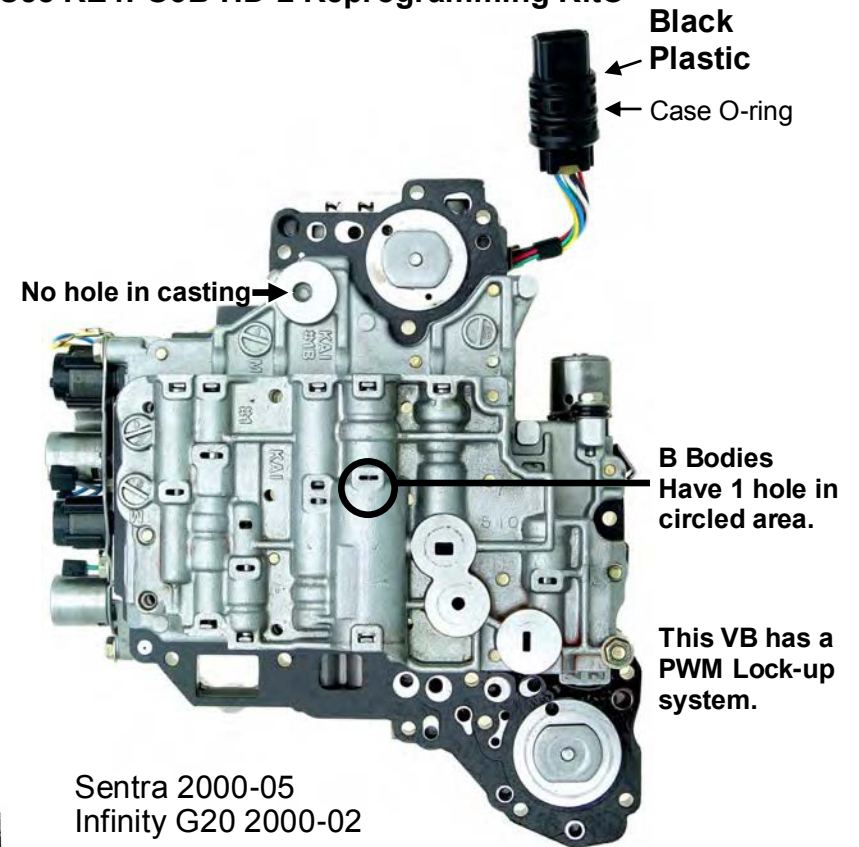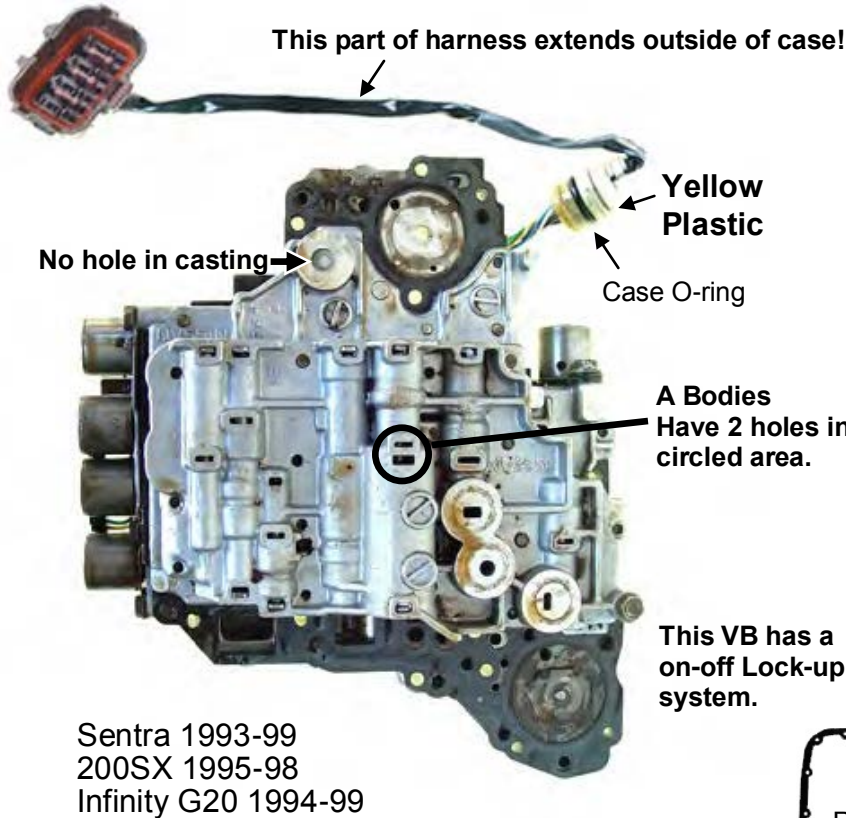Use **SK® RE4FO3A**
For **Hot Rods** Only:
Use **RE4FO3A HD-2 Reprogramming Kit®**

This part of harness extends outside of case!

Yellow Plastic

Case O-ring

No hole in casting ➤

A Bodies Have 2 holes in circled area.

This VB has a on-off Lock-up system.

Sentra 1993-99
200SX 1995-98
Infinity G20 1994-99

RE4FO3 B models: The internal solenoid wiring harness **DOES NOT** extend outside of the case!
Use **SK® RE4FO3B**
For **Hot Rods** Only:
Use **RE4FO3B HD-2 Reprogramming Kit®**

Black Plastic

Case O-ring

No hole in casting ➤

B Bodies Have 1 hole in circled area.

This VB has a PWM Lock-up system.

Sentra 2000-05
Infinity G20 2000-02

RE4FO3 Pan Gasket

Over

© TransGo 2011