

7-4-V 3-4 Shift Valve Kit

Allows MAX throttle 3-4 shift on 700's.

Max line pressure needs to be 175 or higher to obtain MAX 3-4 up-shift. Install 7-4 Valve Kit with TransGo® 700 2-3 Reprogramming Kit® and TransGo® #7-472 TV Boost Valve to get the needed line pressure.




Choose 3-4 shift timing spring. Install Spring, Valve & Bushing. Insert roll pin from bottom side of Valve Body.

Yellow--Blue--Beige
← Earlier Shift - - - - Later Shift →




Roll pin goes in this notch.

Roll pin location

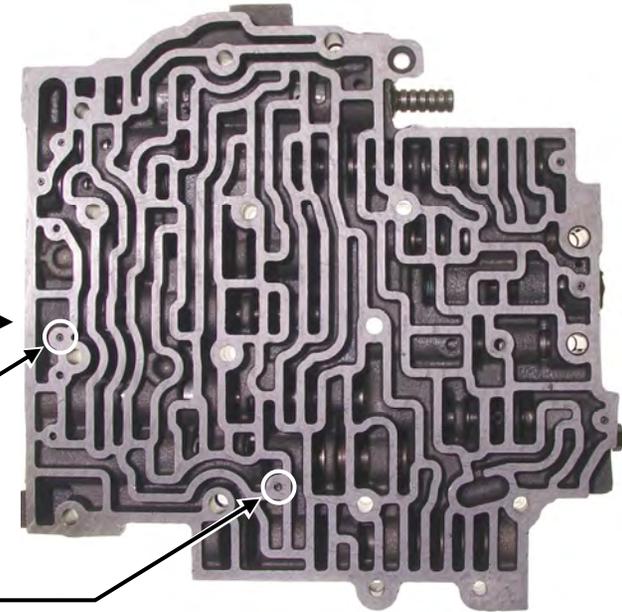


82-87 Valve Bodies (Type 1) have a roll pin here.
88 and on bodies (Type 2) do **not** have this roll pin.

If your using this product **WITH** a **700 2-3 Reprogramming Kit™** on a **TYPE 1** Valvebody:
Do **NOT** plug hole "H" in the plate **AND** re-install checkball "2" in the case.
The installation of this 3-4 shift valve **replaces** those 2 instruction parts.

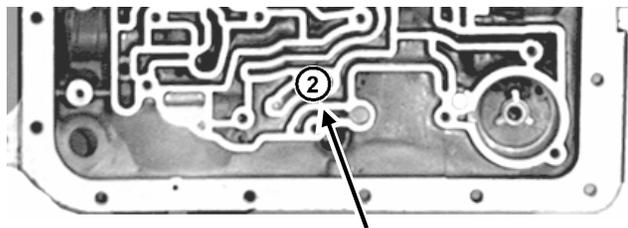

Re-install Ball "2"

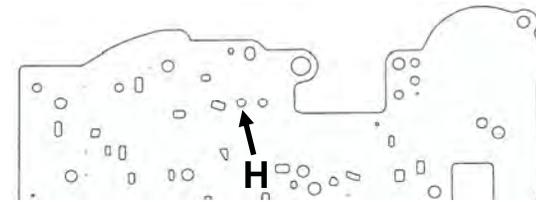

Do not install "H" plug.
Remove plug if already installed.