


REVISIONS

REV.	DATE	DESCRIPTION	BY
-	11-08-23	INITIAL RELEASE	RMV

#8-32 x 1/4 LONG PAN HEAD SCREW WITH COMBO PHILIPS/SLOTTED DR.

OUTER SLIDE FOR BOX SUPPORT FOR CAT.# 995

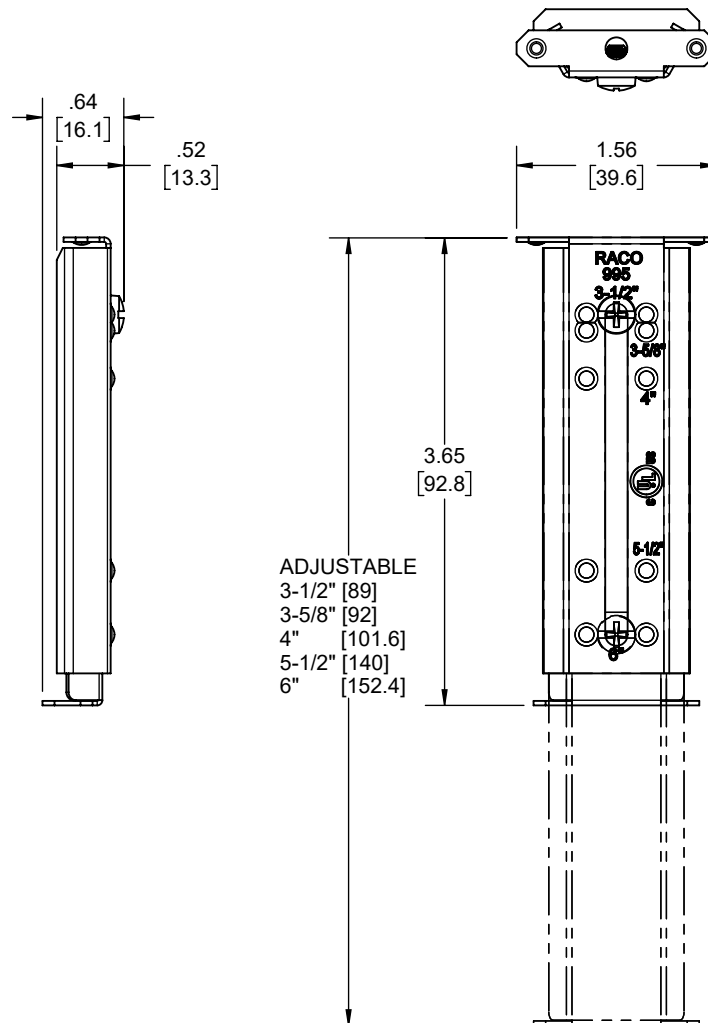

INNER SLIDE FOR BOX SUPPORT FOR CAT.# 995

FASTENERS	STEEL	GALVANIZED
OUTER SLIDE	STEEL	GALVANIZED
INNER SLIDE	STEEL	GALVANIZED
DESCRIPTION	MATERIAL	FINISH

LIST OF PARTS

THE DESIGN AND DIMENSIONS OF THE PRODUCT SHOWN ON THIS DRAWING ARE SUBJECT TO CHANGE WITHOUT NOTICE

TITLE:

FARSIDE SUPPORT ASSEMBLY

TOLERANCE UNLESS OTHERWISE SPECIFIED

.XX DECIMAL $\pm .015$
.XXX DECIMAL $\pm .005$
ANGLE $\pm 2^\circ$



DRAWN BY:	RMV	SCALE:	SIZE:
APP. BY:	N.S.		
DATE:	11-08-23	1:1.5	A

NOTES:


- ALL DIMENSIONS ARE IN INCHES AND [MILLIMETERS]
- cULus LISTED
- FOR INSTRUCTION SHEET SCROLL DOWN TO NEXT SHEET

INSTRUCTION SHEET

FAR SIDE SUPPORT BRACKET #995


STEP 1

Slide far side support bracket over flange of plate (not included)

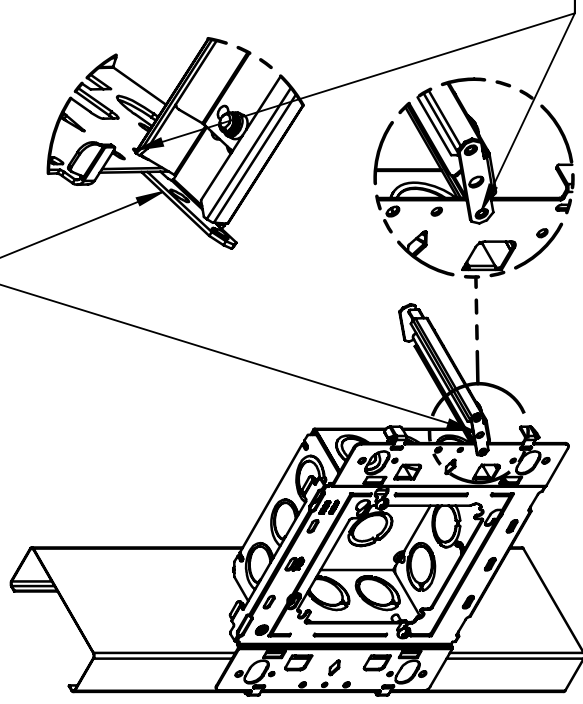

STEP 2

Align bottom dimple in far side support bracket with the bottom hole in the plate as shown, until it snaps into place

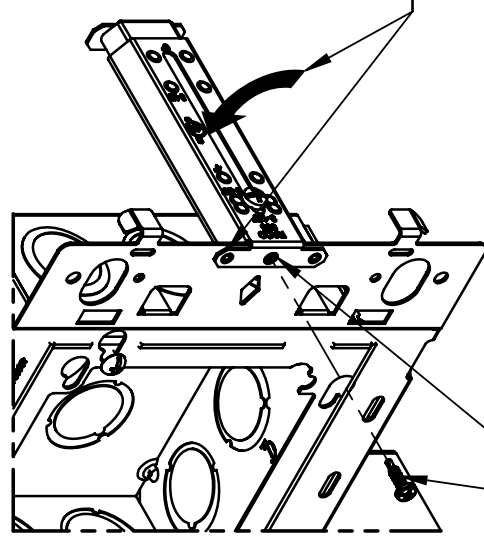

STEP 3

Rotate the far side support bracket until the top dimple aligns with the top hole in the plate and snaps into place

STEP 4

Install a self-drilling screw (not included) to keep the far side support bracket in place

STEP 5

Loosen the screw and slide the far side support bracket out to the desired location: 3.5", 3.625", 4", 5.5" & 6". Tighten the screw after done

