


**Showerhead  
For all Models**

*Thank you for selecting American Standard...  
the benchmark of fine quality for over 100 years.*

**To ensure that your installation proceeds smoothly—please read  
these instructions carefully before you begin.**

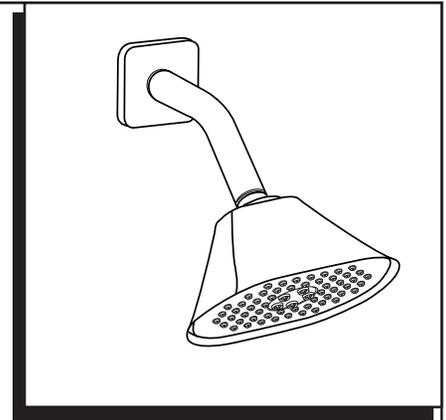

Certified to comply with ANSI A112.18.1M

**RECOMMENDED TOOLS AND MATERIALS**

Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing supply stores. It is essential that the tools and materials be on hand before work is begun.



Channel Locks



Adjustable Wrench



Teflon Tape




Plumbers' Grease

**CARE AND CLEANING**


**Do:** Simply rinse the product clean with clear water, dry with a soft cotton flannel cloth.

**Do Not:** Clean the product with soaps, acid, polish, abrasives, harsh cleaners, or a cloth with a coarse surface.

**ROUGH-IN  
DIMENSIONS**

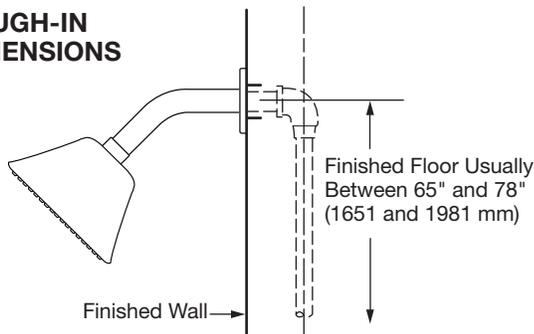

**INSTALL SUPPORTS  
FOR SHOWER**

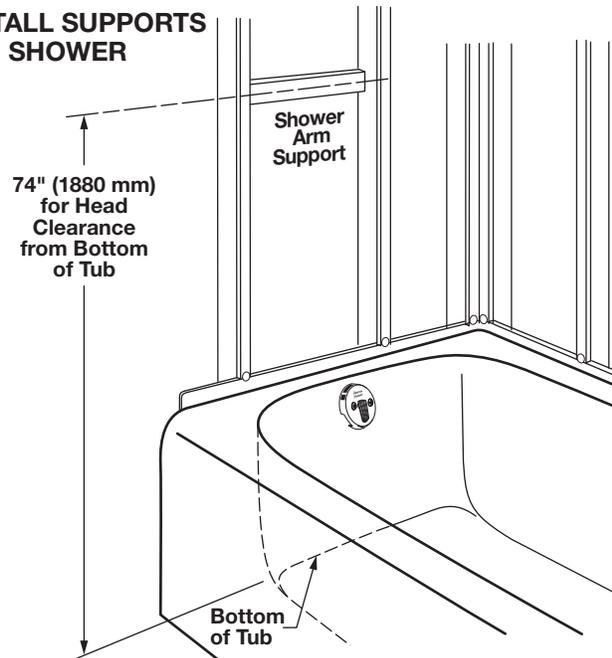

**Apply Sealing Tape  
to all Threaded  
Connections.  
Install Shower Arm,  
Showerhead**

