


American Standard

Installation Instructions

FloWise™ Vandal Proof Showerheads

1660 SERIES

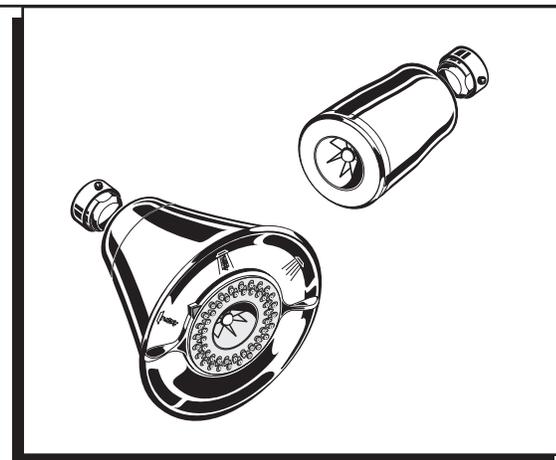

Certified to comply with ANSI A112.18.1
M965035

Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly—please read these instructions carefully before you begin.

Recommended Tools




Adjustable Wrench



Teflon Tape


1 REMOVE LOCK RING (1660 SERIES)

- Use the HEX WRENCH (1) supplied to loosen LOCK RING SET SCREW (2). Remove LOCK RING (3) FROM SHOWER HEAD (4).

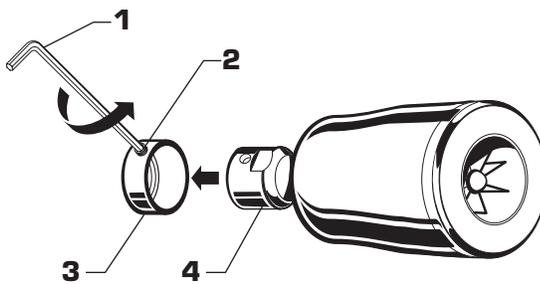


2 SEAL SHOWER ELBOW

- Apply TEFLON TAPE (1) or sealant to threads of SHOWER ARM (2).
- Slide the small end of the LOCK RING (3) onto SHOWER ARM (4).

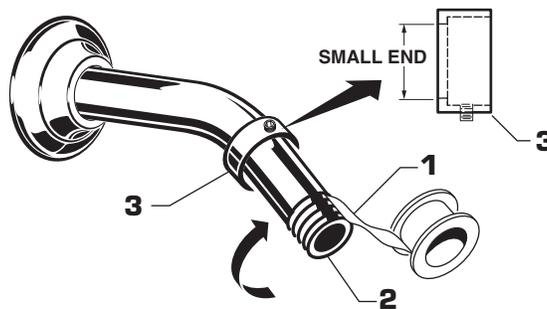

3 INSTALL SHOWER HEAD

- Tighten SHOWER HEAD (1) to SHOWER ARM (2) with adjustable wrench. **FIG. 1.**
- Turn water on to shower and check for leaks.
- Slide the LOCK RING (3) over the shower connector aligning the **set screw** with **connector hole**. **FIG. 1.**
- Tighten the **set screw** with **hex wrench** until it's tight against the SHOWER ARM (2). **FIG. 2.**

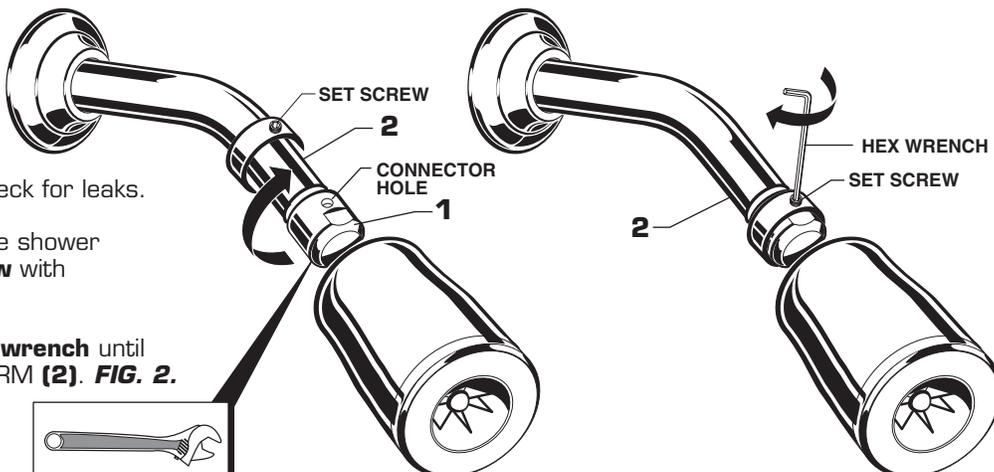

Adjustable Wrench

FIG. 1

FIG. 2