

# Oatey®



deliver quality. build trust. improve lives.

## POWER OF ONE

**#1 in the industry.** Oatey® is the number one source for purchasing the leading brands in the plumbing industry.

**One call does it all.** Only Oatey brings you the plumbing industry's best brands in one source, making it easy to purchase any product across all our brands on one invoice, in one shipment.

### TO PLACE AN ORDER

Contact your local Oatey Representative

800-321-9532

Oatey.com


Oatey.com/Dearborn

LCS1086F 10/20

Designed with  
the plumber in mind.



SCREWLESS  
OVERFLOW FACEPLATE

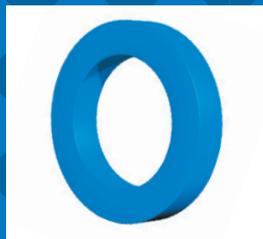

INNOVATIVE  
OVERFLOW GASKET



PRESS-IN  
TRIM VENEER



LOCKING  
DRAIN GASKET



QUARTER-TURN  
TEST PLUGS




# INNOVATIVE FROM TOP TO BOTTOM



# TRUE BLUE<sup>TM</sup> TABLE OF CONTENTS

DESIGNED WITH THE PLUMBER IN MIND	4
TRUE BLUE BATH WASTE KIT	5
TIME-SAVING FEATURES	6
TOOL-FREE INSTALLATION	7
DRAIN GASKET	8
QUARTER-TURN TEST PLUGS	9
DESIGNER FINISHES	10
STOPPER DESIGNS	11
ORDERING INFORMATION	12

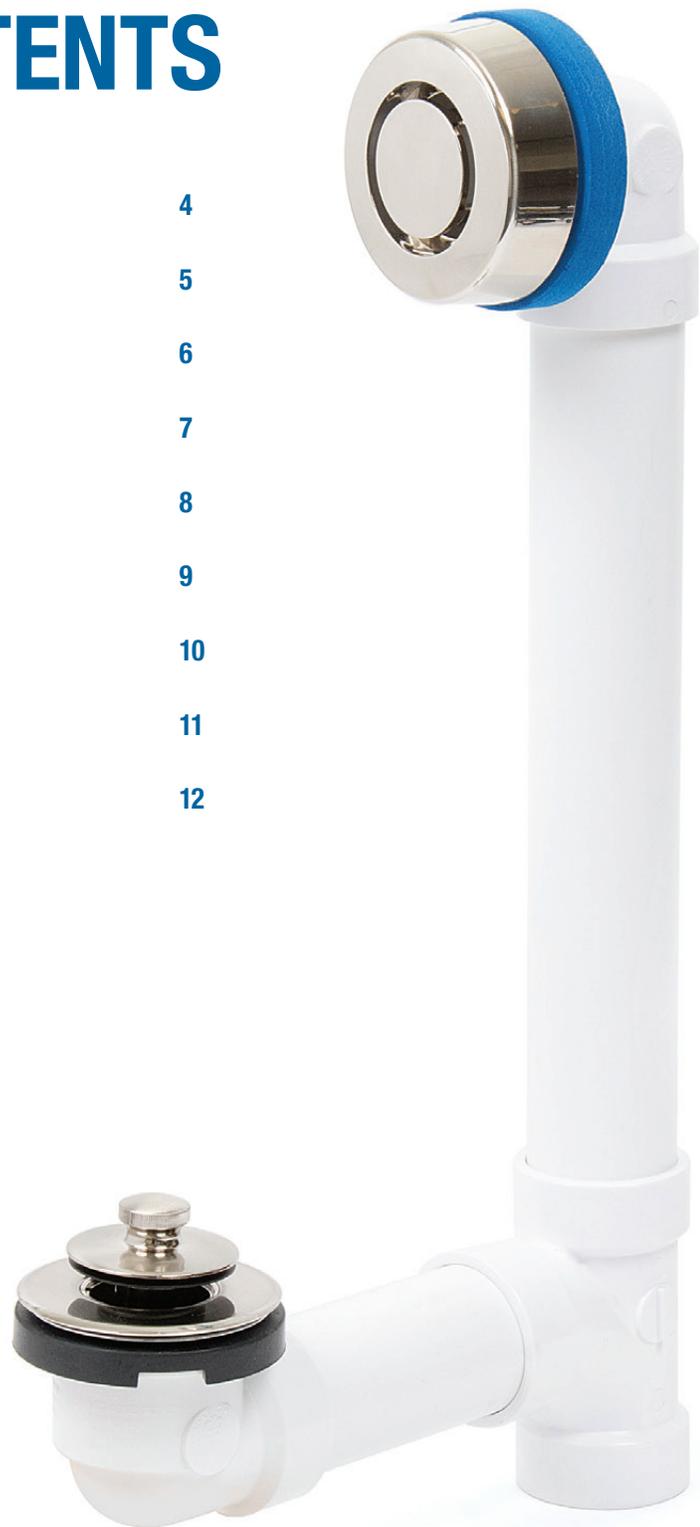




# DESIGNED WITH THE PLUMBER IN MIND

SCREWLESS OVERFLOW FACEPLATE

INNOVATIVE FOAMED RUBBER GASKET WITH SUPERIOR SEAL

LOCKING DRAIN GASKET

PRESS-IN DESIGNER TRIM VENEER

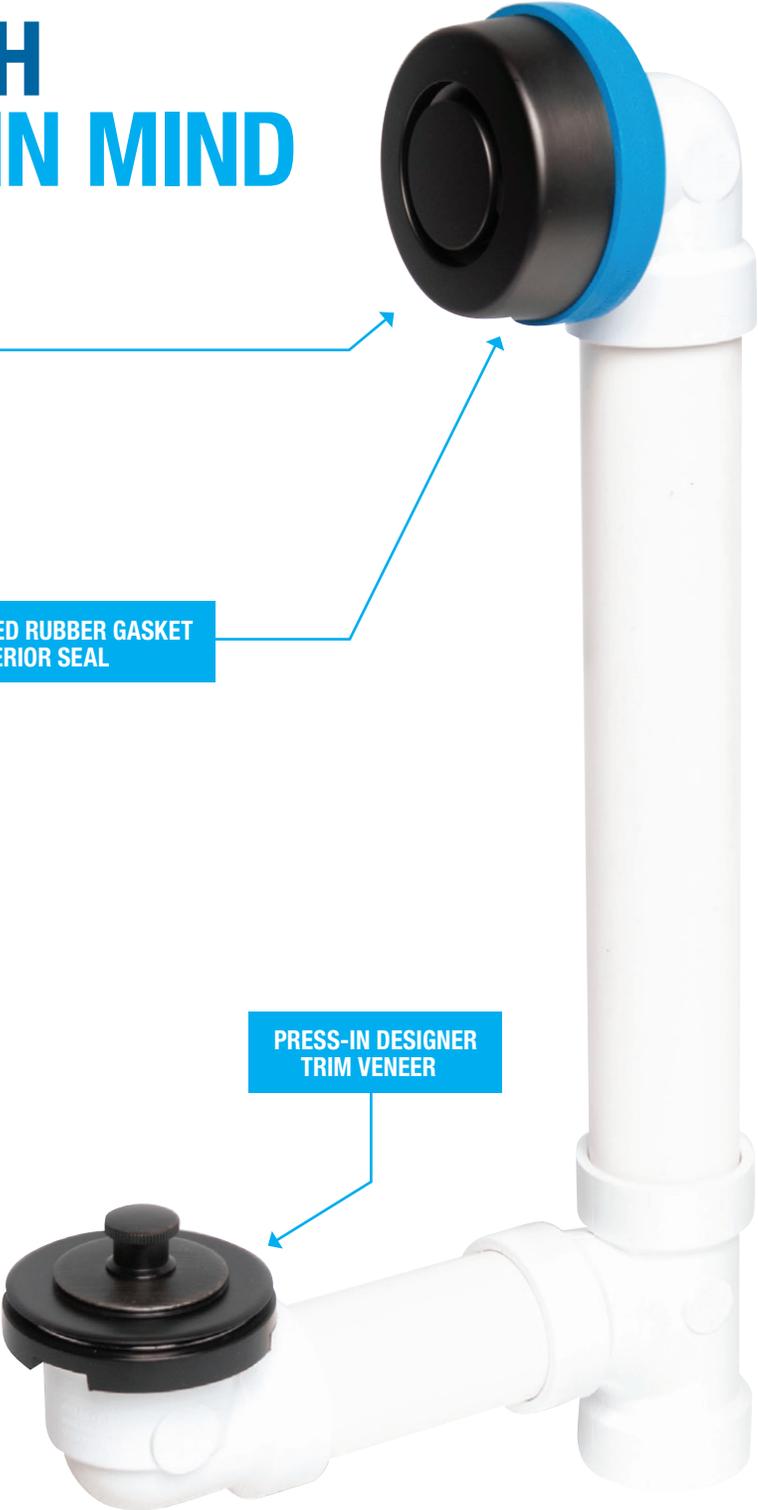

# TRUE BLUE™ BATH WASTE KIT

Introducing True Blue by Dearborn, the next generation of bath waste.

True Blue was thoughtfully designed for pros with a variety of cutting-edge features, like integrated locking components that simplify installation, and quarter-turn test plugs that make testing quick and painless.

True Blue allows you to go from box, to test, to finishing the job in no time.

## TRUE BLUE ADVANTAGES

### Innovative

- Integrated locking components
- Superior overflow & locking drain gaskets

### Plumber-friendly

- Saves time and money
- Hassle-free, tool-less install

### Flexible

- Easy to install on even the most difficult jobsite
- Works with almost any tub

PRESS-IN TRIM VENEER FOR  
INSTANT DESIGNER FINISHES



ITEM #P9850RB

## PRODUCTS ARE IN COMPLIANCE WITH THE FOLLOWING CODES:



Uniform Plumbing Code (UPC®)



National Plumbing Code of Canada



International Plumbing Code (IPC®)

## Products are in compliance with the following standards:



ASME A112.18.2-2015/CSA B125.2-15



# OVERFLOWING WITH TIME-SAVING FEATURES

### OVERFLOW TEST PLUG

The quarter-turn test plug comes factory pre-installed, simplifying the job to make testing quick and easy. The True Blue overflow test plug is approved for up to 40 feet of head pressure and doubles as a trim veneer installation tool.

- Overflow cover cannot be installed with test plug in place and reduces potential for bathroom air locks
- Reusable

### A NEXT-GEN GASKET

Made with an innovative foamed rubber material, True Blue's overflow gasket provides better compression and memory than traditional gaskets, creating a more reliable seal that will rebound and prevent leaks.

- Unique foamed rubber material
- Superior compression & memory for a better seal that reduces potential for leak paths



PRE-ASSEMBLED COMPONENTS MAKE INSTALLATION FASTER



GASKET IS DESIGNED FOR BETTER COMPRESSION AND MEMORY AND REDUCES THE CHANCE OF A LEAK PATH



REUSABLE TEST PLUG ALLOWS FOR REPEAT TESTING

# TOOL-FREE INSTALLATION

The True Blue overflow cover locks with a simple clockwise turn, requiring no additional tools or screws for installation.

And with depth adjustability, it can accommodate various tub styles and thicknesses with an additional clockwise turn.

## OVERFLOW COVER FEATURES

- No tools needed
- Depth adjustability to fit many tub styles and thicknesses
- Removable for maintenance
- No set screw required
- High flow rate
- Eliminates need for perfect alignment



NO TOOLS  
NEEDED



HIGH  
FLOW RATE



EASY  
ALIGNMENT



DEPTH ADJUSTABILITY WITH  
JUST A CLOCKWISE TURN



QUARTER-TURN TEST PLUGS MAKE  
TESTING EASIER THAN EVER

**WHILE OTHER OVERFLOW COVERS REQUIRE SCREWS AND PRECISE ALIGNMENT, TRUE BLUE IS A PERFECT INSTALL EVERY TIME**



TWIST AND LOCK OVERFLOW  
COVER DESIGN

# LESS FRUSTRATION EASIER INSTALLATION

Many bath waste installations are performed in tight quarters with limited visibility or little room to maneuver. True Blue improves the process with a set of integrated features to make the job smoother.

## DRAIN GASKET FEATURES

- Locking rubber gasket comes pre-assembled
- Will not move or fall off at odd or difficult angles while installing drain spud
- Softer durometer for better seal

TRUE BLUE UTILIZES A LOCKING DRAIN GASKET THAT WILL NOT FALL OFF IN DIFFICULT INSTALLATION ANGLES OR WHILE RESETTING THE DRAIN SPUD



# IT STANDS THE TRUE BLUE™ TEST

## QUARTER-TURN TEST PLUGS

- Test plugs avoid cross-threading and misalignment
- Integrated locking mechanism makes test plug install quick and reliable
- Drain test plug removable with pipe
- Approved for up to 40 feet of head

QUARTER-TURN TEST PLUGS AVOID  
CROSS-THREADING AND MISALIGNMENT





# DESIGNER FINISHES

### STYLISH FINISHES

True Blue Bath Waste comes in chrome, brushed nickel, oil-rubbed bronze, matte black and white.

### TRIM KITS FOR ALL FINISHES

- Quickly change trim without removing the spud
- No additional sealants required
- Easily installed with overflow test plug

### FINISHED DRAIN SPUD

Full & Half Kits available with finished drain spud



OVERFLOW TEST PLUG DOUBLES AS A TRIM INSTALLATION TOOL



CHROME



BRUSHED NICKEL



OIL-RUBBED BRONZE




WHITE




MATTE BLACK

## STOPPER DESIGN OPTIONS


### 1 UNI-LIFT

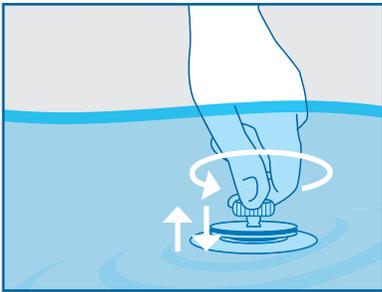

### 2 TOUCH TOE

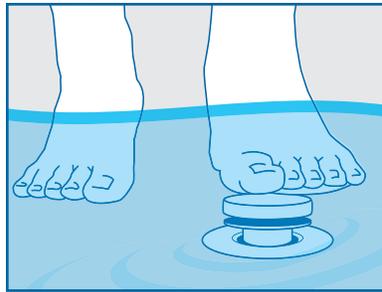

### 3 PUSH N' PULL

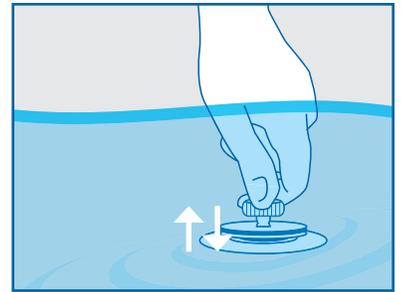

ITEM #K98RB



# ORDER TRUE BLUE™ BATH WASTE

ORDER TRUE BLUE BATH WASTE IN FULL, HALF, ROUGH OR TRIM KITS IN SCHEDULE 40 PVC OR ABS

FULL KIT INCLUDES



HALF KIT INCLUDES



ROUGH KIT INCLUDES



TRIM KIT INCLUDES

\*Available with Finished Drain Spud



# FULL KITS ORDERING INFORMATION

## PVC



FULL KIT P9850CP  
(SHOWN ASSEMBLED)

ITEM NO.	DESCRIPTION	CASE QTY	UPC
P9840CP	True Blue PVC Full Kit, Push N' Pull Stopper, w/ Test Kit CHR	10	041193343185
P9840BN	True Blue PVC Full Kit, Push N' Pull Stopper, w/ Test Kit BN	10	041193343192
P9840RB	True Blue PVC Full Kit, Push N' Pull Stopper, w/ Test Kit ORB	10	041193343208
P9850CP	True Blue PVC Full Kit, Touch Toe Stopper, w/ Test Kit CHR	10	041193104908
P9850BN	True Blue PVC Full Kit, Touch Toe Stopper, w/ Test Kit BN	10	041193104915
P9850RB	True Blue PVC Full Kit, Touch Toe Stopper, w/ Test Kit ORB	10	041193104922
P9860CP	True Blue PVC Full Kit, Uni-Lift Stopper, w/ Test Kit CHR	10	041193104939
P9860BN	True Blue PVC Full Kit, Uni-Lift Stopper, w/ Test Kit BN	10	041193104946
P9860RB	True Blue PVC Full Kit, Uni-Lift Stopper, w/ Test Kit ORB	10	041193104953

### TO PLACE AN ORDER

Contact your local Oatey Representative  
800-321-9532 | Oatey.com

To order designer finish full kits with finished drain spud, add "PS" to end of the product number

- I.E.: P9860BNPS
- Available in BN, ORB, WH and MB finishes
- For complete Finished Drain Spud Offering, see page 20



# FULL KITS ORDERING INFORMATION

## ABS



A9850CP

ITEM NO.	DESCRIPTION	CASE QTY	UPC
A9840CP	True Blue ABS Full Kit, Push N' Pull Stopper, w/ Test Kit CHR	10	041193343154
A9840BN	True Blue ABS Full Kit, Push N' Pull Stopper, w/ Test Kit BN	10	041193343161
A9840RB	True Blue ABS Full Kit, Push N' Pull Stopper, w/ Test Kit ORB	10	041193343178
A9850CP	True Blue ABS Full Kit, Touch Toe Stopper, w/ Test Kit CHR	10	041193104847
A9850BN	True Blue ABS Full Kit, Touch Toe Stopper, w/ Test Kit BN	10	041193104854
A9850RB	True Blue ABS Full Kit, Touch Toe Stopper, w/ Test Kit ORB	10	041193104861
A9860CP	True Blue ABS Full Kit, Uni-Lift Stopper, w/ Test Kit CHR	10	041193104878
A9860BN	True Blue ABS Full Kit, Uni-Lift Stopper, w/ Test Kit BN	10	041193104885
A9860RB	True Blue ABS Full Kit, Uni-Lift Stopper, w/ Test Kit ORB	10	041193104892

**TO PLACE AN ORDER**  
Contact your local Oatey Representative  
800-321-9532 | Oatey.com

To order designer finish full kits with finished drain spud, add "PS" to end of product number

- I.E.: A9860BNPS
- Available in BN, ORB, WH and MB finishes
- For complete Finished Drain Spud Offering, see page 20

# HALF KITS ORDERING INFORMATION

## PVC



P9960CP



Condensate Adapter



Direct Drain Fitting

ITEM NO.	DESCRIPTION	CASE QTY	UPC
P9940	True Blue PVC Half Kit, Push N' Pull Stopper, no Test Kit, CHR	10	041193343352
P9940CP	True Blue PVC Half Kit, Push N' Pull Stopper, w/ Test Kit, CHR	10	041193343369
P9940BN	True Blue PVC Half Kit, Push N' Pull Stopper, w/ Test Kit, BN	10	041193343376
P9940RB	True Blue PVC Half Kit, Push N' Pull Stopper, w/ Test Kit, ORB	10	041193343383
P9940WH	True Blue PVC Half Kit, Push N' Pull Stopper, w/ Test Kit, WH	10	041193343390
P9940MB	True Blue PVC Half Kit, Push N' Pull Stopper, w/ Test Kit, MB	10	041193343406
P9950	True Blue PVC Half Kit, Touch Toe Stopper, no Test Kit, CHR	10	041193105042
P9950CP	True Blue PVC Half Kit, Touch Toe Stopper, w/ Test Kit, CHR	10	041193105059
P9950BN	True Blue PVC Half Kit, Touch Toe Stopper, w/ Test Kit, BN	10	041193105066
P9950RB	True Blue PVC Half Kit, Touch Toe Stopper, w/ Test Kit, ORB	10	041193105073
P9950WH	True Blue PVC Half Kit, Touch Toe Stopper, w/ Test Kit, WH	10	041193343314
P9950MB	True Blue PVC Half Kit, Touch Toe Stopper, w/ Test Kit, MB	10	041193343321
P9960	True Blue PVC Half Kit, Uni-Lift Stopper, no Test Kit, CHR	10	041193105080
P9960CP	True Blue PVC Half Kit, Uni-Lift Stopper, w/ Test Kit, CHR	10	041193105097
P9960CPC	True Blue PVC Half Kit, Uni-Lift Stopper, w/ Test Kit, CHR, Condensate Elbow	10	041193105332
P9960CPD	True Blue PVC Half Kit, Uni-Lift Stopper, w/ Test Kit, CHR, Direct Drain	10	041193105356
P9960BN	True Blue PVC Half Kit, Uni-Lift Stopper, w/ Test Kit, BN	10	041193105103
P9960RB	True Blue PVC Half Kit, Uni-Lift Stopper, w/ Test Kit, ORB	10	041193105110
P9960CPZ	True Blue PVC Half Kit, Uni-Lift Stopper, w/ Test Kit, Zinc CHR	10	041193105233
P9960WH	True Blue PVC Half Kit, Uni-Lift Stopper, w/ Test Kit, WH	10	041193343338
P9960MB	True Blue PVC Half Kit, Uni-Lift Stopper, w/ Test Kit, MB	10	041193343345

To order designer finish half kits with finished drain spud, add "PS" to end of product number

- I.E. P9960BNPS
- Available in BN, ORB, WH and MB finishes
- For complete Finished Drain Spud Offering, see page 20



# HALF KITS ORDERING INFORMATION

## ABS



A9950RB

ITEM NO.	DESCRIPTION	CASE QTY	UPC
A9940	True Blue ABS Half Kit, Push N' Pull Stopper, no Test Kit CHR	10	041193343253
A9940CP	True Blue ABS Half Kit, Push N' Pull Stopper, w/ Test Kit, CHR	10	041193343260
A9940BN	True Blue ABS Half Kit, Push N' Pull Stopper, w/ Test Kit, BN	10	041193343277
A9940RB	True Blue ABS Half Kit, Push N' Pull Stopper, w/ Test Kit, ORB	10	041193343284
A9940WH	True Blue ABS Half Kit, Push N' Pull Stopper, w/ Test Kit, WH	10	041193343291
A9940MB	True Blue ABS Half Kit, Push N' Pull Stopper, w/ Test Kit, MB	10	041193343307
A9950	True Blue ABS Half Kit, Touch Toe Stopper, no Test Kit, CHR	10	041193104960
A9950CP	True Blue ABS Half Kit, Touch Toe Stopper, w/ Test Kit, CHR	10	041193104977
A9950BN	True Blue ABS Half Kit, Touch Toe Stopper, w/ Test Kit, BN	10	041193104984
A9950RB	True Blue ABS Half Kit, Touch Toe Stopper, w/ Test Kit, ORB	10	041193104991
A9950WH	True Blue ABS Half Kit, Touch Toe Stopper, w/ Test Kit, WH	10	041193343215
A9950MB	True Blue ABS Half Kit, Touch Toe Stopper, w/ Test Kit, MB	10	041193343222
A9960	True Blue ABS Half Kit, Uni-Lift Stopper, no Test Kit CHR	10	041193105004
A9960CP	True Blue ABS Half Kit, Uni-Lift Stopper, w/ Test Kit CHR	10	041193105011
A9960CPC	True Blue ABS Half Kit, Uni-Lift Stopper, w/ Test Kit, CHR, Condensate Elbow	10	041193105325
A9960CPD	True Blue ABS Half Kit, Uni-Lift Stopper, w/ Test Kit, CHR, Direct Drain	10	041193105349
A9960BN	True Blue ABS Half Kit, Uni-Lift Stopper, w/ Test Kit BN	10	041193105028
A9960RB	True Blue ABS Half Kit, Uni-Lift Stopper, w/ Test Kit ORB	10	041193105035
A9960CPZ	True Blue ABS Half Kit, Uni-Lift Stopper, w/ Test Kit Zinc CHR	10	041193105226
A9960WH	True Blue ABS Half Kit, Uni-Lift Stopper, w/ Test Kit WH	10	041193343239
A9960MB	True Blue ABS Half Kit, Uni-Lift Stopper, w/ Test Kit Zinc MB	10	041193343246

### TO PLACE AN ORDER

Contact your local Oatey Representative  
800-321-9532 | Oatey.com

To order designer finish half kits with finished drain spud, add "PS" to end of product number

- I.E. A9960BNPS
- Available in BN, ORB, WH and MB finishes
- For complete Finished Drain Spud Offering, see page 20

# ROUGH KITS ORDERING INFORMATION

## PVC



P9975

ITEM NO.	DESCRIPTION	CASE QTY	UPC
P9970	True Blue PVC Rough Kit, No Test Kit, CHR	10	041193105141
P9975	True Blue PVC Rough Kit, w/ Test Kit, CHR	10	041193105158
P9975Z	True Blue PVC Rough Kit, w/ Test Kit, Zinc CHR	10	041193105257
P9975C	True Blue PVC Rough Kit, w/ Test Kit, CHR, Zinc, Condensate Elbow	10	041193105264
P9975ZC	True Blue PVC Rough Kit, w/ Test Kit, CHR, Zinc Condensate Elbow	10	041193105288
P9975D	True Blue PVC Rough Kit, w/ Test Kit, CHR, Direct Drain	10	041193105295
P9975ZD	True Blue PVC Rough Kit, w/ Test Kit, CHR, Zinc, Direct Drain	10	041193105318

## ABS



A9975

ITEM NO.	DESCRIPTION	CASE QTY	UPC
A9970	True Blue ABS Rough Kit, No Test Kit, CHR	10	041193105127
A9975	True Blue ABS Rough Kit, w/ Test Kit, CHR	10	041193105134
A9975Z	True Blue ABS Rough Kit, w/ Test Kit, Zinc CHR	10	041193105240
A9975C	True Blue ABS Rough Kit, w/ Test Kit, CHR, Condensate Elbow	10	041193105271
A9975D	True Blue ABS Rough Kit, w/ Test Kit, CHR, Direct Drain	10	041193105301



# TRIM KITS ORDERING INFORMATION

## TOUCH-TOE



ITEM NO.	DESCRIPTION	CASE QTY	UPC
K97CP	True Blue Trim Kit, Touch Toe, CHR, No Veneer Included	10	041193105165
K97BN	True Blue Trim Kit, Touch Toe, BN	10	041193105172
K97RB	True Blue Trim Kit, Touch Toe, ORB	10	041193105189
K97WH	True Blue Trim Kit, Touch Toe, WH	10	041193343413
K97MB	True Blue Trim Kit, Touch Toe, MB	10	041193343420

## UNI-LIFT



ITEM NO.	DESCRIPTION	CASE QTY	UPC
K98CP	True Blue Trim Kit, Uni-Lift, CHR, No Veneer Included	10	041193105196
K98BN	True Blue Trim Kit, Uni-Lift, BN	10	041193105202
K98RB	True Blue Trim Kit, Uni-Lift, ORB	10	041193105219
K98WH	True Blue Trim Kit, Uni-Lift, WH	10	041193343437
K98MB	True Blue Trim Kit, Uni-Lift, MB	10	041193343444

## PUSH N' PULL



ITEM NO.	DESCRIPTION	CASE QTY	UPC
K99CP	True Blue Trim Kit, Push N' Pull, CHR, No Veneer Included	10	041193343451
K99BN	True Blue Trim Kit, Push N' Pull, BN	10	041193343468
K99RB	True Blue Trim Kit, Push N' Pull, ORB	10	041193343475
K99WH	True Blue Trim Kit, Push N' Pull, WH	10	041193343482
K99MB	True Blue Trim Kit, Push N' Pull, MB	10	041193343499

**TO PLACE AN ORDER**  
 Contact your local Oatey Representative  
 800-321-9532 | Oatey.com

To order designer finish trim kits with finished drain spud, add "PS" to end of product number

- I.E. K97BNPS
- Available in BN, ORB, WH and MB finishes
- For complete Finished Drain Spud Offering, see page 20

# REPLACEMENT PARTS

## ORDERING INFORMATION



4516-1



4516-3



4516-4



4516-6



4516-10

ITEM NO.	DESCRIPTION	CASE QTY	UPC
4516-1	True Blue Brass Drain Spud	10	041193115874
4516-2	True Blue Drain Elbow Gasket	100 (10 per bag)	041193115805
4516-3	True Blue Overflow Washer	120 (20 per bag)	041193115423
4516-4	True Blue Drain & Overflow Test Plugs	100 (5 each per bag)	041193115867
4516-5	True Blue Zinc Drain Spud	10	041193115850
4516-6	True Blue Trim Veneer, BN	10	041193115843
4516-7	True Blue Trim Veneer, ORB	10	041193115836
4516-8	True Blue Overflow Faceplate, BN	10	041193115829
4516-9	True Blue Overflow Faceplate, ORB	10	041193115812
4516-10	True Blue Overflow Faceplate, CHR	10	041193115881



# FINISHED DRAIN SPUD PRODUCT OFFERING



A9840RBPS

PART NO.	MATERIAL	KIT TYPE	STOPPER STYLE	FINISH	TEST PLUG	SPUD MATERIAL
A9840CP	ABS	Full	Push N' Pull	Chrome	Yes	Brass
A9840BNPS	ABS	Full	Push N' Pull	Brushed Nickel	Yes	Brass
A9840RBPS	ABS	Full	Push N' Pull	Oil Rubbed Bronze	Yes	Brass
A9850CP	ABS	Full	Touch Toe	Chrome	Yes	Brass
A9850BNPS	ABS	Full	Touch Toe	Brushed Nickel	Yes	Brass
A9850RBPS	ABS	Full	Touch Toe	Oil Rubbed Bronze	Yes	Brass
A9860CP	ABS	Full	Uni-Lift	Chrome	Yes	Brass
A9860BNPS	ABS	Full	Uni-Lift	Brushed Nickel	Yes	Brass
A9860RBPS	ABS	Full	Uni-Lift	Oil Rubbed Bronze	Yes	Brass
P9840CP	PVC	Full	Push N' Pull	Chrome	Yes	Brass
P9840BNPS	PVC	Full	Push N' Pull	Brushed Nickel	Yes	Brass
P9840RBPS	PVC	Full	Push N' Pull	Oil Rubbed Bronze	Yes	Brass
P9850CP	PVC	Full	Touch Toe	Chrome	Yes	Brass
P9850BNPS	PVC	Full	Touch Toe	Brushed Nickel	Yes	Brass
P9850RBPS	PVC	Full	Touch Toe	Oil Rubbed Bronze	Yes	Brass
P9860CP	PVC	Full	Uni-Lift	Chrome	Yes	Brass
P9860BNPS	PVC	Full	Uni-Lift	Brushed Nickel	Yes	Brass
P9860RBPS	PVC	Full	Uni-Lift	Oil Rubbed Bronze	Yes	Brass
A9940CP	ABS	Half	Push N' Pull	Chrome	Yes	Brass
A9940BNPS	ABS	Half	Push N' Pull	Brushed Nickel	Yes	Brass
A9940RBPS	ABS	Half	Push N' Pull	Oil Rubbed Bronze	Yes	Brass
A9940WHPS	ABS	Half	Push N' Pull	White	Yes	Brass
A9940MBPS	ABS	Half	Push N' Pull	Matte Black	Yes	Brass
A9950CP	ABS	Half	Touch Toe	Chrome	Yes	Brass
A9950BNPS	ABS	Half	Touch Toe	Brushed Nickel	Yes	Brass
A9950RBPS	ABS	Half	Touch Toe	Oil Rubbed Bronze	Yes	Brass
A9950WHPS	ABS	Half	Touch Toe	White	Yes	Brass
A9950MBPS	ABS	Half	Touch Toe	Matte Black	Yes	Brass
A9960CP	ABS	Half	Uni-Lift	Chrome	Yes	Brass
A9960BNPS	ABS	Half	Uni-Lift	Brushed Nickel	Yes	Brass
A9960RBPS	ABS	Half	Uni-Lift	Oil Rubbed Bronze	Yes	Brass
A9960WHPS	ABS	Half	Uni-Lift	White	Yes	Brass
A9960MBPS	ABS	Half	Uni-Lift	Matte Black	Yes	Brass

# FINISHED DRAIN SPUD PRODUCT OFFERING



P9960BNPS



K97MBPS

PART NO.	MATERIAL	KIT TYPE	STOPPER STYLE	FINISH	TEST PLUG	SPUD MATERIAL
P9940CP	PVC	Half	Push N' Pull	Chrome	Yes	Brass
P9940BNPS	PVC	Half	Push N' Pull	Brushed Nickel	Yes	Brass
P9940RBPS	PVC	Half	Push N' Pull	Oil Rubbed Bronze	Yes	Brass
P9940WHPS	PVC	Half	Push N' Pull	White	Yes	Brass
P9940MBPS	PVC	Half	Push N' Pull	Matte Black	Yes	Brass
P9950CP	PVC	Half	Touch Toe	Chrome	Yes	Brass
P9950BNPS	PVC	Half	Touch Toe	Brushed Nickel	Yes	Brass
P9950RBPS	PVC	Half	Touch Toe	Oil Rubbed Bronze	Yes	Brass
P9950WHPS	PVC	Half	Touch Toe	White	Yes	Brass
P9950MBPS	PVC	Half	Touch Toe	Matte Black	Yes	Brass
P9960CP	PVC	Half	Uni-Lift	Chrome	Yes	Brass
P9960BNPS	PVC	Half	Uni-Lift	Brushed Nickel	Yes	Brass
P9960RBPS	PVC	Half	Uni-Lift	Oil Rubbed Bronze	Yes	Brass
P9960WHPS	PVC	Half	Uni-Lift	White	Yes	Brass
P9960MBPS	PVC	Half	Uni-Lift	Matte Black	Yes	Brass
K97BNPS	N/A	Trim	Touch Toe	Brushed Nickel	No	Brass
K97RBPS	N/A	Trim	Touch Toe	Oil Rubbed Bronze	No	Brass
K97WHPS	N/A	Trim	Touch Toe	White	No	Brass
K97MBPS	N/A	Trim	Touch Toe	Matte Black	No	Brass
K98BNPS	N/A	Trim	Uni-Lift	Brushed Nickel	No	Brass
K98RBPS	N/A	Trim	Uni-Lift	Oil Rubbed Bronze	No	Brass
K98WHPS	N/A	Trim	Uni-Lift	White	No	Brass
K98MBPS	N/A	Trim	Uni-Lift	Matte Black	No	Brass
K99BNPS	N/A	Trim	Push N' Pull	Brushed Nickel	No	Brass
K99RBPS	N/A	Trim	Push N' Pull	Oil Rubbed Bronze	No	Brass
K99WHPS	N/A	Trim	Push N' Pull	White	No	Brass
K99MBPS	N/A	Trim	Push N' Pull	Matte Black	No	Brass