




ADJUST TO DESIRED HEIGHT. (CAN BE CUT AS SHORT AS 2-1/2") (Fig. 1)

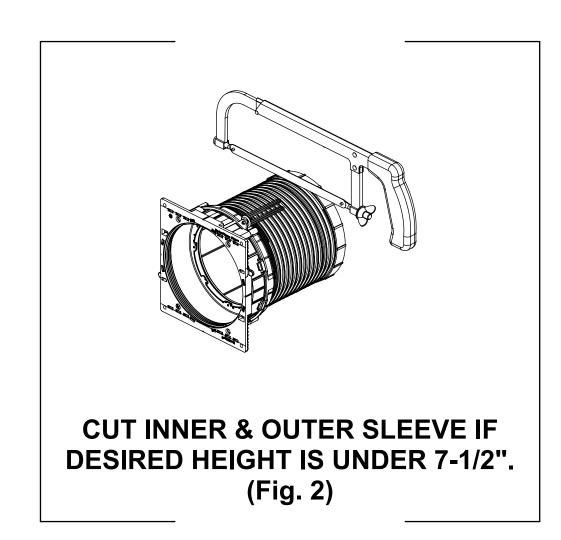


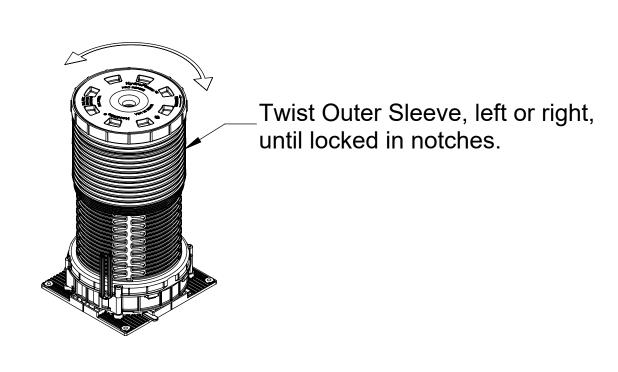


LOCK OUTER SLEEVE IN PLACE. (Fig. 3)

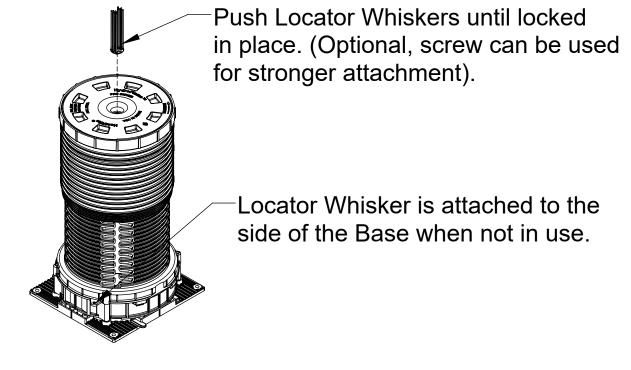


INSERT WHISKERS. (Fig. 4)

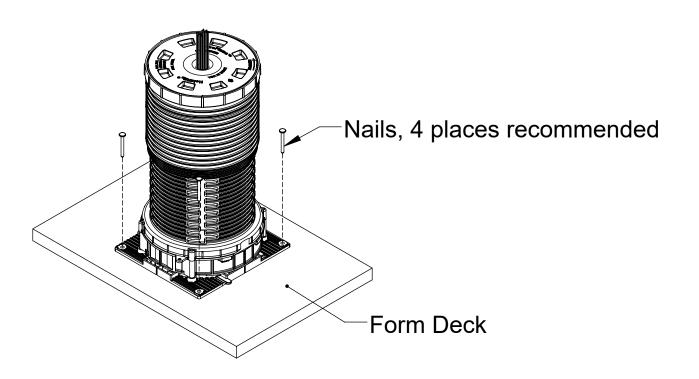


NAIL TO FORM DECK. (Fig. 5)

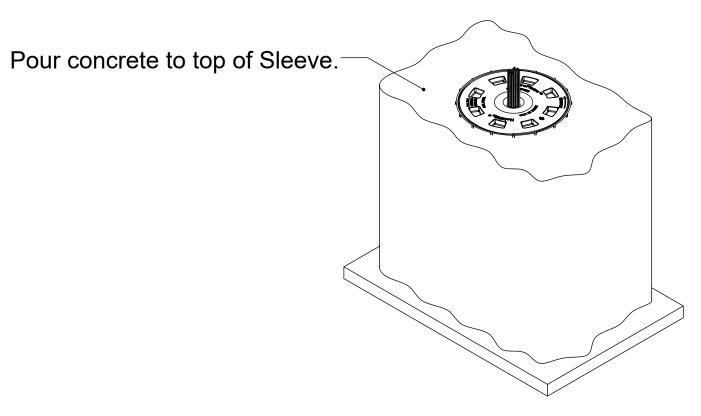

POUR IN CONCRETE. (Fig. 6)

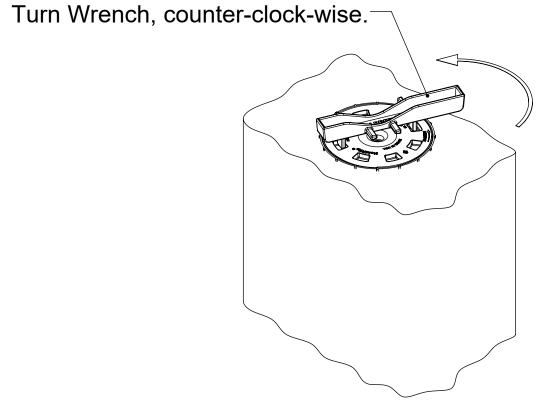

REMOVE CAP WITH HF WRENCH, OR BREAK-OUT WITH HAMMER. (Fig. 7)

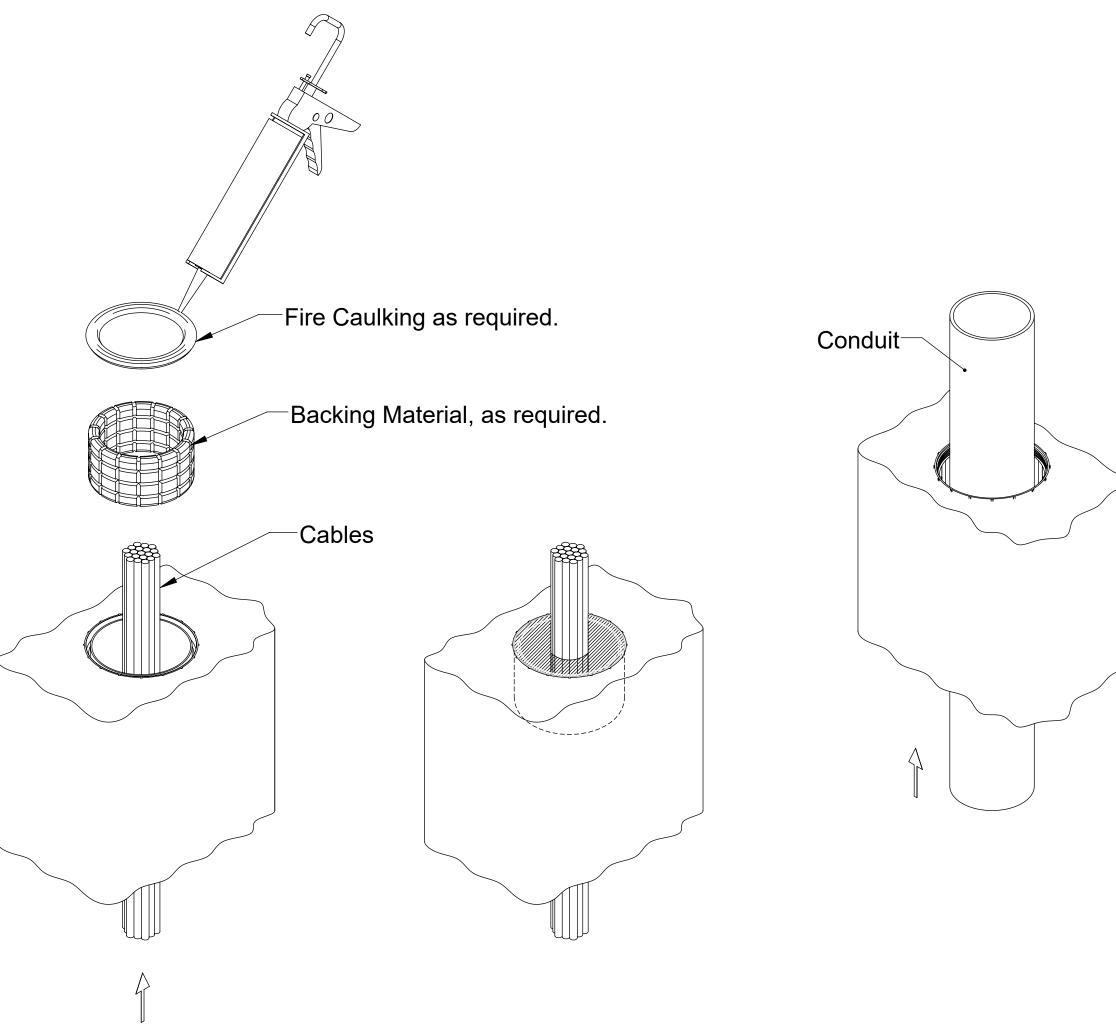

INSTALL CABLES OR CONDUIT FROM BELOW, INSTALL BACKING MATERIAL & FIRE CAULKING AS REQUIRED. (Fig. 8)