




**ADJUST TO DESIRED HEIGHT.**  
(Fig. 1)

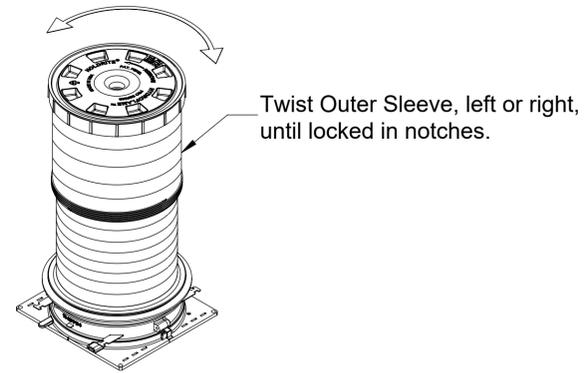


**LOCK OUTER SLEEVE IN PLACE.**  
(Fig. 3)

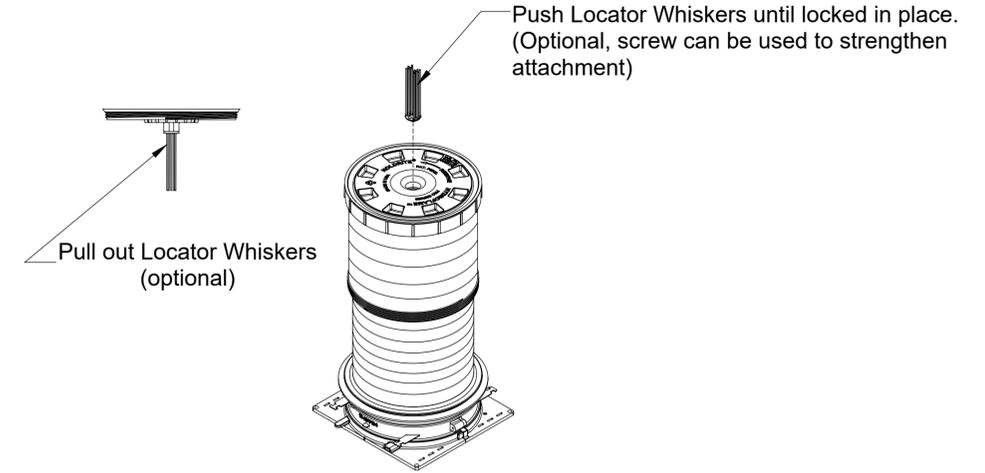


**RE-INSTALL CAP & INSERT LOCATOR WHISKERS.**  
(Fig. 4)

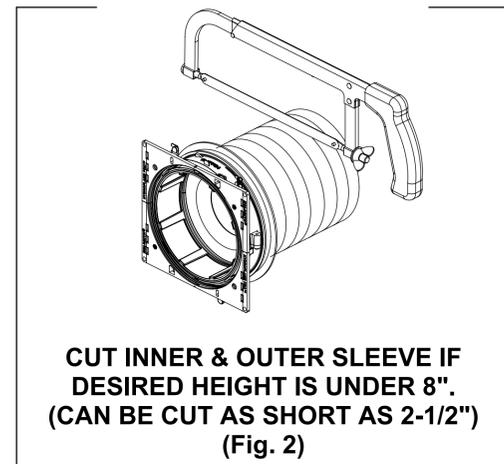


**CUT INNER & OUTER SLEEVE IF  
DESIRED HEIGHT IS UNDER 8".  
(CAN BE CUT AS SHORT AS 2-1/2")**  
(Fig. 2)

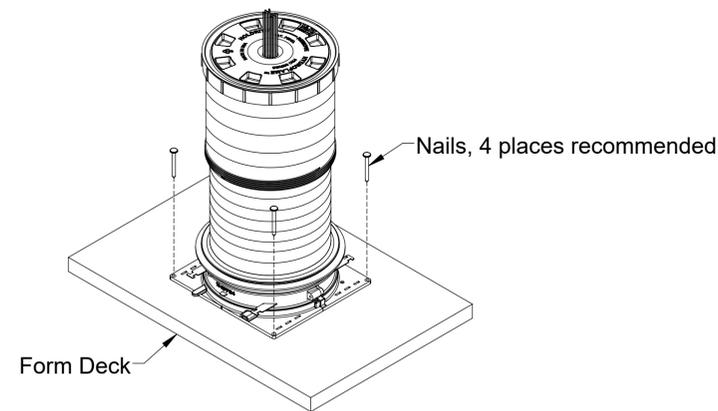


**NAIL TO FORM DECK.**  
(Fig. 5)

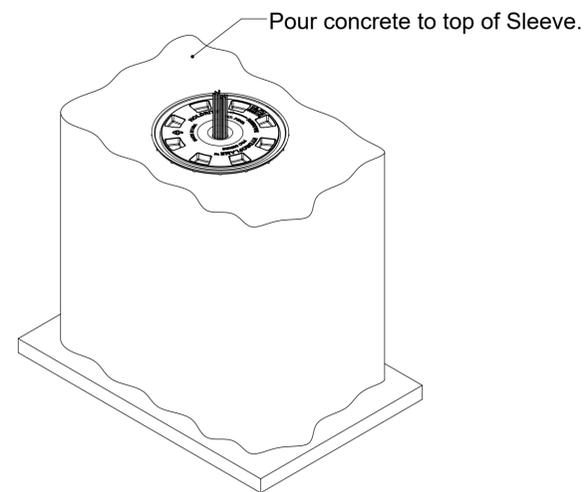

**POURED IN CONCRETE.**  
(Fig. 6)

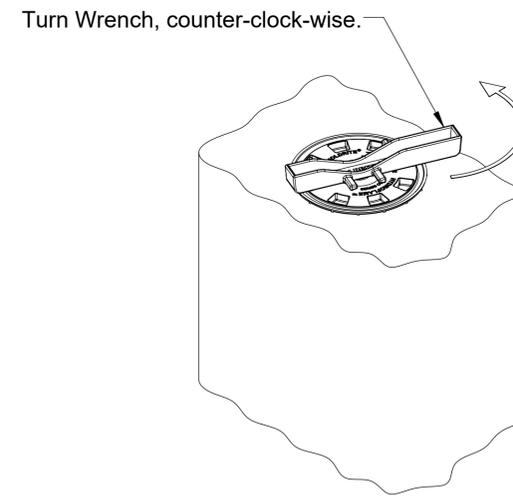

**REMOVE CAP WITH HF WRENCH  
OR BREAK-OUT WITH HAMMER.**  
(Fig. 7)

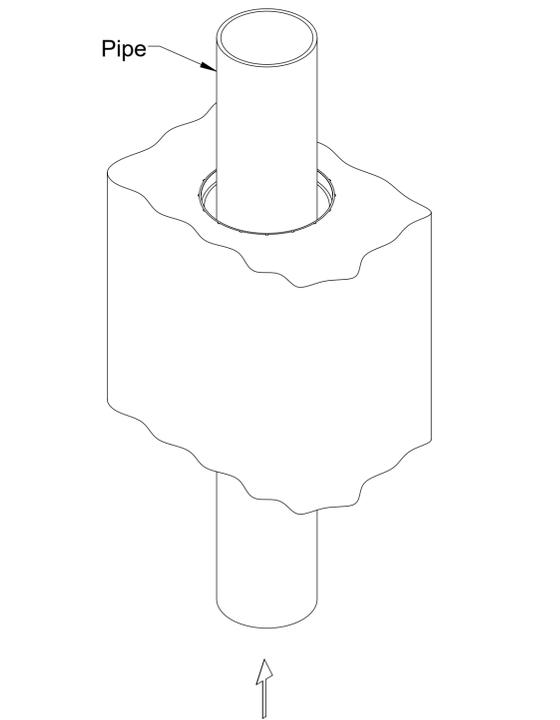

**INSTALL PIPE FROM BELOW.  
(SOAPY WATER EASES PIPE INSERTION)**  
(Fig. 8)