



REMOVE OUTER SLEEVE & UNSCREW CAP.
(Fig. 1)

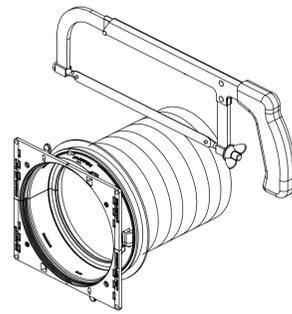


CUT SLEEVE TO DESIRED HEIGHT.
(CAN BE CUT AS SHORT AS 4-1/2")
(Fig. 2)

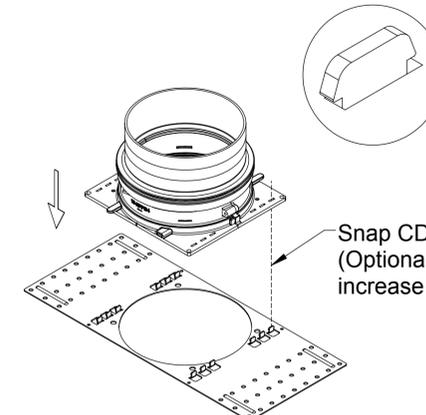


INSTALL CD PLATE.
(Fig. 3)

Snap CD Plate onto bottom of Base.
(Optional, #8 screws may be used to increase attachment strength.)

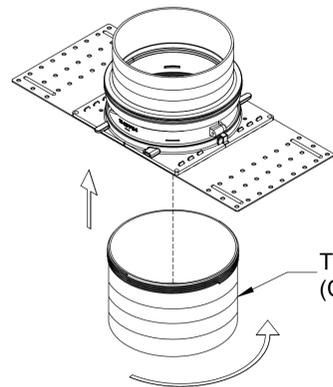


INSTALL INVERTED OUTER SLEEVE TO UNDERSIDE.
(Fig. 4)

Twist Outer Sleeve, clock-wise, until tight.
(Cut short, if desired)

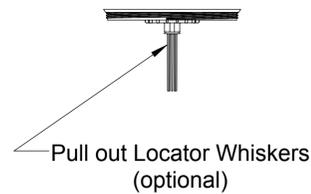


Pull out Locator Whiskers
(optional)

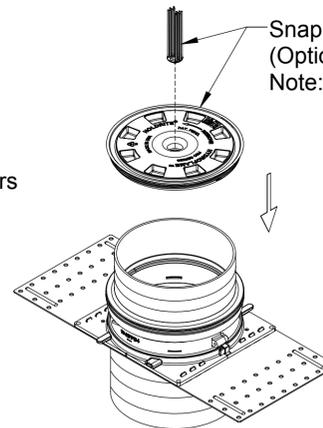


Snap Cap & Locator Whiskers onto Sleeve.
(Optional, screw can be used, for stronger attachment)
Note: Push Cap down onto Sleeve until it snaps on.
Rotate clockwise, slightly, if desired.


RE-INSTALL CAP & LOCATOR WHISKERS.
(Fig. 5)

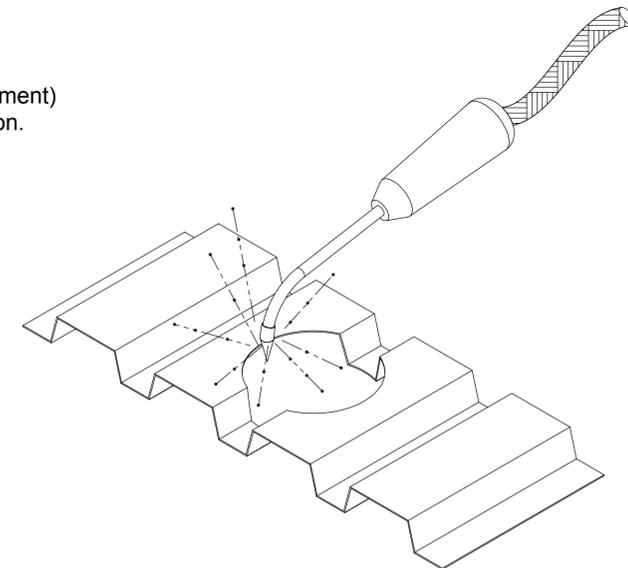


CUT HOLE IN METAL DECK.
(SEE SPEC. SHEET FOR HOLE SIZING CHART)
(Fig. 6)

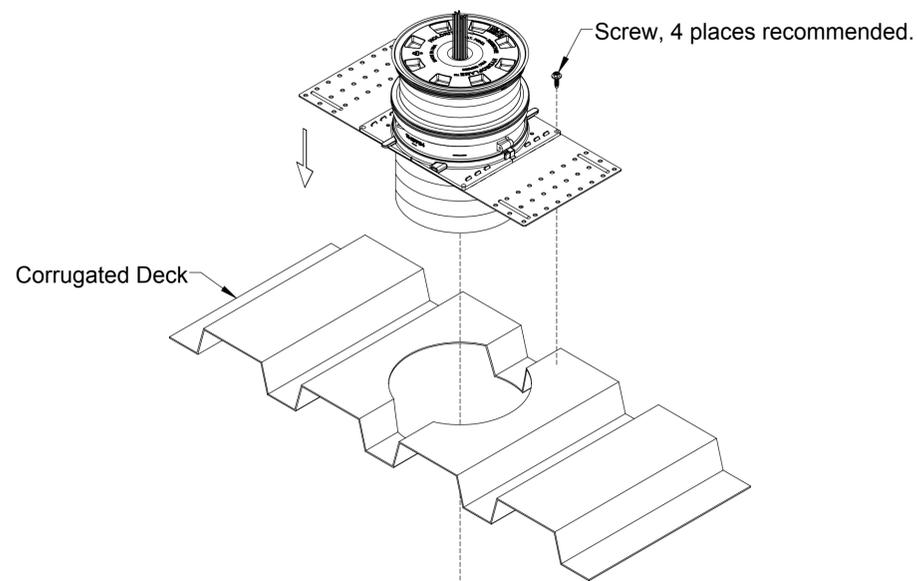




**INSTALL SLEEVE ASSY INTO CORRUGATED DECK.
(Fig. 7)**

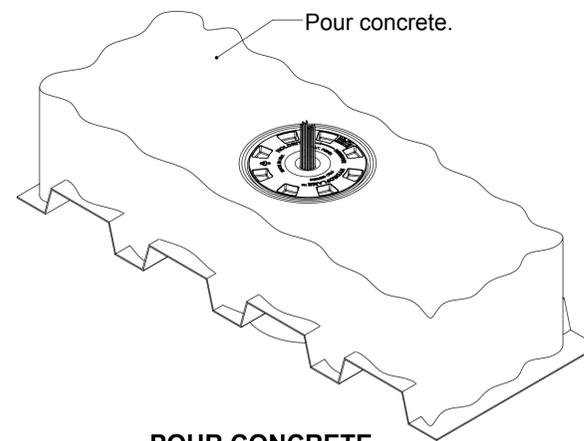

**POUR CONCRETE.
(Fig. 8)**

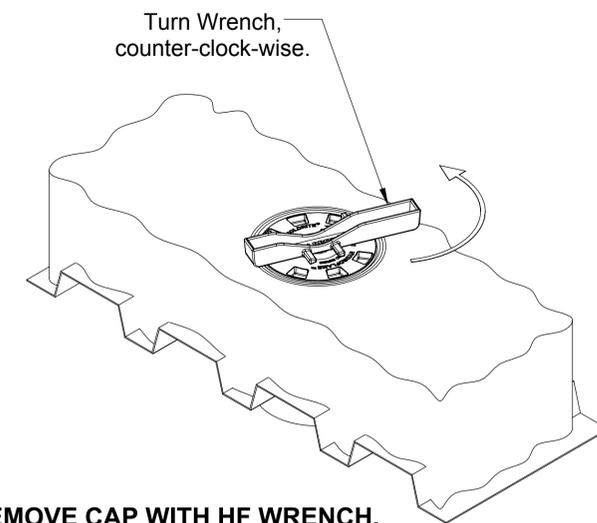

**REMOVE CAP WITH HF WRENCH,
OR BREAK-OUT WITH HAMMER.
(Fig. 9)**

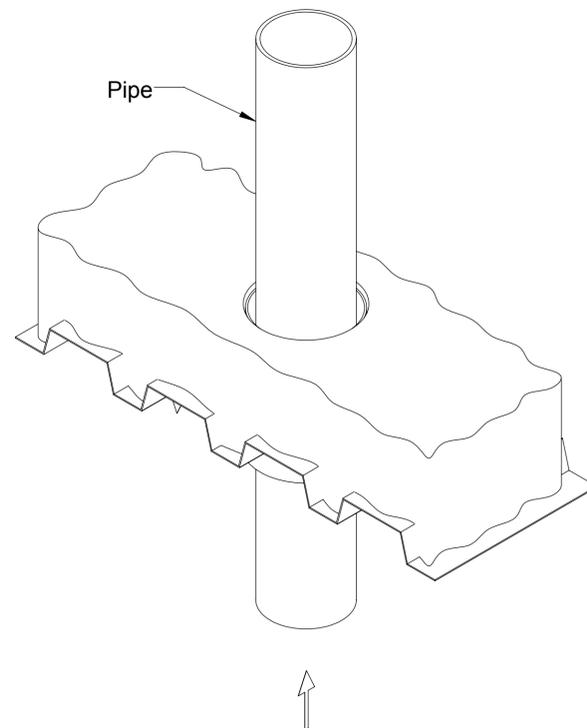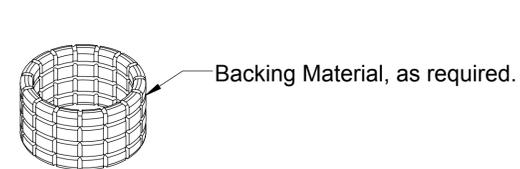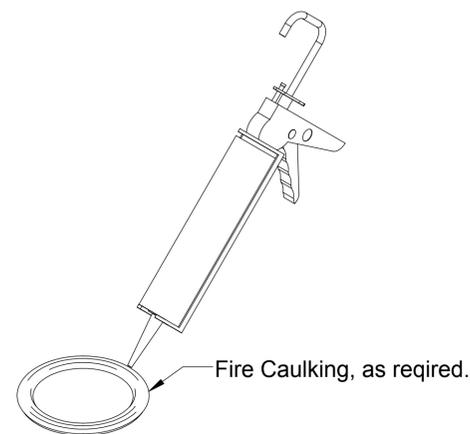

**INSTALL PIPE FROM BELOW, INSTALL BACKING
MATERIAL & FIRE CAULKING AS REQUIRED.
(SOAPY WATER EASES PIPE INSERTION)
(Fig. 10)**