


## INSTALLATION INSTRUCTIONS

PUSH TO SEAL BATH WASTE & OVERFLOW DR290

### DRAIN

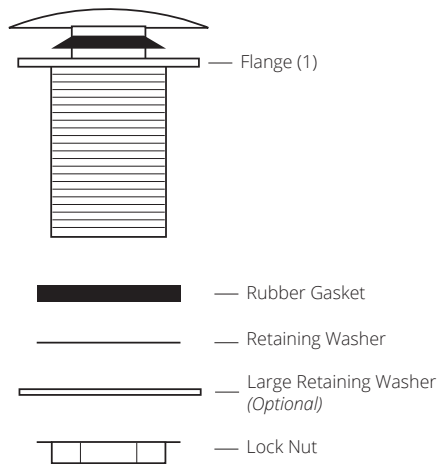


### DRAIN

1. Separate all mounting hardware as shown.
2. Apply 100% silicone (non-water based) to underside of flange (1) and then place directly into drain opening of the sink.
3. From underneath the sink slide the rubber gasket and the retaining washer and the lock nut onto the threaded seat and tighten into position.
4. Optional large washer available for use in place of retaining washer if necessary for larger hole opening.

### SIDE VIEW

### OVERFLOW

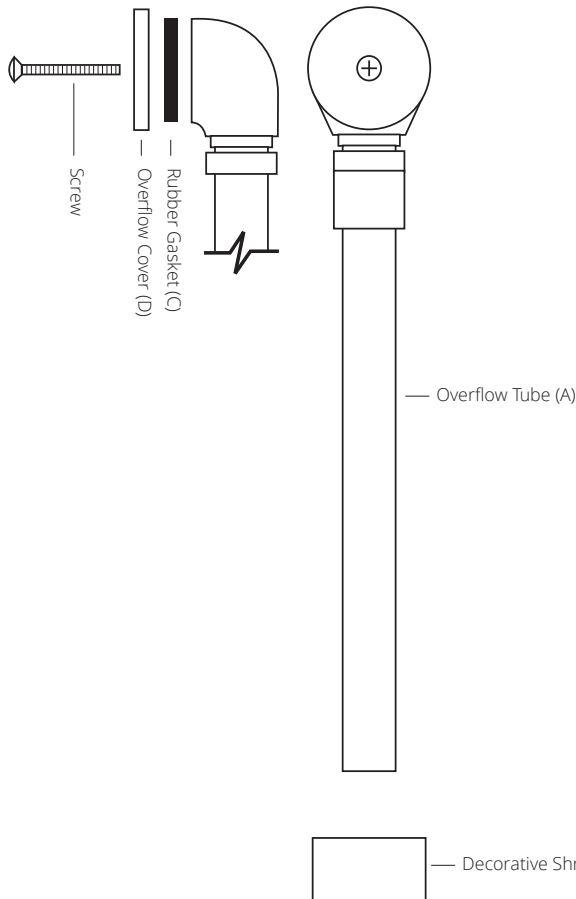

### OVERFLOW

1. Cut overflow Tube (A) to the appropriate length\*
2. Position decorative shroud (B) on the overflow tube so that it will be above the opening in the subfloor when installed.
3. To connect tube to overflow put rubber gasket (C) onto overflow tube (A) and align from the outside with the overflow hole of the tub and hold in place.
4. From the inside of the tub insert the screw through the overflow cover (D) into the mounting hole on the overflow tube (A). Carefully tighten the screw making sure the overflow cover is in the proper orientation (Openings toward the bottom).

\* We strongly recommend that the tub waste and overflow be installed by a professional installer. These instructions do not detail the necessary connections needed to connect the overflow tub and bathtub waste. Those connection will need to be made by the installer.