




The only Bath Waste you'll ever need.

2-in-1 Offset & Direct Bath waste configurations in one bag - and no wasted parts!
Available in ABS and PVC models, with multiple kit types and closure mechanisms.

Your job just got easier.®

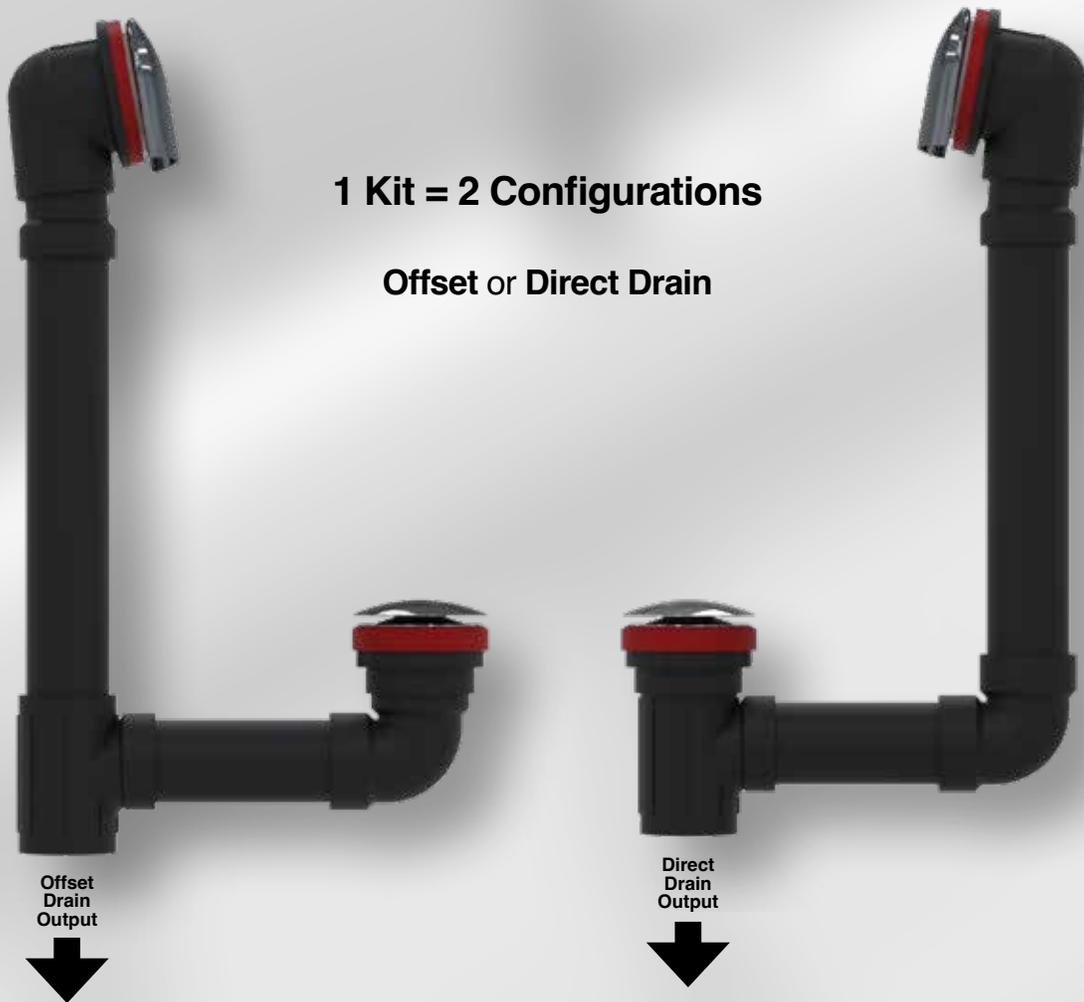

Contractors - No need to keep both Offset AND Direct Drain Bath Waste kits in your truck.

Wholesalers - Reduce your inventory costs AND maximize your shelf space.

OSBPBT1-USCAN0223



The only Bath Waste you'll ever need.

2-in-1 Offset & Direct Bath waste configurations in one bag - and no wasted parts!
Available in ABS and PVC models, with multiple kit types and closure mechanisms.

Your job just got easier.®



Contractors - No need to keep both Offset AND Direct Drain Bath Waste kits in your truck.

Wholesalers - Reduce your inventory costs AND maximize your shelf space.

OSBPBT1-USCAN0223