


# INSTALLING 5611 / 5611T CORNER GLASS SHELF

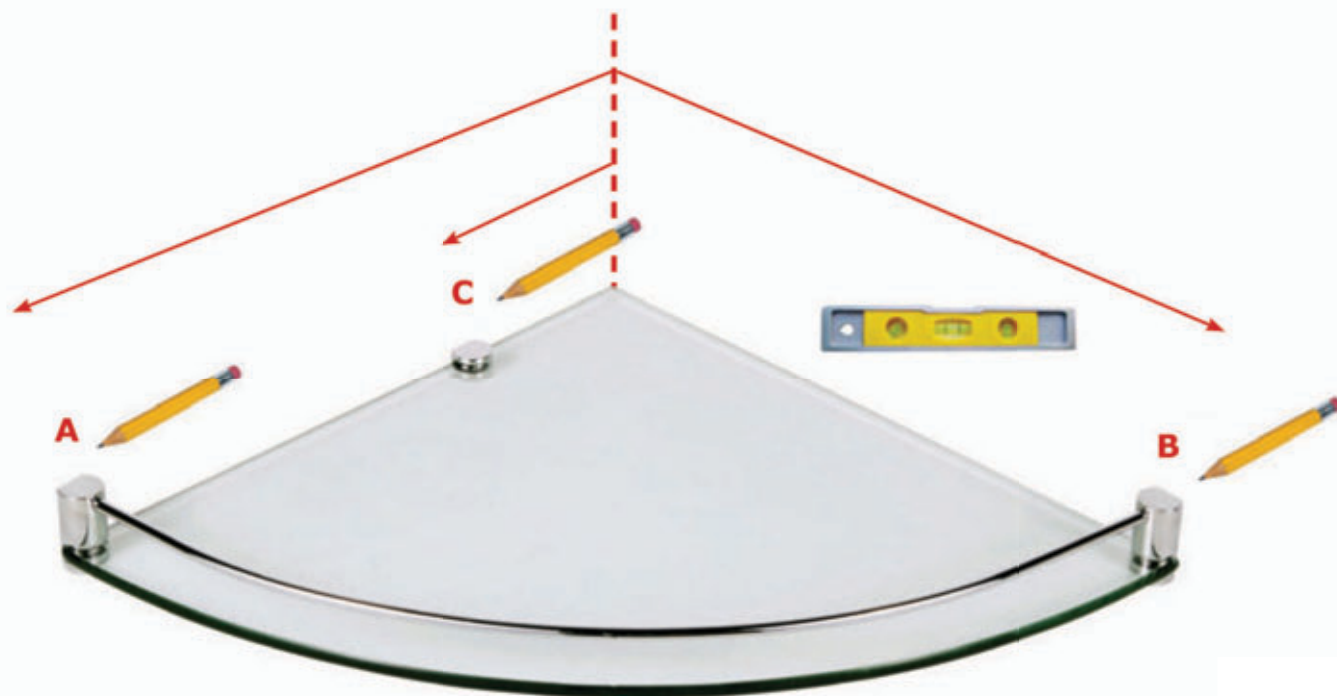

## Preparing Glass Shelf

1. Attach railing to glass shelf.
2. Dry fit and level shelf with attached railing to desired position in the corner of wall surface (tile or drywall).
3. Mark the wall surface at the corner with a pencil. Mark the position of the outer brackets [A & B]. Mark the position of the 3rd floating bracket [C] to either the left or right of centre.
4. Slide glass shelf out of brackets. Align the bracket [A/B] on the wall with markings and trace a circular line inside the 'U-shaped' channel to mark position of screw.
5. Align the Floating bracket [C] to the marking on the wall and trace a circular line inside the 'U-shaped' channel.

## Installing Wall Brackets

6. Using a Phillips screw driver, install drywall anchors at the marked installation points. (Please note the wall anchors *are not suitable when installing on tile/backer board surfaces.*)
7. Install the floating wall [C] bracket to either left or right of centre.
8. Position the bracket [A/B] on the plugs and screw brackets to the wall.
9. Re-install the glass shelf into 'U-channel' and tighten the set screws to stabilize the shelf.



**x 3 Wall Plugs Provided**  
Suitable for Drywall Installation



LaLOO ACCESSORIES  
laloocanada.com  
866.305.2566  
SERVICE@laloocanada.com