


Important: Review and read **complete** Instructions before installation.


*For ABS Models, use Certified ABS Solvent Cement only. For PVC Models, use Certified PVC Solvent Cement only. For Kits (less pipe), use only Certified ABS or PVC DWV Pipe.

Step 1

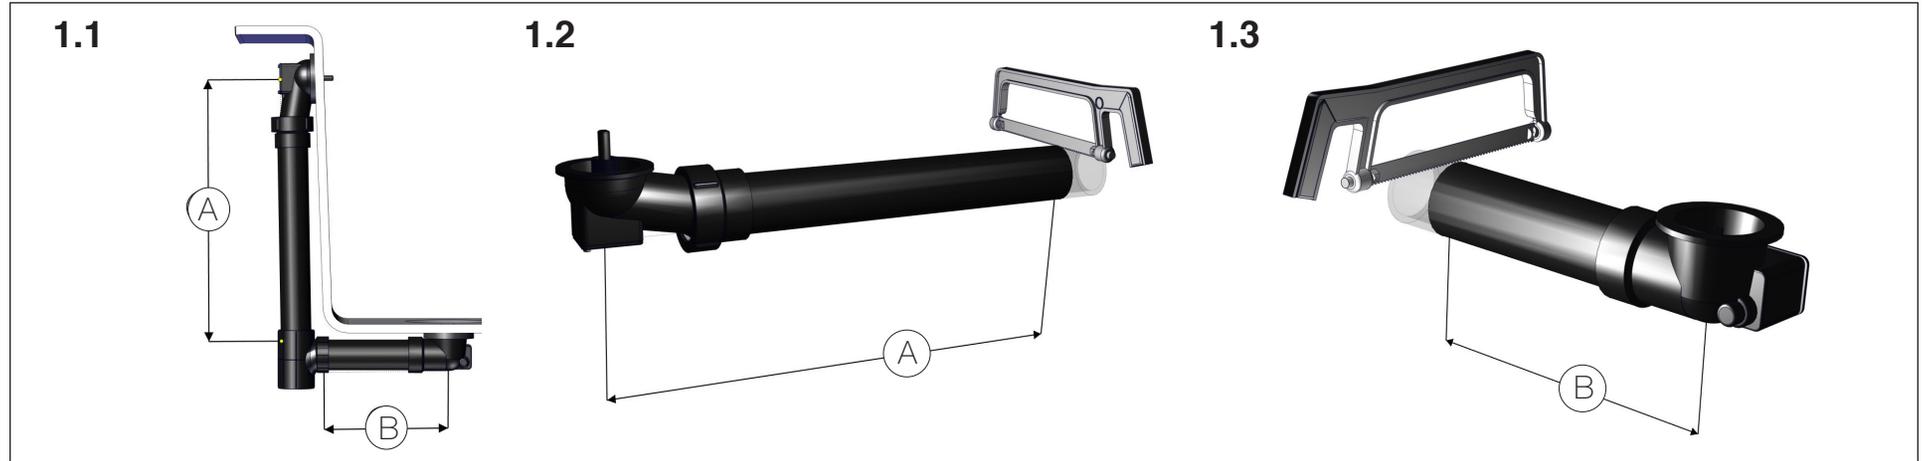


1.1: When measuring, dry fit tubing approximately 1" (2.5cm) into Tee, overflow Ell and drain Ell. Cut accordingly.

Step 2

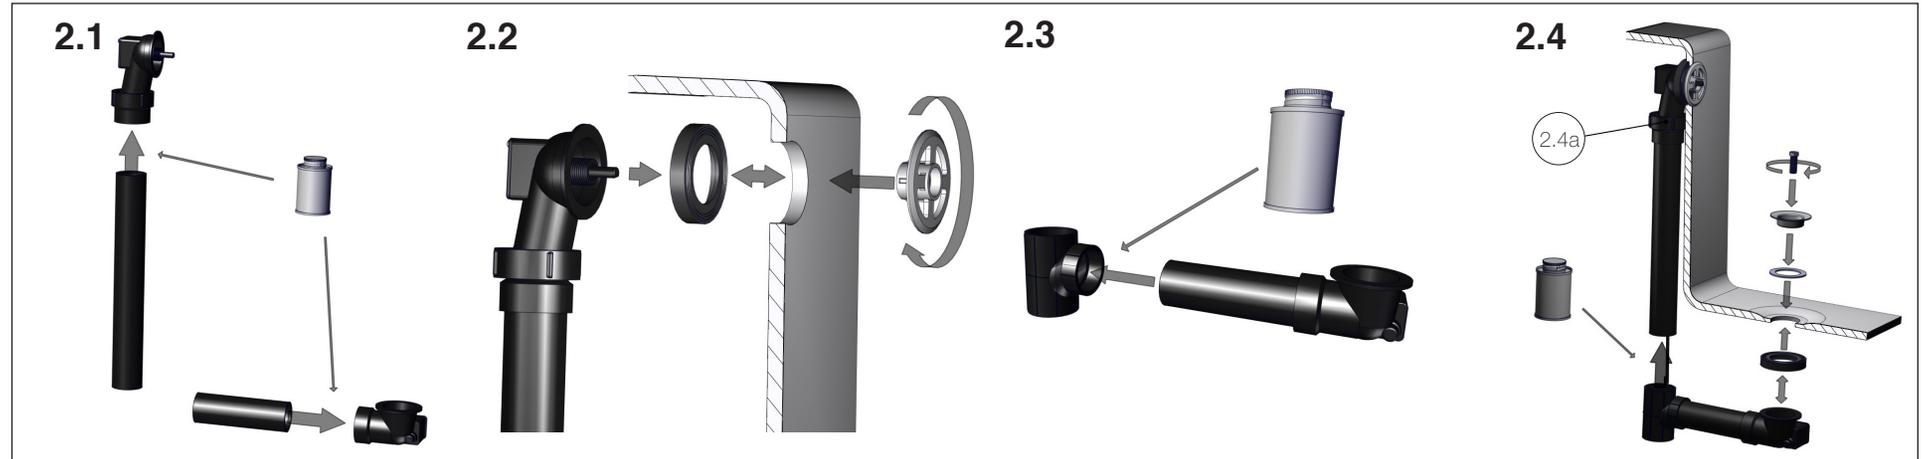

2.4a: After gluing all joints*, hand tighten Nut until snug.

Step 3

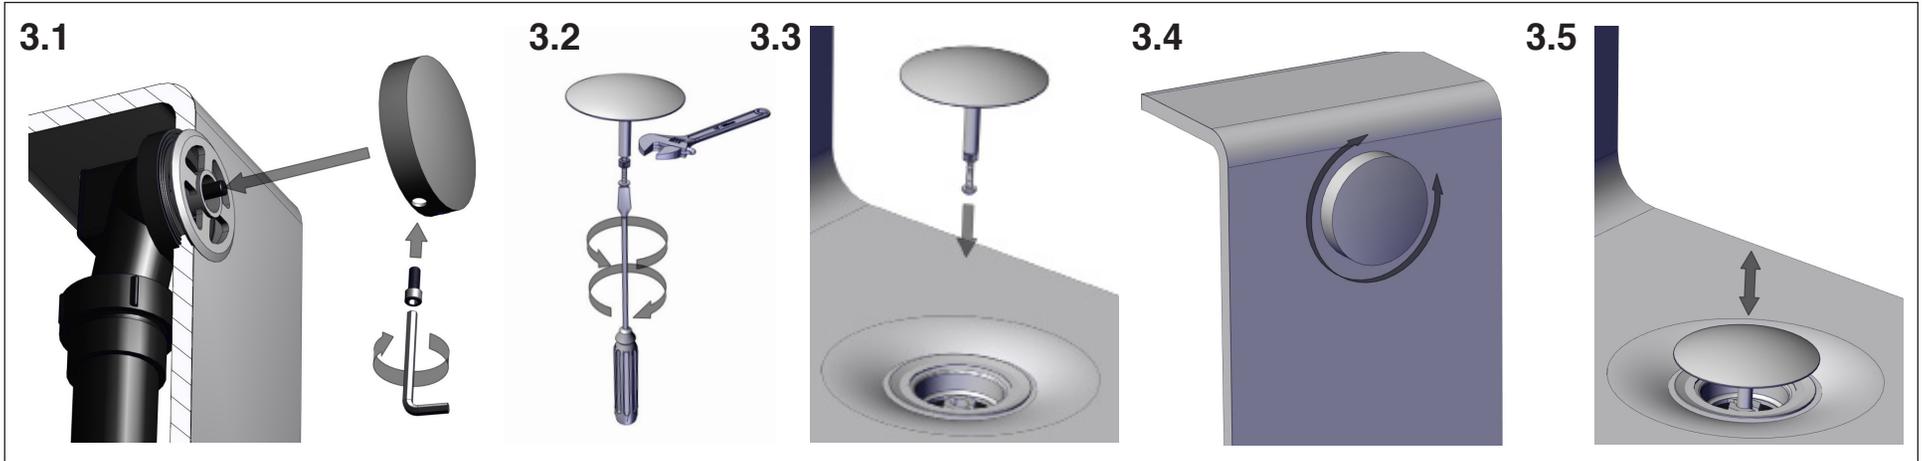

Important Note:

The installation of an Access Panel for maintenance and repair is recommended.

Certification



Tools required:



Hack Saw



ABS or PVC Solvent Cement



Adjustable Wrench



Hex Key (Supplied)



Slotted Screwdriver

SCAN



Scan the QR Code to view the installation video

Questions?

Call us toll free at 1.877.314.6040 or visit:
www.osb.ca (Canada)
www.osbplumbing.com (USA)

CABLE-DRIVE® is a Registered Trademark of Oakville Stamping and Bending Limited (OS&B®)