

INSTALLATION GUIDE

ALLARD TUBS


Applicable Models



Recommended Tools



SPECIFICATIONS

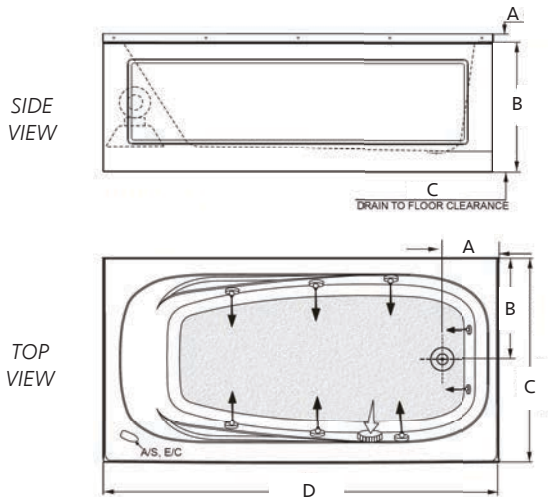

VIEW	DIMENSIONS*			
	A	B	C	D
SIDE	1" (25mm)	20" (508mm)	3" (76mm)	
TOP	6.75" (171mm)	15" (381mm)	32" (813mm)	60" (1524mm)

* Tolerance on dimensions: $\pm 0.25"$ (6mm)

INSTALL NOTES

Structural Support: floor under the tub must be capable of supporting at least 50 lb./ft. (240 kg/m) with the weight concentrated at the 5 legs of the tub.

The rim of the bath is not designed to carry weight and should be supported as shown in the following install steps


Any finishing material that overlaps or touches the bath must be fully self-supporting.

The bath must be level along the top edges in both directions to ensure proper drainage.

If required use hardwood shims and /or trim the legs to level the bath on an uneven floor.

INSTALL STEPS

- 1 Position and level the tub. Use the adjustable legs to level the tub and support the tub from the floor.

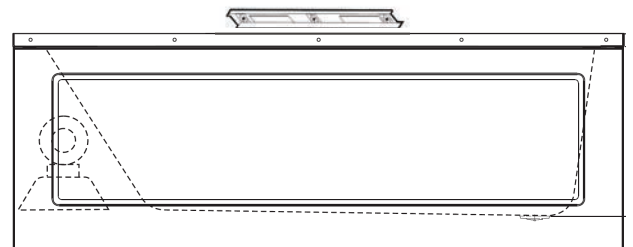


Disclaimer: please hire a specialist if you feel you are unable to install yourself. Teago cannot be held liable for a faulty install or damage done by it.


INSTALLATION GUIDE

ALLARD TUBS

- 2 Pre-drill pilot holes. Then fasten the flange of the tub to the wall studs with 5/8" (16mm) or longer screws. For the tub to be installed correctly a dry wall screw must be driven through the tile flange into each stud around the alcove.

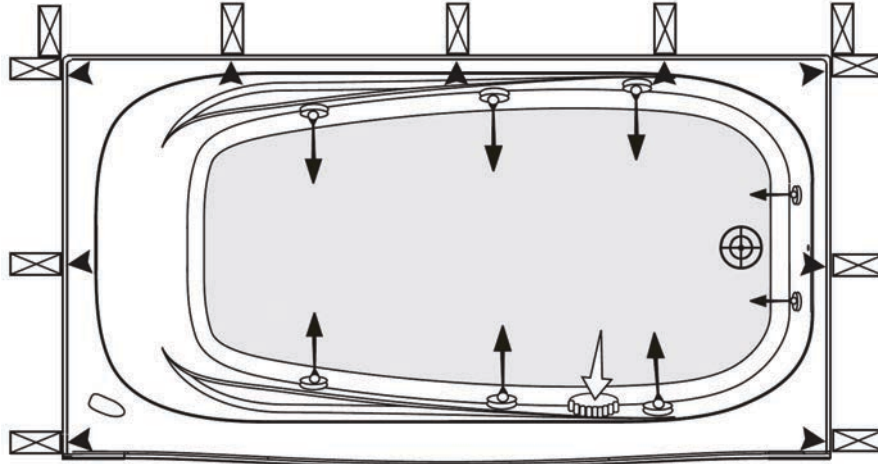

- 3 Finish the wall as shown in the image below. Apply additional silicone to seal any gaps in the corners. Clean off excess silicone on the surface of the tub immediately with a cloth and warm water.

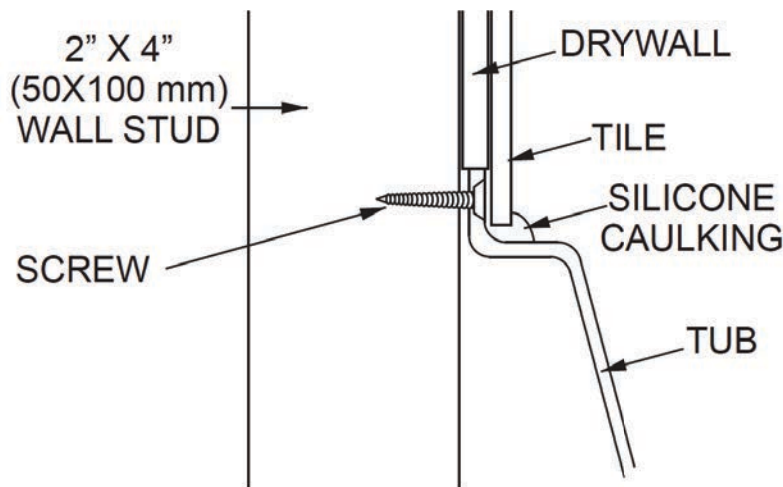

MAINTENANCE

The acrylic sheets, which forms the surface of your bathtub, provides one of the most durable surfaces found in modern bathrooms. Keep it bright and smooth with mild liquid household detergent, soap and water, or foaming cleansers. **NEVER** USE aromatic solvents, abrasive cleaners, scouring compounds or pads, strong liquid cleansers, or other material that could damage or dull the surface of the bath. Restore surface gloss by applying a very fine rubbing compound and polishing the surface by hand or with a power buffer. Finish with an application of good quality automotive wax.

Note: Please note these are only general installation guidelines. Steps may vary from time to time depending on the circumstances. Do not hesitate to contact us if you require any further information. Our contact info can be found at teago.ca.