



INSTALLATION GUIDE

SHOWER BASES


Applicable Models

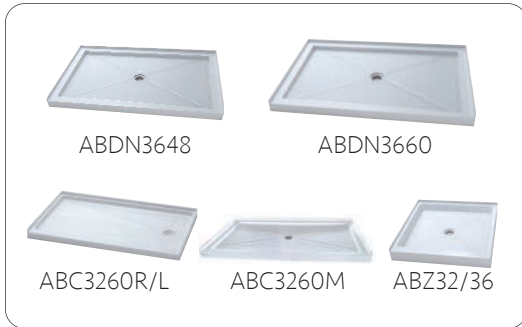


Recommended Tools

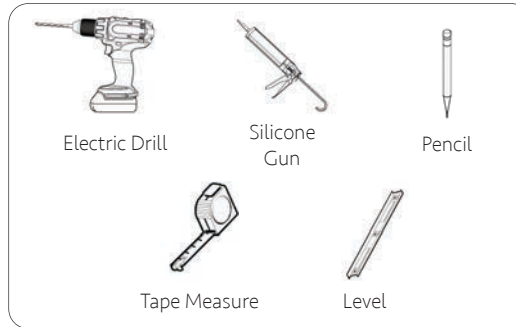

Recommended Parts

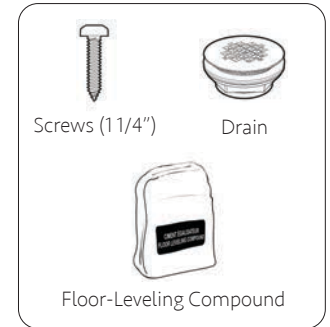

SPECIFICATIONS

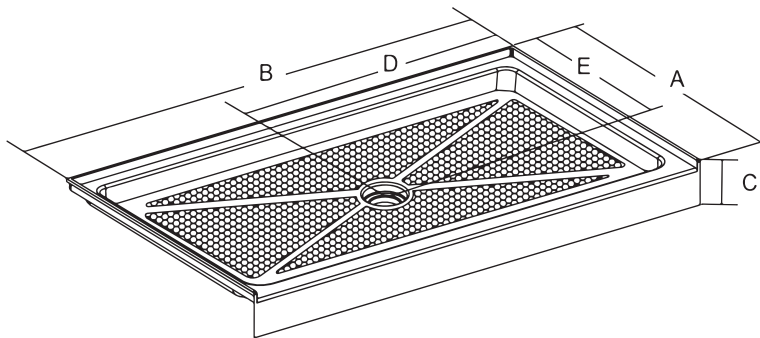


MODELS	DIMENSIONS*				
	A	B	C	D	E
ABDN3648	35.9" (912mm)	47.9" (1216mm)	3.5" (90mm)	23.9" (608mm)	17.25" (438mm)
ABDN3660	36" (914mm)	59.9" (1520mm)	3.5" (90mm)	29.9" (760mm)	17.25" (438mm)
ABC3260R/L	31.9" (810mm)	59.9" (1520mm)	3.5" (90mm)	8" (203mm)	16" (405mm)
ABC3260M	31.9" (810mm)	59.9" (1520mm)	3.5" (90mm)	29.9" (760mm)	16" (405mm)
ABZ32	31.9" (810mm)	31.9" (810mm)	3.5" (90mm)	16" (405mm)	15.1" (385mm)
ABZ36	36" (914mm)	36" (914mm)	3.5" (90mm)	18" (457mm)	18" (457mm)


* Tolerance on dimensions: $\pm 0.25"$ (6mm)

INSTALL STEPS

- 1 Cut out floor based on D & E dimensions. A 6x6" (150x150mm) cut-size is recommended. Also, use floor-leveling compound to level floor.

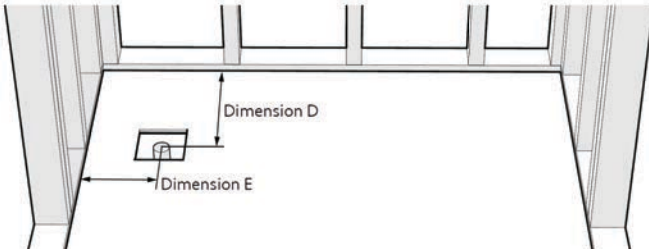

- 2 Install 2x4' on the floor plate between studs along the edge of the shower base for flange support. Then, place shower base in position to ensure that the drainage pipe matches the location of the shower base. Now remove base for the next step.

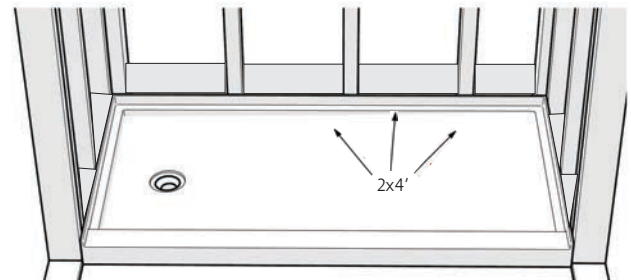


Disclaimer: please hire a specialist if you feel you are unable to install yourself. Teago cannot be held liable for a faulty install or damage done by it.




INSTALLATION GUIDE

SHOWER BASES

- 3 Ensure that silicone is beaded around drain body & shower base before the drain is installed on the base.

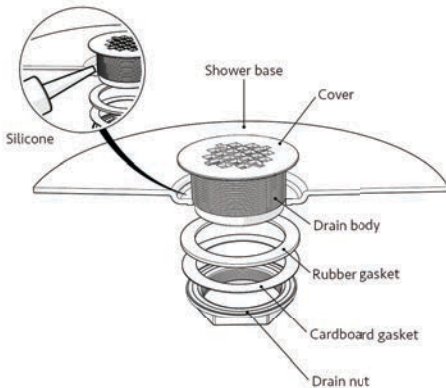


- 4 After placing base onto bathroom floor, use the level to check that each shower base corner is level. Use shims if necessary. Now you can install the drain.

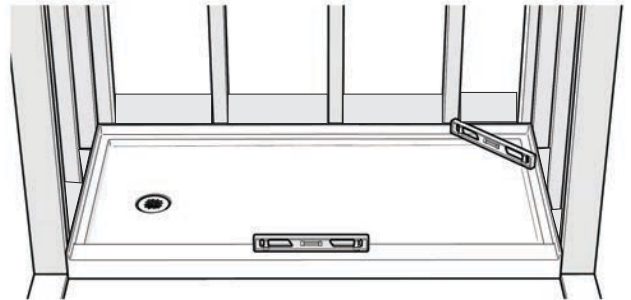


- 5 To test the drain, plug the drain & fill the base with a small amount of water. Check for leakages around the drain. Then unplug the drain & ensure a smooth flow.



- 6 Use 1 1/4" screws to fasten shower base to studs and backing every 12" (305mm).

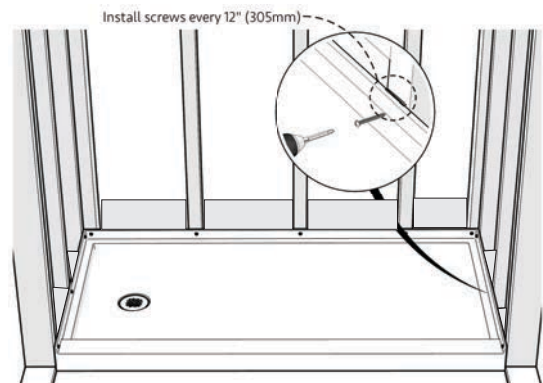

- 7 Here are some best practices for getting the best finish & water-tight seal.

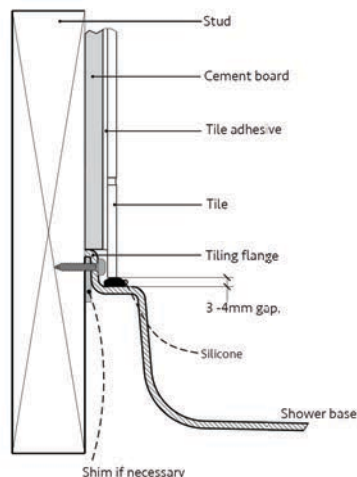

Note: Please note these are only general installation guidelines. Steps may vary from time to time depending on the circumstances. Do not hesitate to contact us if you require any further information. Our contact info can be found at teago.ca.



Massachusetts Code: Approved



10-Year
Warranty

teago.ca