



TEAGO
Bath Solutions

INSTALLATION GUIDE

BATH FURNITURE

Applicable Models



KICK 400-16



SLICE 600-24



SLICE 750-30



SLICE 900-35



SLICE 1200-47

Recommended Tools



Electric Drill



Drillbit (8/5)



Tape Measure



Silicone



Pencil



Screwdriver



Level

Recommended Parts



Screws



Drywall
Plugs




Washers


Disclaimer: please hire a specialist if you feel you are unable to install yourself. Teago cannot be held liable for a faulty install or damage done by it.

INSTALL STEPS


1

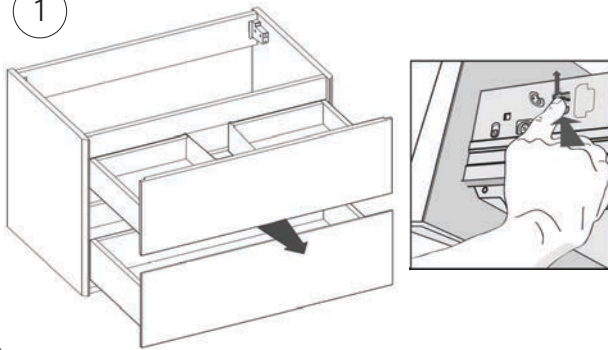


2

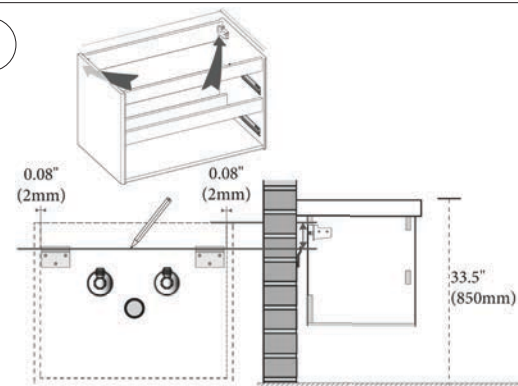


3

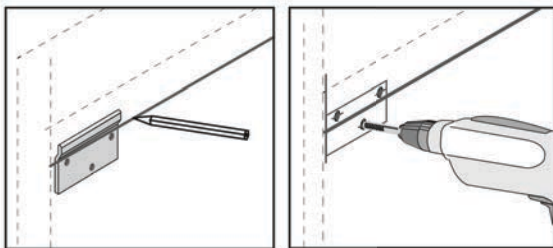


4

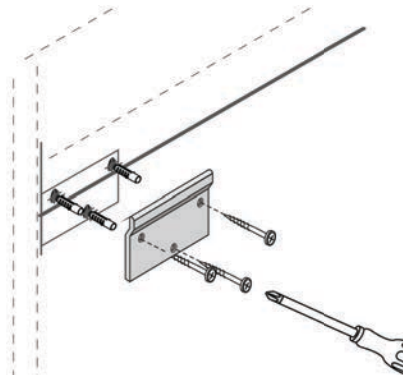

5

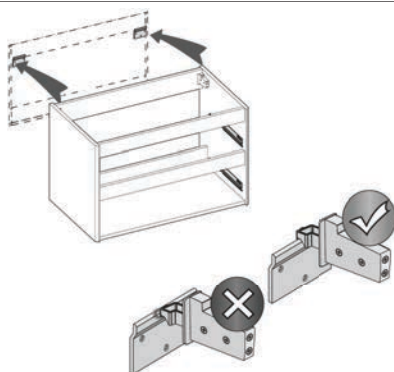

6

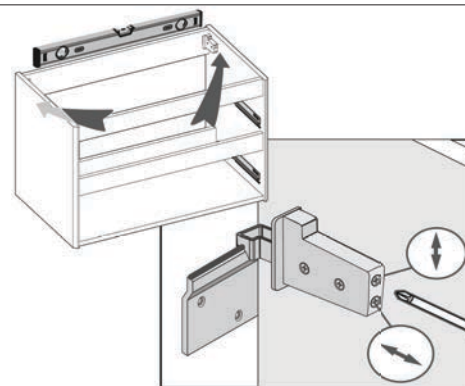

Massachusetts Code: Approved



1-Year
Warranty

teago.ca