

881806 SHOWER PANEL INSTALLATION GUIDE

Thank you for choosing Valley Acrylic Products. This installation manual provides general information on the installation of our products.

All the information in this guide is based upon the most recent product information available at the time of this publication. Valley Acrylic reserves the right to make changes to product characteristics, packaging, or availability at any time without notice.

Thank you for your purchase!



Please unpack and inspect all parts carefully to make sure they are complete and not damaged. If any parts are damaged or missing, please contact the authorized dealer you purchased the product through.

BEFORE YOU BEGIN

- Please read these instructions carefully before beginning your installation.
- Consult your local building codes to ensure that your installation complies with local standards.
- Remove the unit from its packaging. Before disposing, packaging and taking unit from your sales person, inspect the unit to make sure it is in good shape.
- Should inspection reveal any damage or defect in the finish, please contact the authorized dealer you purchased the product through. The warranty does not cover damages or defects in the finish once the unit has been installed. Valley's responsibility for shipping damages ceases upon delivery of the product in good order to the carrier. All complaints regarding damage due to transport must be made directly to the carrier.
- Please refer to your product's specification sheet and ensure that both your unit and build plan measure match the stated sizes.

REQUIRED TOOLS

- | | |
|------------------|------------------------|
| • Measuring Tape | • Level |
| • Pencil | • Safety glasses |
| • Electric drill | • Water-resistant glue |
| • Screwdriver | • Silicone sealant |
| • Pliers | • Wrench |




Before assembly, flush the water supply pipes thoroughly to drain debris inside (allow the water to run with the main stopcock open for 3min), otherwise dirty particles might affect the function of the shower panel.

SPECS


SIDE VIEW

FRONT VIEW


BACK VIEW

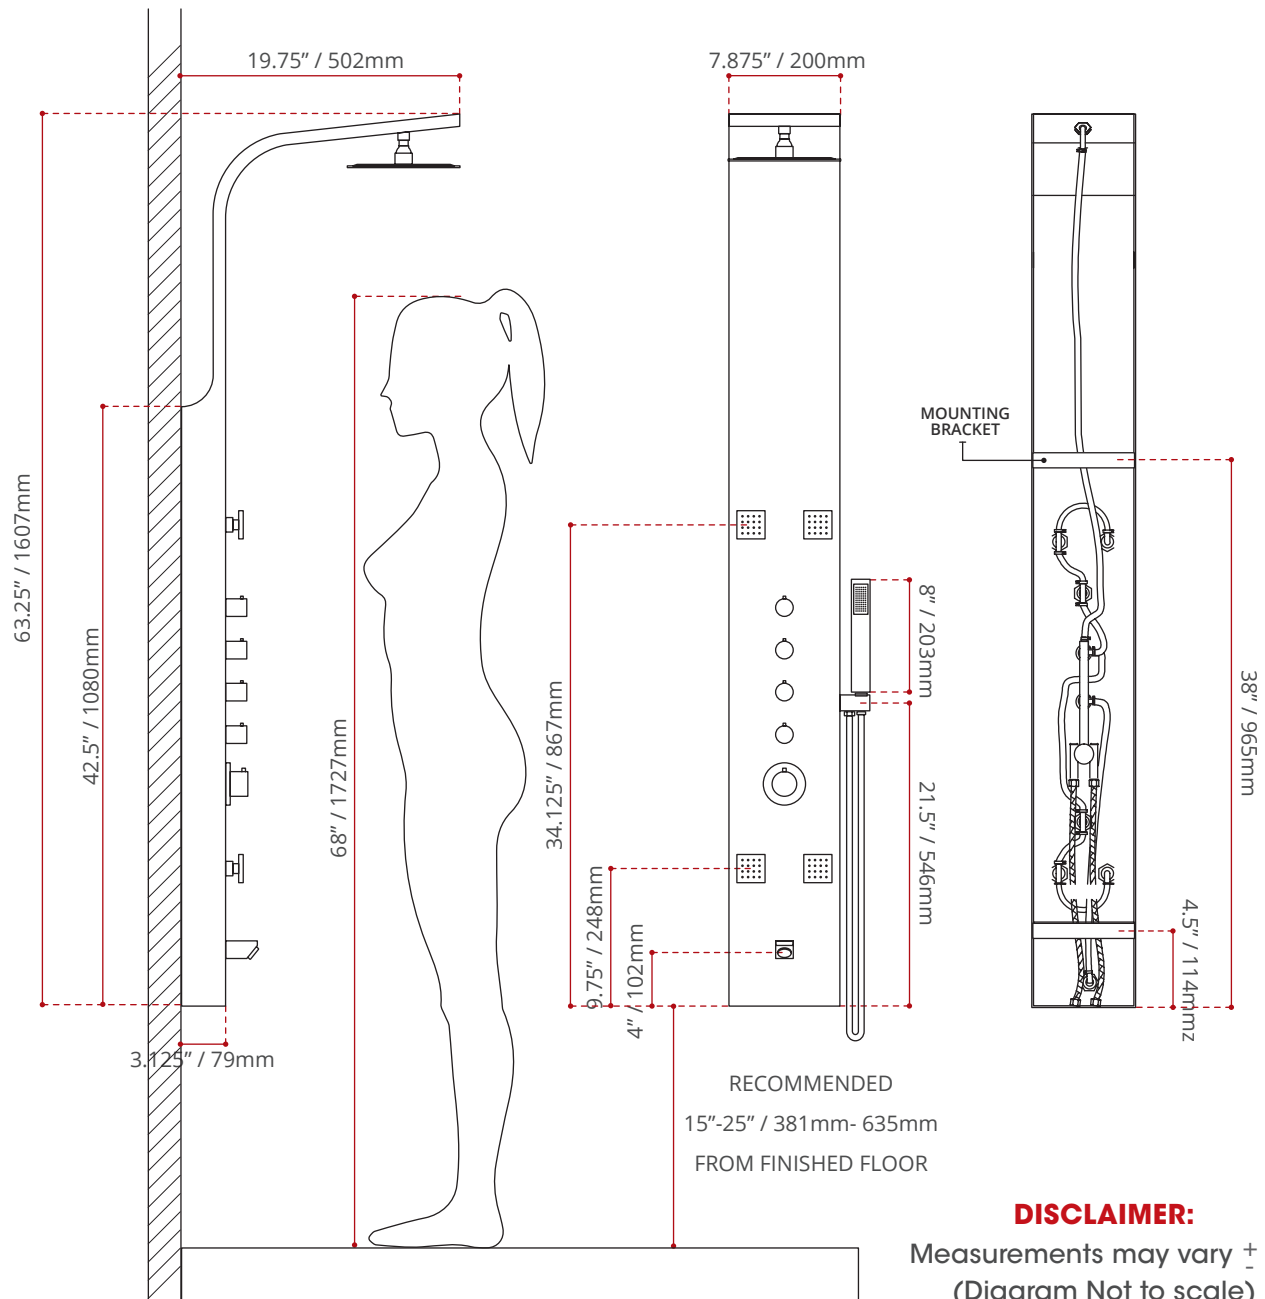


- 01** Ensure that the brackets are level.
Mark the brackets screw location.

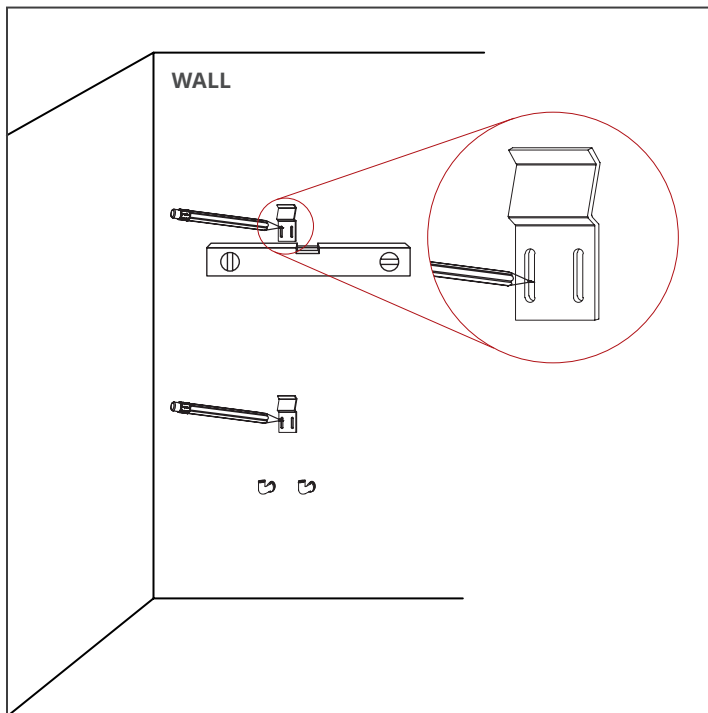


- 02** Remove the brackets.
Drill the screw holes. Tighten the wall anchor.

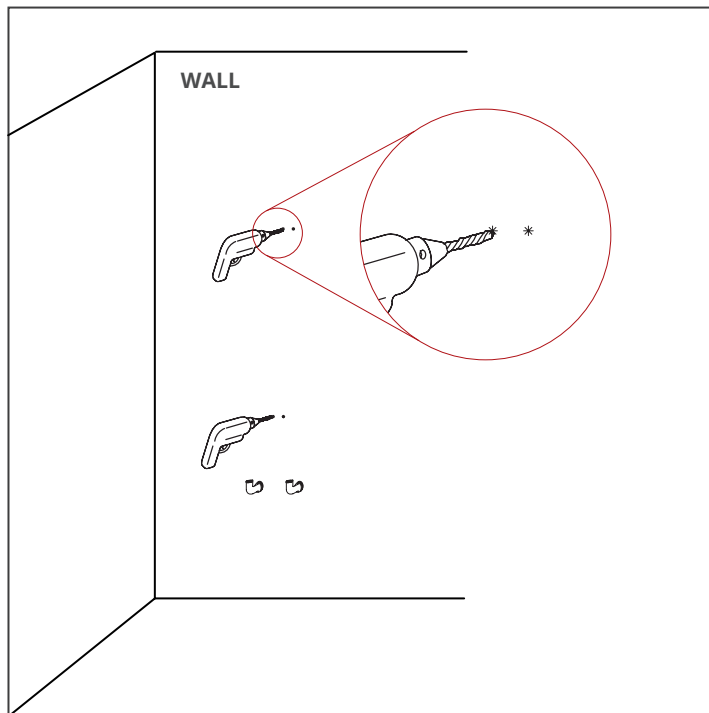


- 03** Securely screw the brackets base into place.

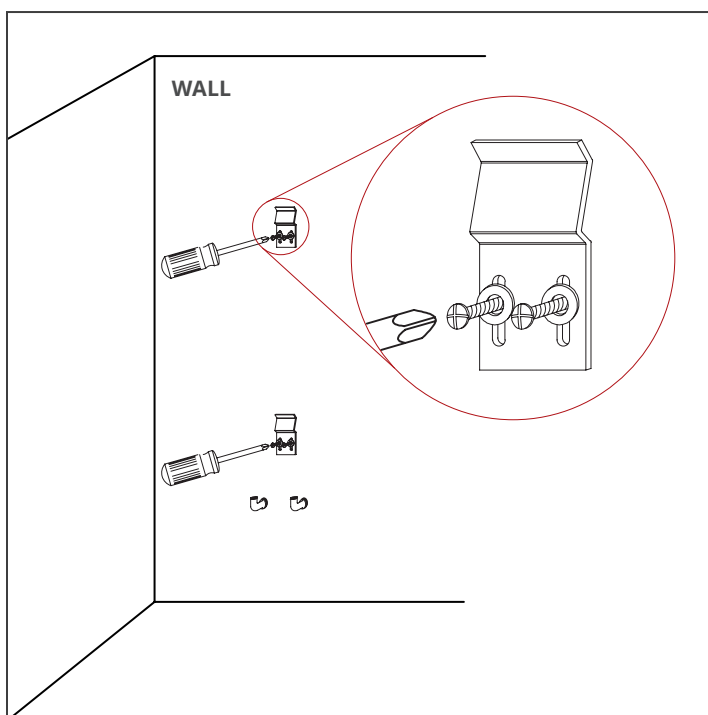


- 04** Connect the embedded hot and cold water supply.
Place the shower panel into place.

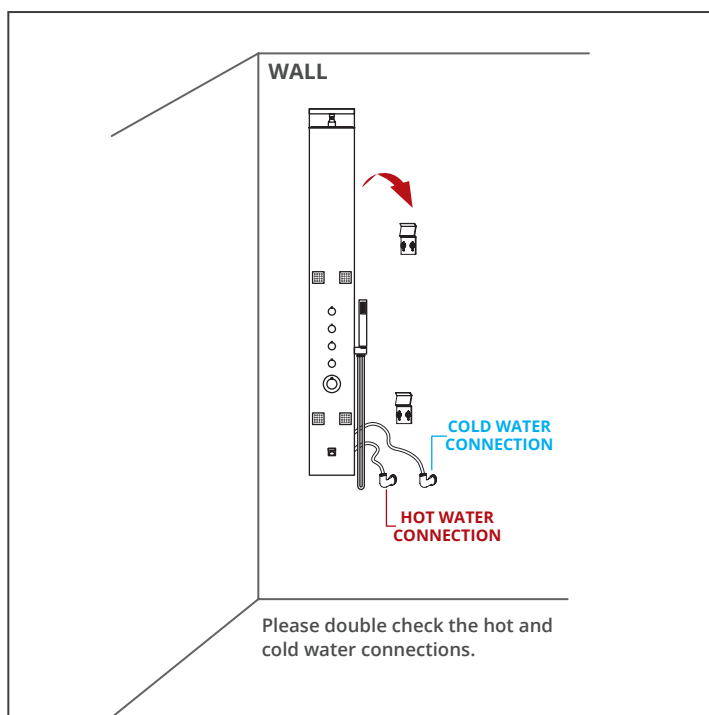

05 Apply silicone between the edges of the shower panel.

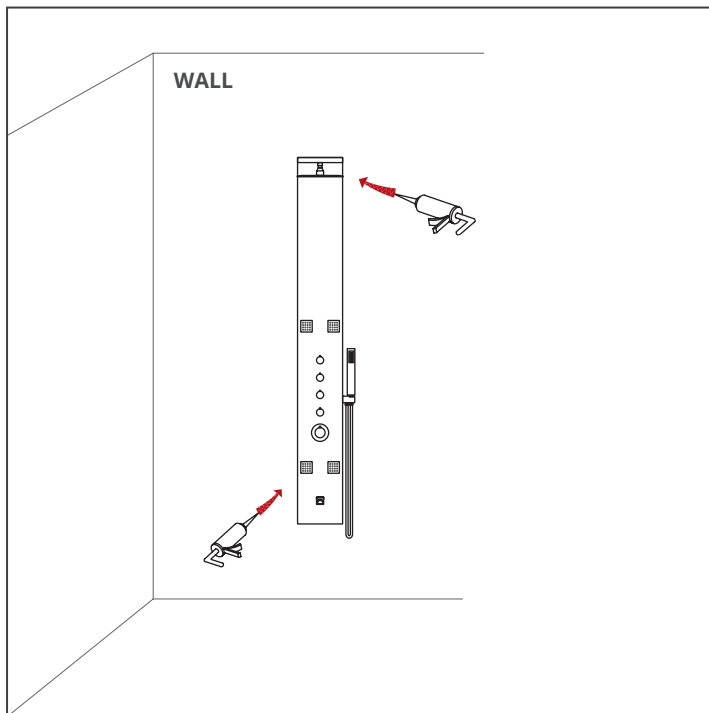

06 PLEASE ALLOW 24 HOURS FOR THE SILICONE TO FULLY CURE BEFORE USING THE SHOWER PANEL.

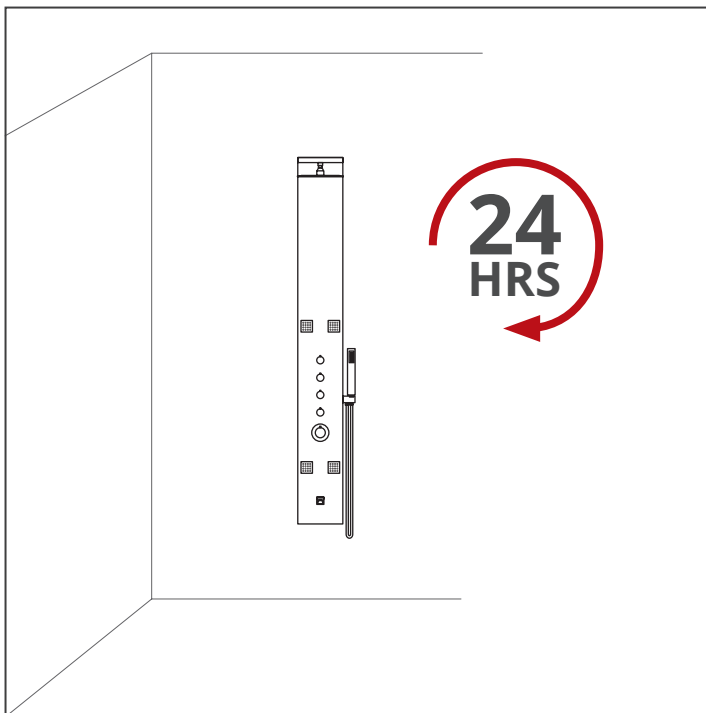

MAINTENANCE

- For daily cleaning, use hot soapy water and vinegar.
- Clean any water stains and dirt on the front panel using a soft cloth only to avoid scratching.
- Avoid using any Acidic or Alkaline cleaners to prevent corrosion.
- If your water supply is contaminated with debris buildup, please avoid use to prevent blockages.
- If you encounter low water pressure the filter gasket of the inlet hoses may need to be cleaned and/or the cartridge.



Congratulations! You are now a part of the Valley Acrylic family, and an owner of a great product!