

WALL MOUNT BASIN INSTALLATION GUIDE

This installation guide can be used to install any of the following wall mount basins

- VA9235 • VA9236 • VA7094B • ABELE (VA3621) • BELLA (VA1717) • CHI (VA2419)
- CHISD (VA2419SD) • DIVINE (VA2416) • DESIRE (VA6019) • KARL (VA4819)
- KARO (VA4019) • LIA (VA4719) • LIA mini (VA2516) • OVO (OVO2419) • PETIT (VA-A400)

INSTALLATION GUIDE

Thank you for choosing Valley Acrylic Products. This installation manual provides general information on the installation of our products.

BEFORE YOU BEGIN

- Read all instructions before beginning installation.
- Consult local building codes to make sure the installation complies with standards.
- Remove the unit from its packaging. Before disposing of packaging, inspect the unit to make sure it is in good condition.
- Should inspection reveal any damage or defect in the finish, Contact Valley Acrylic Bath Ltd. at 1-877-398-8827. The warranty does not cover damages or defects in the finish once the unit has been installed. The manufacturer's responsibility for shipping damages ceases upon delivery of the product in good order to the carrier. All complaints regarding damage due to transport must be made directly to the carrier.

CAUTION

RISK OF PERSONAL INJURY OR PRODUCT DAMAGE. HANDLE WITH CARE. PRODUCT CAN BREAK, CHIP OR CAUSE INJURY IF HANDLED CARELESSLY. GET HELP LIFTING THE LAVATORY.

REQUIRED TOOLS




Safety Goggles




Phillips screwdriver



Silicone Gun

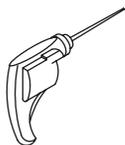

Cordless Drill



Pencil




Tape Measure



Wrench


01

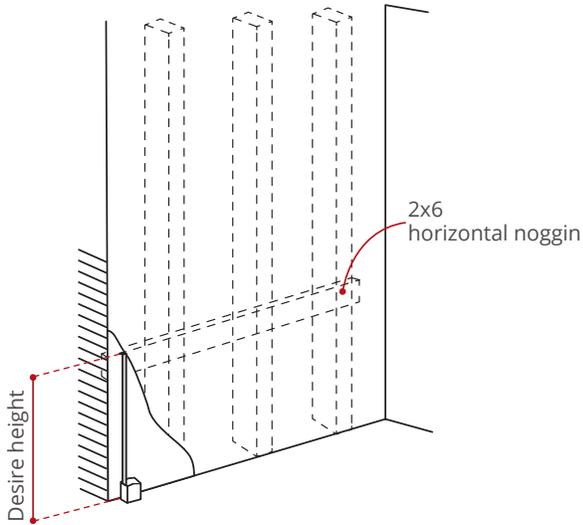

Measure the desire height of the basin and install a 2x6 horizontal noggin.


We recommend the height be no more than 34 inches above the floor. Between 31 inches upto 34 inches.

02

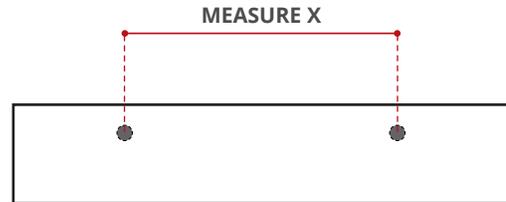


Measure the distance between the two mounting holes on the basin

03

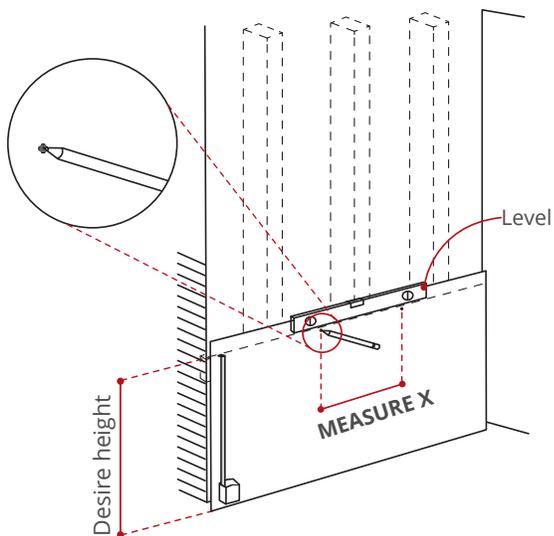


Using a pencil, mark the position of each mounting hole accordingly to the distance you measured of the basin mounting holes. **Make sure the mark position is level.**

04

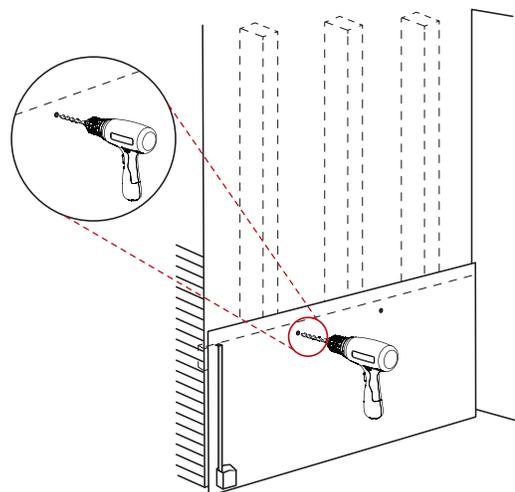


Proceed to drill holes accordingly

05

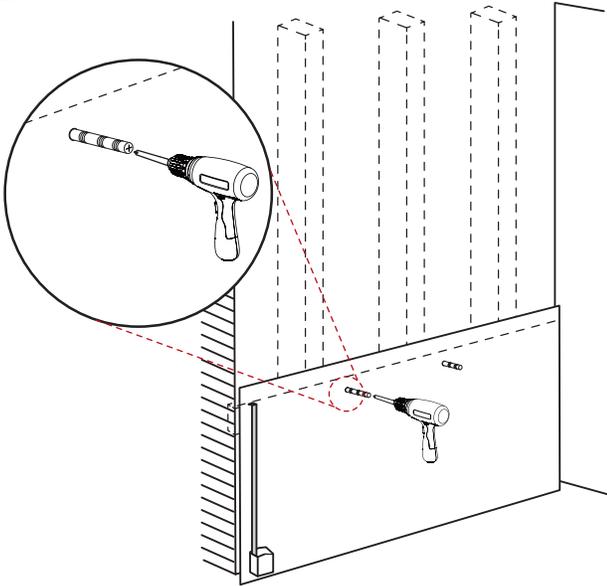


Screw in the 3/8 mounting bolts into place

06

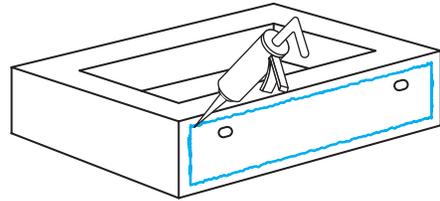


Apply a thin line of silicone on the back of the basin

07

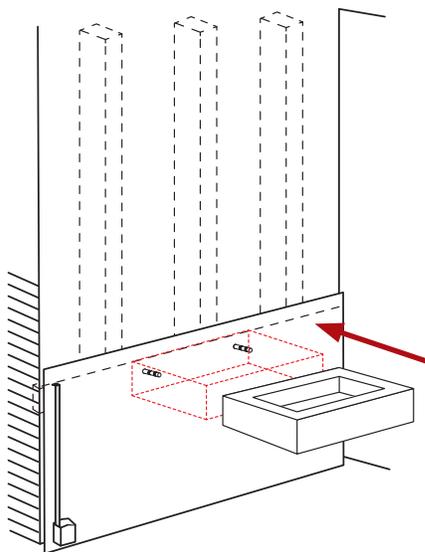


Install the Basin into place

08

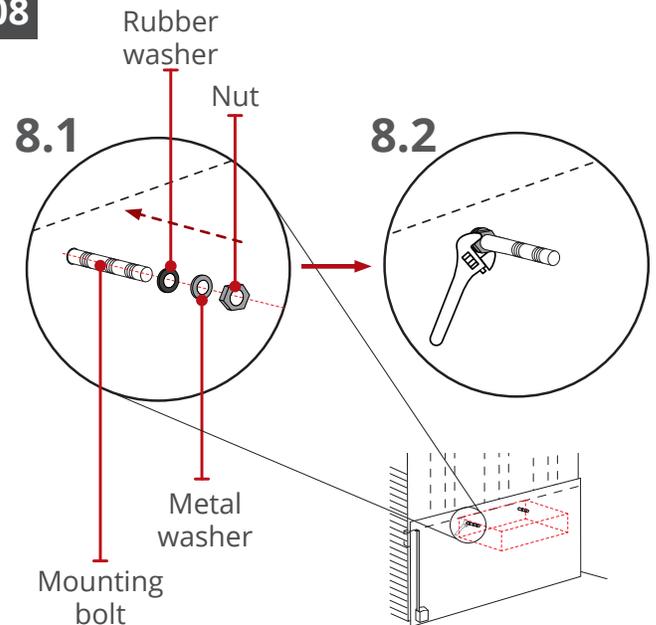

Place rubber washer, metal washer and nuts on to mounting bolts and tighten to secure basin


09

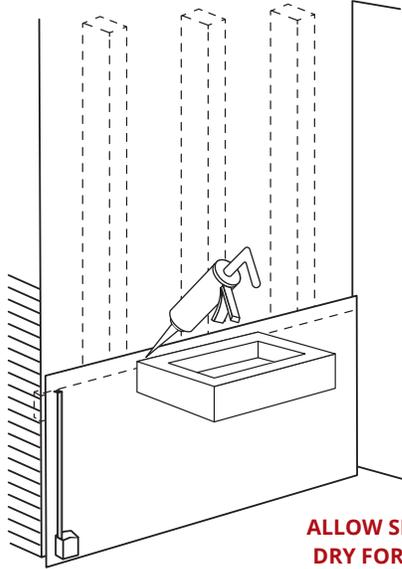

**ALLOW SILICONE TO
DRY FOR 24 HOURS
BEFORE USE.**

Clean the basin and work area. Remove residual dirt and dust. Seal the edge of the shelf with a clear silicone.

10

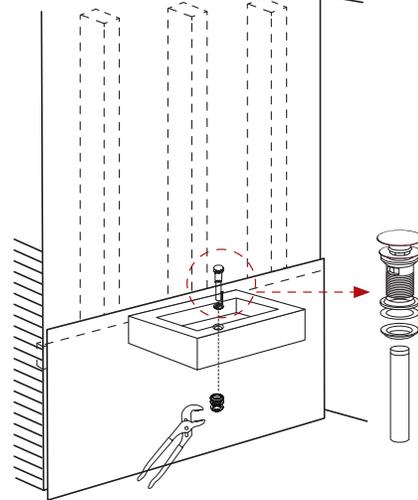

Mount the drain assembly (not included) on the sink following the manufacturer's instructions. Be certain to apply a bead of sealing putty on the underside of the drain in order to ensure a watertight seal between the sink and drain. Remove excess putty after installing drain on sink.




IMPORTANT INFORMATION



The following diagrams show two typical installations with different types of pop-up drains. Sinks without an overflow can only be paired with pop-up drains without overflow (see Fig. A.) Sinks with overflow must use pop-up drains with overflow (Fig. B.) Consult a professional installer if necessary.

A

Basin - Drain installation NO overflow

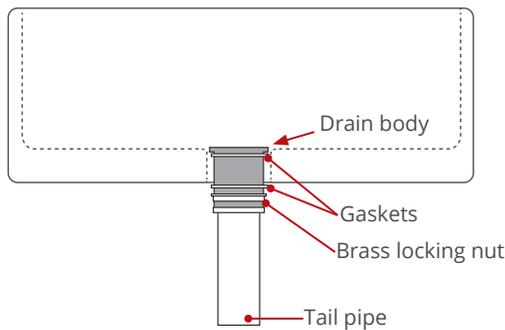

B

Basin - Drain installation WITH overflow

