



# INSTALLATION GUIDE

## FREESTANDING TUBS


- 1
  - A. Cut 5" (12,7 cm) hole into wood sub-floor (use supplied Cutout Template).
  - B. Affix to sub-floor with 5 screws
  - C. Connect Drain assembly to desired P-Trap below floor.

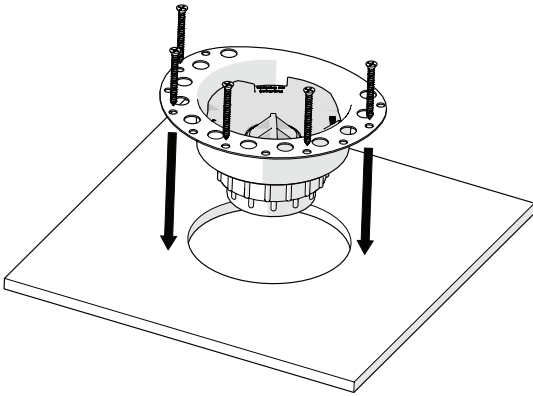

- 2
  - A. Install flooring surface, leaving a 5" opening to access Drain.
  - B. Affix the appropriate brass Tailpiece to the Waste & Overflow. Ensure the measurement between the base of the Drain and P-Trap will accommodate the Tailpiece.

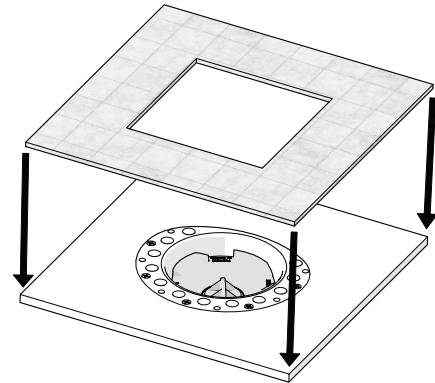


- 3
  - A. Grip centre Tab with Channel Locks and rock back and forth till removed. Apply lubricant (supplied) to the Tailpiece.
  - B. Position assembled Tub in-line with Drain.
  - C. Carefully lower the Tub with installed brass Tailpiece into the Red Collar Drain assembly. Ensure Tailpiece is fully engaged with Seal.

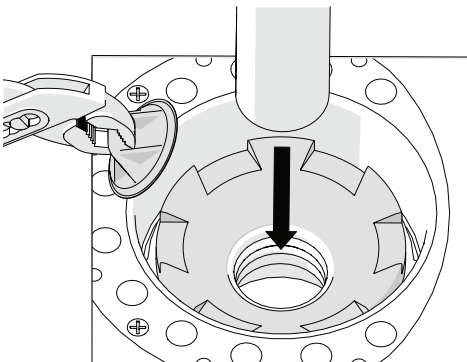

For more info, you can watch the installation video here:

<https://www.youtube.com/watch?v=QRSrHVtKUGA>

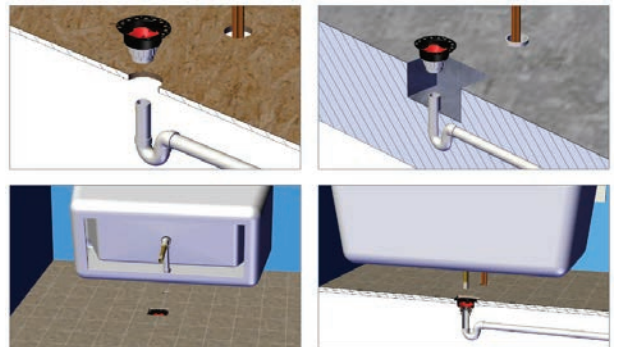

**Important: DO NOT CUT THE SUPPLIED BRASS TAILPIECE.**

Doing so may cause a leak. Disassembling the Drain or cutting the Tailpiece will void the warranty.

*Disclaimer: please hire a specialist if you feel you are unable to install yourself. Teago cannot be held liable for a faulty install or damage done by it.*