



TEAGO
Bath Solutions

INSTALLATION GUIDE

SECORD (Inline)

General Information

Please check the condition & that all parts are included with your new shower doors. Any issues must be reported right away. Delaying this might affect the warranty of the item.

Warning: *handle glass with care. It cannot be re-worked.*

Aftercare: clean regularly with soap & water; especially in areas with hard water. Avoid contact with strong chemicals such as organic solvents or strippers.

Warning: *two adults may be required to install shower doors.*

Recommended Tools



Electric Drill



Drillbits



Tape Measure



Silicone Gun



Leveler



Pencil




Flat/Cross
Screwdriver



Mallet

Assembly Drawing

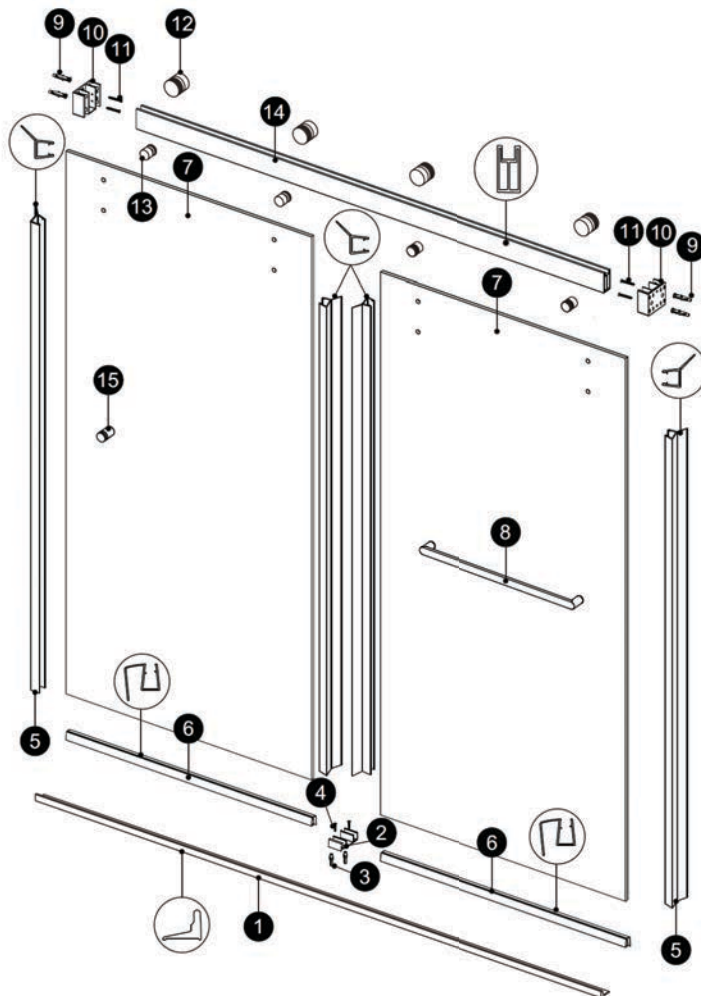

PART #	DESCRIPTION	Q'TY
1	Aluminum Threshold	1pc
2	Bottom Guide	1pc
3	Wall Plugs-A	2pcs
4	Screws ST4x1"	2pcs
5	Gasket-A	4pcs
6	Gasket-B	2pcs
7	Door Panels	2pcs
8	Towel Bar	1pc
9	Wall Plugs-B	4pcs
10	Wall Brackets(L/R) x 1 for each	1set
11	Screws ST5x2"	4pcs
12	Rollers	4pcs
13	Anti-Lift Pins	4pcs
14	Running Bar	1pc
15	Knob	1pc
16	Allen Wrenches	1pc

Disclaimer: *please hire a specialist if you feel you are unable to install yourself. Teago cannot be held liable for a faulty install or damage done by it.*



Massachusetts Code: Approved



10-Year
Warranty


teago.ca

INSTALLATION GUIDE

SECORD (Inline)

Install Steps (Page 1)

Step 1

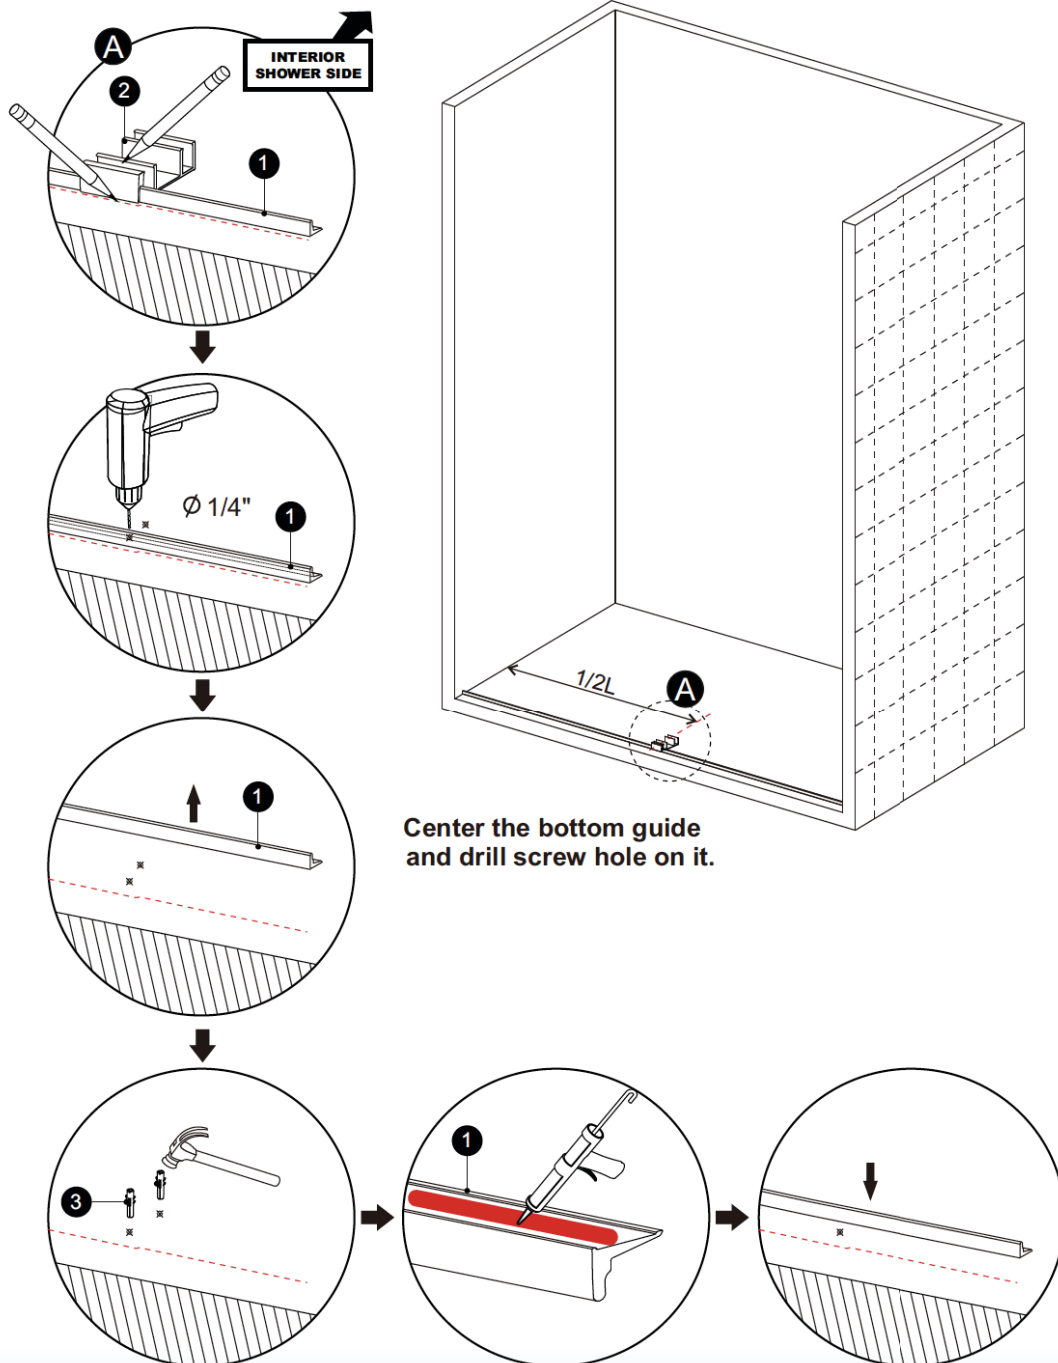


INSTALLATION GUIDE

SECORD (Inline)

Install Steps (Page 2)

Step 2

Draw a line along the wall on both sides using a level.

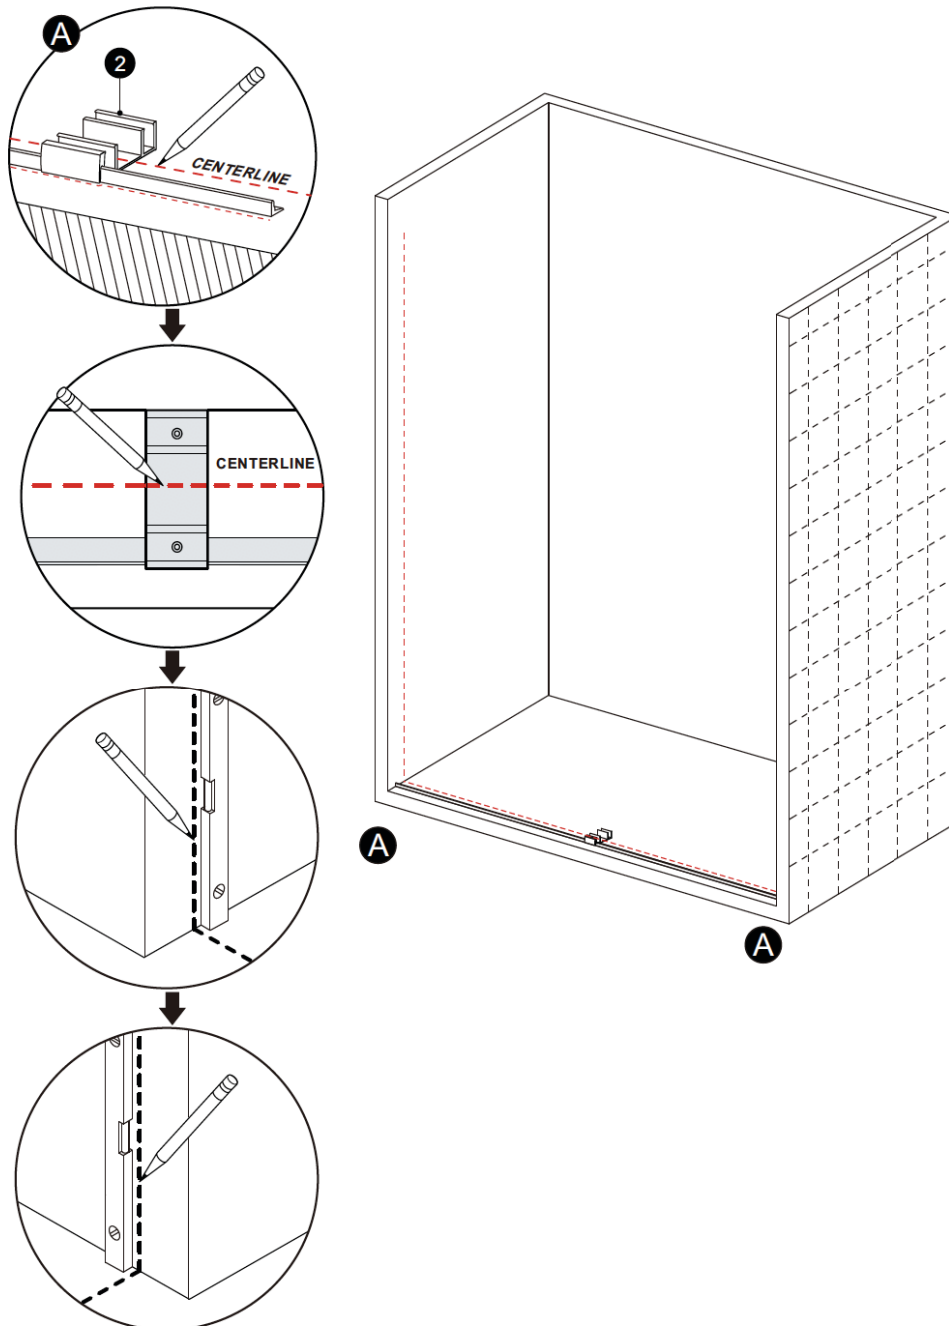

INSTALLATION GUIDE


SECORD (Inline)

Install Steps (Page 3)

Step 3

Table 1

Shower height	Wall Bracket height
60" (1524mm)	55" (1397mm)
79" (2007mm)	76.5" (1943mm)


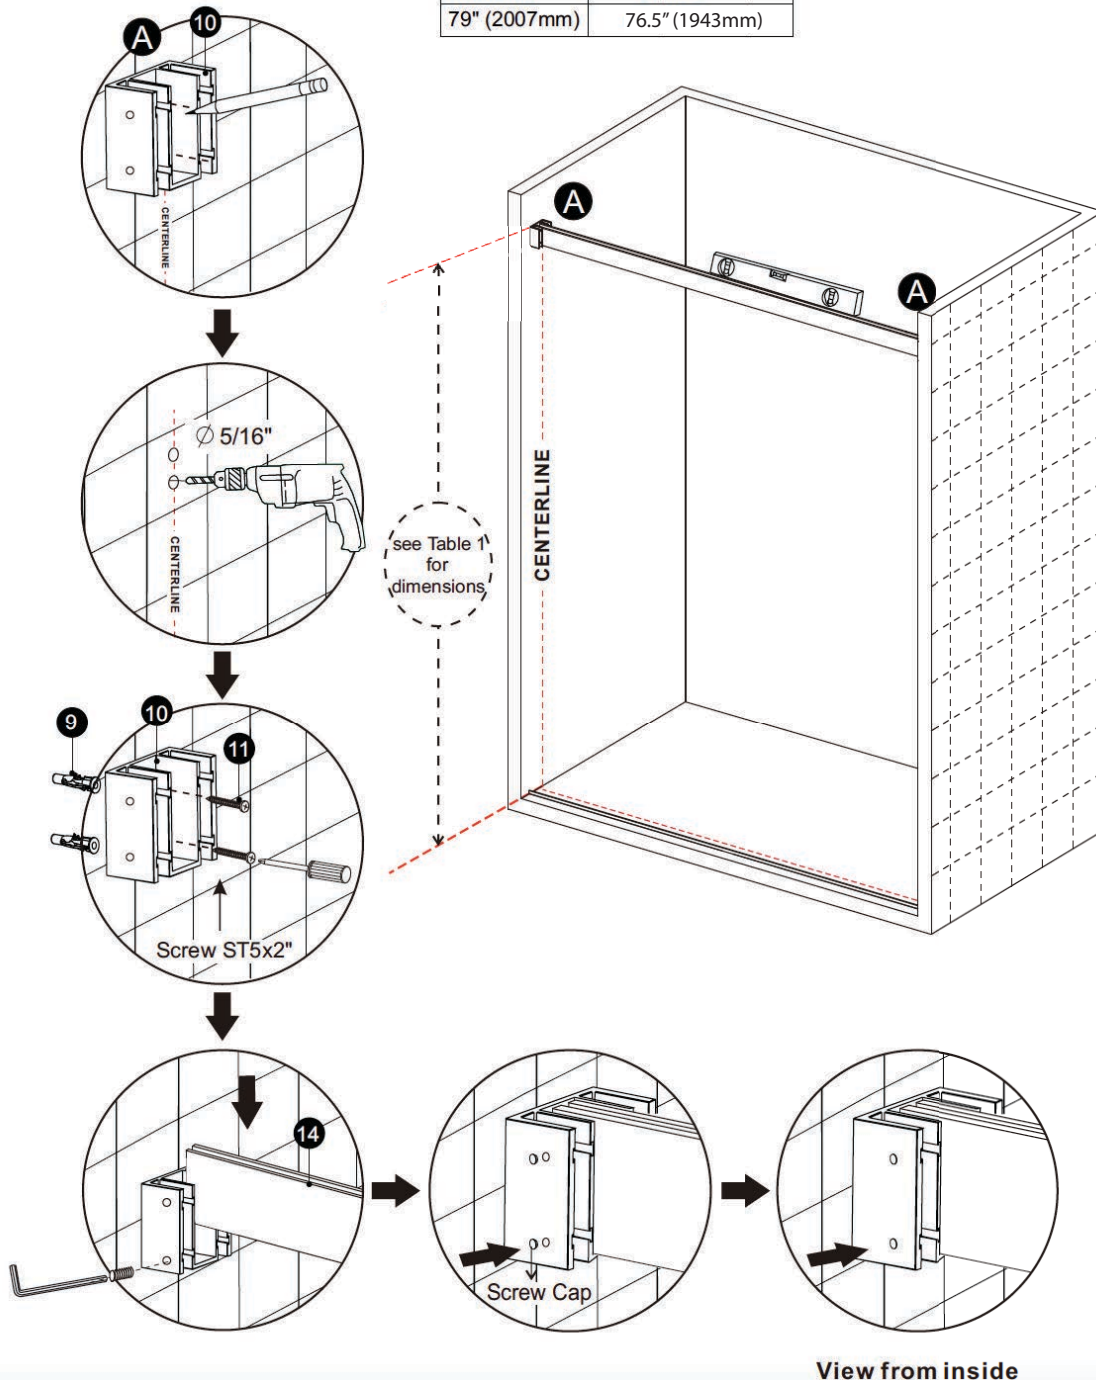


INSTALLATION GUIDE

SECORD (Inline)

Install Steps (Page 4)

Step 4




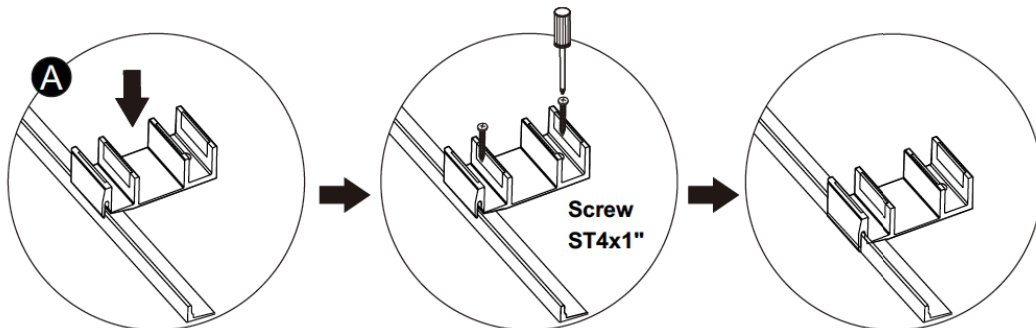
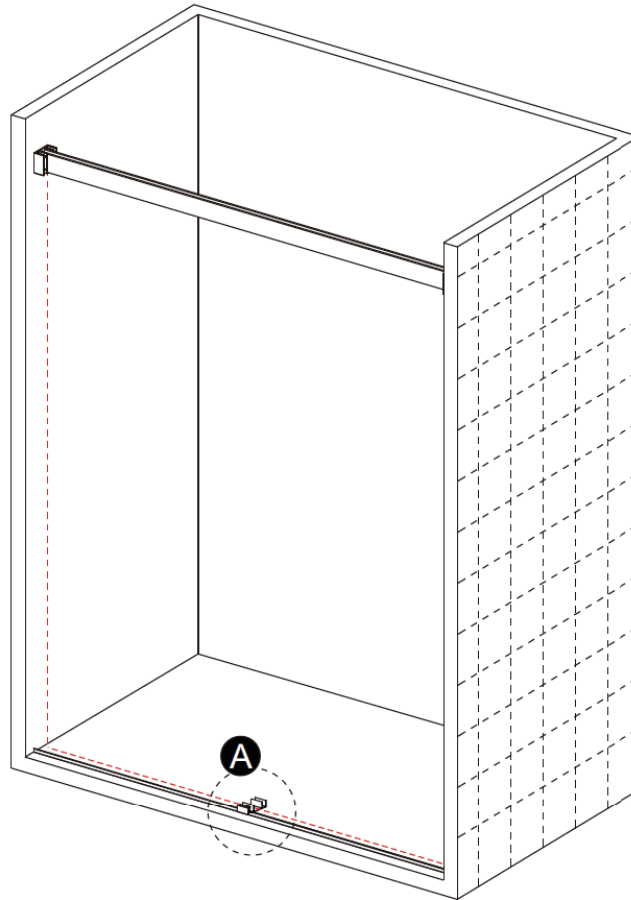


INSTALLATION GUIDE

SECORD (Inline)

Install Steps (Page 5)

Step 5A

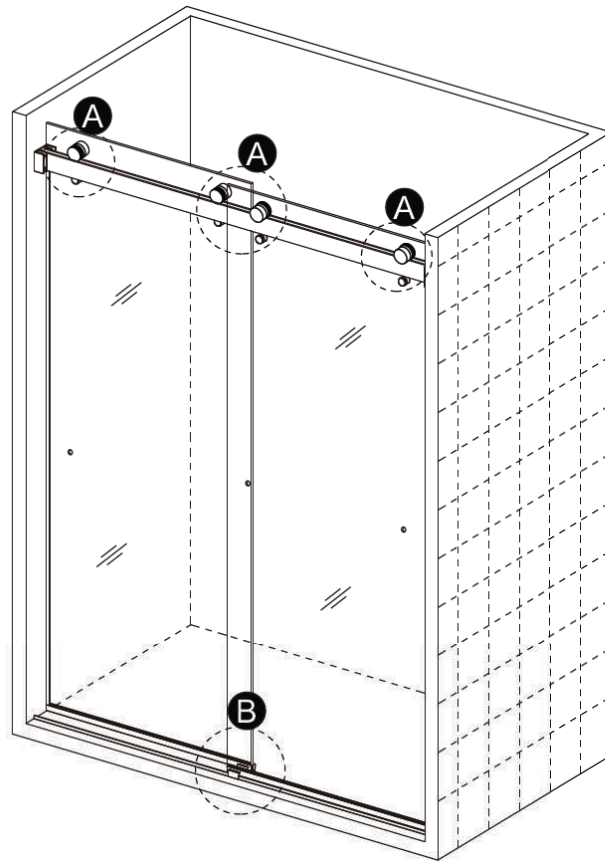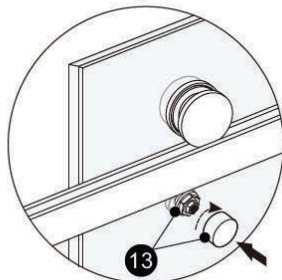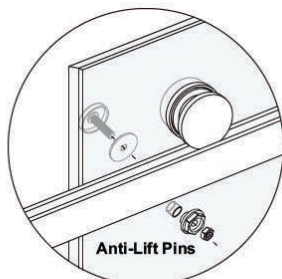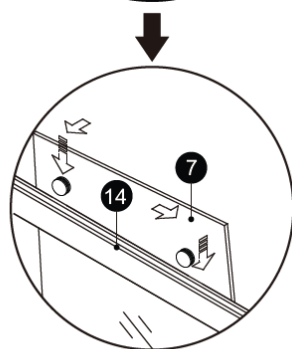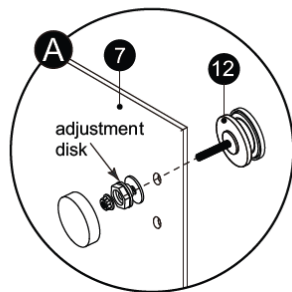

INSTALLATION GUIDE

SECORD (Inline)

Install Steps (Page 6)


Step 5B

Remark:

B1. Refer to B1 for install with water deflectors on the bottom of glass panel.

B2. Refer to B2 for install without water deflectors. Remove 2mm plastic piece and replace with 4mm plastic piece.

Warmly notice: Sliding without water deflector is smoother. However, there will be a potential water leak.






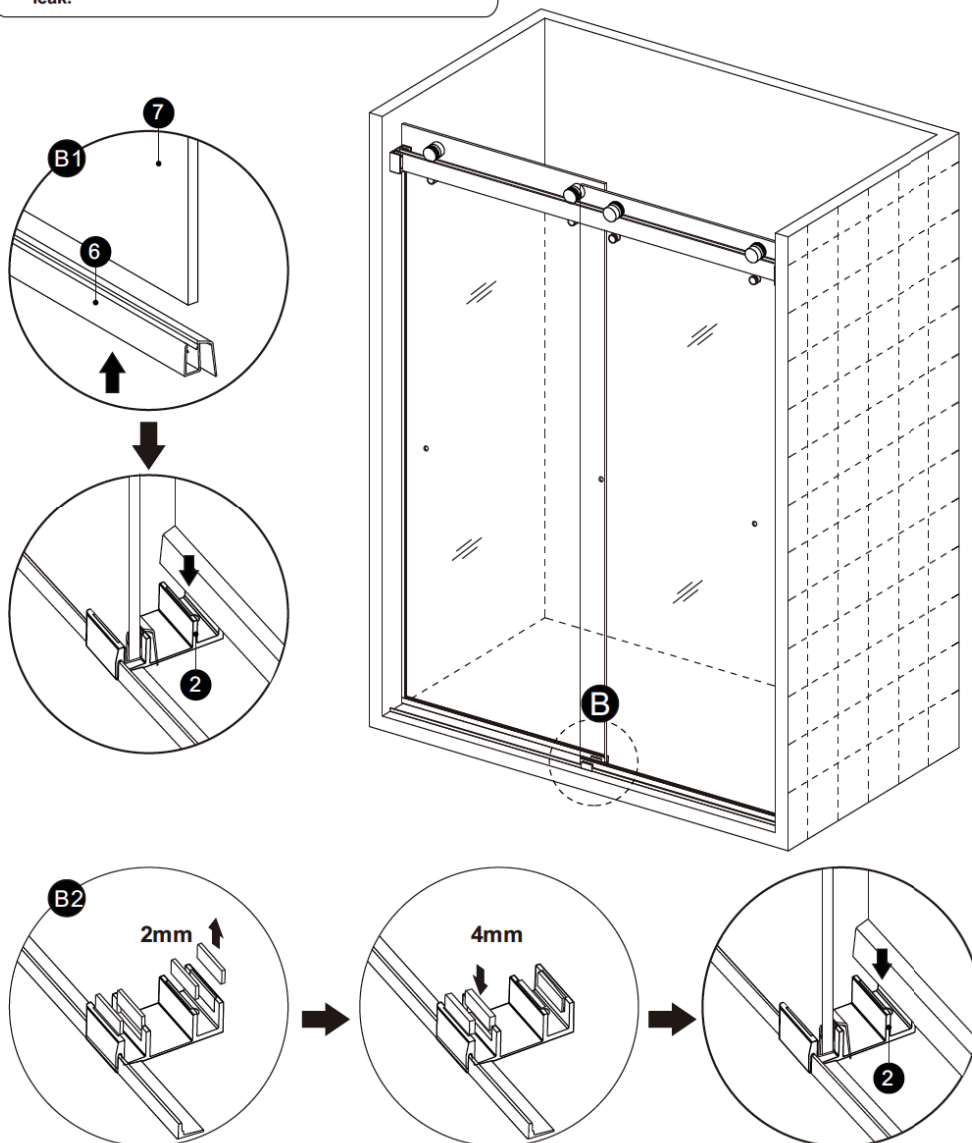


INSTALLATION GUIDE


SECORD (Inline)

Install Steps (Page 7)

Step 6

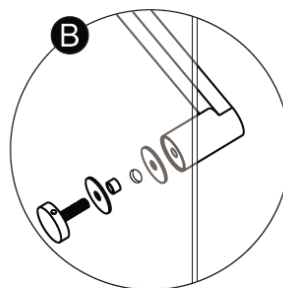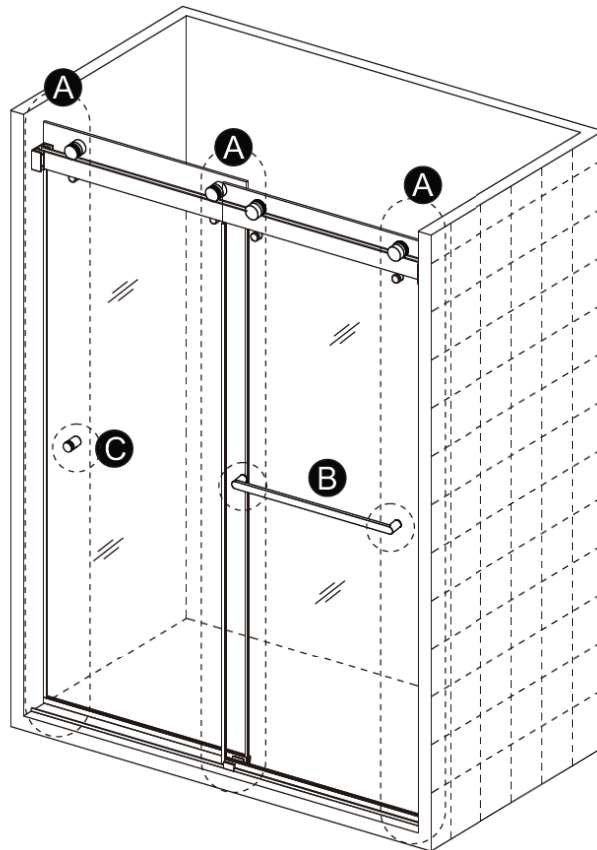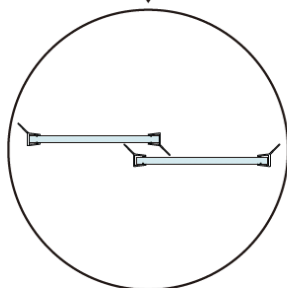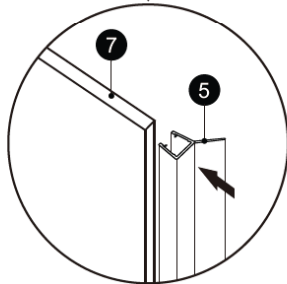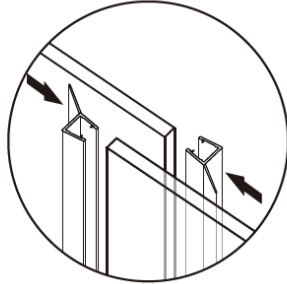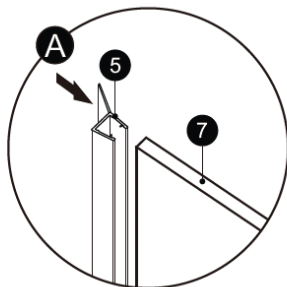

View from inside

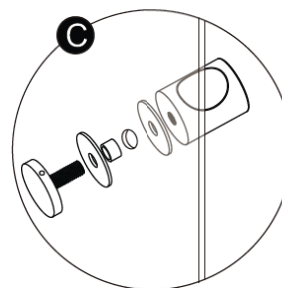

View from inside



INSTALLATION GUIDE

SECORD (Inline)


Install Steps (Page 8)

Step 7



24 HOURS

Allow 24 hours for silicone to dry before use.

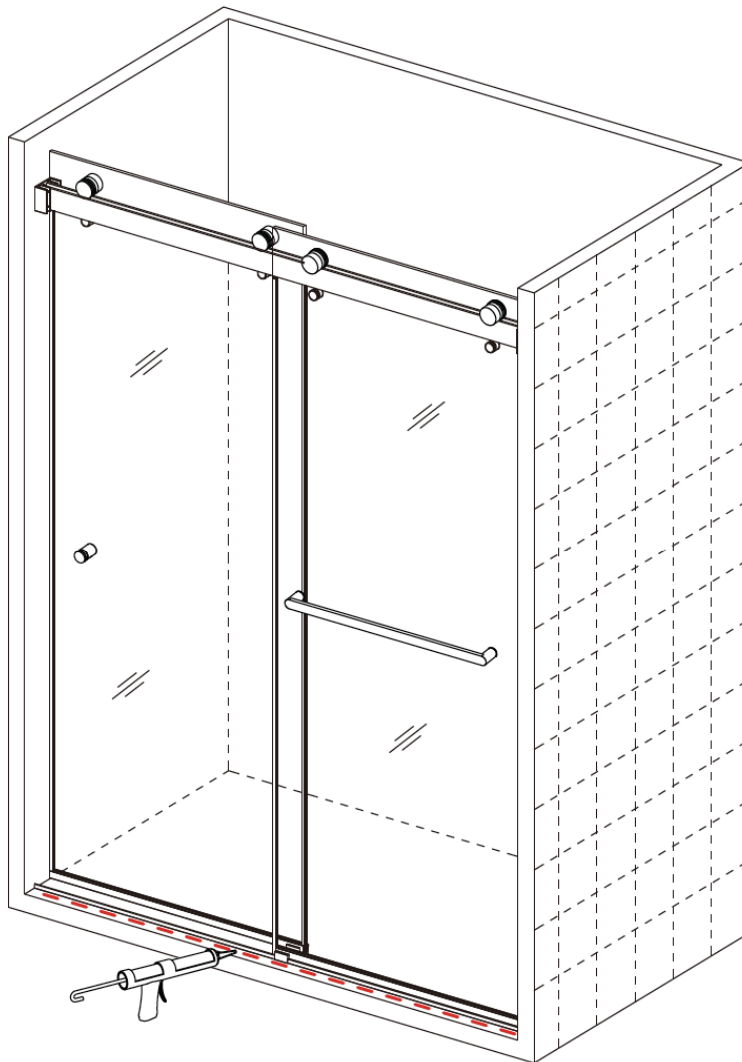

Massachusetts Code: Approved



10-Year
Warranty

teago.ca