



TEAGO
Bath Solutions

INSTALLATION GUIDE

SUMMERSIDE 70

General Information

Please check the condition & that all parts are included with your new shower doors. Any issues must be reported right away. Delaying this might affect the warranty of the item.

Warning: *handle glass with care. It cannot be re-worked.*

Aftercare: clean regularly with soap & water; especially in areas with hard water. Avoid contact with strong chemicals such as organic solvents or strippers.

Warning: *two adults may be required to install shower doors.*

Recommended Tools



Electric Drill



Drillbits
(1/4" & 1/8")



Tape Measure



Silicone Gun



Leveler



Pencil




Flat/Cross
Screwdriver



Hammer

Assembly Drawing

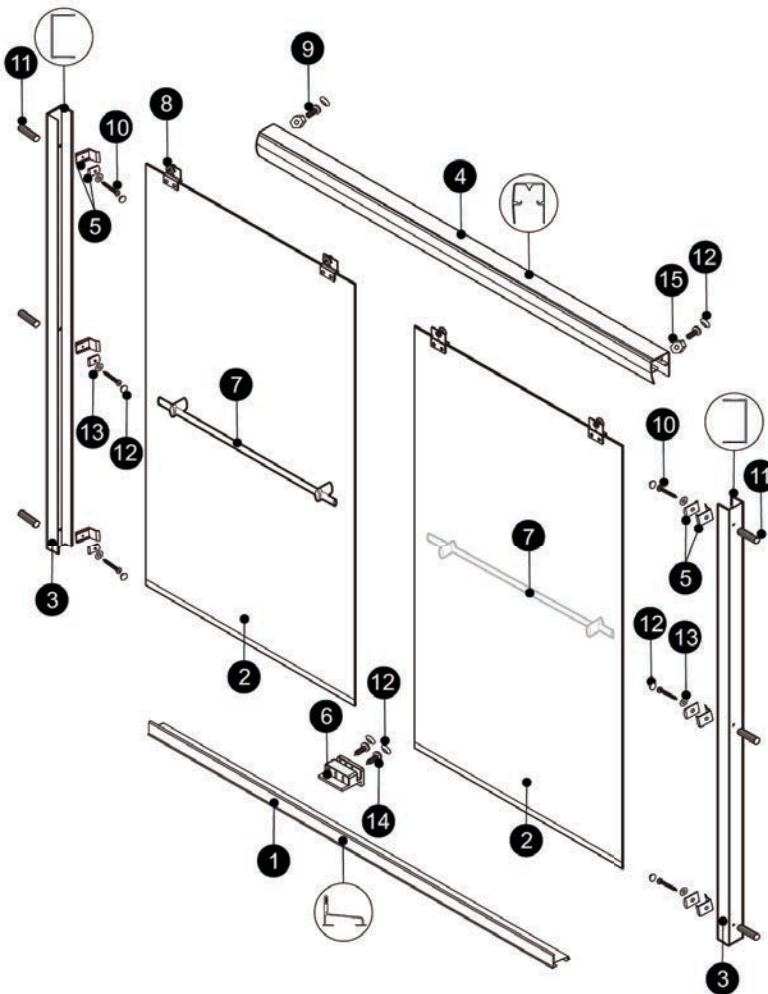

PART #	DESCRIPTION	Q'TY
1	Bottom Horizontal Rail	1pc
2	Door Panels	2pcs
3	Wall Jambs	2pcs
4	Top Horizontal Rail	1pc
5	Bumper Blocks x 6 Stopper Blocks x 6	6sets
6	Bottom Guide	1pc
7	Towel Bar	2set
8	Roller Bracket Assembly	4sets
9	Screw M4x3/8"	2pcs
10	Screws ST5x2"	6pcs
11	Wall Plugs	6pcs
12	Screw Caps	10pcs
13	M4 Washers	6pcs
14	Screw ST4x9/16"	2pcs
15	Screw nut	2pcs

Disclaimer: please hire a specialist if you feel you are unable to install yourself. Teago cannot be held liable for a faulty install or damage done by it.



Massachusetts Code: Approved



10-Year
Warranty


teago.ca

INSTALLATION GUIDE


SUMMERSIDE 70

Install Steps (Page 1)

Step 1

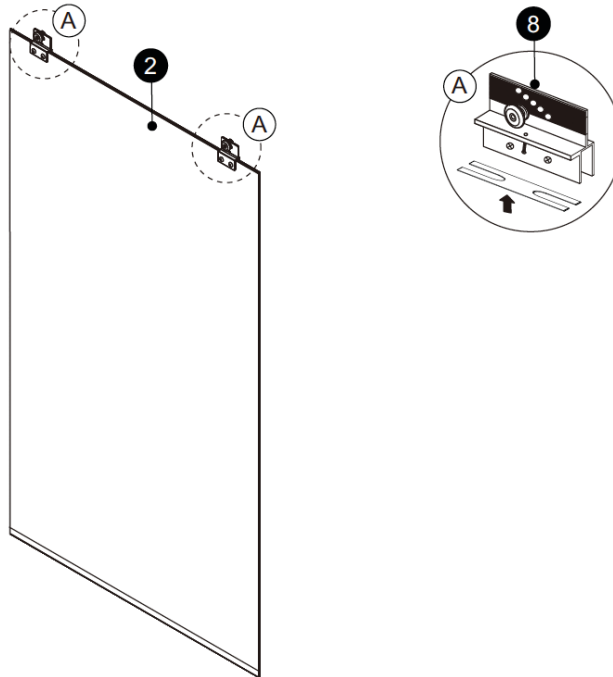

Step 2


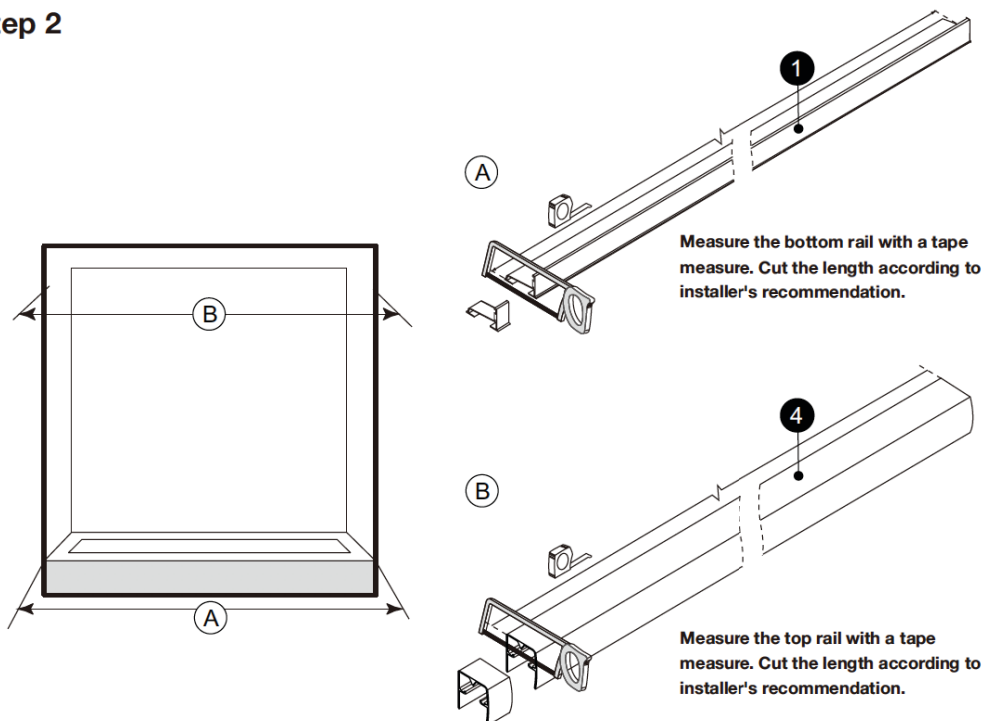


INSTALLATION GUIDE



SUMMERSIDE 70

Install Steps (Page 2)

Step 3

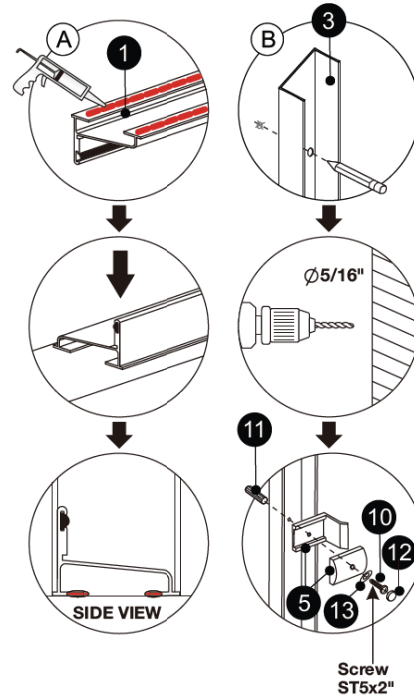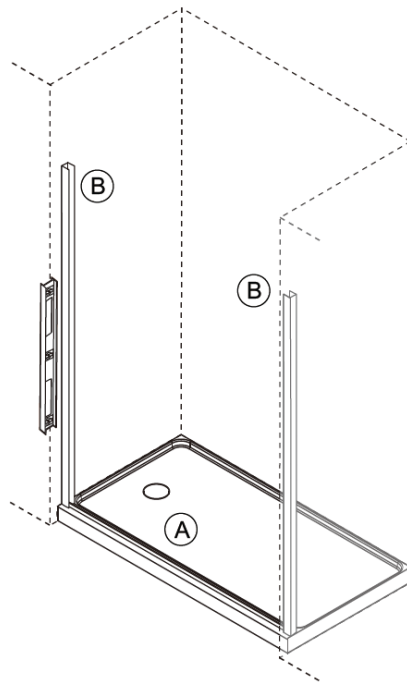

Step 4

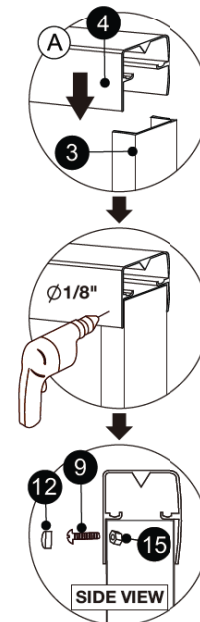
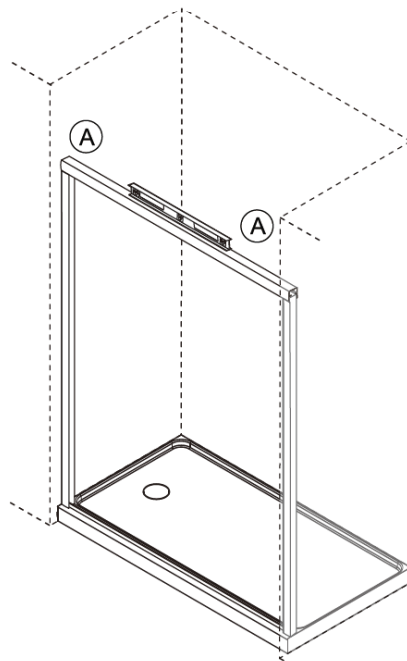


INSTALLATION GUIDE



SUMMERSIDE 70

Install Steps (Page 3)

Step 6

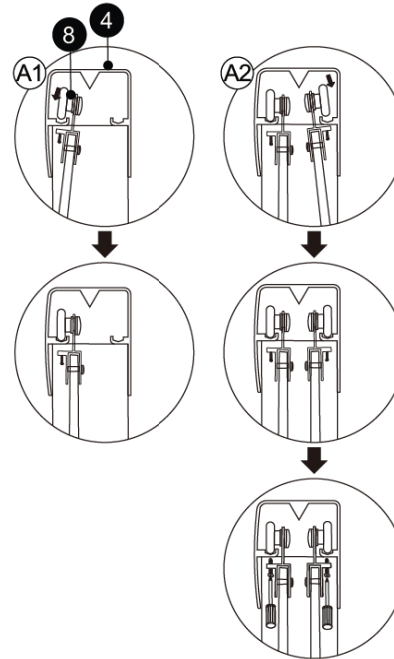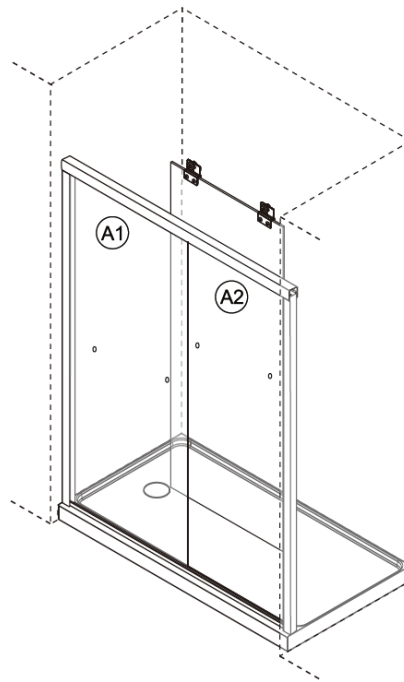


Step 7

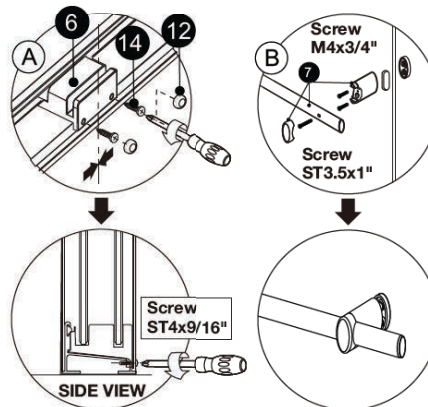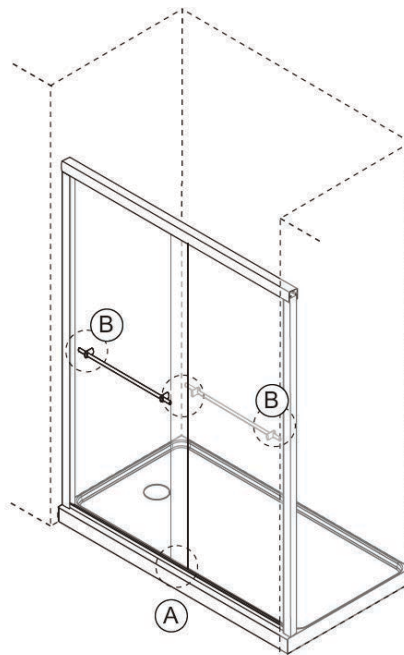

INSTALLATION GUIDE

SUMMERSIDE 70

Install Steps (Page 4)

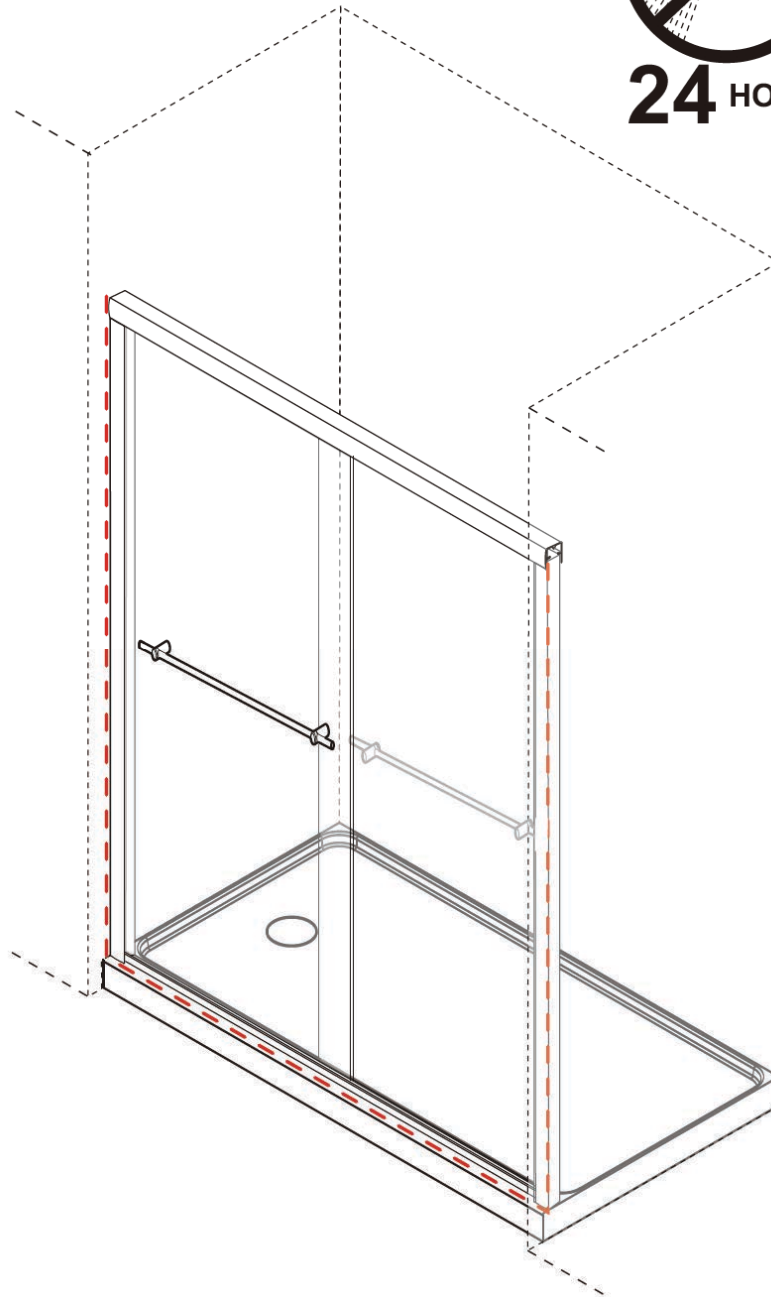

Massachusetts Code: Approved



10-Year
Warranty

teago.ca