

# INSTALLATION GUIDE

## SUMMERSIDE 75

### General Information

Please check the condition & that all parts are included with your new shower doors. Any issues must be reported right away. Delaying this might affect the warranty of the item.

**Warning:** *handle glass with care. It cannot be re-worked.*

**Aftercare:** clean regularly with soap & water; especially in areas with hard water. Avoid contact with strong chemicals such as organic solvents or strippers.

**Warning:** *two adults may be required to install shower doors.*

### Recommended Tools



Electric Drill



Drillbits  
(1/4" & 1/8")



Tape Measure



Silicone Gun



Leveler



Pencil




Flat/Cross  
Screwdriver



Hammer

### Assembly Drawing

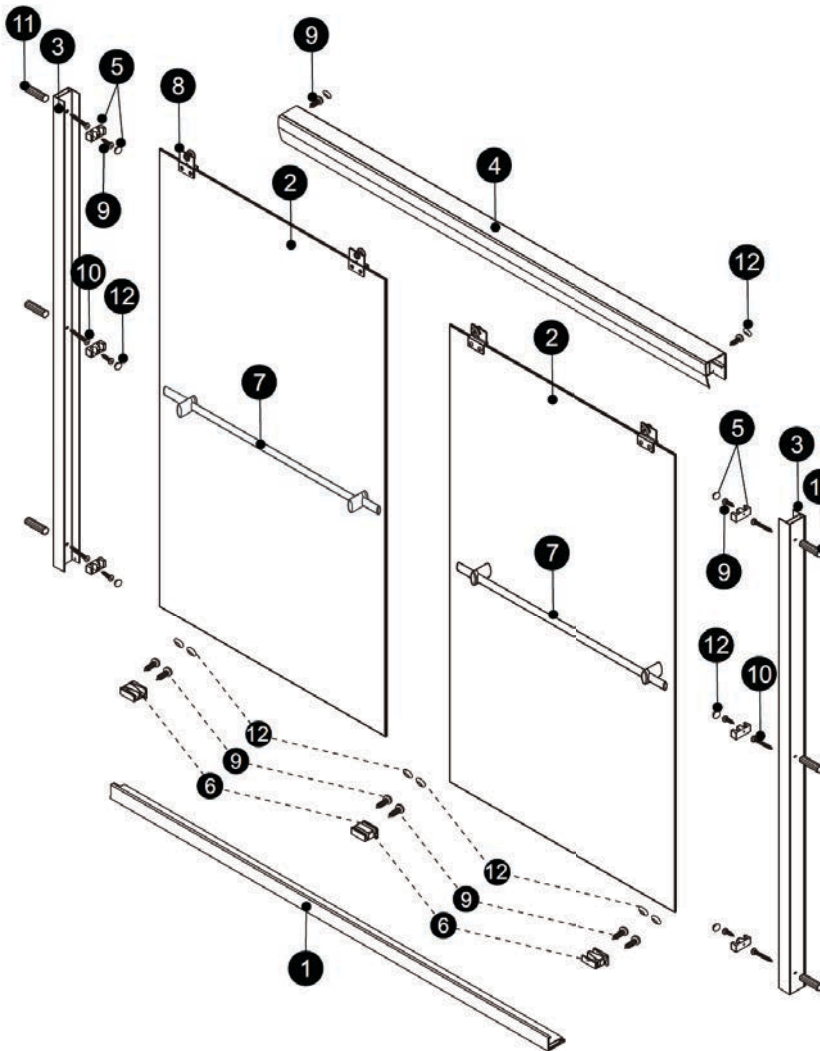

| PART # | DESCRIPTION                      | Q'TY  |
|--------|----------------------------------|-------|
| 1      | Bottom Horizontal Rail           | 1pc   |
| 2      | Door Panels                      | 2pcs  |
| 3      | Wall Jamb                        | 2pcs  |
| 4      | Top Horizontal Rail              | 1pc   |
| 5      | Bumper Blocks x 6                | 6sets |
|        | Screw Caps x 6                   |       |
| 6      | Bottom Guide(L/M/R) x 1 for each | 1set  |
| 7      | Towel Bar                        | 2sets |
| 8      | Roller Bracket Assembly          | 4sets |
| 9      | Screw ST4x5/8"                   | 14pcs |
| 10     | Screws ST5x2"                    | 6pcs  |
| 11     | Wall Plugs                       | 6pcs  |
| 12     | Screw Caps                       | 8pcs  |

**Disclaimer:** please hire a specialist if you feel you are unable to install yourself. Teago cannot be held liable for a faulty install or damage done by it.



Massachusetts Code: Approved



10-Year  
Warranty

**teago.ca**


# INSTALLATION GUIDE

## SUMMERSIDE 75


Install Steps (Page 1)

### ◆ Installation Steps

#### Step 1

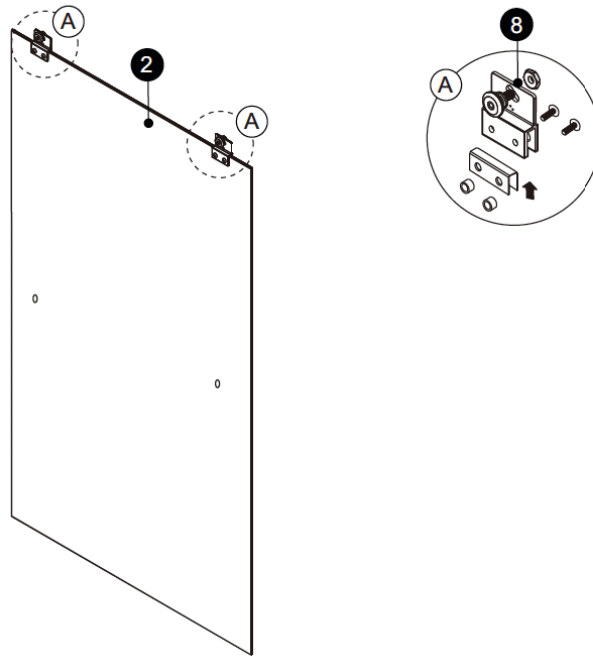

#### Step 2


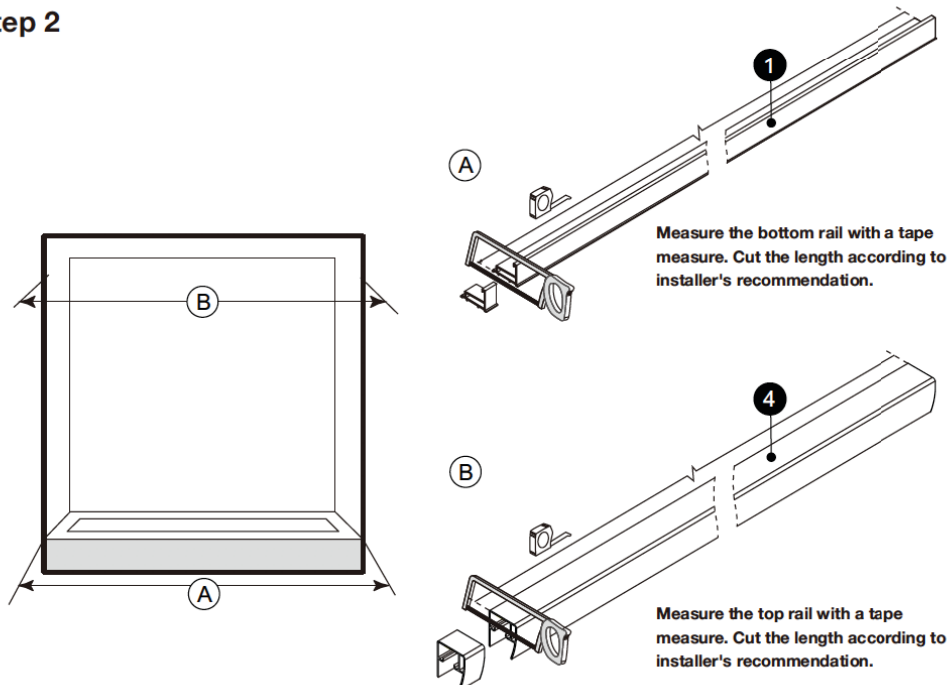


# INSTALLATION GUIDE









## SUMMERSIDE 75

Install Steps (Page 2)

### Step 3

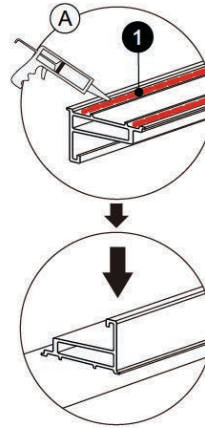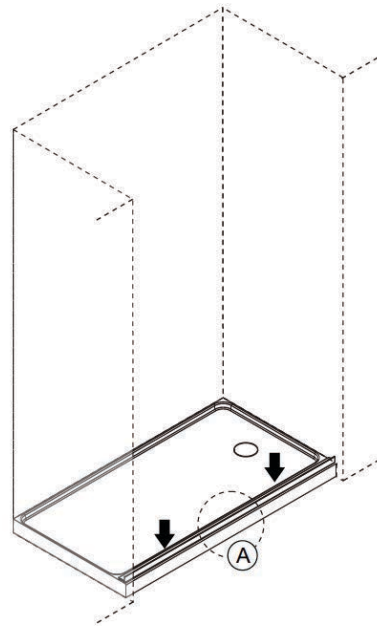

### Step 4

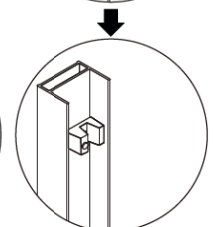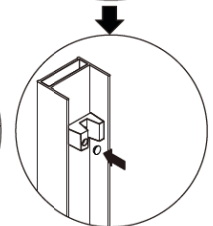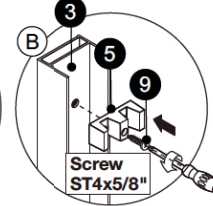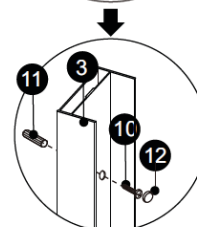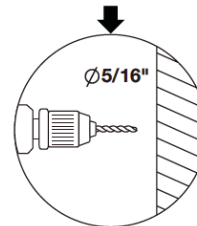
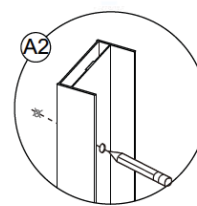
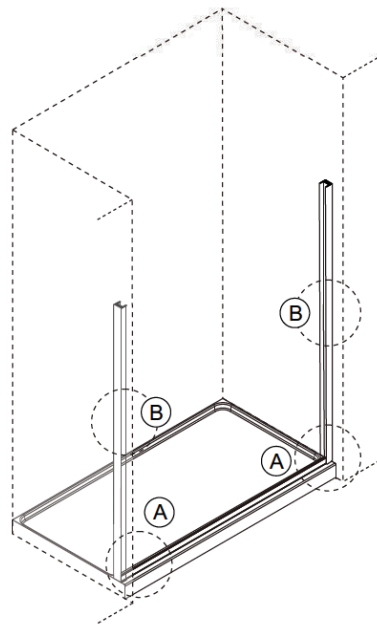
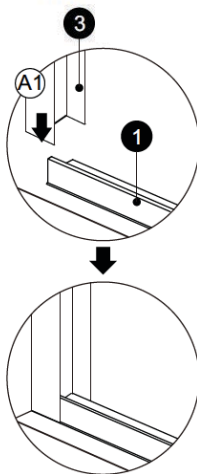


# INSTALLATION GUIDE

## SUMMERSIDE 75






Install Steps (Page 3)

### Step 5

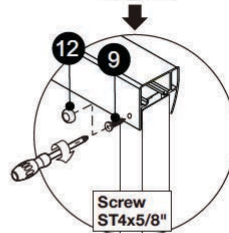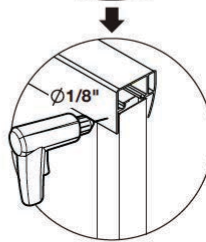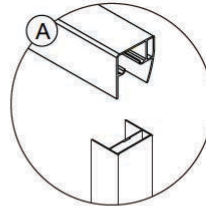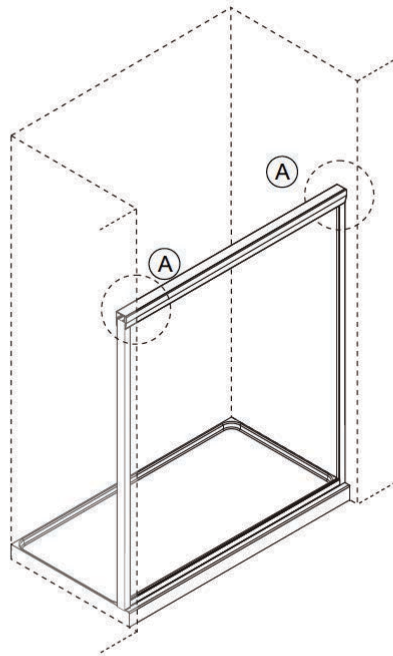

View from inside

### Step 6

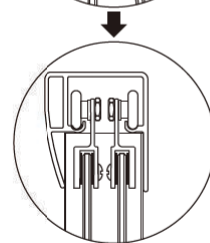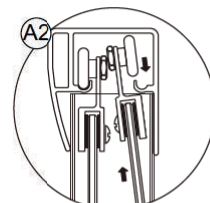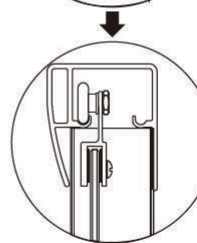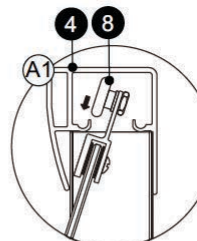
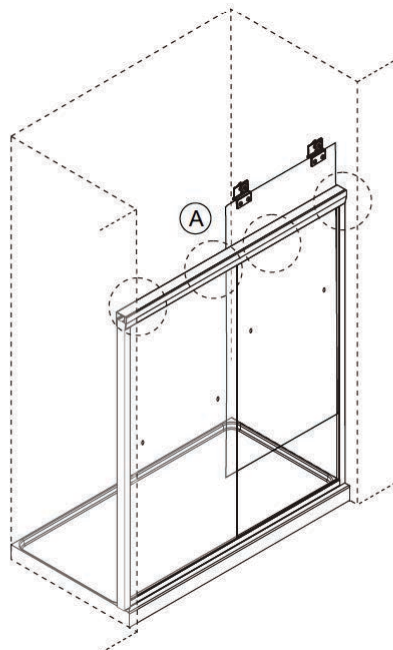


# INSTALLATION GUIDE



## SUMMERSIDE 75

Install Steps (Page 4)

### Step 7

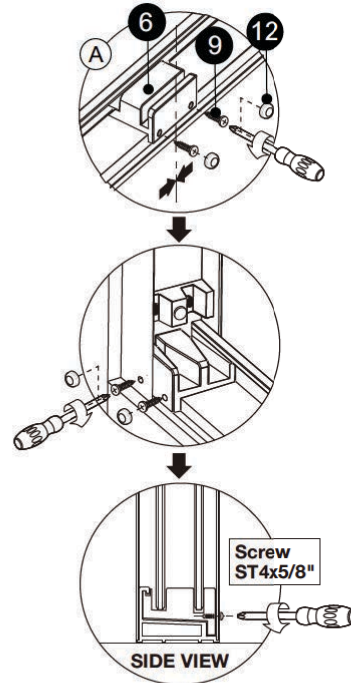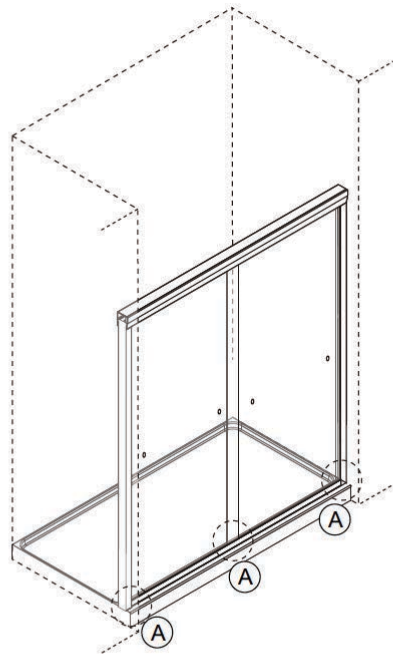

### Step 8

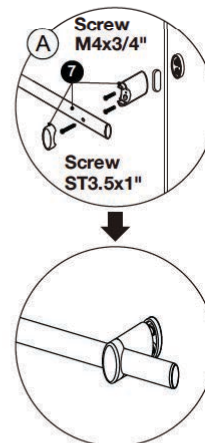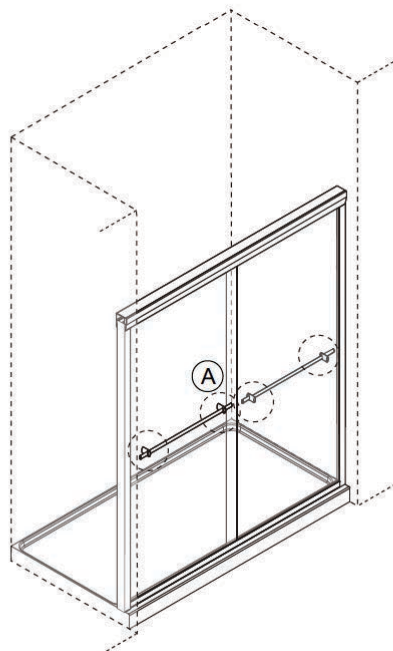




**TEAGO**  
*Bath Solutions*

## INSTALLATION GUIDE

SUMMERSIDE 75

Install Steps (Page 5)

**Step 9**

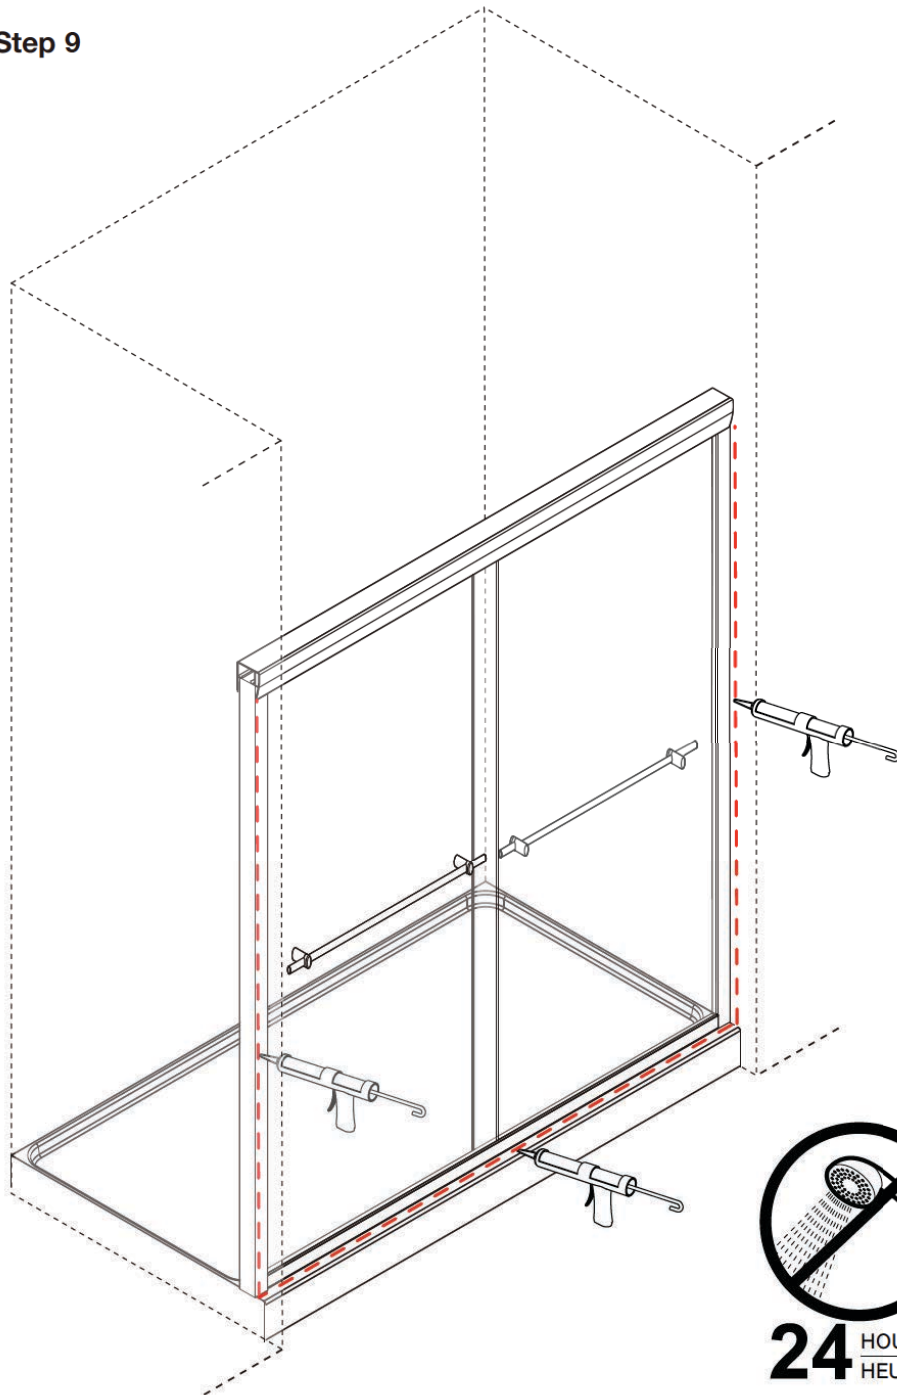

**24** HOURS  
HEURES



Massachusetts Code: Approved



10-Year  
Warranty

**teago.ca**