


Reversing the Door Swing


Follow the instructions below to reverse the door swing. **IMPORTANT:** Before you begin, unplug the refrigerator.

To reverse the door from right swing to left swing:


1. Open the door and using a Phillips screwdriver, remove the bottom screws from the lower hinge.

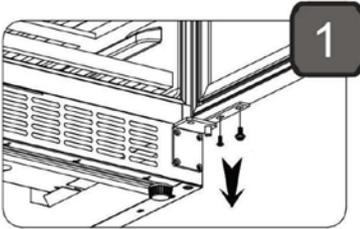


2. Carefully slide the bottom of the door forward and down, and place it on a padded surface to prevent damaging it.

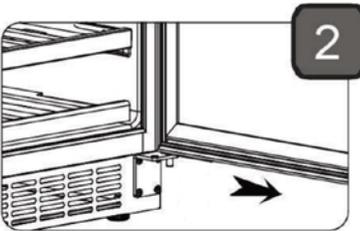


3. Remove the screws from the upper right hinge. Place the upper right hinge in a safe place in case you need to reverse the door in the future. Remove the plastic caps from the upper left hinge corner. Install the upper left hinge by fastening the screws through the left hinge to the cabinet. Insert the plastic caps to the upper right corner.

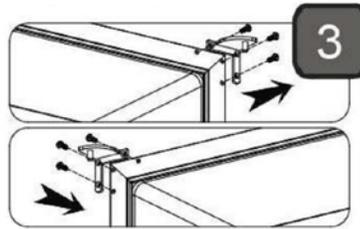

4. Remove the lower hinge and bushing from the bottom right support bracket. Remove the decorative screws from the left corner of the door and install and tighten them to the right corner holes. Remove the plastic cap from the top left corner of the door and insert it on the right top corner.

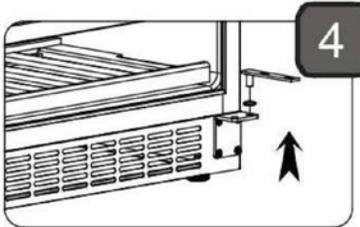

5. Install the lower hinge and bushing on the bottom left support bracket

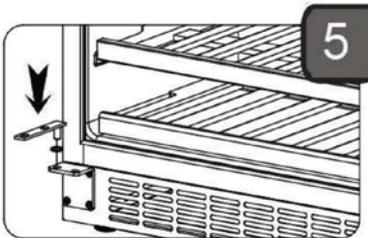

6. Carefully insert the door into the upper right corner hinge, then slide the door on top of the lower hinge and secure the door by installing the lower screws.

