# beurer

# **WL 75**





**GB** Wake up light Instructions for use



# **ENGLISH**



Read these instructions for use carefully and keep them for later use, be sure to make them accessible to other users and observe the information they contain.

### Dear customer,

Thank you for choosing a product from our range. Our name stands for high-quality, thoroughly tested products for applications in the areas of heat, weight, blood pressure, body temperature, pulse, gentle therapy, massage, beauty, air and baby.

With kind regards

Your Beurer team

## Getting to know your device

The beurer WL 75 wake up light allows you to wake up and fall asleep gently and naturally. The LED light gradually becomes brighter like a rising sun, allowing you to slowly become accustomed to the light conditions and gently preparing your body for waking up. You can also set a wake-up melody that is played following the simulated sunrise and provides an acoustic aid to help you wake up. Besides an alarm tone, you can also choose the radio or various sounds. The beurer WL 75 wake up light not only provides a rested and pleasant start to your day but also helps you drift comfortably off to sleep thanks to a simulated sunset with melodies.

#### **Functions:**

- Control of the device functions via smartphone with the "beurer LightUp" app
- "Alarm" function (simulated sunrise: wake up light gradually becomes brighter over a set period of time)
- "Sleep" function (simulated sunset: wake up light gradually dims and switches off automatically after a preset time)
- Light function (white light/reading lamp)

- Mood light with individual colour setting (choice of 10 different sequences)
- Time shown on the display
- FM radio
- · Alarm tone, wake-up and sleep melodies
- Play your own music via the AUX input



The WL 75 wake up light can only be used with its full functionality in conjunction with the "beurer LightUp" app. Basic functions can also be set directly on the device.

The following functions can only be controlled via the app:

- Choice of 10 defined mood light sequences
- · Direct choice of mood light colour
- Alarm can be switched on/off for each day
- Adjustment of special alarm settings
- Button tone can be switched on/off

### System requirements App "beurer LightUp":

- $iOS \ge 14.0$
- Android<sup>™</sup> ≥ 8.0
- Bluetooth® ≥ 4.0

For a list of all compatible mobile devices, please scan the following QR code:

# **Table of contents**

1. Included in delivery	. 3
2. Signs and symbols	. 3
3. Intended use	. 3
4. Warnings and safety notes	. 3
5. Device description	. 4
6. Initial use	

7. Usage	5
8. Cleaning and maintenance	7
9. What if there are problems?	7
10. Disposal	7
11. Technical specifications	7
12. Warranty / Service	8

# 1. Included in delivery

Check that the exterior of the cardboard delivery packaging is intact and make sure that all contents are present. Before use, ensure that there is no visible damage to the device or accessories and that all packaging material has been removed. If you have any doubts, do not use the device and contact your retailer or the specified Customer Service address.

- 1x Wake up light with cable antenna
- 1x Mains adapter
- 1x AUX cable
- 1x Instructions for use

# 2. Signs and symbols

The following symbols are used on the device, in these instructions for use, on the packaging and on the type plate for the device:

plate for the dev	plate for the device:		
$\triangle$	Warning Warning instruction indicating a risk of injury or damage to health		
$\triangle$	Important Safety note indicating possible damage to the device/accessory		
(i)	Product information  Note on important information		
	Read the instructions		
I	Disposal in accordance with the Waste Electrical and Electronic Equipment EC Directive – WEEE		
•••	Manufacturer		
0	Separate the packaging elements and dispose of them in accordance with local regulations.		
EBS A	Marking to identify the packaging material.  A = Material code, B = Material number: 1-7 = Plastics, 20-22 = Paper and cardboard		
UK	United Kingdom Conformity Assessed Mark		
(F	Separate the product and packaging elements and dispose of them in accordance with local regulations.		

CE	CE labelling This product satisfies the requirements of the applicable European and national directives.
EAC	The products demonstrably meet the requirements of the Technical Regulations of the EAEU.
VI	Energy efficiency class 6
	Replacement of the light source is not possible

# 3. Intended use

# MARNING

The device may only be used for the purpose for which it is designed and in the manner specified in the instructions for use. Improper use can be dangerous. The manufacturer is not liable for damage resulting from improper or careless use.

# 4. Warnings and safety notes

# **MARNING**

- The device is intended only for domestic/private use, not for commercial use.
- This device may be used by children over the age of eight and by people with reduced physical, sensory or mental skills or a lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the device safely and are fully aware of the consequent risks of use.
- Under no circumstances should you open or repair the device yourself, as faultless functionality can no longer be guaranteed thereafter. Failure to comply will invalidate the warranty.
- Children must not play with the device.
- Keep packaging material away from children (risk of suffocation).
- Only operate the device with the mains adapter provided and at the mains voltage specified on the mains adapter.
- Place the device on a firm, even surface.
- The device must be placed near an easily accessible socket.
- Before use, inspect the device and accessories for visible damage. If you have any doubts, do not use the device and contact your retailer or the specified Customer Service address.
- Keep the device, mains adapter and mains cable away from water.

- Never plug in or unplug the mains adapter when you have wet hands.
- Cleaning and user maintenance must not be performed by children unless supervised.
- In the event of defects or operational faults, switch the device off immediately and disconnect it from the mains socket.
- Arrange the mains cable so that no-one will trip over it.



# **IMPORTANT**

- Protect the device from impacts, moisture, dirt, marked temperature fluctuations and direct sunlight.
- Do not drop the device.

# 5. Device description

1 Display	8 Radio button
2 ON/OFF button ()	9 Cable antenna
3 Touch sensor (for snoozing)	10 Mains part connection
4 Brightness buttons +/-	11 USB connection (for charging smartphones)
5 Touch sensor (for illu- minated display)	12 AUX input
6 /	13 Alarm button
7 AUX button	14 Set button





# Display 1 2 3 4 5 AMPM D D D



1 Volume	9 Bluetooth®
2 Year (Y)/Month (M)/ Day (D)	10 Time
3 Radio alarm mode	11 Display
4 Time/Date/Radio frequency	12 Alarm memory space 1, 2
5 SET mode	13 "Sleep" function
6 AUX mode	14 Beep
7 Alarm mode	15 Wake-up melody
8 Radio	

# 6. Initial use

- 1. Remove the packaging material.
- 2. Check that all parts listed are present.
- Check the device, mains adapter and AUX cable for damage.
- 4. Download the free "beurer LightUp" app from the Apple App Store (iOS) or Google Play (Android).
- 5. Activate *Bluetooth®* on your smartphone.
- 6. Place the device on a firm, even surface. The device must be placed near an easily accessible socket.

- Insert the mains adapter connector into the mains adapter socket on the rear of the device.
- 8. Insert the mains adapter into a suitable socket.
- 9. The time  $\partial:\partial\partial$  is shown on the device display.
- 10. Place the cable antenna at the back.
- 11. Open the "beurer LightUp" app and follow the instructions.
- 12. Once the WL 75 is connected, the time on the wake up light is updated.

# 7. Usage

You can either set the device functions using the "beurer LightUp" app or the buttons on the wake up light.

We recommend setting the device functions using the "beurer LightUp" app as it is more convenient. If the wake up light is connected to a smartphone, all the buttons on the wake up light are locked. Once the smartphone and wake up light are disconnected, you can use the buttons on the wake up light again.

# 7.1 Setting the time/date



You can set the time and date using the "beurer LightUp" app or the buttons on the wake up light. If you connect the wake up light to your smartphone using the "beurer LightUp" app, the time and date are automatically set on the wake up light.

To set the time using the buttons on the wake up light, proceed as follows:

- 1. Press the **Set** button on the device three times. "SET Time" appears on the display. Wait three seconds until the hour format "24 hc" flashes on the display.
- 2. Set the hour format using the < / > buttons (24-hour format "²Ч hc" or 12-hour format AM/PM "¹² hc"). Confirm with the **Set** button.

- The year (Y) flashes on the display. Set the year using the 
   buttons. Confirm with the Set button.
- 7. The day (D) flashes on the display. Set the day using the 
  ¬ buttons. Confirm with the Set button.

# 7.2 "Alarm" function Setting the alarm



If you set the alarm using the buttons on the wake up light, you can select the alarm time and the alarm tone. If you set the alarm using the "beurer LightUp" app, you can also select the alarm days, snooze time

and a simulated sunrise (wake up light gradually becomes brighter over a set period of time).

To set the alarm using the buttons on the wake up light, proceed as follows:

- Press the Set button on the device once. "SET Alarm" appears on the display. Wait three seconds until the flashes on the display.
- Use the 
   buttons to select either alarm of or alarm
   Confirm with the Set button.
- The alarm hour flashes on the display. Set the alarm hour using the 
   buttons. Confirm with the Set button.
- The alarm minute flashes on the display. Set the alarm minute using the 
   buttons. Confirm with the Set button.
- 5. Alarm tone <sup>3</sup>), wake-up melody 1–6 <sup>3</sup> or radio <sup>6</sup> flashes on the display. Use the 
  √ buttons to select the desired alarm tone. Confirm with the Set button. Alarm is now activated.

The simulated sunrise starts before the set alarm in order to prepare the body for waking up. The alarm only goes off after the sunrise.

# Activating the alarm

To activate the alarm, press the **Alarm** button on the wake up light repeatedly until "ALARMI", "ALARMI" or "ALARMI AND ALARMI" appears on the display.

# Deactivating the alarm

To deactivate the alarm, press the **Alarm** button on the wake up light repeatedly until "UFF" appears on the display.

# Activating the snooze function

When the alarm sounds, touch (not press) the **ON/OFF** button  $\bigcirc$  to activate the snooze function. You can set the snooze time in the "beurer LightUp" app.

# Switching off the alarm

When the alarm sounds, press the **ON/OFF** button () to switch off the alarm.

# 7.3 Light/reading lamp



You can switch on the light using the "beurer LightUp" app or the buttons on the wake up light.

To switch on the light using the buttons on the wake up light, proceed as follows:

- Briefly press the **ON/OFF** button on the inserted device. The light comes on.
- To switch the light off again, press the ON/OFF button again. The light goes off.

3. You can use the brightness buttons + - to set the brightness.

# 7.4 Mood light

The wake up light can also be used as a mood light.



If you switch on the mood light via the wake up light, you get a mood light with a standardised colour change.

If you set the mood light via the "beurer LightUp" app, you also have the following setting options:

- You can select the colour of the mood light yourself.
- 10 preset sequences (e.g. rainbow) are available.
- The mood light can be set on a timer.

To switch on the mood light on the wake up light, proceed as follows:

- 1. Press and hold the **ON/OFF** button for 2 seconds. The colour changing mood light comes on.
- 2. To maintain one colour on the mood light, press the **ON/OFF** button again.
- 3. To switch the mood light off, press the ON/OFF button again.

# 7.5 "Sleep" function

The "Sleep" area is ideal for helping you fall asleep. Here you can set the sunset function. With this function, the light gradually dims after a set period of time. You can also assign various relaxing sounds to the simulated sunset and either use natural light or a mood light.



You can set the sunset function using the "beurer LightUp" app or the buttons on the wake up light.

To switch on the sunset function on the wake up light, proceed as follows:

- 1. To use the sunset function with normal light, briefly press the ON/OFF button. The light comes on.
  - To use the sunset function with the mood light, press and hold the **ON/OFF** button for 2 seconds. The mood light comes on.
- 2. Press and hold the **ON/OFF** button for 5 seconds.  $\square$ 2 flashes on the display. Use the <1/ > buttons within 5 seconds to set the duration of the sunset.
- Use the <1/ > buttons to set the volume.
- Use the Set button to set the desired sound.

#### 7.6 Radio



You can configure the radio settings using the "beurer LightUp" app or the buttons on the wake up light.

# Setting the radio station

To set the radio station using the buttons on the wake up light, proceed as follows:

- 1. Press the **Set** button on the device twice. "SET Radio" appears on the display. Wait three seconds until the current station frequency flashes on the display.
- Use the buttons to set the desired radio station. To start the station search, press and hold the ⊲ or ⊳ button. Confirm with the Set button.
- 3. Programme number P 11 flashes on the display. Use the 
  d / ▷ buttons to select the desired programme number (e.g. P 01 or P 02) under which the set radio station is to be saved. There are 10 radio memory spaces available. Confirm with the Set button.

# Switching the radio on/off

- 1. To switch the radio on or off, press the Radio button on the wake up light.
- 2. To switch between the saved radio stations, first press the **Set** button. Use the sired radio station.
- 3. To set the volume, press the radio is playing.

# 7.7 Setting the display brightness




# Note

The wake up light has four display brightness levels (0, 1, 2 and 3). You can set the display brightness in the settings of the "beurer LightUp" app or using the buttons on the wake up light.

To set the display brightness using the buttons on the wake up light, proceed as follows:

- 1. Press the Set button on the device four times. "SET Display" appears on the display. Wait three seconds until a number flashes on the display.
- ness. Confirm with the Set button. The configured display brightness is shown after 5 seconds.

Alternatively, you can also tap on the right-hand side of the display to make the display brightness briefly brighter.

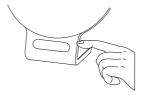

## 7.8 AUX connection

You can connect an external audio source (e.g. MP3 player, smartphone or CD player) to the wake up light via the AUX input.

- 1. Connect the supplied AUX cable to an audio source.
- 2. Insert the other end of the AUX cable into the AUX input on the rear of the device.
- 3. Press the AUX button on the device. The external audio source is now connected to the wake up light.

- 4. Use the <1/ > buttons to adjust the volume.
- 5. Press the AUX button to exit AUX mode again.

# 7.9 Switching the button tone on/off

You can only switch the button tone of the wake up light on and off via the settings in the "beurer LightUp" app.

# 7.10 Activating/deactivating *Bluetooth*®

(i) Note

The wake up light is supplied to the customer with  $Bluetooth^{\otimes}$  activated. If you deactivate  $Bluetooth^{\otimes}$ , the wake up light cannot be connected to the "beurer LightUp" app.

To deactivate Bluetooth® on the wake up light, proceed as follows:

- Press the Set button on the device five times. "SET ? appears on the display. Wait three seconds until "on" flashes on the display.
- Press the ⊲ or ⊳ button until "□FF" appears on the display. Confirm with the Set button. Bluetooth® is now deactivated on the wake up light.

# 8. Cleaning and maintenance

- Clean the device with a dry cloth.
- Do not use any abrasive cleaning products.
- Ensure that no water enters the device. If this should happen, only reuse the device once it has fully dried out.
- Never immerse the device or mains part plug in water or other liquids.
- Protect the device from impacts, moisture, dust, chemicals, marked temperature fluctuations and nearby sources of heat (ovens, heaters).

# 9. What if there are problems?

Problem	Possible cause	Solution
Device does not light up	On/off button switched off	Switch on the on/off button.
	No electricity	Connect the mains part properly.
	No electricity	The mains part is faulty. Contact customer services or your retailer.
LEDs have reached the end of their service life. LEDs faulty.		If you need to have the device repaired, contact customer service or an authorised dealer.

Problem	Possible cause	Solution
No Bluetooth® connection (**) symbol is missing).	Device outside the range.	The minimum range in the open is approx. 10 m. Other radio waves may interfere with the transmission.
	No connection to the app.	Completely close the app (including in the background). Switch Bluetooth® off and back on again. If need be, remove it from the devices list in the Bluetooth® settings, and then use the "beurer LightUp" app. Switch the smartphone off and back on again.

You can find further information and a list of frequently asked questions (FAQs) about this product at www.beurer.com.

# 10. Disposal

For environmental reasons, do not dispose of the device in the household waste at the end of its useful life. Dispose of the device at a suitable local collection or recycling point. Observe the local regulations for material disposal. Dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment). If you have any questions, please contact the local authorities responsible for waste disposal.

# 11. Technical specifications

Illuminance	Max. approx. 2,000 lux (at distance of 15 cm)
Light	LED technology (LED service life: > 20,000 hours)
Light levels	10 on wake up light Infinitely variable via app
Mood light	Automatic RGB colour change, option of setting individual colour
Snooze time	1–30 minutes
LCD backlighting	Off, 1, 2, 3
Time	Can be switched between 12h/24h
Alarm	2 alarm times Wake up: alarm tone, radio, 6 wake-up melodies Fall asleep: 4 sleep melodies

Charging function	Smartphones can be charged via USB
Button tone	Off, On
AUX	Line-in, 3.5 mm jack plug
Radio	Frequency range FM 87.5 – 108 MHz, 10 memory spaces
Loudspeaker	2 watts
Mains part Manufacturer: Model no.:	Kuantech Incorporated Company KSASB0240900200HE
Supply Input: Output:	100-240V AC 50/60Hz 0.6A 9V DC 2A 18W
Average active efficiency	≥ 85%
No-load power consumption	≤ 0,1W
Mains part protection class	Protection class II
Frequency band	2402MHz-2480MHz
Transmission power	max. 4dBM
This product contains a light source with energy et	

This product contains a light source with energy efficiency class G

Subject to technical changes.

We hereby confirm that this product complies with the European RED Directive 2014/53/EU.

The CE Declaration of Conformity for this product can be found under: https://www.beurer.com/web/we-landing-pages/de/cedeclarationofconformity.php.

# 12. Warranty / Service

Further information on the guarantee and guarantee conditions can be found in the guarantee leaflet supplied.

<sup>-</sup> Android is a trademark of Google Inc.



<sup>-</sup>The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SiG,Inc. and any use of such marks by Beurer GmbH is under license. Other trademarks and trade names are those of their respective owners.

<sup>-</sup> Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the U.S. and other countries.

<sup>-</sup> Google Play and the Google Play logo are trademarks of Google Inc.