


Installation Instructions

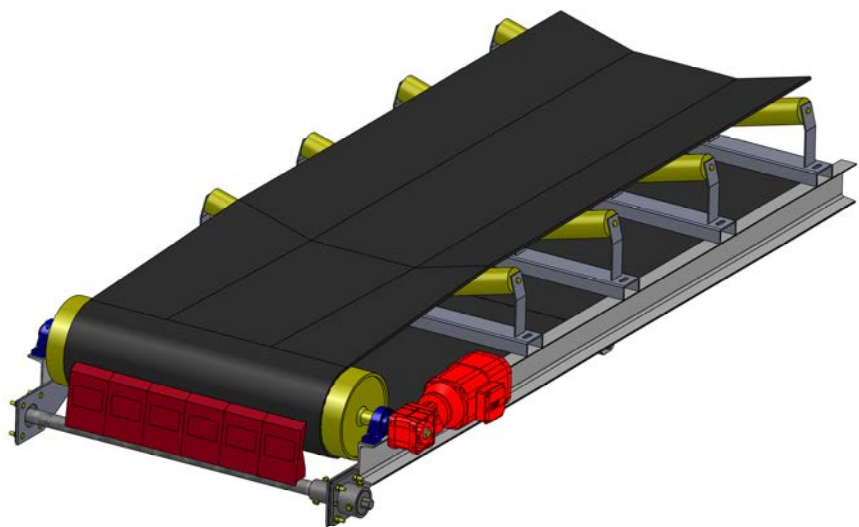




- 1

Flange
- 2

Support
- 3

PU Scraper Blade
- 4

Tensioning Unit

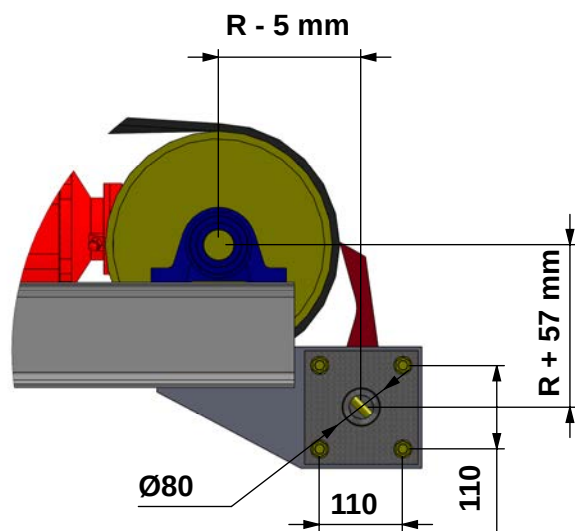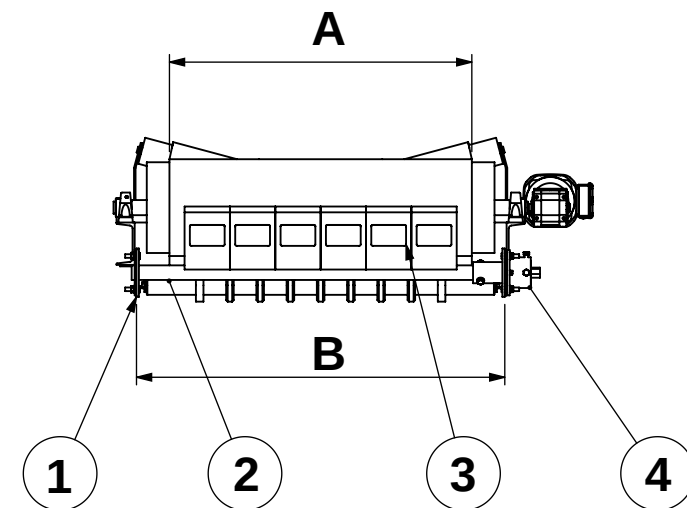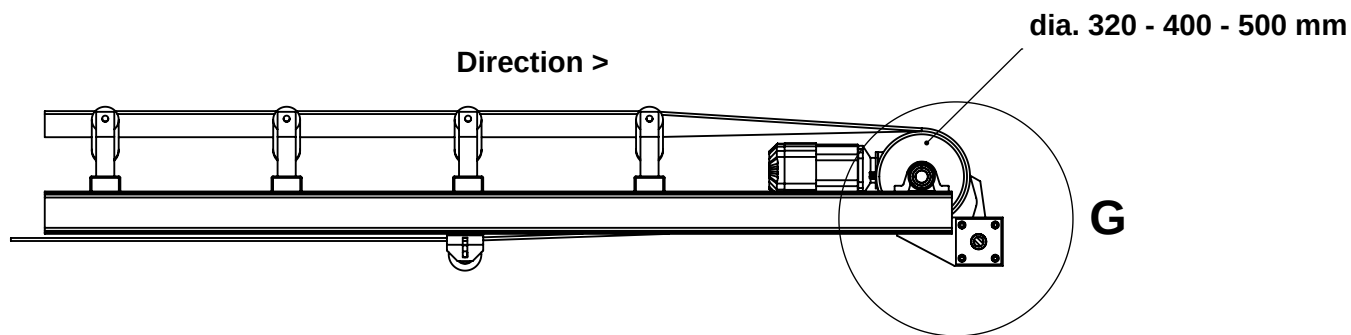

G (1:10)

Quantity of blades per belt width\*

| Beltwidth | Qty of blades | "A"     | "B"       |
|-----------|---------------|---------|-----------|
| 500 mm    | 3             | 450 mm  | ± 900 mm  |
| 650 mm    | 4             | 600 mm  | ± 1050 mm |
| 800 mm    | 5             | 750 mm  | ± 1200 mm |
| 1000 mm   | 6             | 900 mm  | ± 1350 mm |
| 1200 mm   | 7             | 1050 mm | ± 1500 mm |
| 1400 mm   | 8             | 1200 mm | ± 1800 mm |
| 1600 mm   | 10            | 1500 mm | ± 1950 mm |
| 1800 mm   | 11            | 1650 mm | ± 2100 mm |
| 2000 mm   | 12            | 1800 mm | ± 2400 mm |

\* From band width 1200 mm a tensioner is applied on both sides  
All specifications are subject to changes without notice.  
Our company does not accept any liability for incorrect installation.  
It is strongly recommended to verify all measurements on site.

Belt scraper TA-PRE

Art. No.:

Dwg No.:

STORM HALVORSEN

KOMPONENTER TIL INDUSTRIEN

www.stormhalvorsen.no

A3