
XV. Repair Parts

All K2FT™ Series Repair Parts may be obtained through your local U.S. Boiler Wholesale distributor. Should you require assistance in locating a U.S. Boiler distributor in your area, or have questions regarding the availability of U.S. Boiler products or repair parts, please contact U.S. Boiler Customer Service at (717) 481-8400 or Fax (717) 481-8408.


XV. Repair Parts (continued)

Space Heating Models Heat Exchanger & Piping Repair Parts						
Key No.	Description	Part Number (Qty)				
		K2FT-085	K2FT-110	K2FT-155	K2FT-205	K2FT-270
1A	Heat Exchanger	Contact U.S. Boiler Company. Provide boiler serial number.				
1B	Burner Repair Kit (includes burner and screws)	106986-01	106986-02	106986-03	106986-04	
1C	Burner Screw, Socket Head Cap Screw, M4 x 6mm, 316SS	101064-01 (3)		101064-01 (4)	101064-01 (5)	
1D	Burner Plate Insulation	106969-01		106969-02	106969-03	
1E	Burner Plate Repair Kit (includes burner plate and insulation)	106985-01		106985-02	106985-03	
1F	Burner Plate Flange Locknut, Serrated, M6 x 1.0, Zinc Plated Steel	101724-01 (4)		101724-01 (5)		
1G	Flame Sensor Repair Kit (includes electrode, gasket and hardware)	105798-01				
1H	Igniter Repair Kit (includes electrode, gasket and hardware)	103005-02				
1I	Heat Exchanger Flue Gasket Repair Kit	107000-01			107000-02	
1J	Flue Pipe Repair Kit (includes pipe and gasket)	106998-01			106998-02	
1K	Flue Pipe Gasket Repair Kit	106999-01				
1L	Silicone Tubing Repair Kit	106989-01				
1M	Flue/Inlet Switch Repair Kit	106988-01		105857-01	106988-02	
1N	Condensate Trap Repair Kit	106990-01				
1O	Return Sensor Repair Kit	106991-01				
1P	Flue Gas / Blocked Drain Sensor Repair Kit	106993-01				
1Q	Supply Sensor Repair Kit	106994-01				
1R	30 PSI Relief Valve	81660319				
1S	3/4" NPT Drain Valve	806603061				
1T	Temperature & Pressure Gauge Repair Kit	105894-01				
1U	Water Gasket Repair Kit (includes 2 gaskets)	106995-01			106996-01	
1V	Supply Pipe Assembly Repair Kit (includes pipe assembly, gasket and jacket grommets)	106977-01			106977-02	
1W	Return Pipe Assembly Repair Kit (includes pipe assembly, gasket and jacket grommets)	106997-01			106997-02	

XV. Repair Parts (continued)

Space Heating Models:

- K2FT-085
- K2FT-110
- K2FT-155
- K2FT-205
- K2FT-270

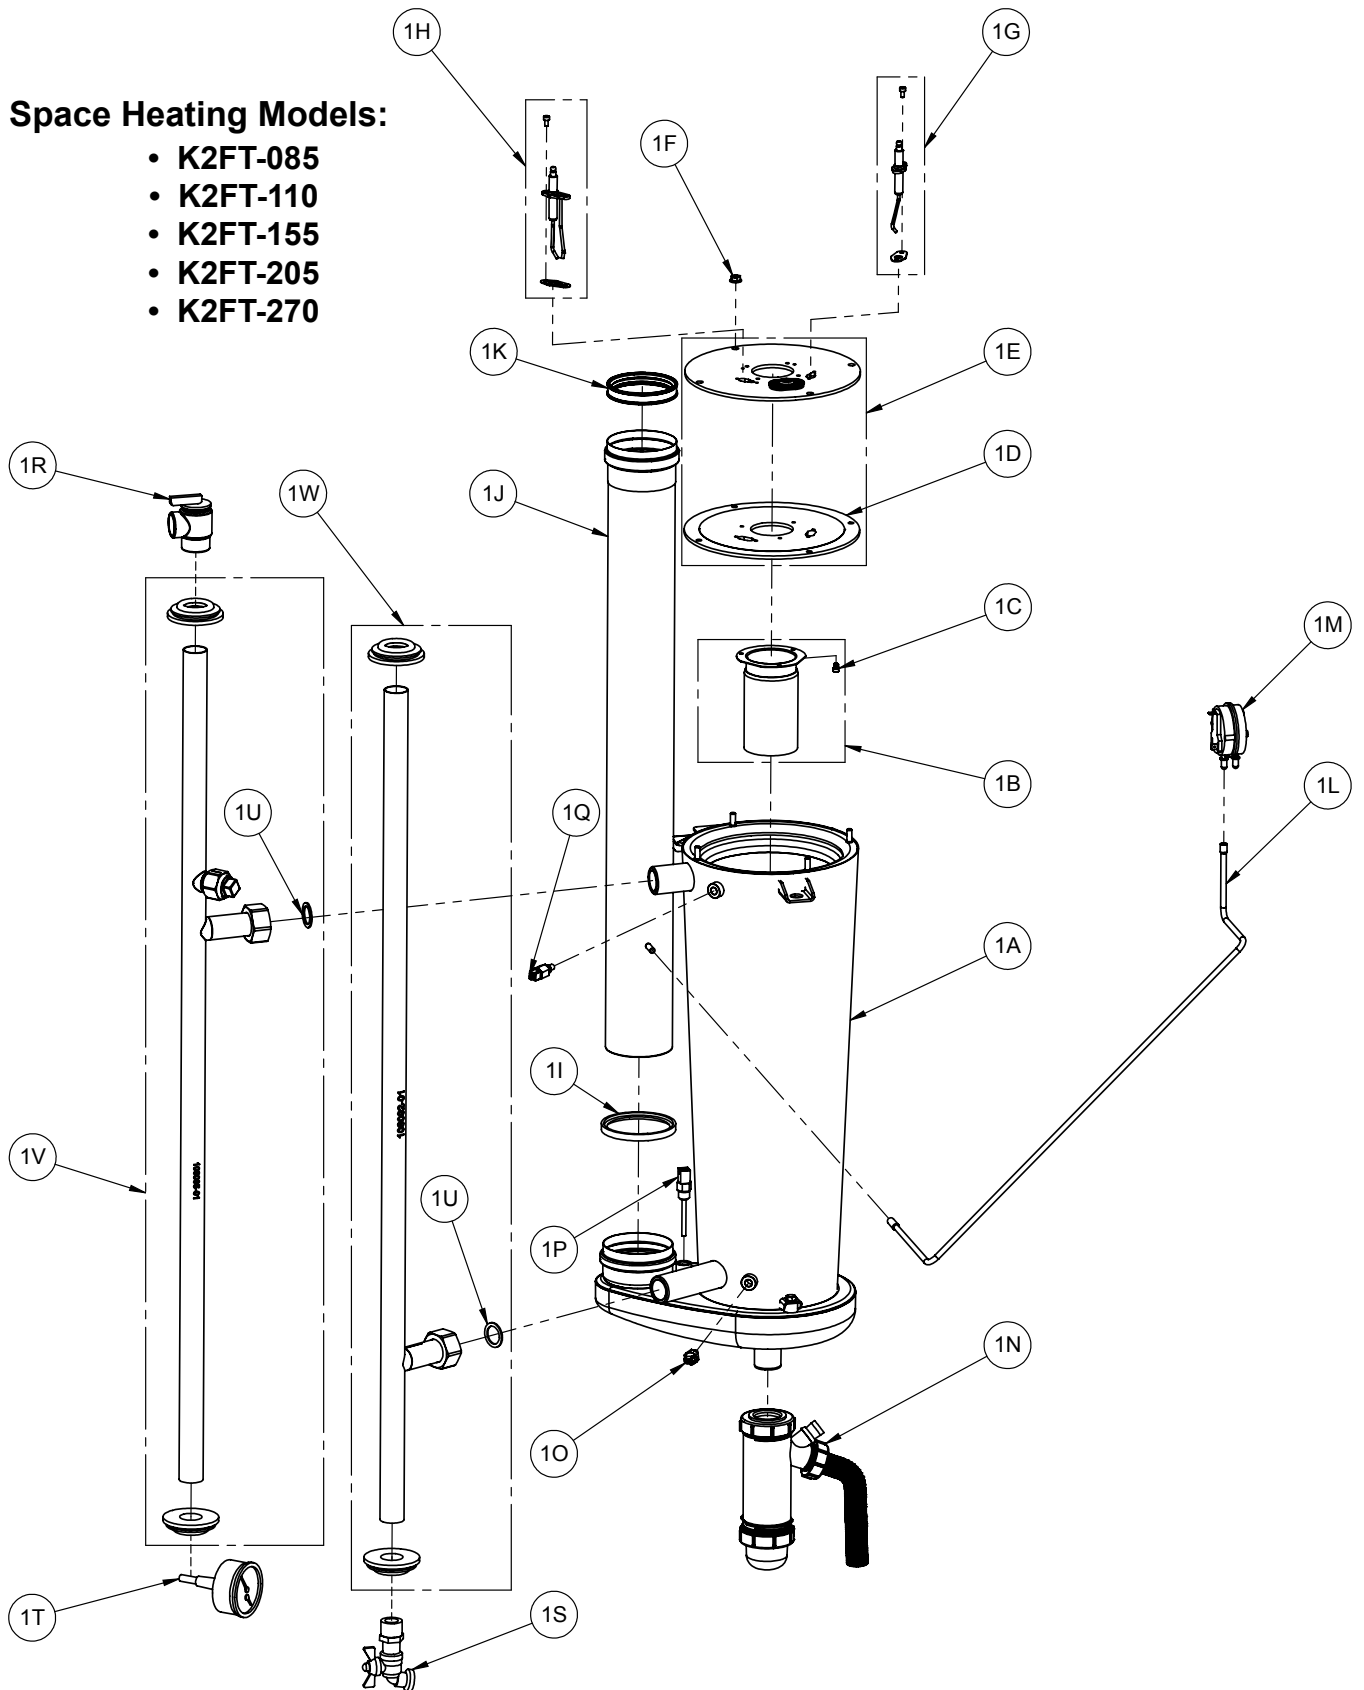

XV. Repair Parts (continued)

155 MBH Combi Heat Exchanger and Piping Repair Parts		
Key No.	Description	Part Number (Qty)
		K2FTC-155
2A	Heat Exchanger	Contact U.S. Boiler Company. Provide boiler serial number.
2B	Burner Repair Kit (includes burner and screws)	106986-03
2C	Burner Screw, Socket Head Cap Screw, M4 x 6mm, 316SS	101064-01 (4)
2D	Burner Plate Insulation	106969-02
2E	Burner Plate Repair Kit (includes burner plate and insulation)	106985-02
2F	Burner Plate Flange Locknut, Serrated, M6 x 1.0, Zinc Plated Steel	101724-01 (5)
2G	Flame Sensor Repair Kit (includes electrode, gasket and hardware)	105798-01
2H	Igniter Repair Kit (includes electrode, gasket and hardware)	103005-02
2I	Heat Exchanger Flue Gasket Repair Kit	107000-01
2J	Flue Pipe Repair Kit (includes pipe and gasket)	106998-01
2K	Flue Pipe Gasket Repair Kit	106999-01
2L	Silicone Tubing Repair Kit	106989-01
2M	Flue/Inlet Switch Repair Kit	105857-01
2N	Condensate Trap Repair Kit	106990-01
2O	Return Sensor Repair Kit	106991-01
2P	Flue Gas / Blocked Drain Sensor Repair Kit	106993-01
2Q	Supply Sensor Repair Kit	106994-01
2R	30 PSI Relief Valve	81660319
2S	3/4" NPT Drain Valve	806603061
2T	Temperature & Pressure Gauge Repair Kit	105894-01
2U	Water Gasket Repair Kit (supply and return pipes, includes 2 gaskets)	106995-01
2V	Supply Pipe Assembly Repair Kit (includes pipe assembly, zone valve body, gasket and jacket grommet)	106977-03
2W	Return Pipe Assembly Repair Kit (includes pipe assembly, gasket and jacket grommet)	106978-01
2X	Zone Valve Actuator	106847-01
2Y	Circulator to Flat Plate Pipe Assembly Repair Kit (includes gasket)	106979-01
2Z	Water Gasket Repair Kit (top flat plate heat exchanger connections, includes 2 gaskets)	106996-01
2AA	DHW Circulator, Taco 007 (includes circulator and gaskets)	106943-01
2BB	Circulator Flange Kit (includes 2 flanges and hardware)	105149-01
2CC	Flat Plate Heat Exchanger Repair Kit (includes heat exchanger, water gaskets and jacket gasket)	106984-01
2DD	Flat Plate Heat Exchanger to Mixing Valve Repair Pipe Assembly (includes gaskets)	106980-01
2EE	DHW to Mixing Valve / Flat Plate Repair Pipe Assembly (includes gaskets)	106981-01
2FF	Mixing Valve to DHW Repair Pipe Assembly (includes gaskets)	106982-01
2GG	Water Gasket Repair Kit (bottom flat plate heat exchanger connections and mixing valve, includes 5 gaskets)	106488-01
2HH	Thermostatic Mixing Valve	106342-01
2II	Flow Switch	106343-01
not shown	DHW Circulator and Zone Valve Repair Harness	107004-01

XV. Repair Parts (continued)

Combi Domestic Hot Water and Space Heating Model: • K2FTC-155

