



Electronic controllers

ECL Comfort 310

Remote Control Units ECA 30 / 31 and Application keys

Description

The ECL Comfort 310 is an electronic weather compensated temperature controller in the ECL Comfort controller family for use in district heating, central heating and cooling systems. Energy savings can be achieved by correct control of the flow temperature in heating and cooling systems. Up to 4 circuits can be controlled.

The weather compensation function in the ECL Comfort controllers measures the outdoor temperature and controls the flow temperature to the heating system accordingly. The weather compensated heating system increases the comfort level and saves energy.

The ECL Comfort 310 controller is configured with a selected application by means of an ECL Application Key.

The ECL Comfort 310 can work as a stand-alone controller and communicate with up to two RCUs and an extension module ECA 32 or ECA 35 with additional inputs / outputs.

Features & benefits

- Designed for comfortable temperatures, optimum energy consumption, easy installation by means of the ECL Application Key (Plug-and-Play) and user-friendly operation
- 3 control circuits + thermostatic function
- Integrated communication interfaces
 - USB interface for service
 - Modbus RS485 for longer distances
 - M-bus master dedicated for heat meters
 - Modbus TCP
- 10 input: 6 Pt 1000, 4 configurable
- 3 x 3-point control output optimized for actuators
- 6 relay outputs
- Data logging readout on display or via communication interface
- Connection to Leanheat® Monitor – easy to install, access and adjust / monitor
- Optional ECA 30/31 Remote Control Unit
- Improved energy savings are facilitated by weather compensation

Applications

- District heating
- Central heating/HVAC
- Cooling systems
- For applications with up to 4 circuits
- Different ECL Application Keys make it easy for the ECL Comfort 310 hardware to run different applications

Ordering

Product code numbers

Description	Type	Code number
ECL COMFORT 310/230 V	ECL Comfort 310	087H3040

Accessories code numbers



087H3808

ECL Application keys, A247

ECL Application key A247. Heating and DHW-tank control

Related products

087H3040 087H3044

087H3050



087H3201

ECA 31

ECA 31

Related products

087H3040 087H3044

087H3050



084N1012

ESMT, Sensor type: Outdoor, Pt 1000

ESMT, Pt 1000 outdoor sensor

Related products

087H3040 087H3044

087H3050



087H3814

ECL Application keys, A275

ECL Application key A275. Boiler ON-OFF control with 2 x heating and 1 x DHW-tank control

Related products

087H3040 087H3044

087H3050



087B1165

ESM-11, Pt 1000

ESM-11, Pt 1000 Surface sensor

Related products

087H3040 087H3044

087H3050



087H3813

ECL Application keys, A367

ECL Application key A367. 2 x heating and 1 x DHW-tank control

Related products

087H3040 087H3044

087H3050



087B1184

ESMB-12, Pt 1000

ESMB-12, Pt 1000 Universal sensor

Related products

087H3040 087H3044

087H3050



087N0011

ESMC, Pt 1000

ESMC, Pt 1000 Surface sensor

Related products

087H3040 087H3044

087H3050



087H3802

ECL Application keys, A230

ECL Application key A230. Heating control with wind compensation. Cooling control.

Related products

087H3040 087H3044

087H3050



087B1182

ESMU-100, Pt 1000, Stainless steel

ESMU-100, Pt 1000 immersion sensor, 100 mm, stainless steel

Related products

087H3040 087H3044

087H3050



087H3810

ECL Application keys, A376

ECL Application key A3762 x heating and 1 x DHW-tank control

Related products

087H3040 087H3044
087H3050



087H3236

ECL Mounting kit

ECA 30/31 FRAME KIT

Related products

087H3040 087H3044
087H3050



087H3200

ECA 30

ECA 30

Related products

087H3040 087H3044
087H3050



087H3847

ECL Application keys, A319

Related products

087H3040 087H3044
087H3050



087H3845

ECL Application keys, A362

Related products

087H3040 087H3044
087H3050



087H3812

ECL Application keys, A232

ECL Application key A232 Heating / cooling control of floor heating / ceiling cooling systems

Related products

087H3040 087H3044
087H3050



087B1181

ESMU-250, Pt 1000, COPPER

ESMU-250, Pt 1000 immersion sensor, 250 mm, copper

Related products

087H3040 087H3044
087H3050



087H3205

ECA 35

Related products

087H3040 087H3044
087H3050



087H3811

ECL Application keys, A214

ECL Application key A214. Heating / cooling control of ventilation systems

Related products

087H3040 087H3044
087H3050



087B1183

ESMU-250, Pt 1000, Stainless steel

ESMU-250, Pt 1000 immersion sensor, 250 mm, stainless steel

Related products

087H3040 087H3044
087H3050



087H3818

ECL Application keys, A333

ECL Application key A333. Heating control with speed control of one or two circulation pumps. Refill water and storage function.

Related products

087H3040 087H3044

087H3050



087H3817

ECL Application keys, A377

ECL Application key A377. 2 x heating and 1 x DHW-tank control

Related products

087H3040 087H3044

087H3050



087H3805

ECL Application keys, A231

ECL Application key A231. Heating control with one or two circulation pump control. Refill water function with one or two pumps.

Related products

087H3040 087H3044

087H3050



087H3806

ECL Application keys, A237

ECL Application key A237. Heating / DHW tank control

Related products

087H3040 087H3044

087H3050



087H3800

ECL Application keys, A266

ECL Application key A266. Heating and DHW control

Related products

087H3040 087H3044

087H3050



087H3803

ECL Application keys, A368

ECL Application key A368. Heating control with one or two circulation pump control. Refill water function with one or two pumps.

Related products

087H3040 087H3044

087H3050



087B1180

ESMU-100, Pt 1000, COPPER

ESMU-100, Pt 1000 immersion sensor, 100 mm, copper

Related products

087H3040 087H3044

087H3050



087H3804

ECL Application keys, A361

ECL Application key A361. 2 x heating control with one or two circulation pump control. Refill water function.

Related products

087H3040 087H3044

087H3050



087H3807

ECL Application keys, A217

ECL Application key A217. DHW - / DHW-tank temperature control

Related products

087H3040 087H3044

087H3050



087H3202

ECA 32

ECA 32

Related products

087H3040 087H3044

087H3050



087B1164

ESM-10, Sensor type: Room, Pt 1000

ESM-10, Pt 1000 room temperature sensor

Related products

087H3040 087H3044
087H3050



087H3815

ECL Application keys, A390

ECL APPLICATION KEY A390

Related products

087H3040 087H3044
087H3050



087H3230

ECL Base part

ECL COMFORT 310 BASE PART

Related products

087H3040 087H3044
087H3050



087H3801

ECL Application keys, A260

ECL Application key A260. 2 x heating control

Related products

087H3040 087H3044
087H3050



087B1156

ECA 99, Supply voltage [V] AC: 24, Output voltage [V] AC: 24

ECA 99 TRANSFORMER 24 V

Related products

087H3040 087H3044
087H3050

Each of the abovementioned code nos. comprises 1 ECL Application Key, 1 installation guide and 1 set of multi-lingual user guides.

Accessories and spare parts (for Pt 1000 temperature sensors)

Type	Designation	Code No.
Pocket	Immersion, stainless steel 100 mm, for ESMU-100, Cu (087B1180)	087B1190
Pocket	Immersion, stainless steel 250 mm, for ESMU-250, Cu (087B1181)	087B1191
Pocket	Immersion, stainless steel 100 mm, for ESMB-12, (087B1184)	087B1192
Pocket	Immersion, stainless steel 250 mm, for ESMB-12, (087B1184)	087B1193

Typical ordering, types


ECL Comfort Controller	Base part	Appl. key	Remote Control Unit	Temperature sensors	Actuators / valves
ECL 310, 230 V a.c. ECL 310 B, 230 V a.c. ECL 310, 24 V a.c.	for ECL 310	A2xx A3xx	ECA 30 ECA 31	ESMT (outdoor) ESM-11 (pipe surface) ESMC (pipe surface) ESMU (immersion) ESM-10 (room) ESMB-12 (universal)	see dedicated literature

Reference, additional products / software


Leanheat® Monitor	Access to the ECL Comfort 310 via a web browser. After having arranged an account, access to the ECL Comfort 310 can also be done via a Smart phone.	See separate data sheet Download from Internet: Leanheat® Monitor Danfoss
ECL Tool	Software for laptop. Connect ECL Comfort 210 / 296 / 310 directly to laptop for e.g. parameter lists, commissioning reports.	Download from Internet: ECL tool Danfoss

Overview

Product portfolio

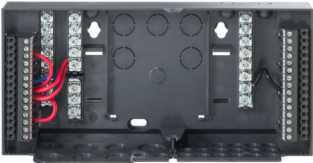ECL Comfort 310 Controller	
	The ECL Comfort 310 is easily operated by means of a dial (multi-functional knob) or a Remote Control Unit (RCU). The dial and the backlight display guide the user through the text menus in the selected language. The ECL Comfort 310 controller has electronic output for motorized valve control, relay output for circulation pump / changeover valve control among others, as well as alarm output. The enclosure is designed for mounting on wall and DIN rail. A variant ECL Comfort 310B (without display and dial) is available. It can be used for mounting inside a panel and is operated by means of the RCU ECA 30 / 31 which can be placed in front of the panel.
Base part	
	Danfoss ECL Comfort mounting base part. For mounting on wall or DIN rail (35 mm). Depending on application, one of the internal extension modules ECA 32 or ECA 35 (inserted into the controller's base part) can give additional input and output signals.
Application key	
	Different ECL Application Keys make it easy for the ECL Comfort 310 hardware to run different applications. The ECL Comfort 310 controller is loaded with the desired application by means of the ECL Application Key, which contains information about applications (basic application sketches are shown in the display), languages, factory settings and firmware. The ECL Application Keys, series A2xx can be used in ECL Comfort 210, ECL Comfort 296 and ECL Comfort 310. Most of the A2xx application keys give extended functionalities when used in ECL Comfort 310, such as additional temperature sensors and M-bus communication. The ECL Application Keys, series 3xx can be used in ECL Comfort 310 only. The application parameters are stored in the controller and are not affected by power break. The relevant ECL Application Keys for the ECL Comfort 210 / 296 / 310 controller can be found in the ordering section.
Remote Control Unit	
	The Remote Control Units (RCU ECA 30 and ECA 31) are used for room temperature control and override of the ECL Comfort 310. The display has backlight. The RCUs are connected to the ECL Comfort controllers by means of 2 x twisted pair cable for communication and power supply (ECL 485 communication bus). The ECA 30 / 31 has a built-in room temperature sensor. An external room temperature sensor can be connected substituting the built-in temperature sensor. Furthermore, the ECA 31 has a built-in relative humidity sensor and the signal is used in relevant applications. It is possible to connect up to 2 RCUs on the ECL 485 communication bus. One RCU can monitor max. 10 ECL Comfort controllers (master/slave system). The ECL Comfort 310 can also work with up to 2 x RCUs, ECA 32 / 35 and other ECL Comfort 210 / 296 / 310 controllers via the ECL 485 communication bus.

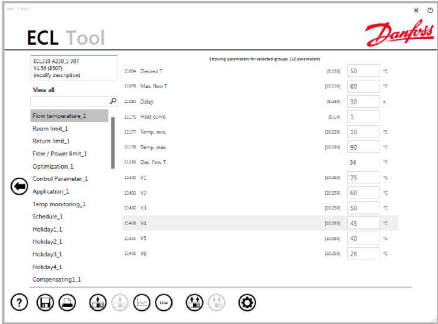

Temperature sensors	
	6 Pt 1000 temperature sensors can be connected. In addition, 4 inputs are configured when uploading the application. The configuration can be Pt 1000 temperature sensor input, analogue input (0 – 10 V) or digital input. Platinum-based sensors, 1000 Ω at 0 °C All the temperature sensors are two-wire devices, and all connections are interchangeable.
Service software	
	The ECL Tool software for ECL Comfort 310 offers possibilities for an alternative remote control in relation to Leanheat® Monitor software. ECL Tool lets service personnel connect to an ECL Comfort 210/310 controller and load, modify and save settings of all its parameters. It can also print a report of current/changed settings i.e. after commissioning of a heating installation.
Cloud Remote Control	
	The web-based Leanheat® Monitor communicates with the ECL Comfort 310 for an effective and easy-to-use turnkey SCADA Supervisory Control And Data Acquisition) tool for all users, service personnel and at commissioning. Service level can be increased and/or service costs reduced. The heating and/or cooling installation is made accessible from virtually anywhere at any time via laptops or Smartphones which increases service level and reduces response time to alarms. Ethernet connection is integrated in the controller. Furthermore, Modbus communication to SCADA systems (Supervisory Control and Data Acquisition) and M-bus communication to heat meters are integrated.

Application keys

Key	ECL Comfort 210 / 296	ECL Comfort 310
A214	A214.1, A214.2, A214.3, A214.4, A214.5, A214.6	A214.1, A214.2, A214.3, A214.4, A214.5, A214.6, A314.1, A314.2, A314.3, A314.4, A314.5, A314.6, A314.7, A314.9
A217	A217.1, A217.2, A217.3	A217.1, A217.2, A217.3 A317.1, A317.2
A230	A230.1, A230.2, A230.3, A230.4	A230.1 *, A230.2 *, A230.3 *, A230.4 *
A231	A231.1, A231.2	A231.1, A231.2 A331.1, A331.2
A232	A232.1	A232.1 A332.1, A332.2, A332.3, A332.4
A237	A237.1, A237.2	A237.1, A237.2 A337.1, A337.2
A247	A247.1, A247.2, A347.3	A247.1, A247.2, A247.3 A347.1, A347.2, A347.3
A260	A260.1	A260.1
A266	A266.1, A266.2, A266.9, A266.10	A266.1 *, A266.2 **, A266.9 *, A266.10 *
A275	A275.1, A275.2, A275.3	A275.1, A275.2, A275.3 A375.1, A375.2, A375.3, A375.4, A375.5
A319		A319.1, A319.2
A333		A333.1, A333.2, A333.3
A361		A361.1, A361.2
A362		A362.1
A367		A367.1, A367.2
A368		A368.1, A368.2, A368.3, A368.4, A368.5, A368.6
A376		A376.1*, A376.2*, A376.3 *, A376.4*, A376.5*, A376.9*, A376.10*
A377		A377.1, A377.2, A377.3
A390		A390.1, A390.2 *, A390.3, A390.11 *, A390.12 *, A390.13 *

* When used in ECL 310 + ECA 32 / 35, 0 - 10 Volt controlled actuators can be used alternatively.

** When used in ECL 310 + ECA 32 / 35 a 0 - 10 Volt controlled actuator can, alternatively, be used for the heating circuit.

This is an overview of currently available application keys for the ECL Comfort controllers.

Not all keys are for sale in your country. Please contact your local Danfoss sales company.


Application examples

All mentioned components (S = temperature sensor, P = pump, M = Motorized control valve and so on) are wired to the ECL Comfort 310.

All applications from ECL Comfort 210 / 296 can run in ECL Comfort 310. Extra functions and communication facilities are enabled.


A214.1, ex. a:

Cooling application, duct temperature based on room temperature.

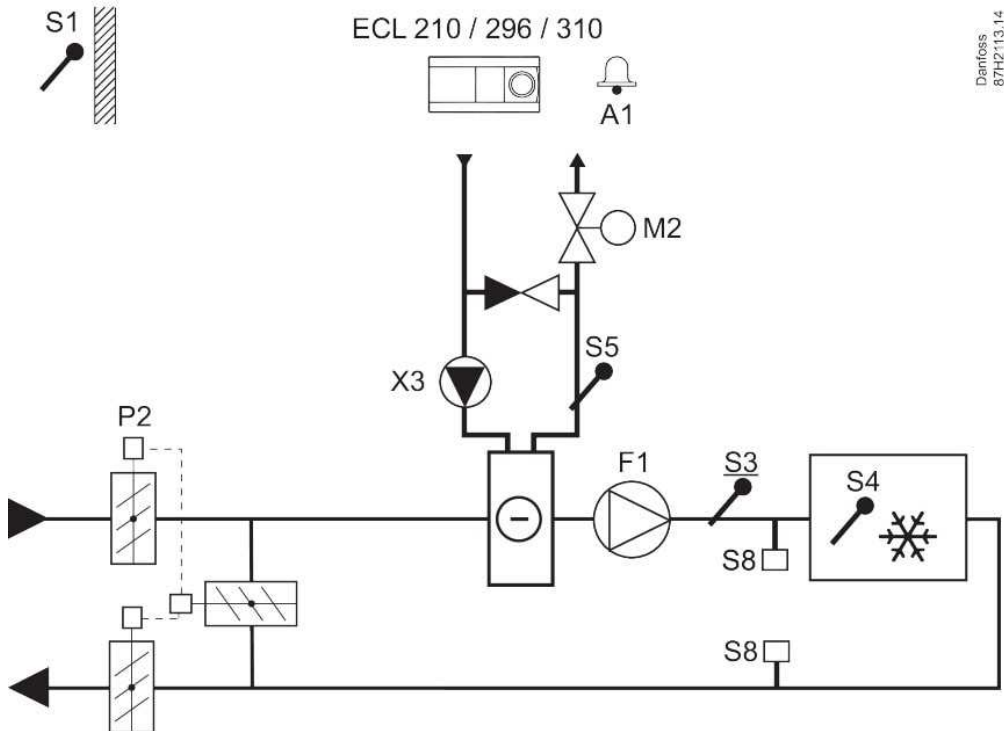


A214.2, ex. a:

Heating application, heating temperature based on duct temperature.

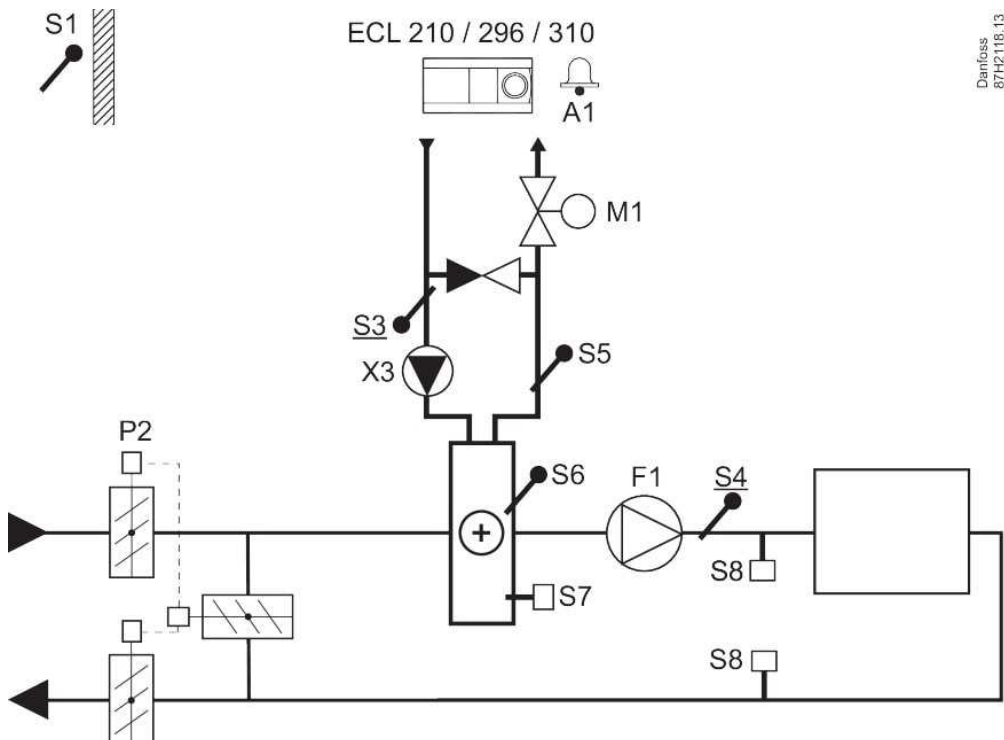


A214.3, ex. a:

Heating application, duct temperature based on room temperature.

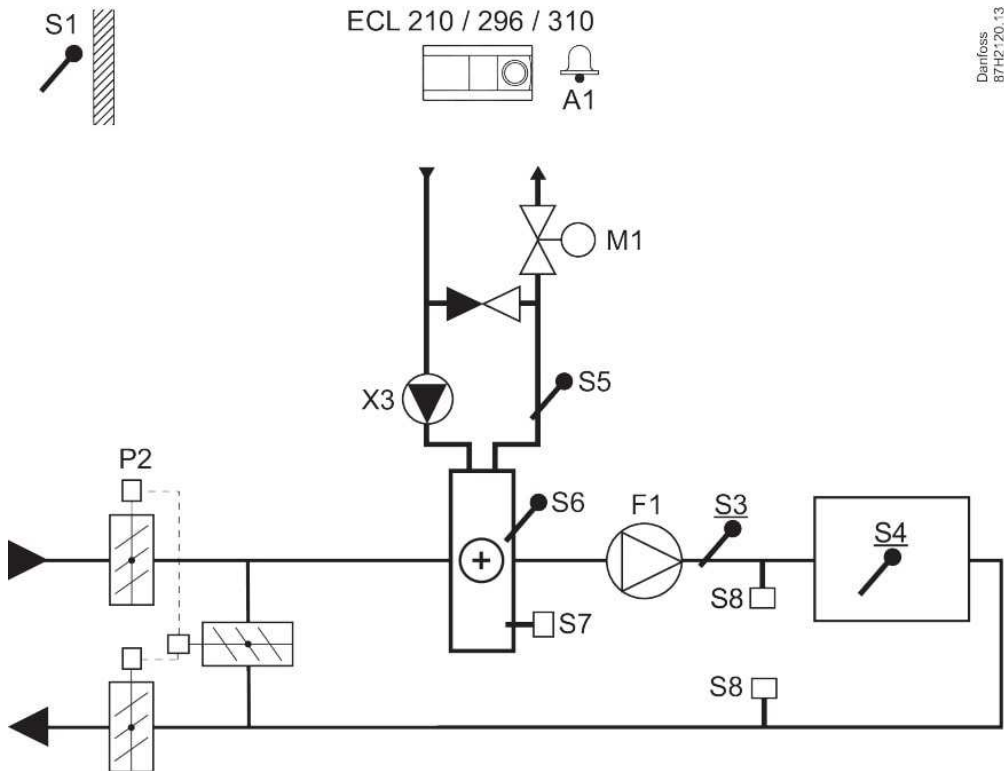
Danfoss
87H2124.13**A214.5, ex. a:**

Heating / cooling application, duct temperature based on room temperature.

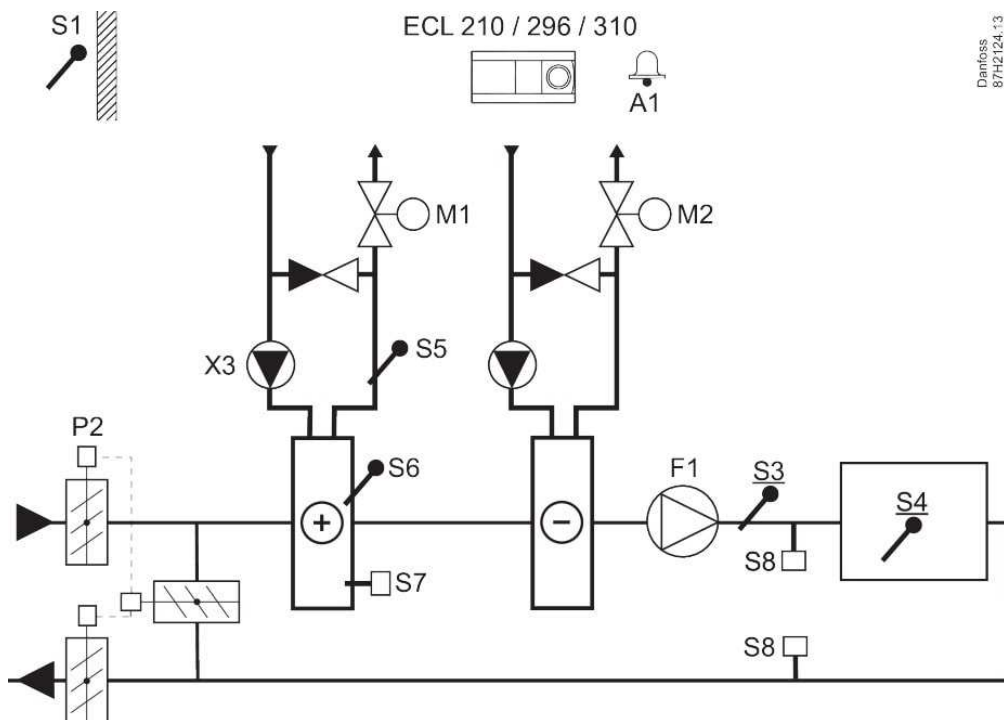
Danfoss
87H2124.13

A314.1, ex. a:

Ventilation system with heating, passive cooling (outside air) and constant duct temperature control. Analogue controlled passive cooling stage (M2).

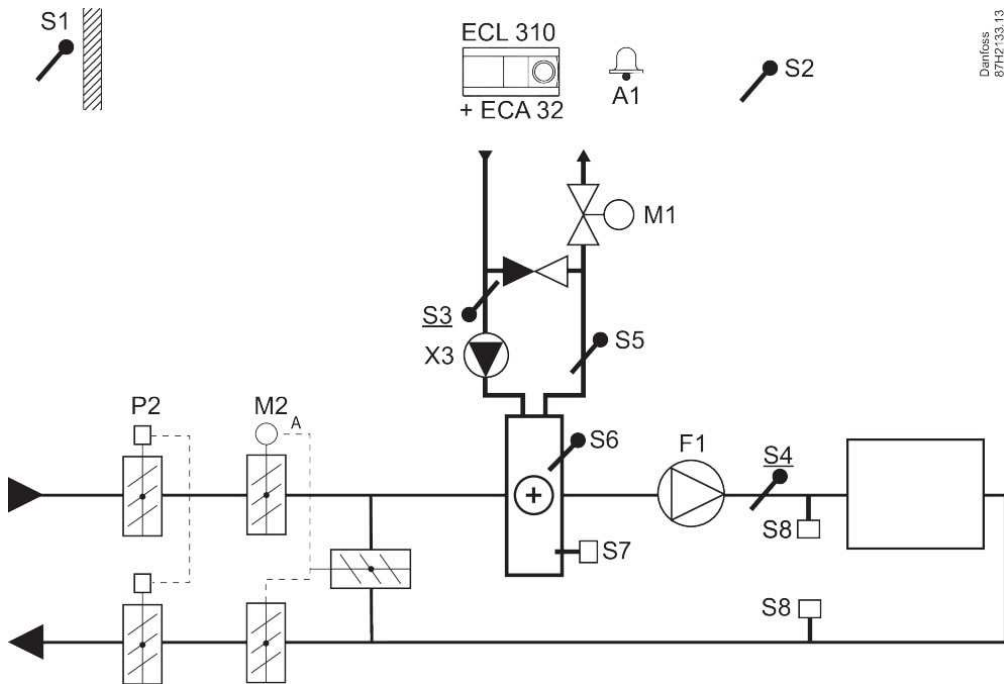
**A314.3, ex. a:**

Ventilation system with heating and room temperature control. Speed controlled fan.

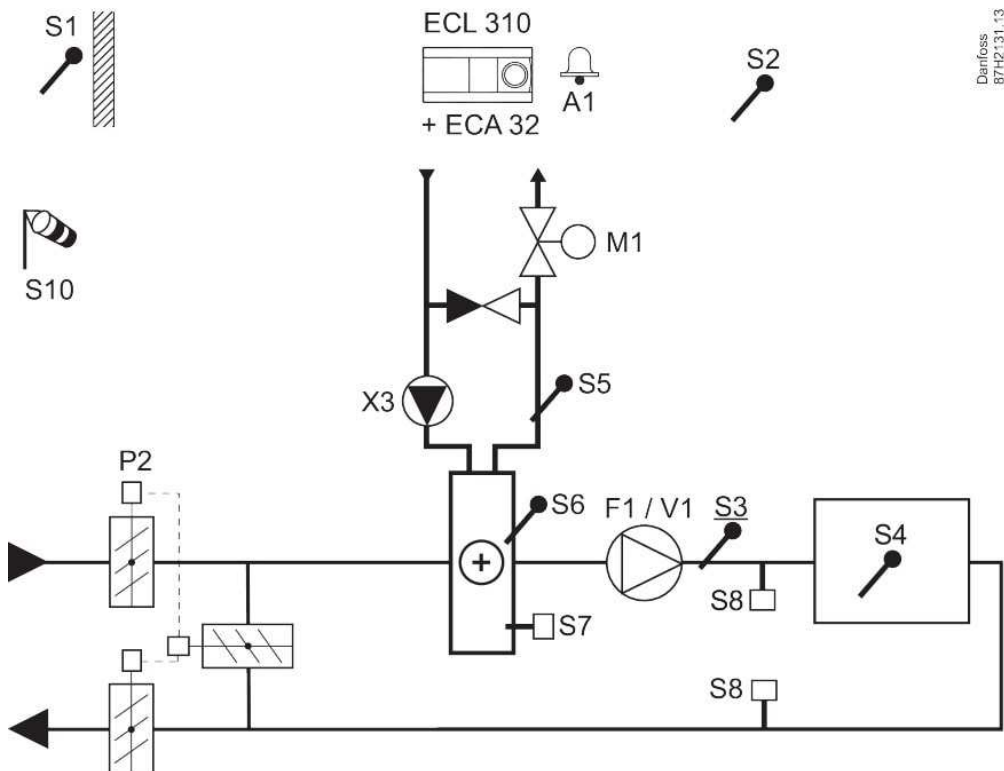


A217.1, ex. a:


DHW tank charging application.

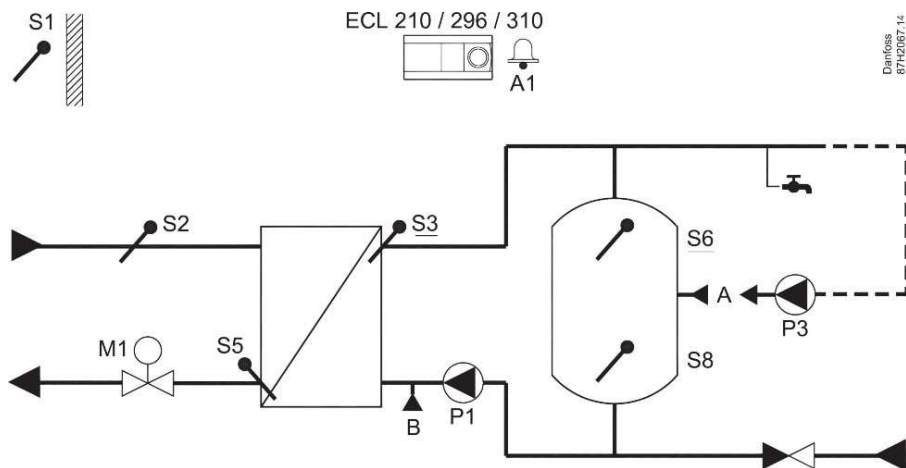**A217.2, ex. a:**

DHW tank charging with preheating circuit.

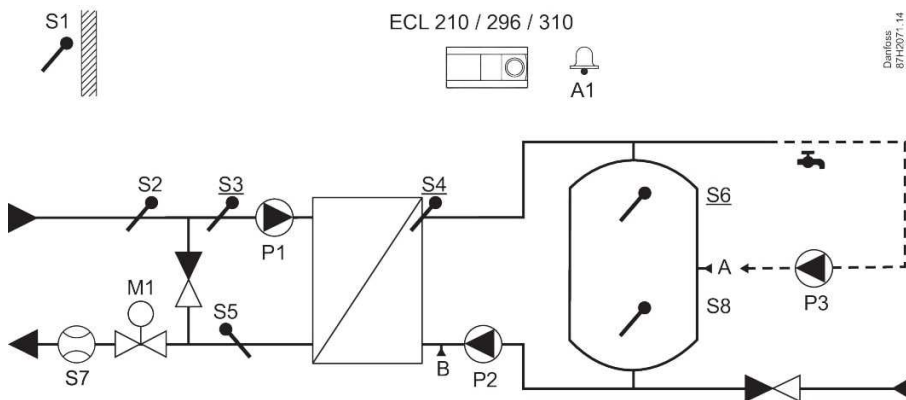
**A217.3, ex. a:**

DHW heating.

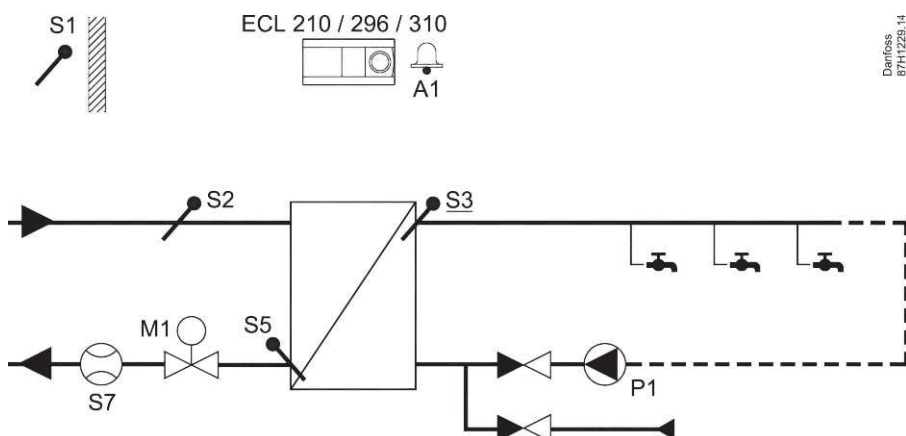


A230.1, ex. a:


Indirectly connected heating system. Wind compensation as option.

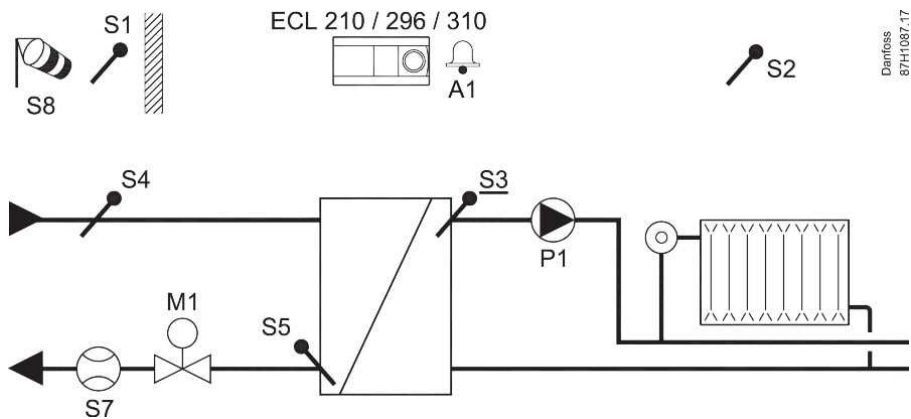**A230.2, ex. a:**

Indirectly connected cooling system (district cooling).

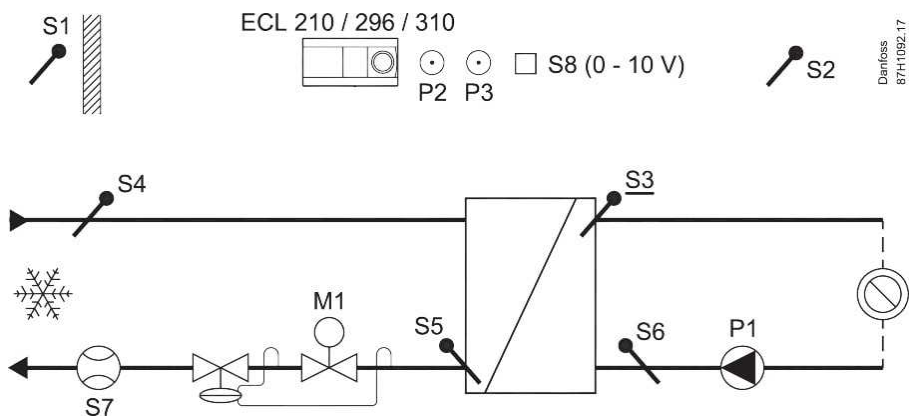
**A230.3:**

Indirectly connected heating system. Compensation for too high relative humidity (measured by ECA 31). Wind compensation as option.

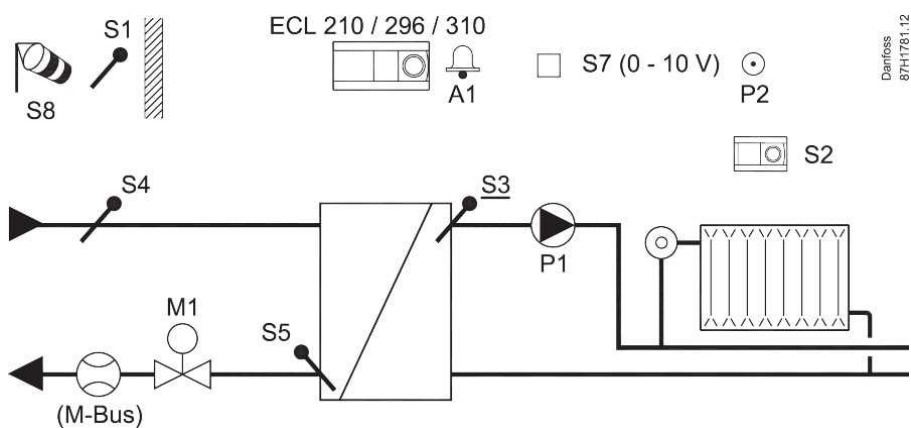


A230.4:


Indirectly connected heating system. Static pressure measurement / alarm.
Monitoring of DHW - and DHW circulation return temperatures.

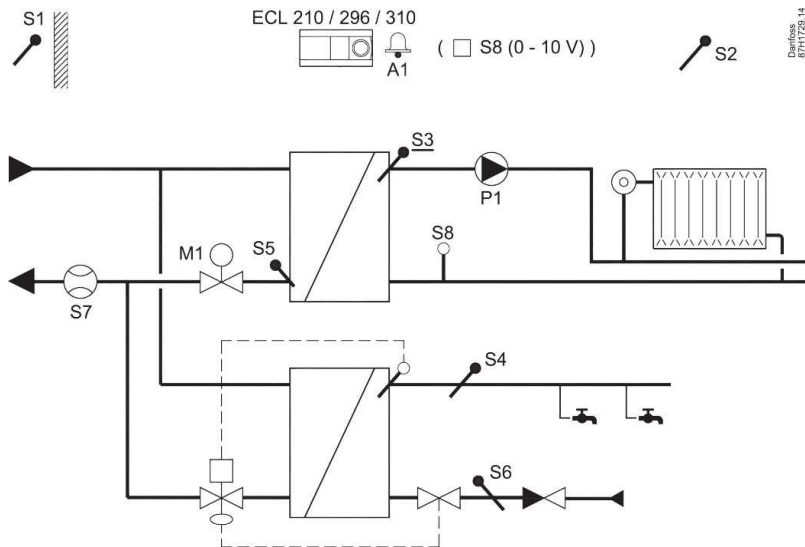**A231.2:**

Indirectly connected heating system with 2-pump control and refill water function.

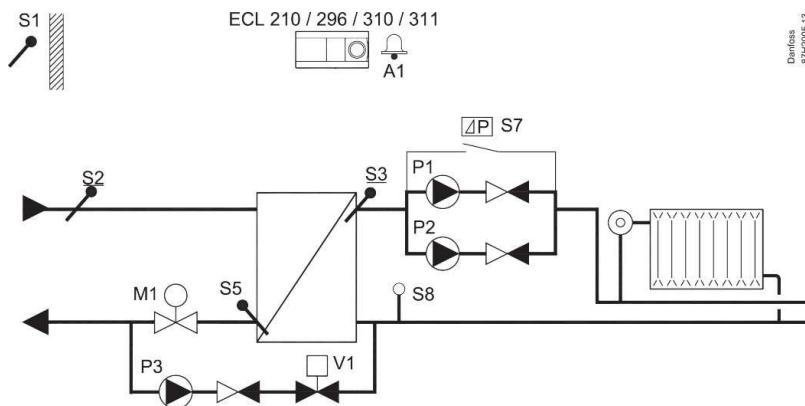
**A331.2, ex. a:**

Heating system with two-pump control and refill water function.
Supply temperature dependent flow temperature control.

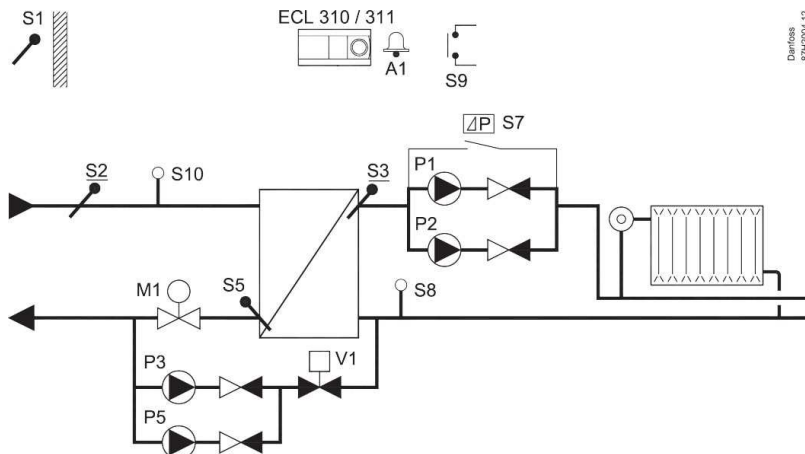


A232.1, ex. a:

Control of flow temperature (heating in floor / cooling in ceiling) in relation to outdoor, room and dew point temperature.

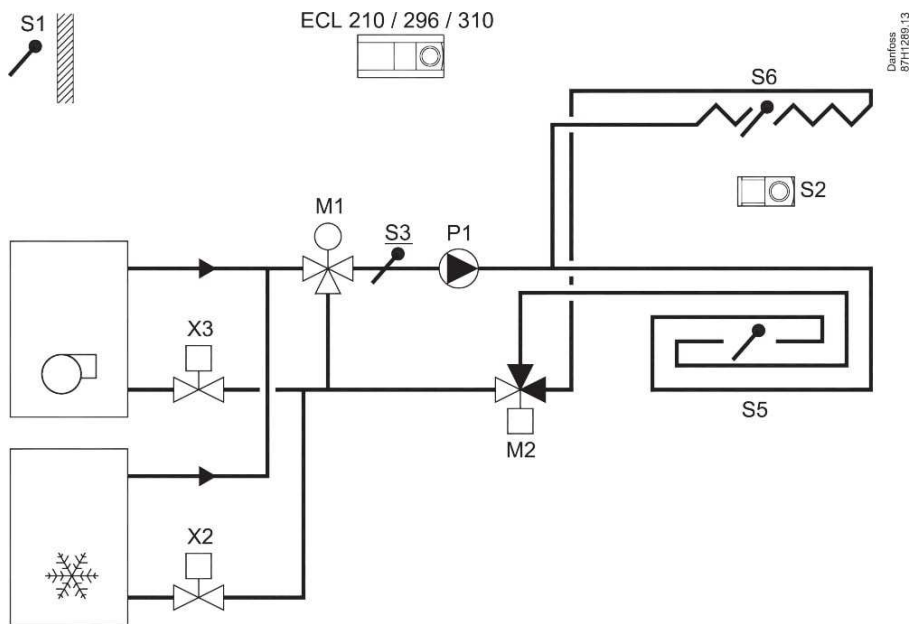


A332.1, ex. a:

Control of flow temperature (heating in floor / cooling in ceiling) in relation to outdoor, room and dew point temperature. Optional return temperature limitation.

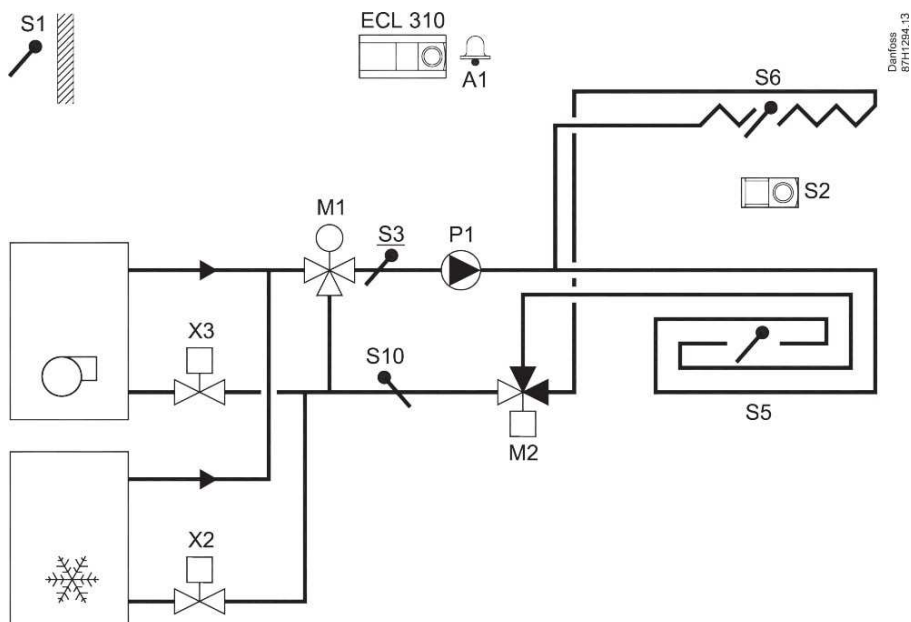


A332.2, ex. a:

Separated control of flow temperatures for heating / cooling in relation to outdoor, room and dew point temperature. Optional return temperature limitations.

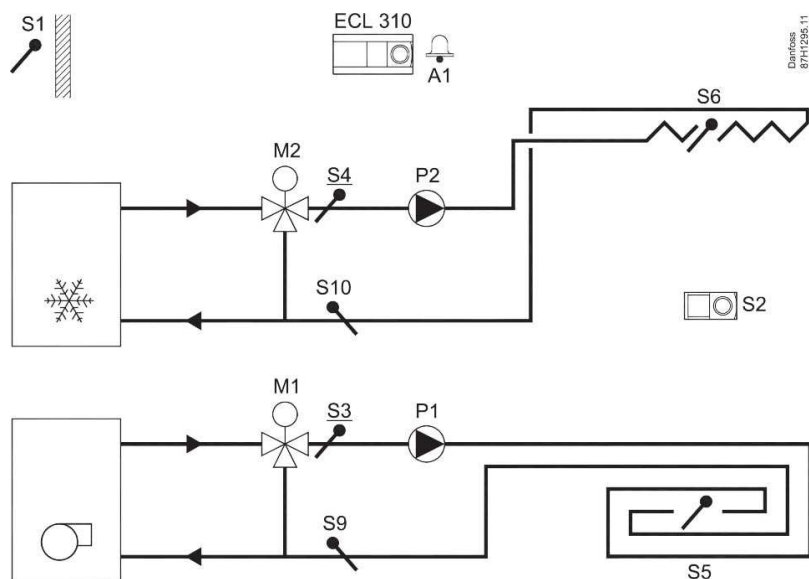
**A332.3:**

Separated control of flow temperatures for heating / cooling in relation to outdoor, room and dew point temperature. Optional return temperature limitations. Advanced instantaneous DHW temperature control.

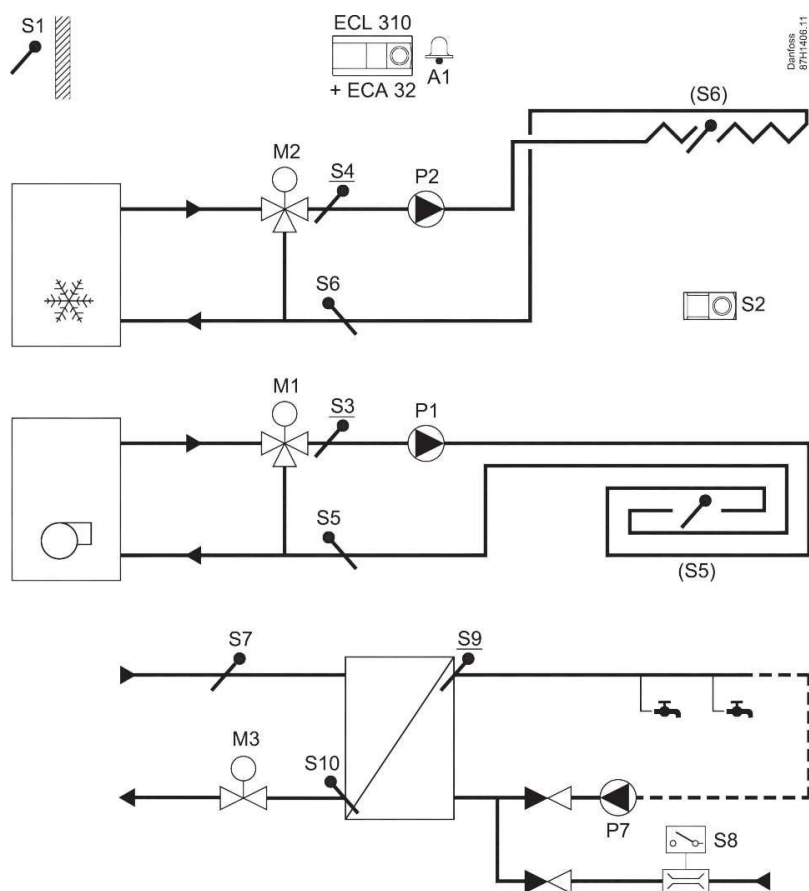


A332.4:

Control of flow temperature (heating in floor / cooling in ceiling) in relation to outdoor, room and dew point temperature. External override of heating / cooling mode. Optional return temperature limitation.

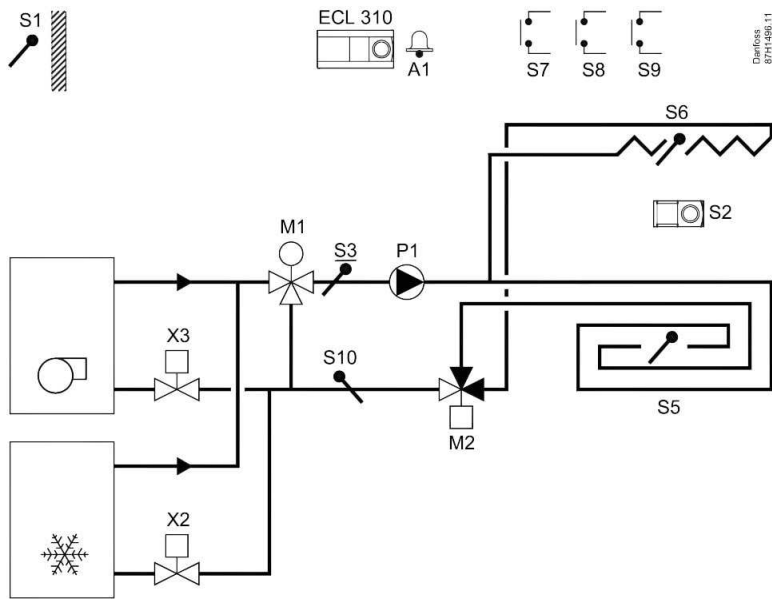


A237.1 / A337.1, ex. a:

Indirectly connected heating and DHW system.

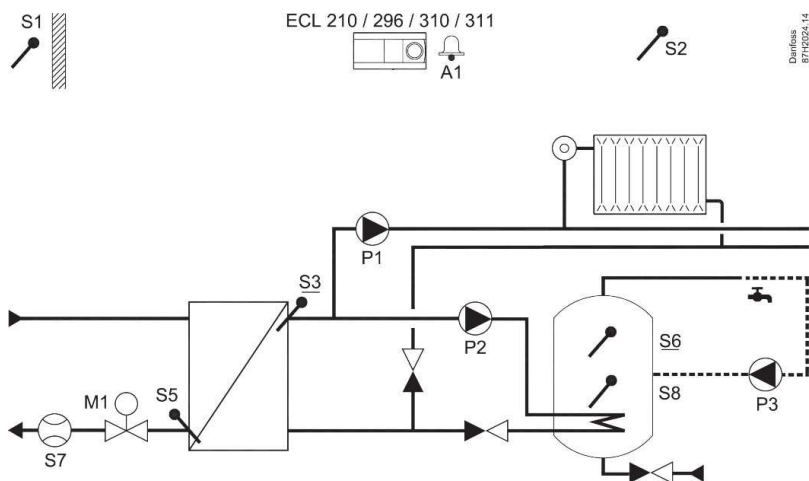


A237.2 / A337.2, ex. a:

Indirectly connected heating and DHW charging system.

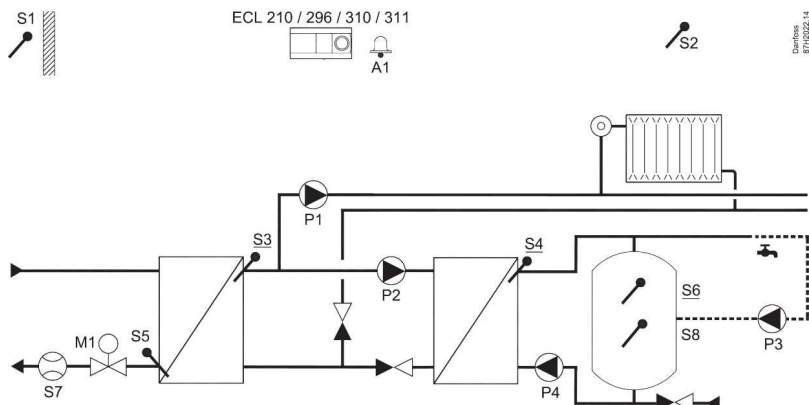


A247.1, ex. a:

Indirectly connected heating and DHW tank charging system. Parallel mode or DHW priority.

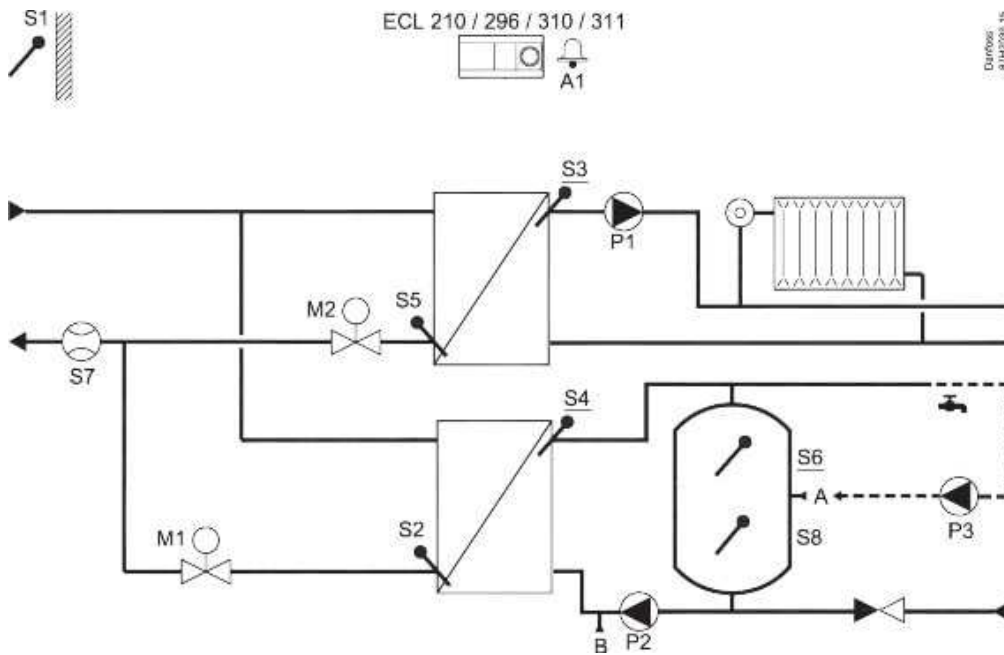
**A247.2, ex. a:**

Indirectly connected heating and DHW tank charging system with preheating circuit. Parallel mode or DHW priority.

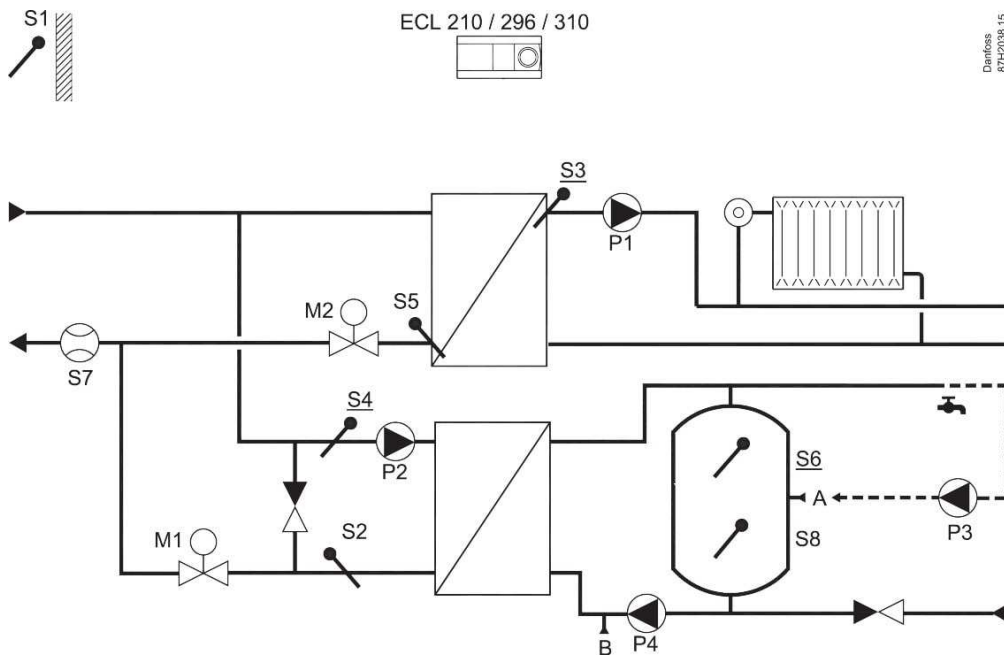


A247.3, ex. a:

Indirectly connected heating and advanced DHW tank charging system with preheating circuit.
Parallel mode or DHW priority.

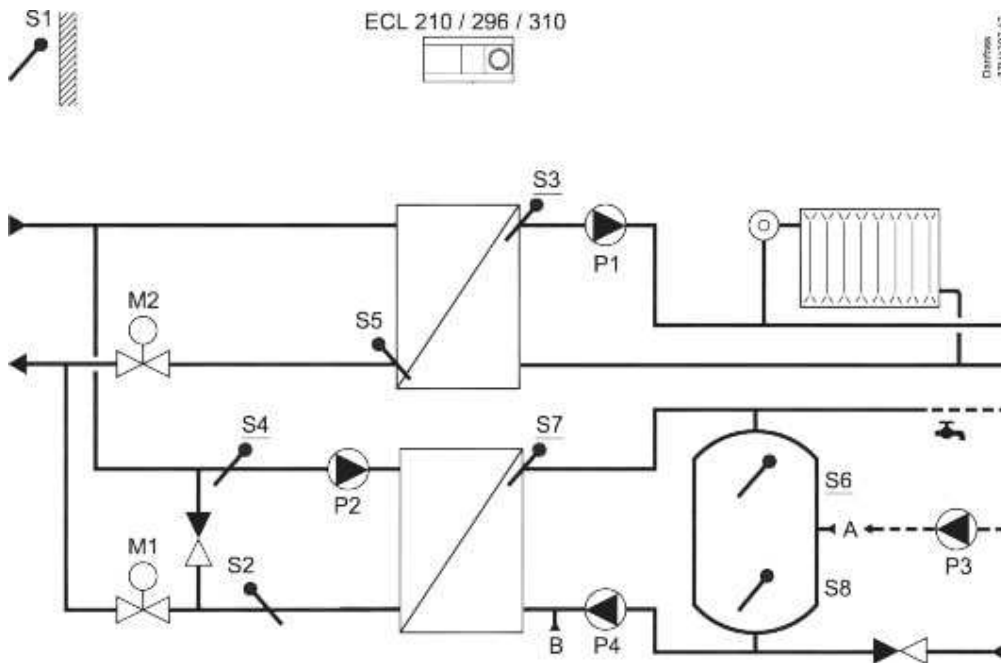
**A347.1, ex. a:**

Indirectly connected heating and DHW tank charging system. Parallel mode or DHW priority.

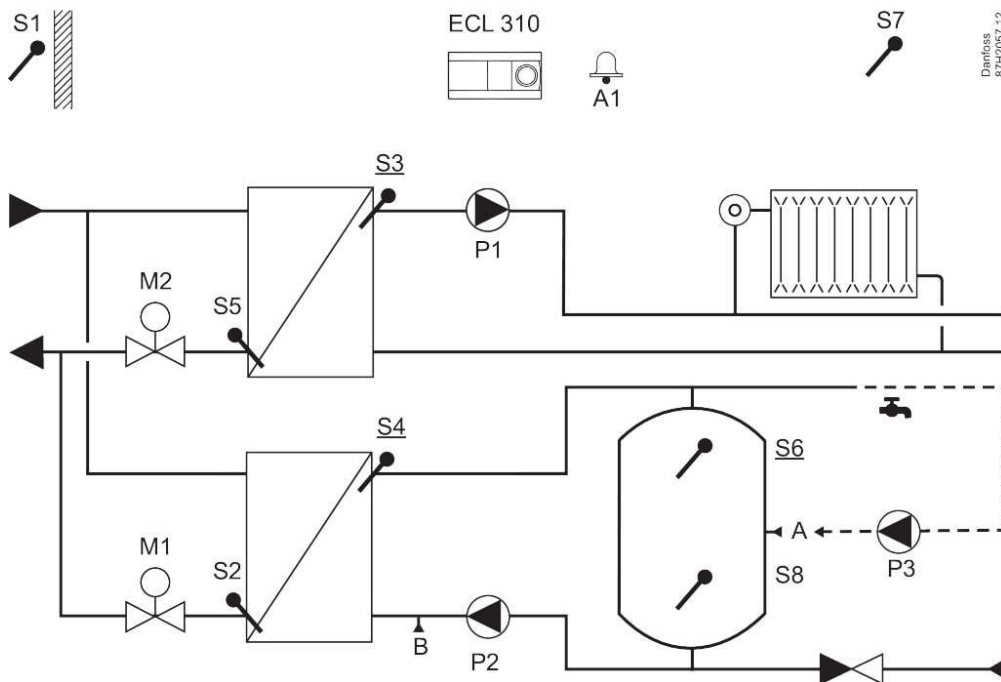


A347.2, ex. a:

Indirectly connected heating and DHW tank charging system with preheating circuit.
Parallel mode or DHW priority.

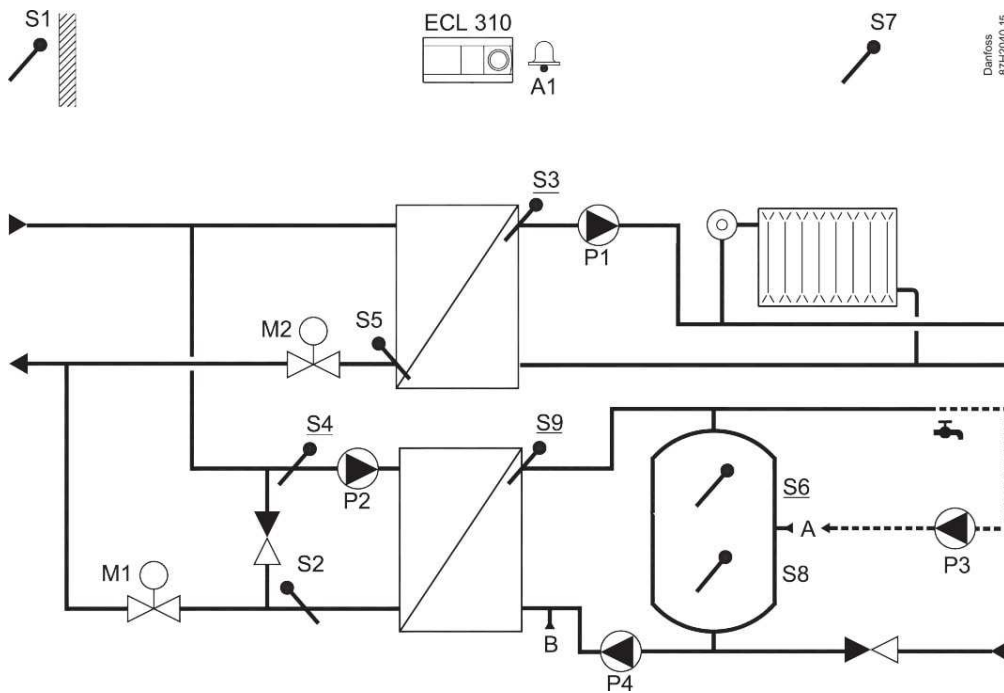
**A260.1, ex. a:**

Two heating systems.

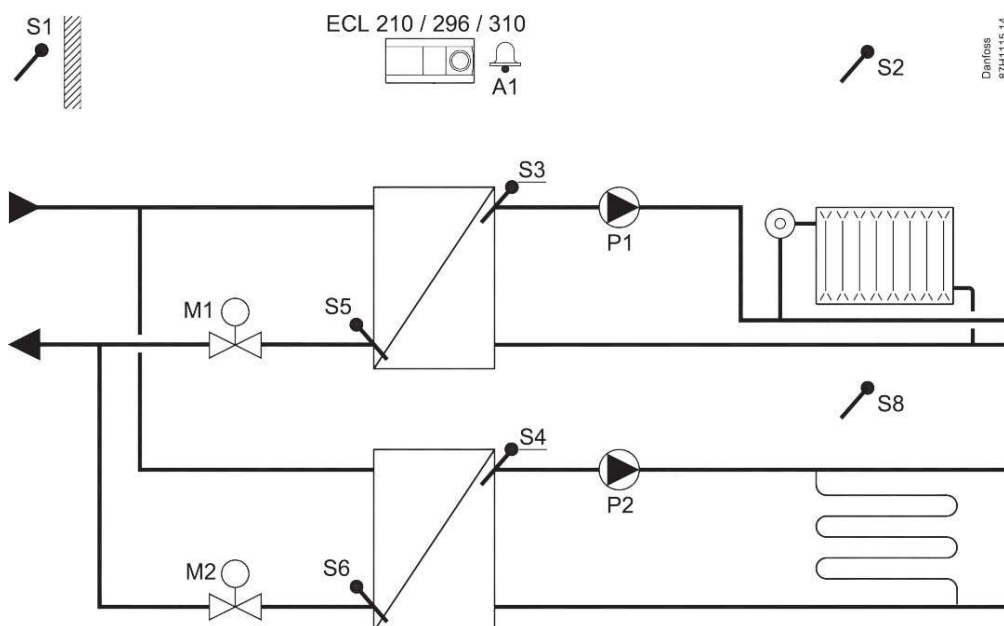


A266.1, ex. a:

Heating and direct DHW heating system. Parallel mode or DHW priority.

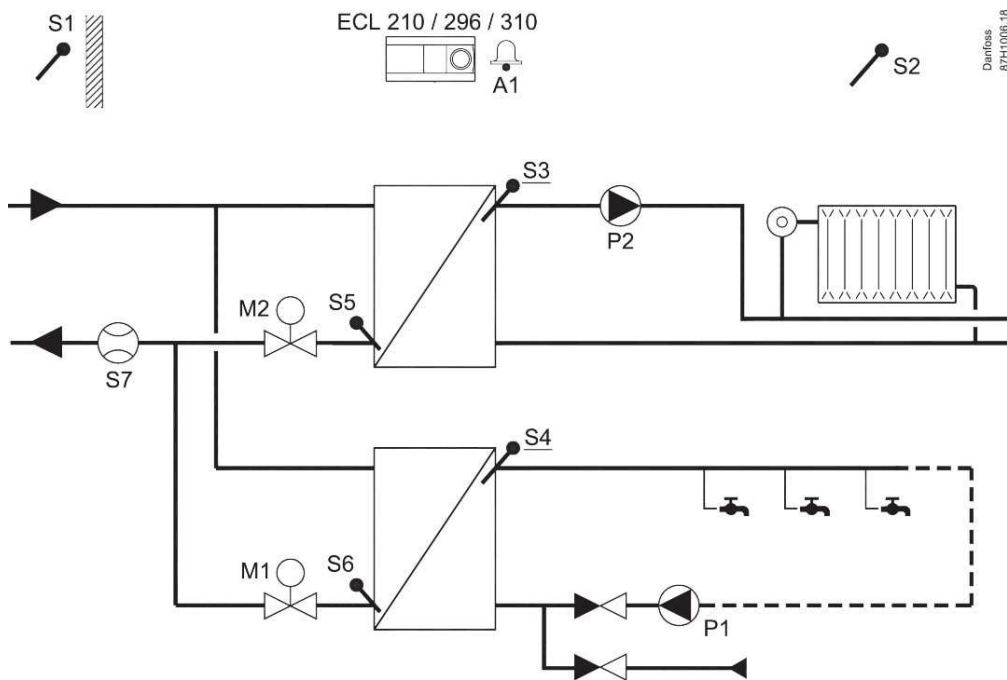
**A266.2, ex. a:**

Heating and direct DHW heating system. Parallel mode or DHW priority. DHW heating on demand (flow switch).

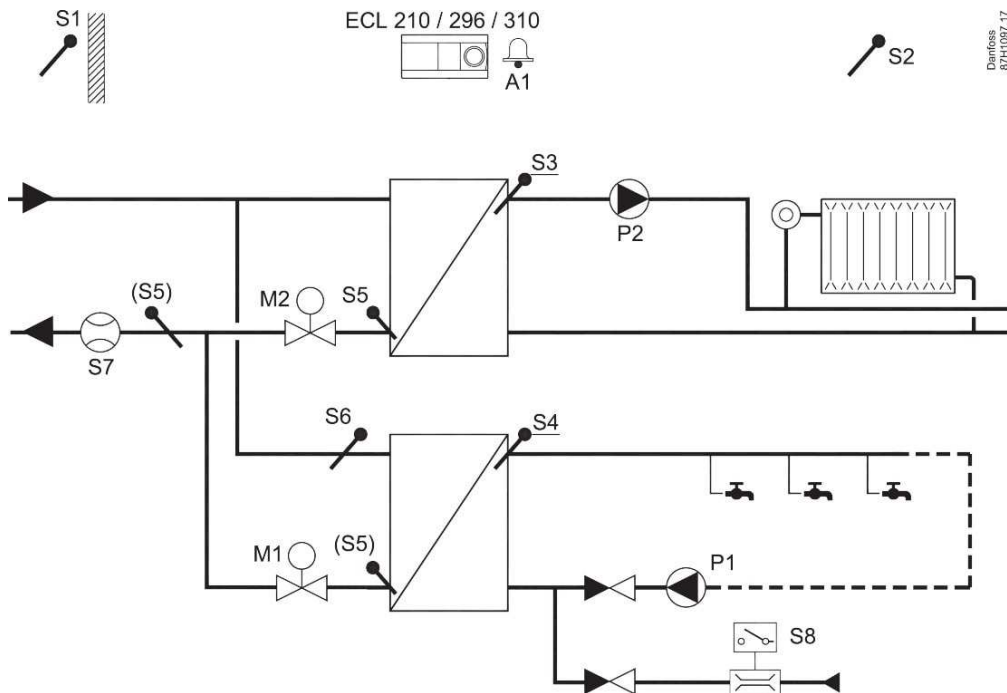


A266.9, ex. a:

Heating and direct DHW heating system. Pressure monitoring / alarm. Universal alarm input. Parallel mode or DHW priority.

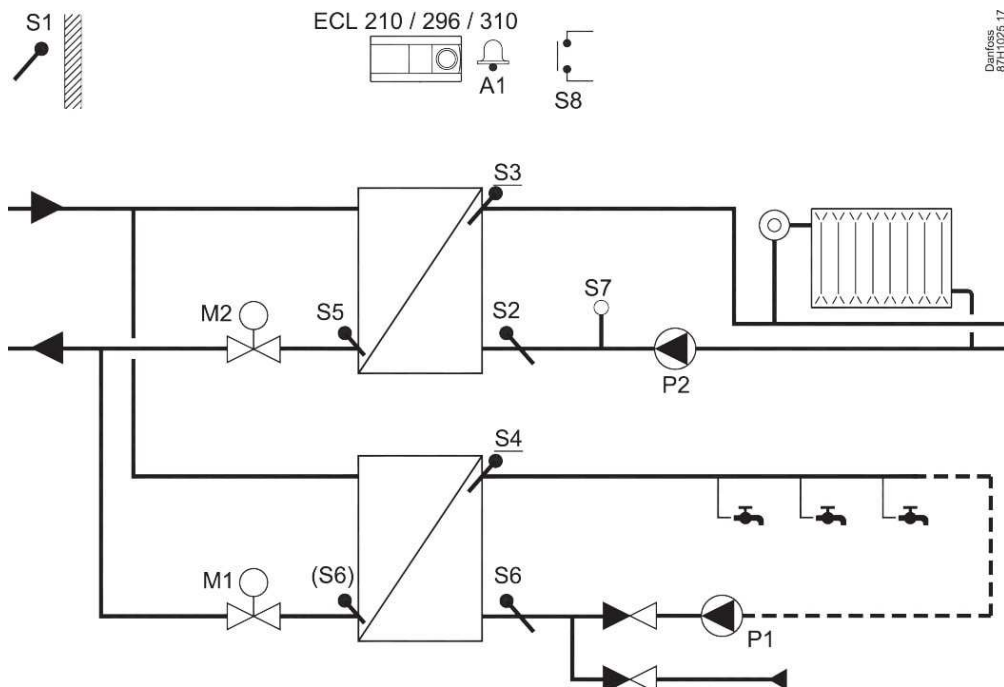


A266.10, ex. a:

Heating and direct DHW heating system. Pressure monitoring / alarm. Universal alarm input. Parallel mode or DHW priority. S7 is pulse based flow or energy meter for related limitation.

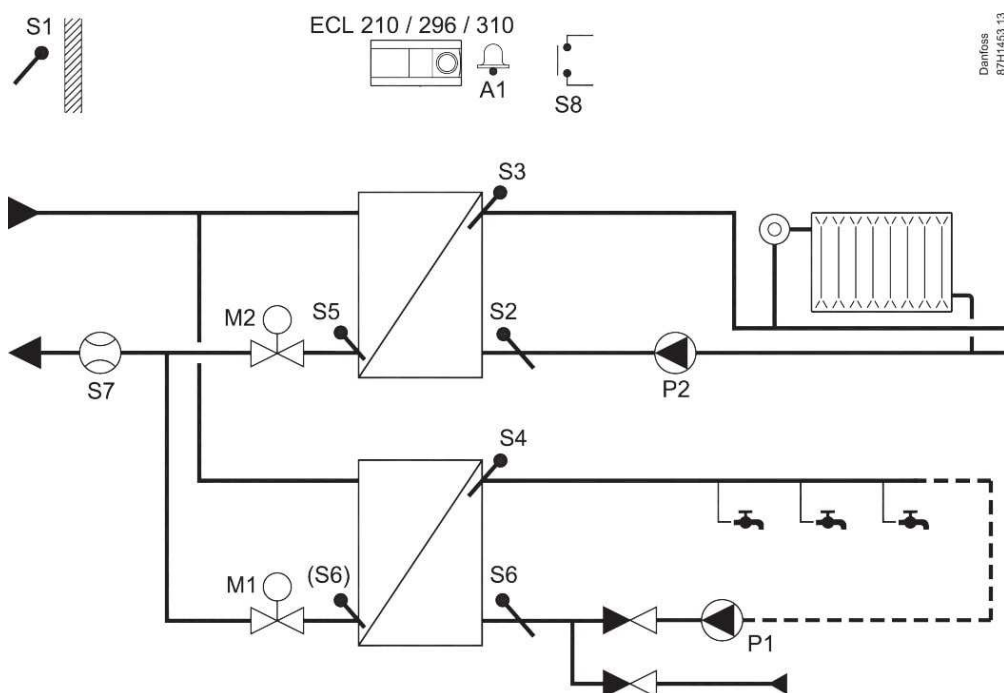


A275.1, ex. a:

Heating system with 1-stage boiler.

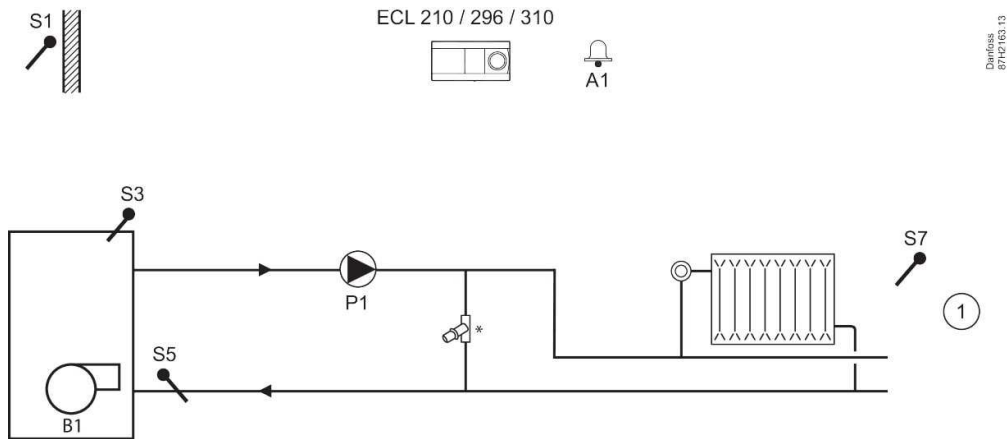
**A275.2, ex. a:**

Heating system with 1-stage boiler and DHW tank.

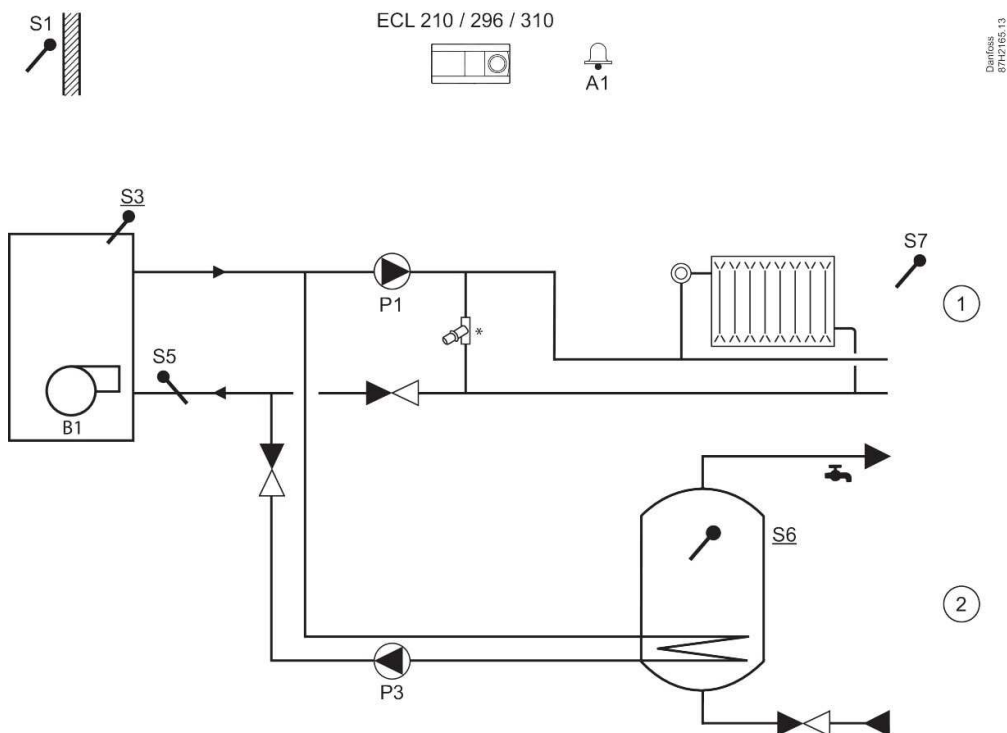


A275.3, ex. a:

Heating system with 1-stage boiler, mixing circuit and DHW tank.

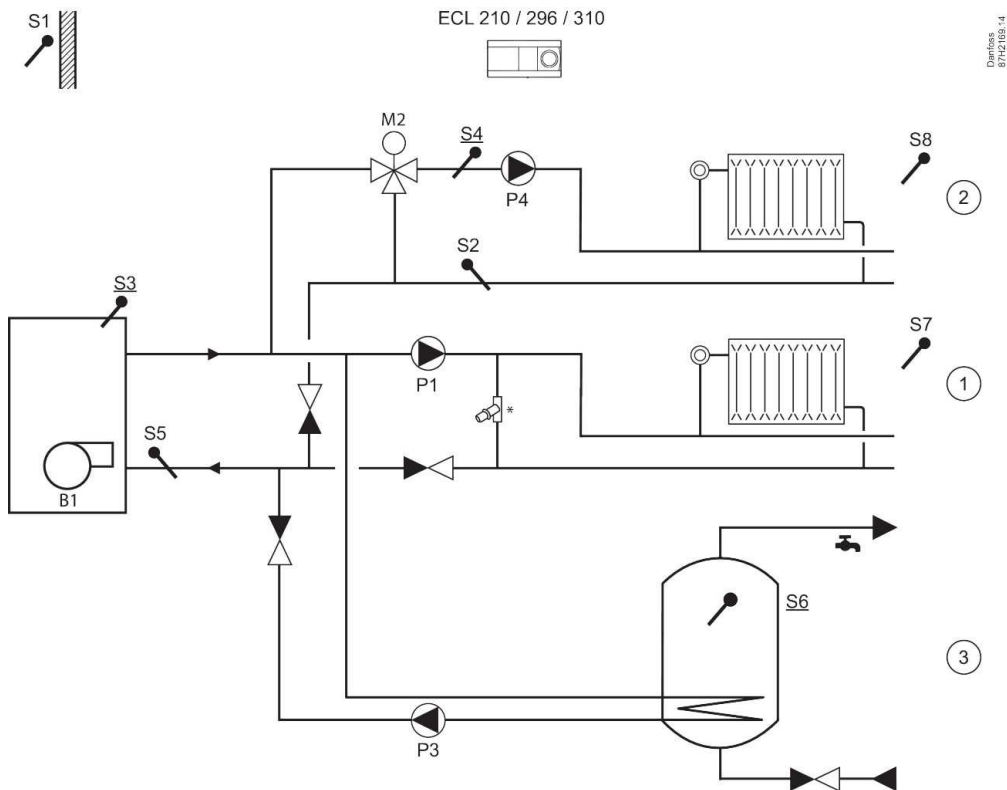
**A375.1, ex. a:**

Up to 8 x boiler ON / OFF control for a heating circuit.

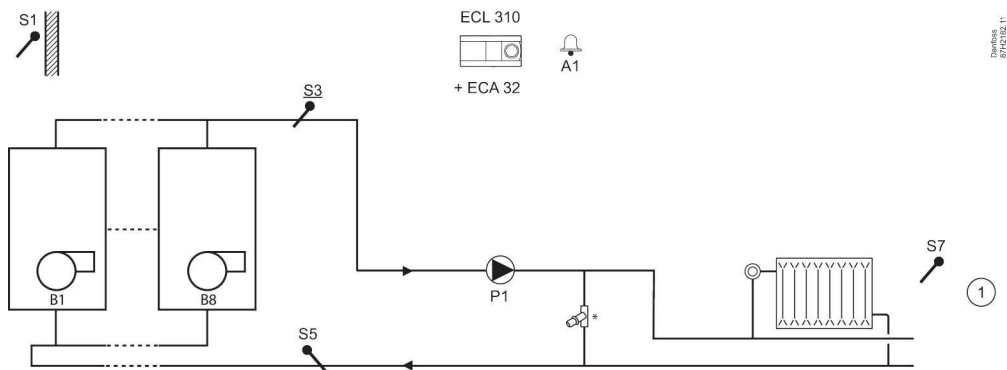


A375.2, ex. a:

Up to 8 x boiler ON / OFF control for a heating circuit and a DHW circuit. Optional DHW priority.

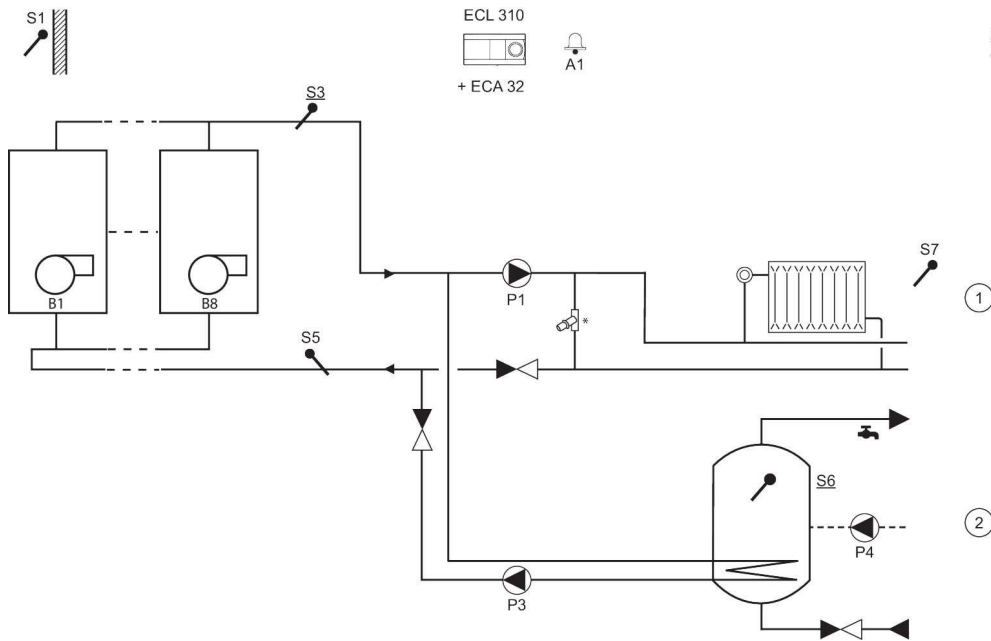**A375.3, ex. a:**


Up to 8 x boiler ON / OFF control for a direct heating circuit (1), a mixing circuit (2) and a DHW circuit (3). Optional DHW priority.

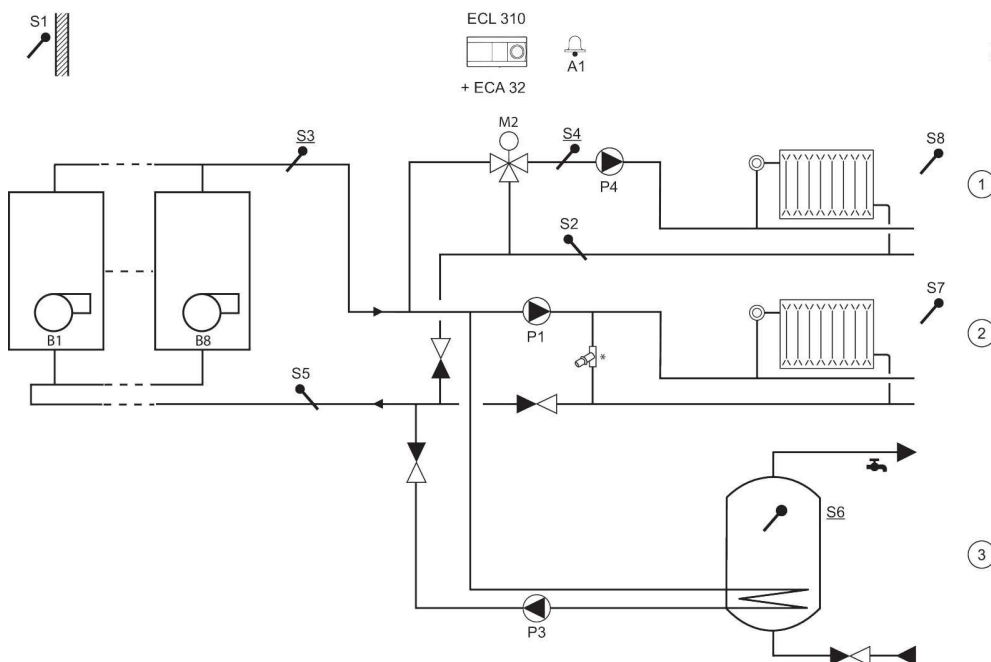




A375.4, ex. a:

Heating system with 1-stage boiler ON / OFF controlled or 0 - 10 Volt controlled. Pressure monitoring / alarm.

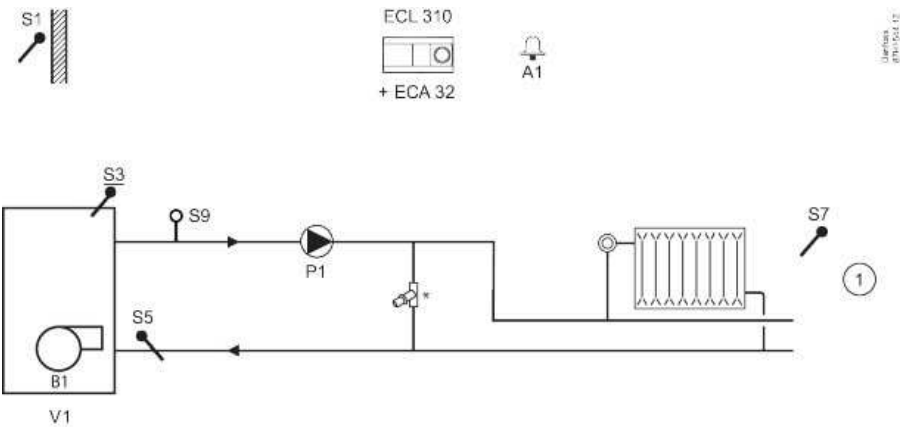

A375.5, ex. a:

Heating system with 1-stage boiler ON / OFF controlled or 0 - 10 Volt controlled. Mixing circuit for second heating circuit. DHW tank heating. Pressure monitoring / alarm.

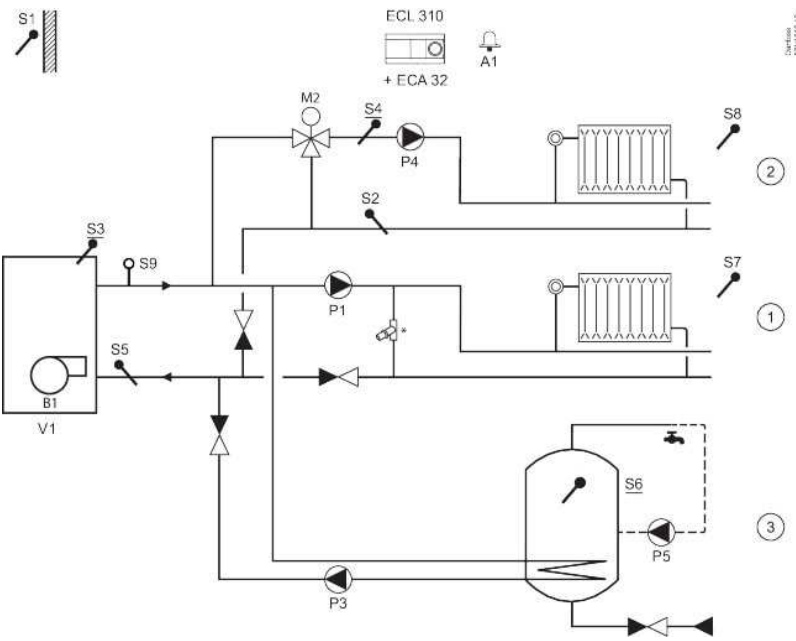


Burner control overview:

	ECL 210	ECL 310						ECA 32			
											
	R2	R2	R3	R4	R5	Triac 5	Triac 6	R7	R8	R9	R10
A275.1											
A275.2											
A275.3											
A375.1											
A375.2											
A375.3											
A375.4											
A375.5											


R2-R10 = relay nos. in ECL / ECA 32

A319.1:


Indirectly connected charging system with 2 temperature sensors in buffer. Heating system connected directly to buffer. Pump P3 speed controlled in relation to differential pressure S9.

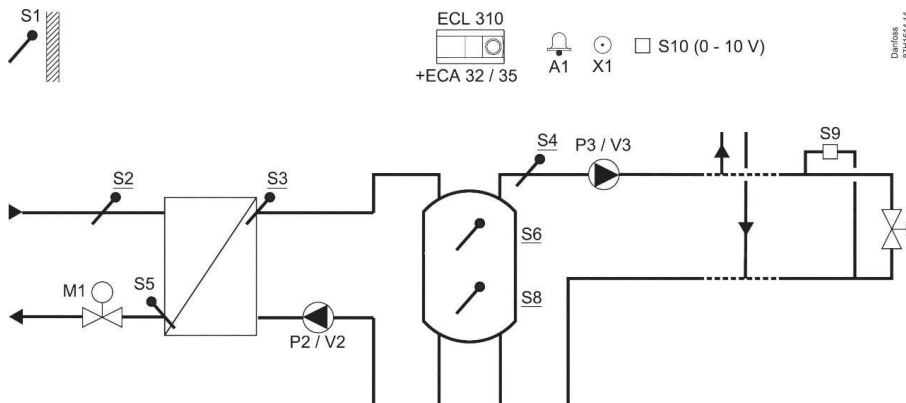**A319.2:**

Indirectly connected charging system with 2 temperature sensors in buffer. Heating system connected to buffer via mixing valve. Pump P3 speed controlled in relation to differential pressure S9.

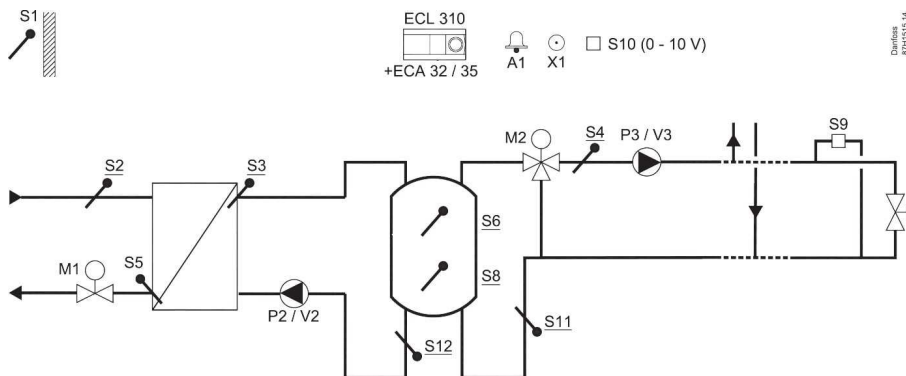**A333.1, ex. a:**


Heating system with control of 1 or 2 circulation pumps. Refill water function with control of 1 or 2 pumps. Pressure measurements in the system.

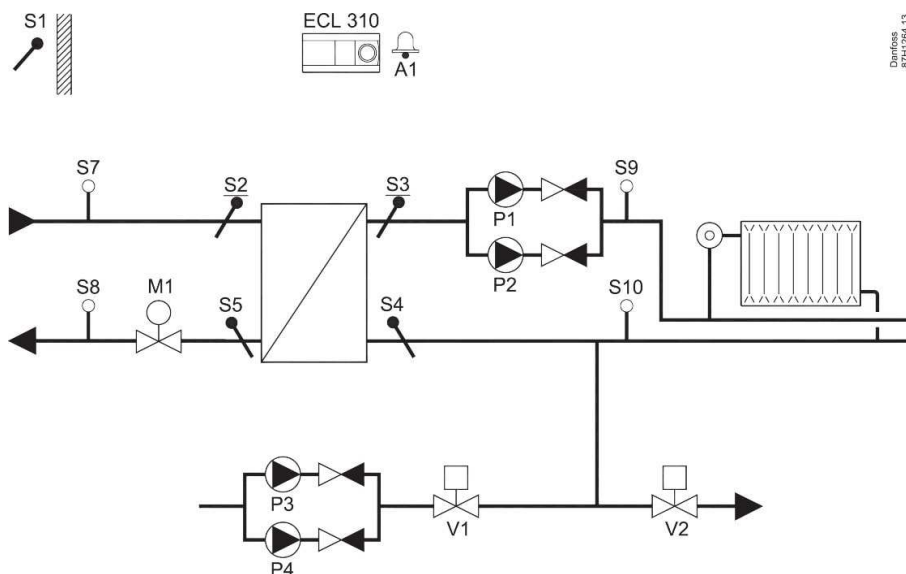

A333.2, ex. a:

Heating system with ON / OFF and speed control of 1 or 2 circulation pumps. Refill water function with ON / OFF and speed control of 1 or 2 pumps. Level control of refill water storage tank.


Pressure measurements in the system.

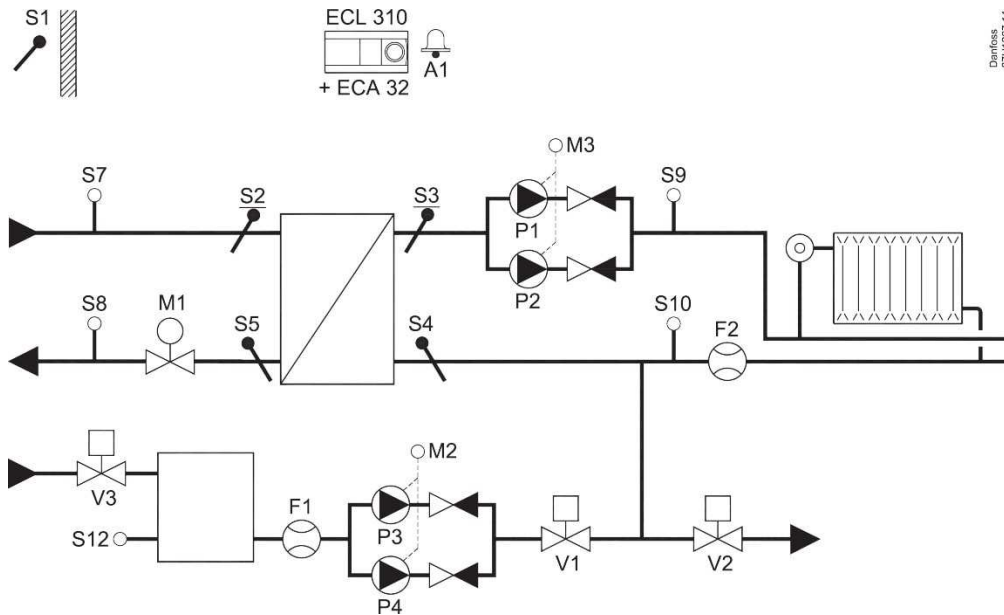

Danfoss
87H1287.14

A333.3, ex. a:


Heating system with ON / OFF and speed control of 1 or 2 circulation pumps. Control valve M1 is 0 - 10 V controlled. Refill water function with ON / OFF and speed control of 1 or 2 pumps. Level control of refill water storage tank. Pressure measurements in the system.

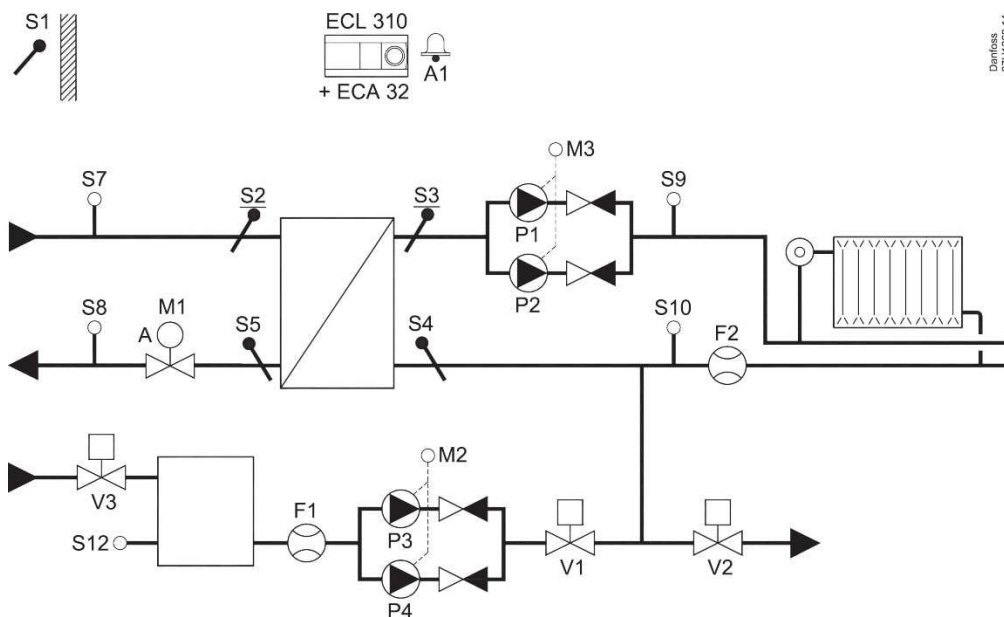


Danfoss
87H1288.14

A361.2, ex. a:

2 x heating systems with two-pump control and refill water function. Supply temperature dependent flow temperature control.

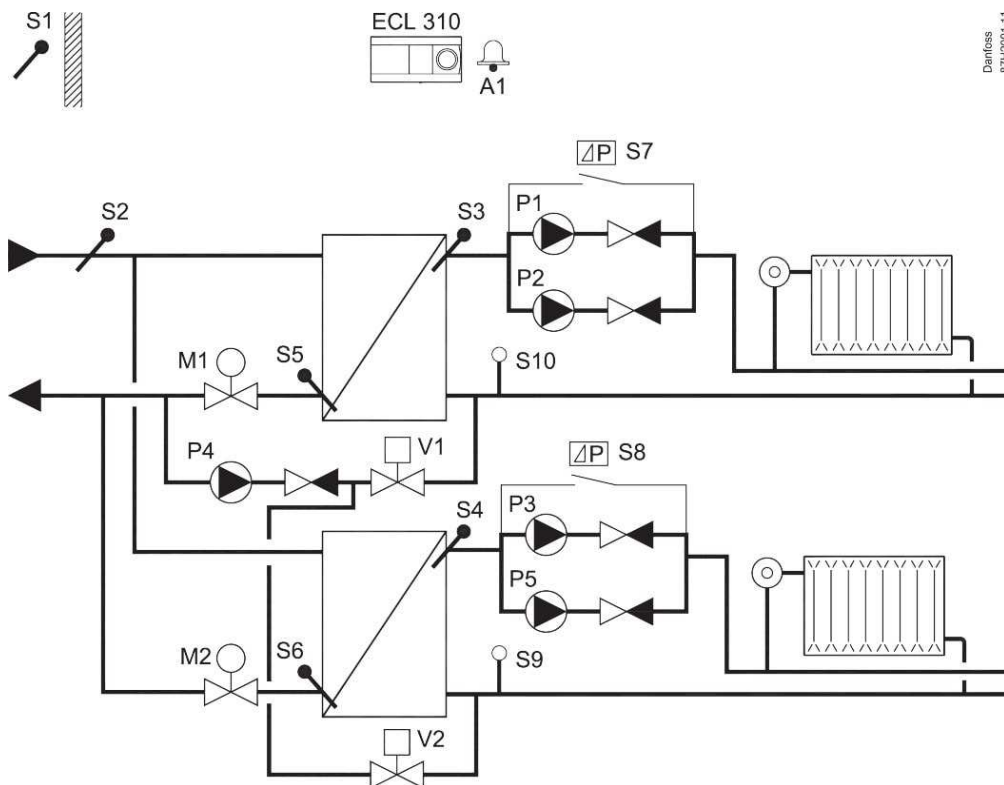**A362.1, ex. a:**


Cascade control of heat exchangers. Indirectly connected system with 2 x HEX, each managed by means of a 0 - 10 Volt controlled motorized control valve (MCV). Each HEX circuit has its own circulation pump. Cascade control can manage up to 6 heat exchangers by using additional ECL 310.

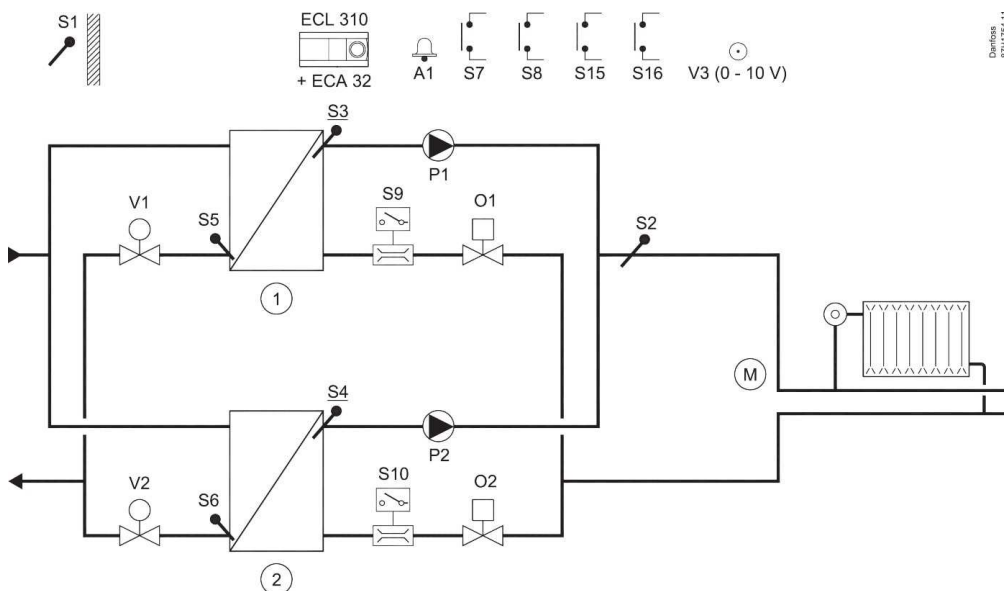


Other solutions, such as 3-point controlled actuators for control valves or a combination 0 - 10 V / 3-point, are possible.

A367.1, ex. a:

System with 2 heating circuits and secondarily connected DHW tank with internal heat exchanger.
Optional DHW priority.

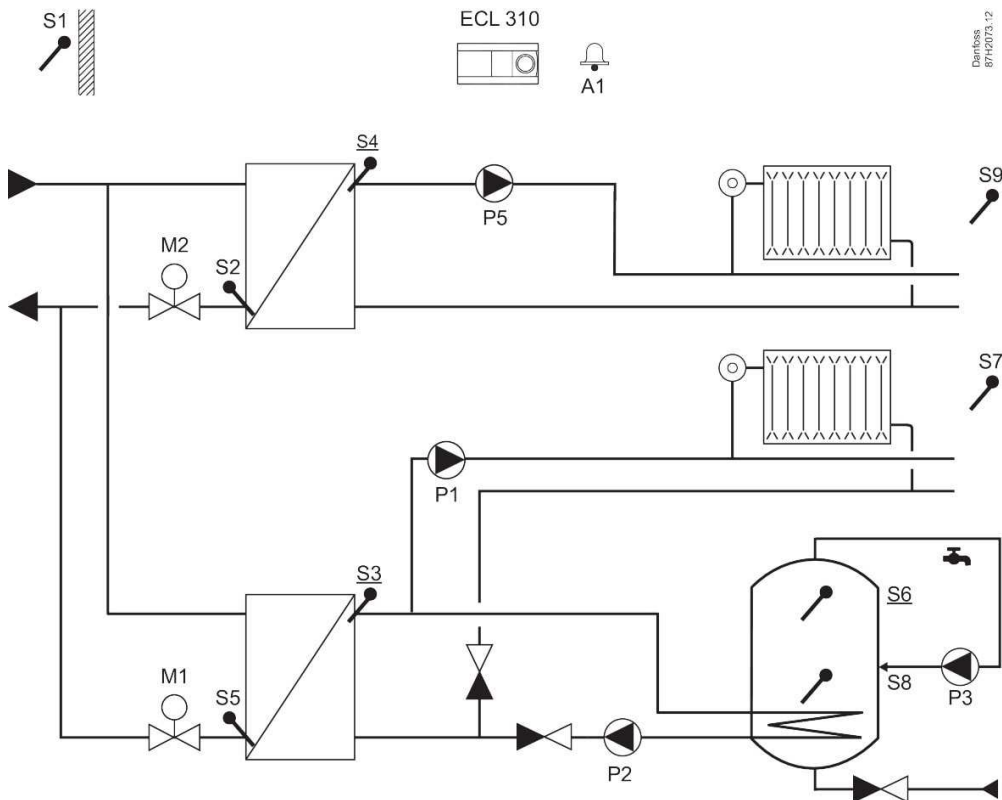
**A367.2, ex. a:**

System with 2 heating circuits and secondarily connected DHW tank charging system.
Optional DHW priority.

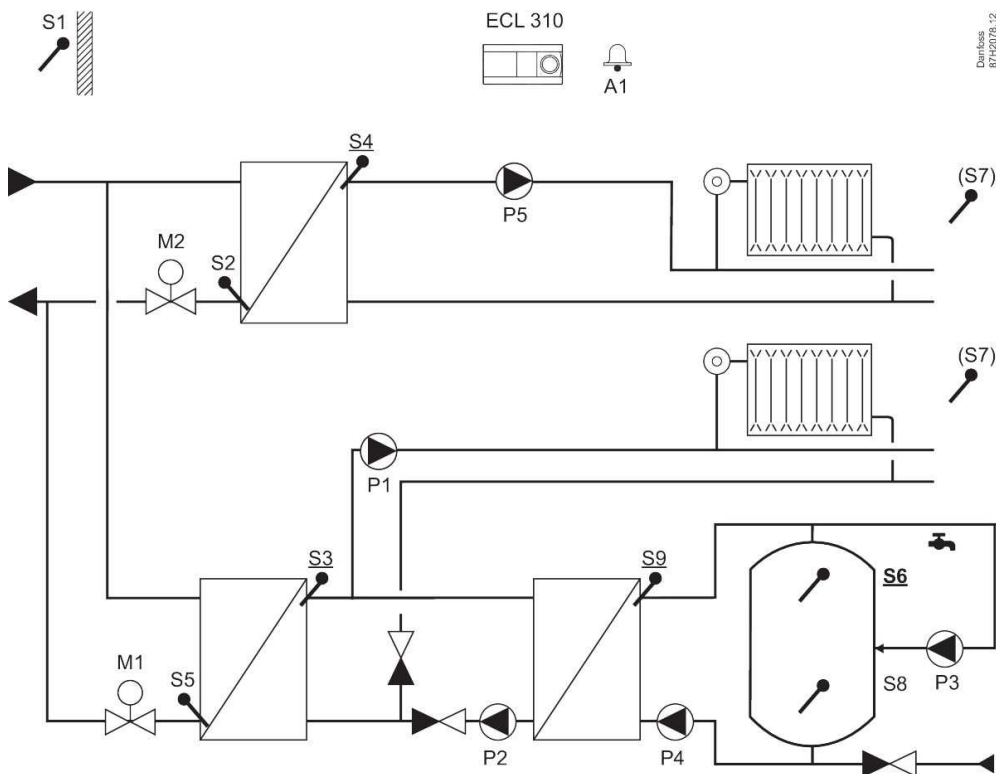


A368.2, ex. a:

Heating system with two-pump control and refill water function. Supply temperature dependent flow temperature control. DHW heating system with control of 1 or 2 circulation pumps.

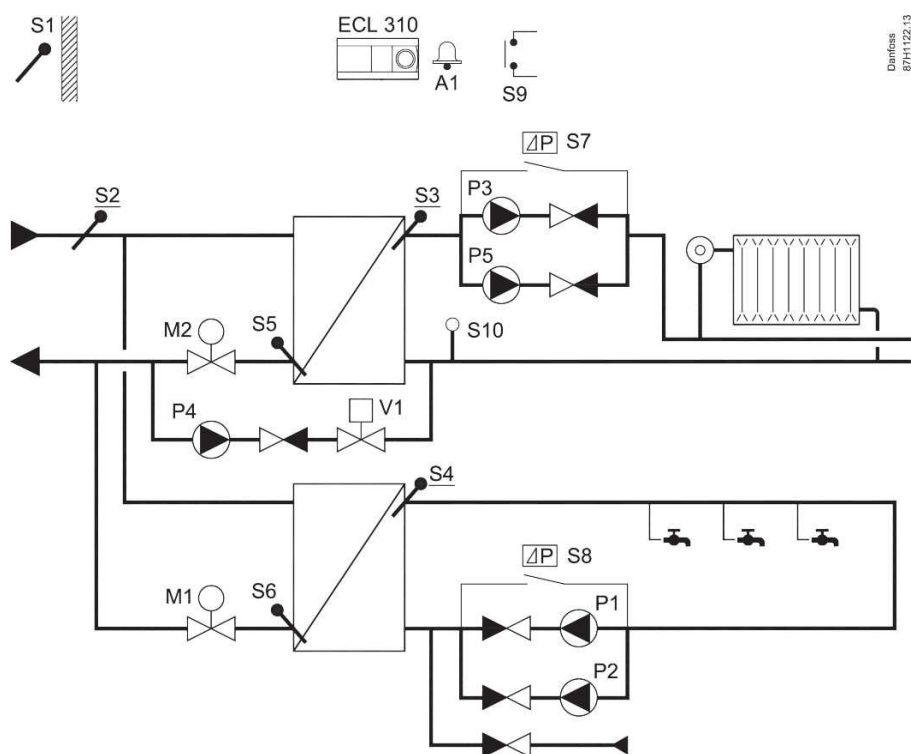**A368.4, ex. a:**


Heating system with two-pump control and refill water function with 1 or 2 pumps. Supply temperature dependent flow temperature control. DHW heating system with control of 1 or 2 circulation pumps. Pressure measurements in the systems.

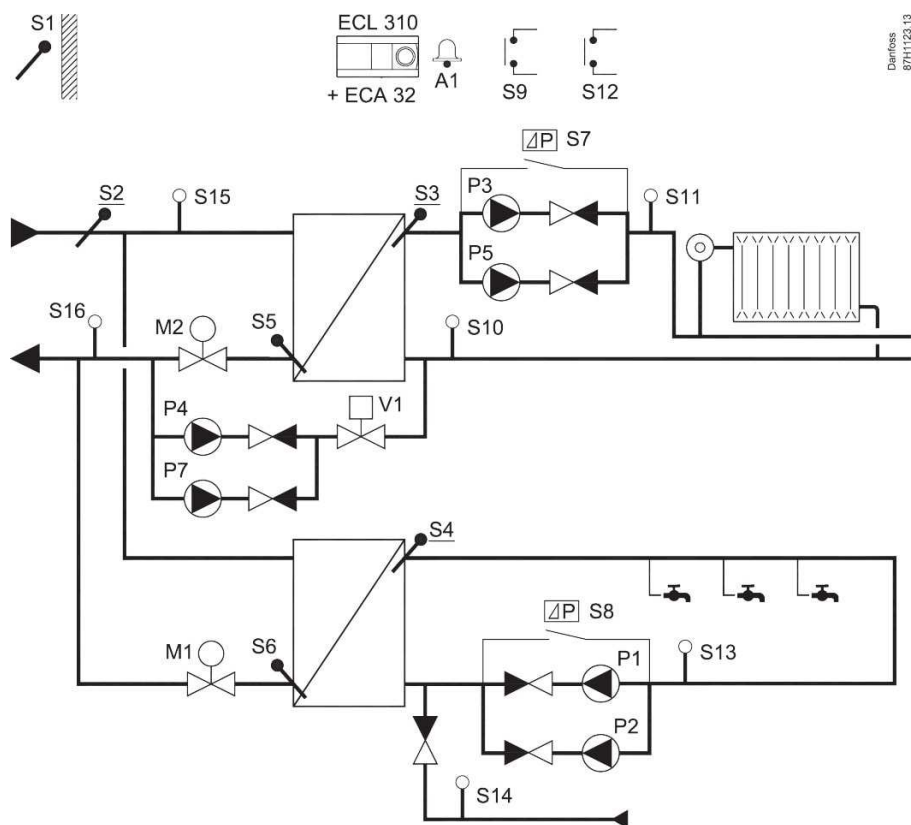

A368 has in total 6 subtypes with differences in temperature / pressure measurements and refill / circulation pump control.


A376.1, ex. a:

Two heating circuits and one direct DHW heating system. Parallel mode or DHW priority.

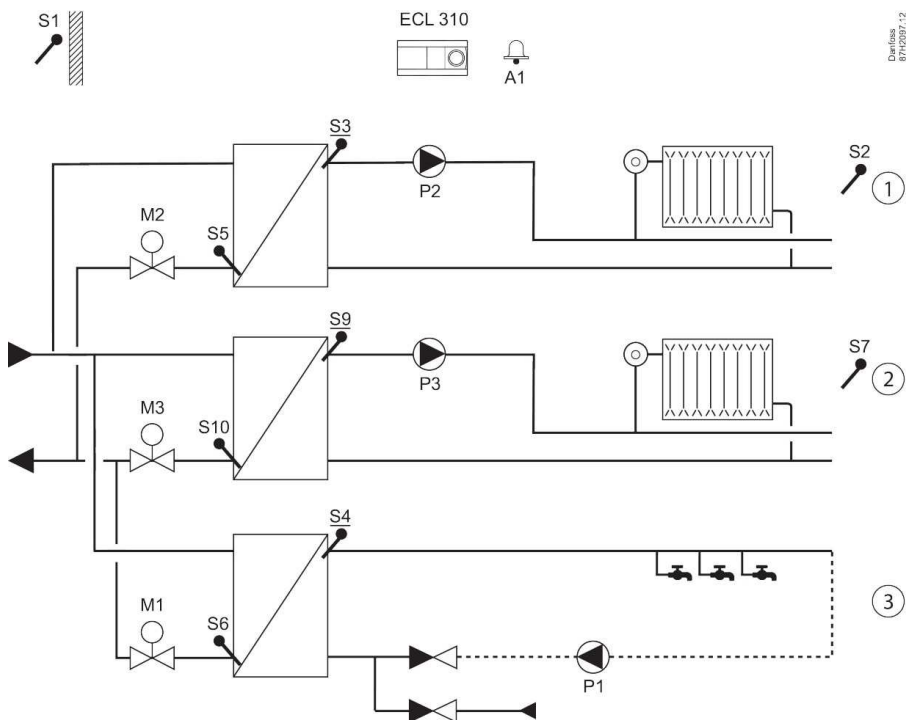


A376.2, ex. a:

Two heating circuits and one direct DHW heating system. Parallel mode or DHW priority. DHW heating on demand (flow switch).

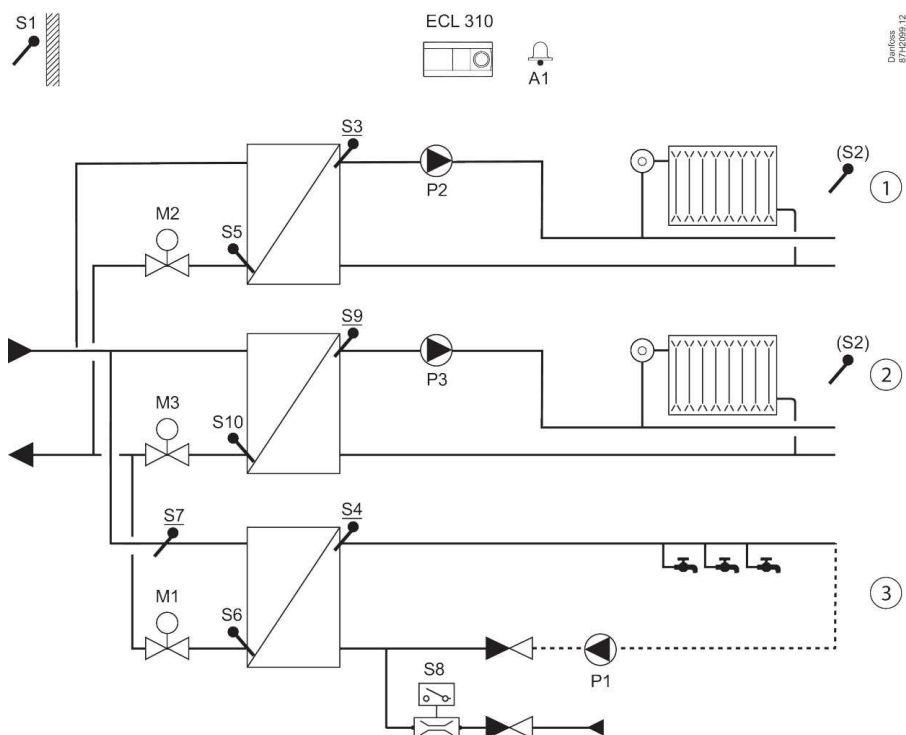


A376.3, ex. a:

Two heating circuits and one direct DHW heating system. Parallel mode or DHW priority. Control valves M1, M2 and M3 are 0 - 10 V controlled.

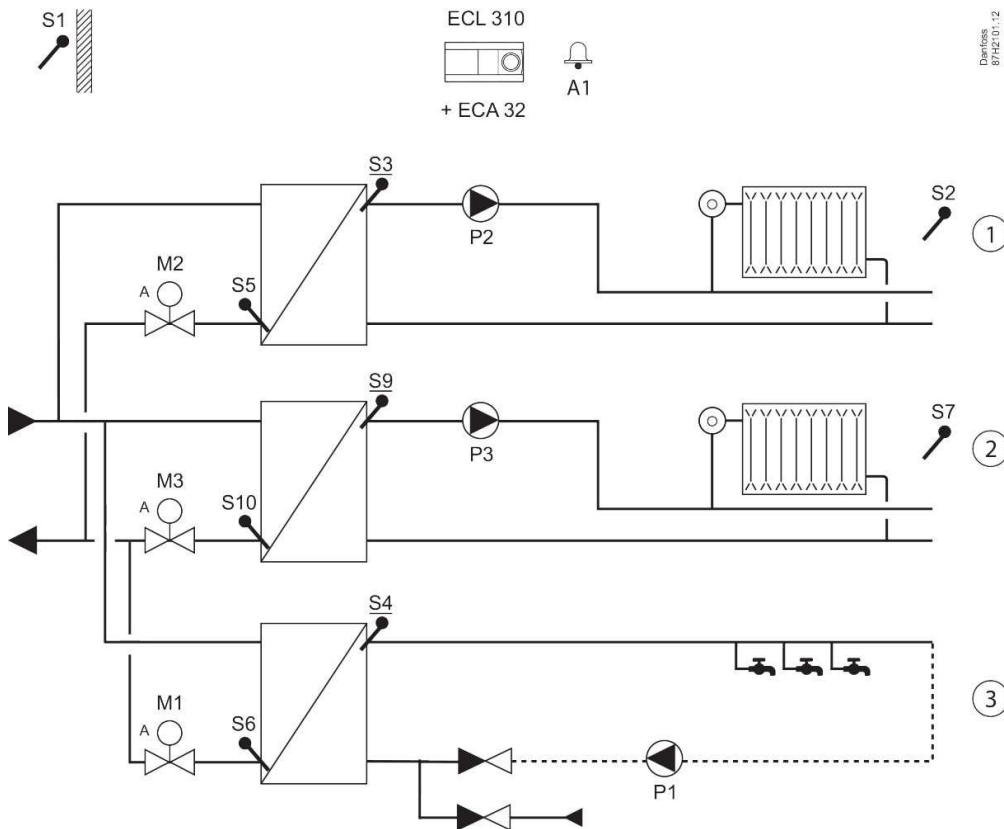
**A376.9, ex. a:**

Two heating circuits and one direct DHW heating system. Parallel mode or DHW priority. Pressure measurements and temperature monitoring in the system.

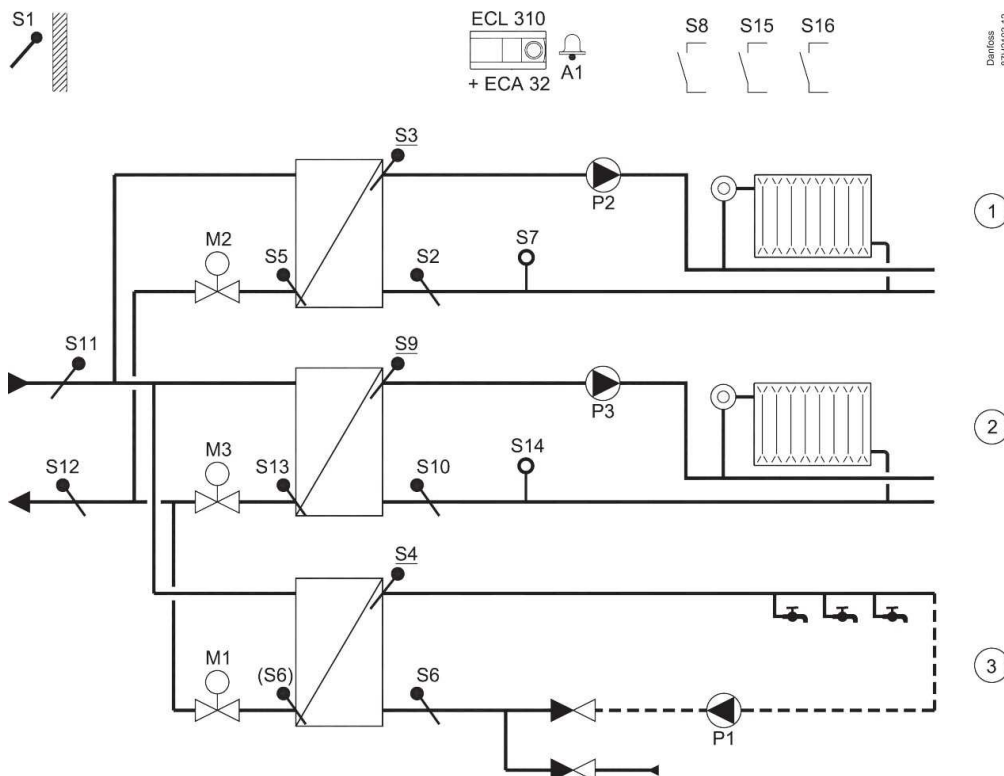


A377.1, ex. a:

Two heating circuits and one DHW tank charging system. Parallel mode or DHW priority.

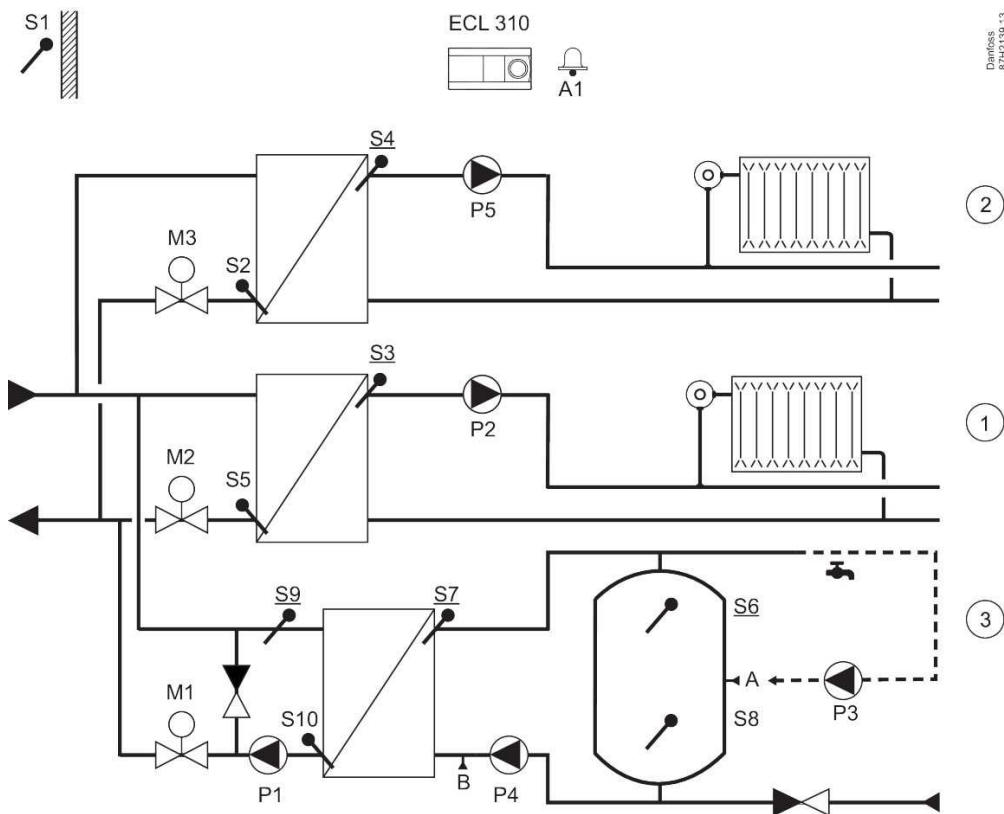
**A377.2, ex. a:**

Two heating circuits and one DHW tank charging system. Control of the DHW heating temperature. Parallel mode or DHW priority.

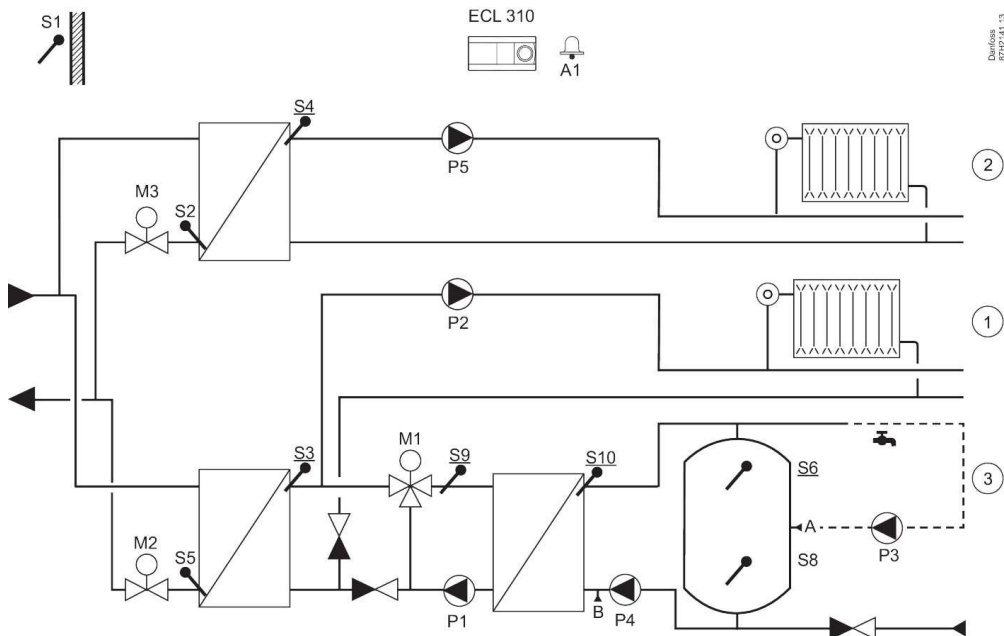


A390.1, ex. a:

3 x indirectly connected heating circuits.

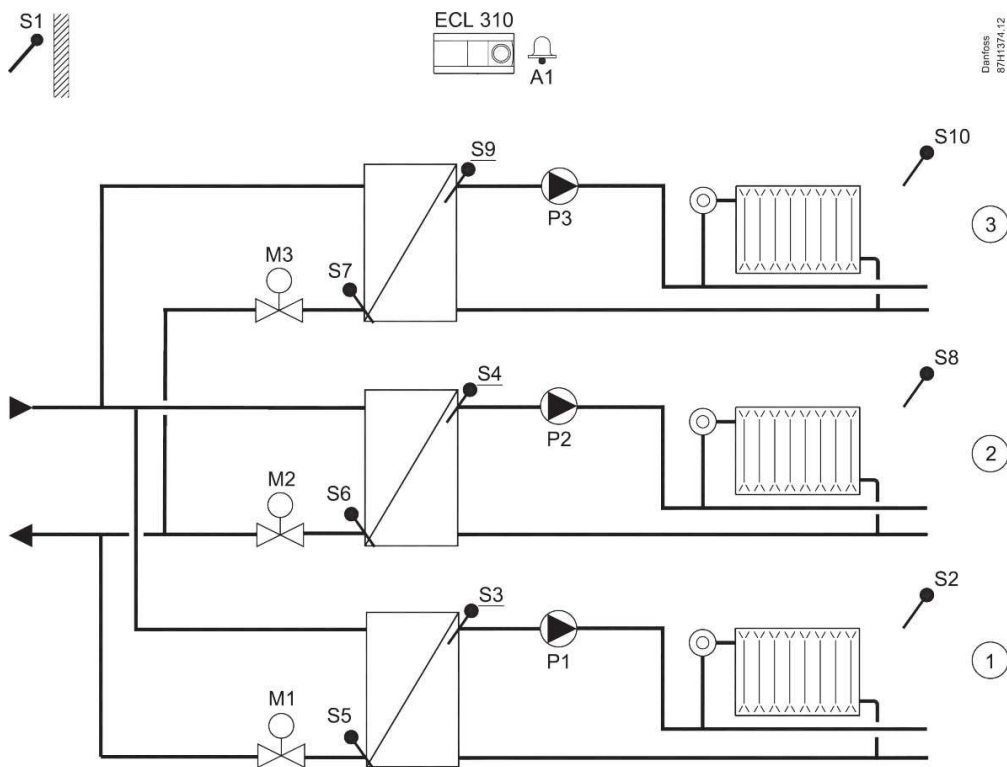
**A390.2, ex. a:**

3 x indirectly connected heating circuits; Actuators for control valves are controlled by 0 - 10 Volt signal.

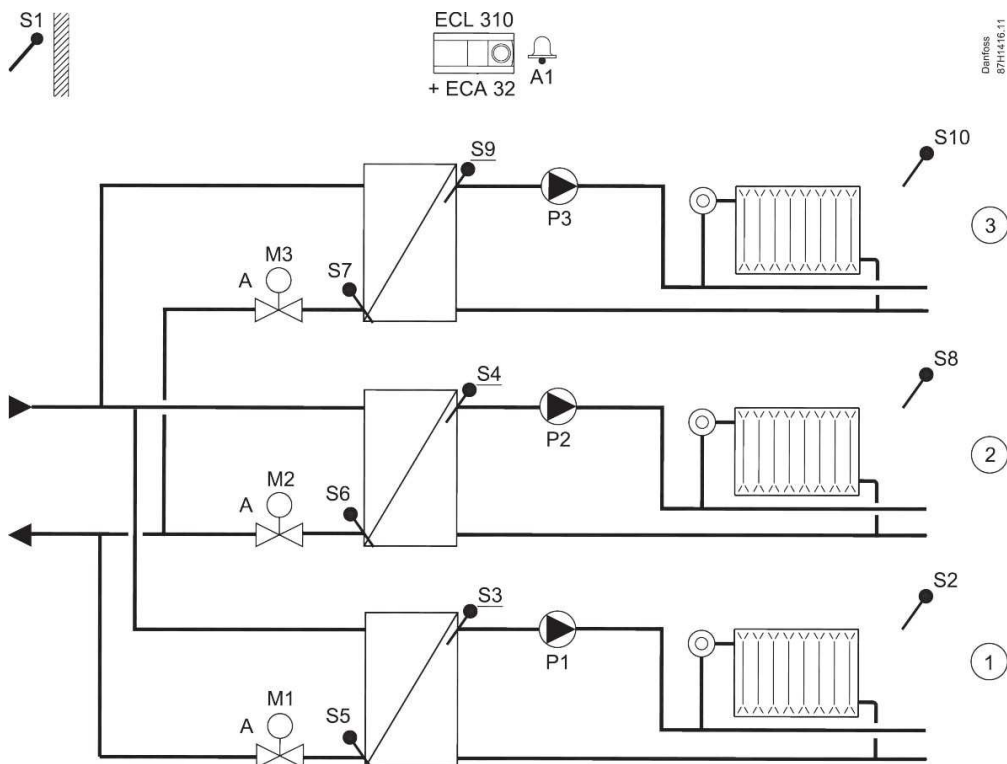


A390.3, ex. a:

3 x indirectly connected cooling circuits. Cooling to rooms can be based on Air Handling Units (AHU).

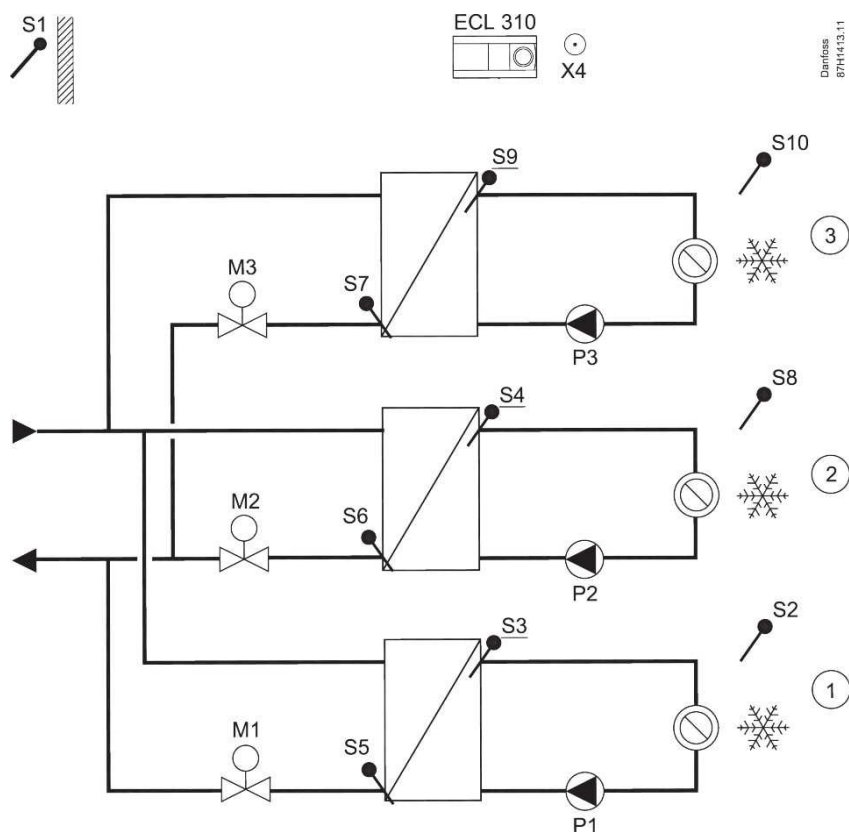
**A390.11, ex. a:**

Three independent heating circuits. The heating circuits are indirectly connected. DHW charging circuit 4 is combined with circuit 1. Optional DHW priority.

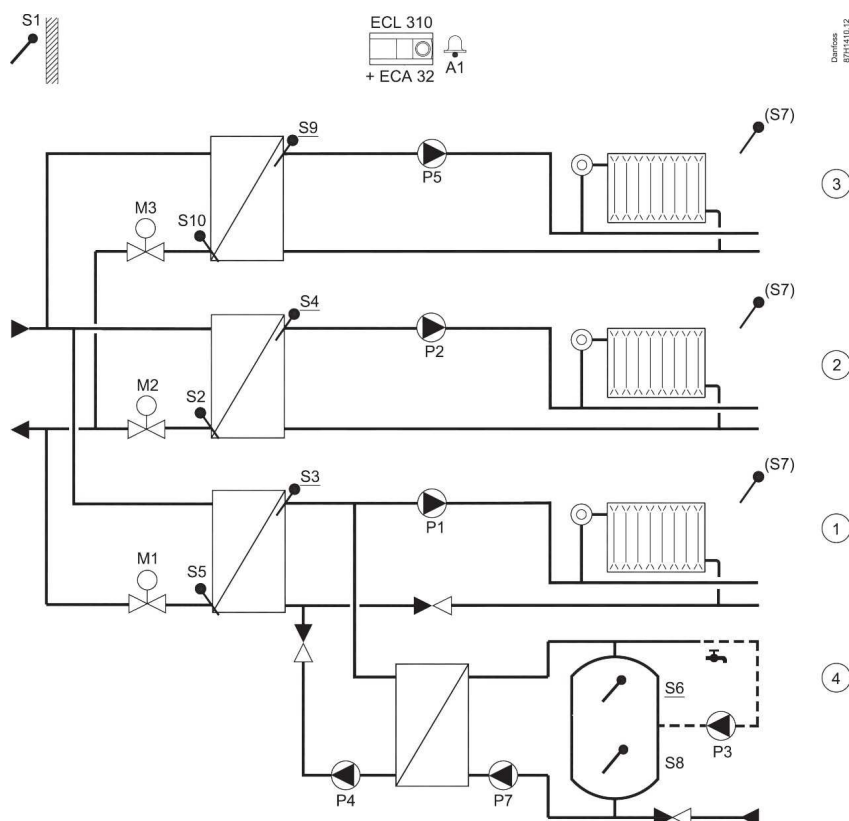


A390.12, ex. a:

Two indirectly connected heating circuits.
One advanced DHW charging circuit.
Optional DHW priority.

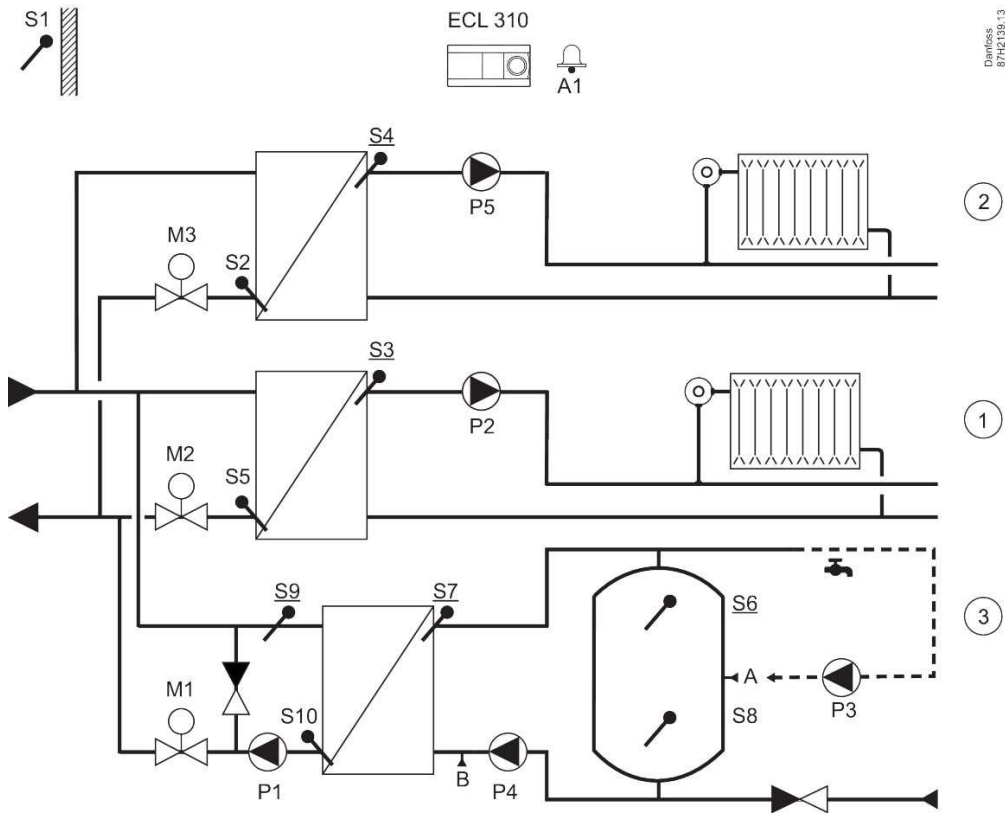
**A390.13, ex. a:**

Two indirectly connected heating circuits and one DHW charging circuit. Always DHW charging priority.

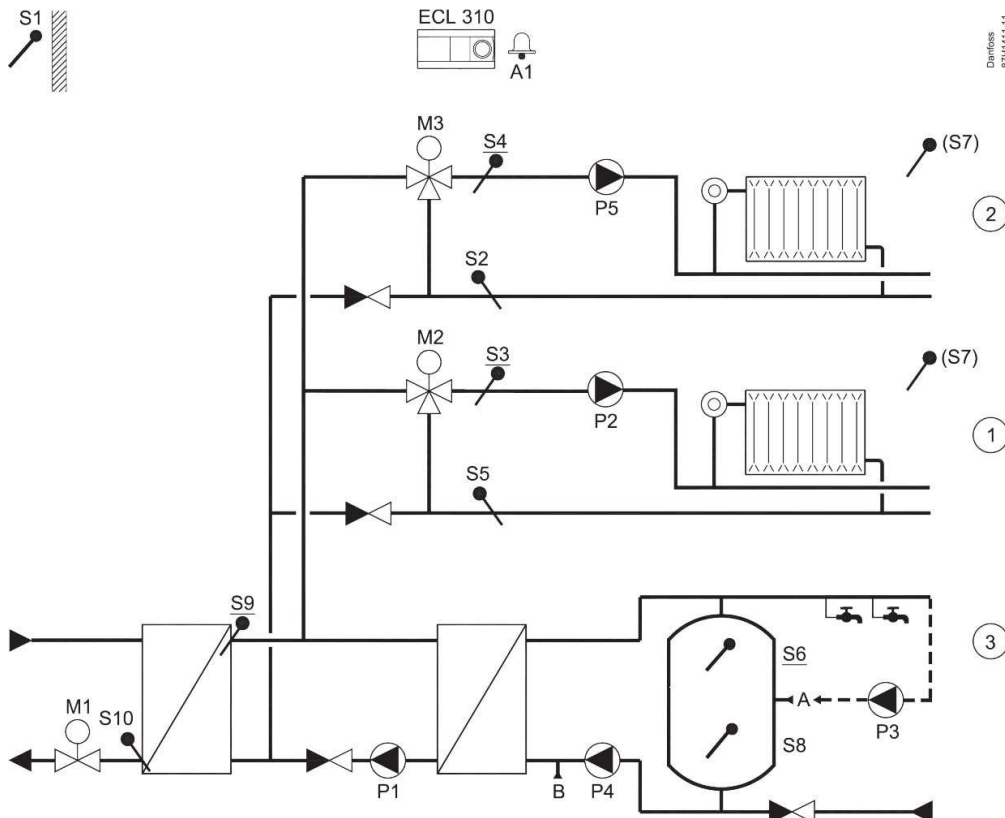

Functions

Operation

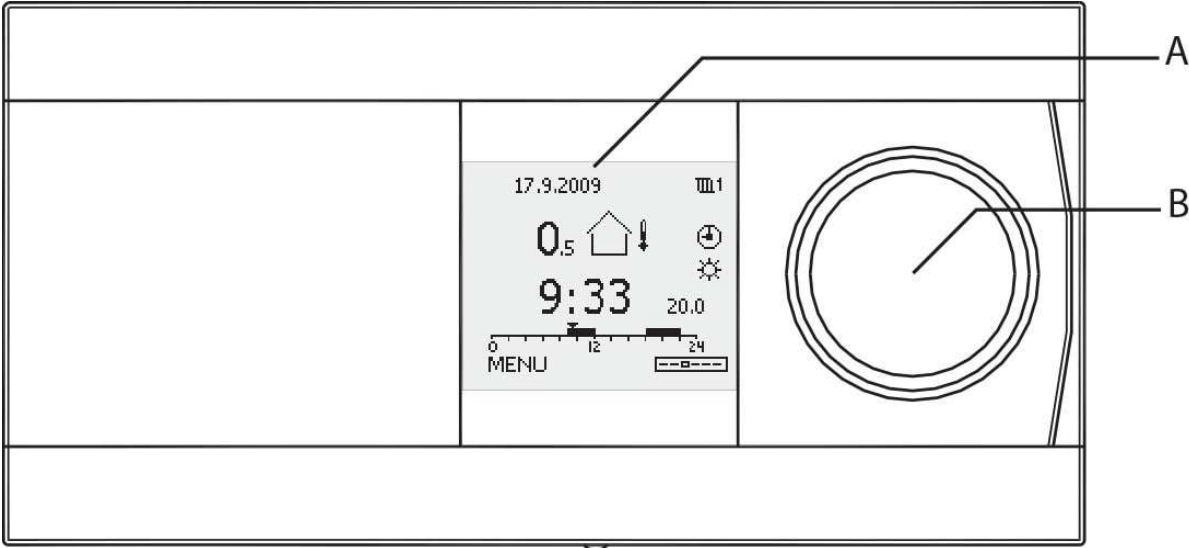

The graphical monochrome display (A) shows all temperature values as well as status information and is used for the setting of control parameters. The display has backlight. Different favorite displays can be selected. Navigation, browsing and selecting the current item in the menus is done by means of the dial (multi-functional knob (B)).

The RCUs ECA 30 / 31 are used for remote setting and override of ECL Comfort controller. By means of the built-in room temperature sensor, the flow temperature can be corrected to keep a constant room temperature at comfort or saving temperature. The ECA 30 / 31 is operated as an ECL Comfort 310 with dial and backlit display.

Languages

Menu languages are selectable among approx. 22 languages. See “Language list”. Furthermore, English is always uploaded in parallel to the selected language.

Examples of favorite displays

Settings

General functions:

- The ECL Comfort 310 has all the required functions of a modern electronic temperature controller for heating and DHW applications.
- The controller can be used as master or slave in systems with master / slave ECL Comfort 210 / 310 controllers.
- The ECL Application Key contains the application software for flexible configuration. Furthermore, an update of the controller software is done automatically, if required.
- The ECL Comfort 310 contains, besides the standard functions, log and alarm functions.
- The built-in Real Time Clock gives automatic summer / winter time changeover, week and holiday schedule.
- Motor protection, which ensures stable control and a long life of the motorized control valve, is available for most of the applications. In periods without heat demand, the motorized control valve is exercised to avoid blocking.
- Scheduled control (Comfort and Saving mode) is based on a week program. A holiday program gives the possibility to select days with comfort or saving mode.
- The ECL Comfort 310 can receive pulses from a heat or flow meter to limit the power or the flow. Alternatively, the data can come from heat or flow meter via the M-bus connection.
- In many applications analogue input (0 – 10 V) is configured for pressure measuring among others. The scaling is set in the controller.
- Some applications are configured to handle digital input. This function can be used to have an external switch to run comfort or saving mode or react on a flow switch signal.
- The control parameters, proportional band (Xp), integration time (Tn), running time of the motorized control valve and neutral zone (Nz) can be set individually for each output (3-point control).
- Motorized control valves in some applications can be controlled with a 0 - 10 V signal.
- Several applications fulfil the demand for refill water function and / or 2-pump control.
- Some applications can speed control circulation pumps by means of 0 - 10 Volt or PWM signal.

Heating functions:

- The heat curve (relationship between outdoor temperature and desired flow temperature) is set by means of 6 coordinate points or a slope value. Max. / min. limitation of the desired flow temperature can be set.
- In some application sub-types (for example A337, A347, A367, A375 and A377) the desired flow temperature can be set by means of a voltage in the range 0 - 10 volt.
- The return temperature limitation can work in relation to the outdoor temperature or be a fixed value.
- The heating cut-out function can switch OFF the heating and stop the circulation pump at high outdoor temperatures.
- Based on the room temperature the ECL Comfort 310 can correct the desired flow temperature in order to increase the comfort level.
- The optimizer function ensures heating in the desired periods (the lower outdoor temperature, the earlier cut-in of the heating).
- The ramping function makes a smooth cut-in of the heating valuable (district heating installations).
- The boost function makes a powerful cut-in of the heating (boiler based installations).
- The circulation pump is controlled in relation to heat demand and frost protection. In periods without heat demand, the circulation pump is exercised to avoid blocking.
- The saving function gives two possibilities:
 - reduced flow temperature with fixed reduction or reduction in relation to outdoor temperature (the lower the outdoor temperature, the less the reduction),
 - heating off, still with active frost protection.


DHW functions:

- The Auto Tuning function with automatic setting of control parameters for constant DHW temperature is integrated in the application A217, A266, A368 and A376. However, Auto Tuning is only applicable with valves that are approved for Auto Tuning, i.e. the Danfoss types VB 2 and VM 2 with split characteristic as well as logarithmic valves such as VF and VFS.
- The anti-bacteria function can follow a schedule program.
- The heating circuit can have sliding DHW priority.

Data communication

The ECL Comfort 310 has:


- **ECL 485** bus, non-galvanic isolated, for closed communication between master, slave and RCUs.
- **RS 485** bus, galvanic isolated, for Modbus communication to SCADA systems.
- **M-bus**, non-galvanic isolated, for M-bus communication with meters.
- **USB**, type B, for ECL Tool (software for PC).
- **Ethernet**, RJ 45, for TCP / IP communication to Internet (Leanheat® Monitor)

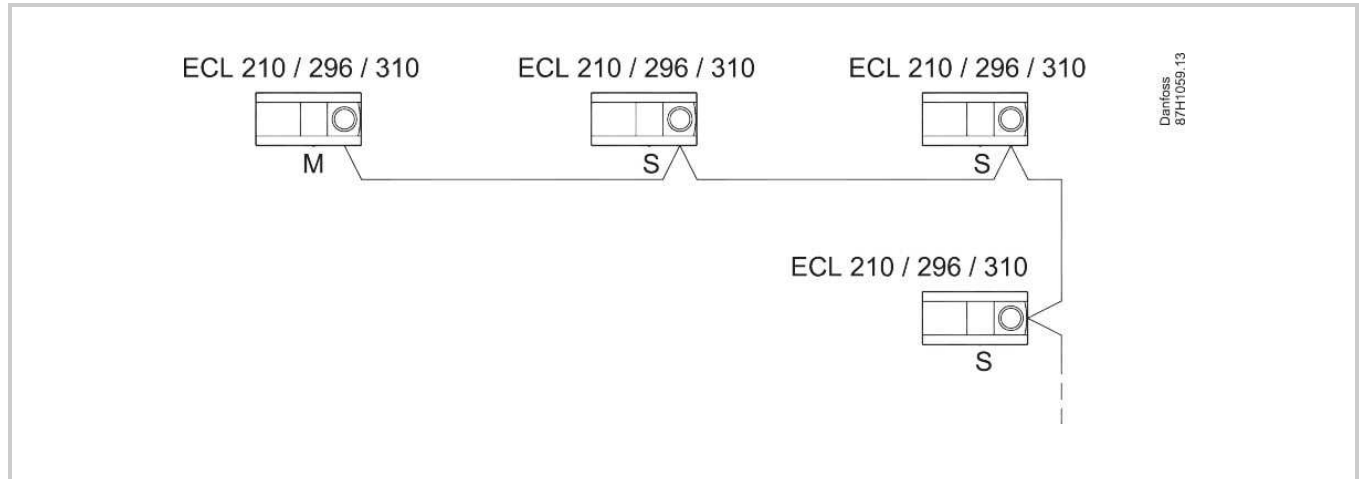

Master / slave connections

The ECL Comfort 310 has:

- **ECL 485** bus, non-galvanic isolated, for closed communication between master, slave and RCUs.
- **RS 485** bus, galvanic isolated, for Modbus communication to SCADA systems.
- **M-bus**, non-galvanic isolated, for M-bus communication with meters.
- **USB**, type B, for ECL Tool (software for PC).
- **Ethernet**, RJ 45, for TCP / IP communication to Internet (Leanheat® Monitor)

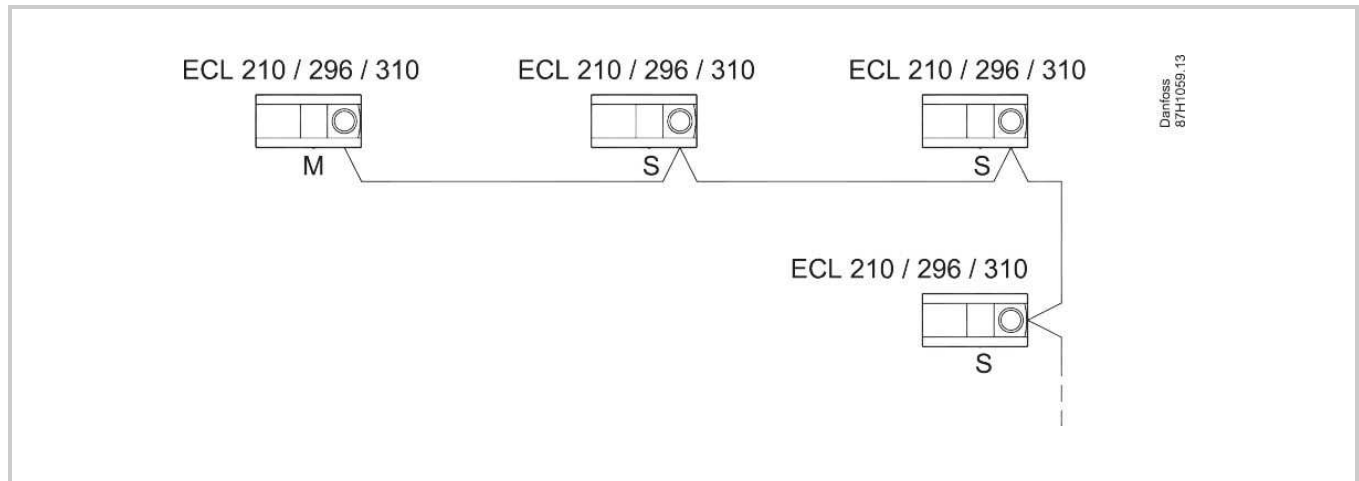

Master / slave connections

Product details

General data

ECL Comfort controller and RCU data

	ECL Comfort 310 / 310B	ECA 30 / 31
Ambient temperature	0 - 55 °C	
Storage and transportation temperature	-40 - 70 °C	
Installation	Installation must be avoided if there is a risk for condensation (dew)	
Mounting	To be mounted on a vertical wall and turned horizontally or on a DIN rail (35 mm)	To be mounted on a vertical wall and turned horizontally or in a panel cut-out
Connections	Terminals in base part	Terminals in base part
Number of inputs	10 in total: 6 temperature sensors 4*) Pt 1000 sensor, digital, analogue or pulse	-
Temperature sensor type	Pt 1000 (1000 ohm at 0 °C), IEC 751B Range: -60 – 150 °C	Alternative to built-in room temperature sensor: Pt 1000 (1000 ohm at 0 °C), IEC 751B
Digital input	12 V pull-up possible Activation of a digital input must be done with a potential free switch / contact.	-
Analog input	0 - 10 V, resolution 9 bits	-
Pulse input, frequency range (selected applications)	For monitoring: 0.01 - 200 Hz For limitation: Minimum 1 Hz (recommended) and regular pulses for having a stable control.	-
Display (ECL Comfort 310 and ECA 30 / 31 only)	Graphical monochrome with backlight 128 × 96 dots Display mode: Black background, white text	
Setting (ECL Comfort 310 and ECA 30 / 31 only)	Dial with intuitive push and turn function	
Setting (ECL Comfort 310 B)	ECA 30 / 31	
Data logging	Up to 10 days for 14 parameters	
Min. backup time for time and date	72 hours	-
Backup of settings and data	Flash memory	Flash memory
Grade of enclosure	IP 41	IP 20
Temperature control	Complies with EN 60730	

*) Configured at application upload.

ECL application key

Storage type	Flash memory
Segmentation	Part 1: Application data, not changeable Part 2: Factory settings, not changeable Part 3: Updating SW for the ECL Comfort controller, not changeable Part 4: User settings, changeable
Applications	A2xx keys work in ECL Comfort 210 and ECL Comfort 310 A3xx keys work in ECL Comfort 310 only
Lock function	If not inserted in the ECL Comfort controller, all settings can be seen, but not changed
Menu languages	Menu languages are selectable among approx. 22 languages. See "Language list".

ECL 485 communication bus data

Purpose	Only for internal connections between ECL Comfort 210 / 296 / 310 and ECA 30 / 31. (Danfoss proprietary bus)
Connection	Terminals in base part Non-galvanic isolated
Cable type	Shielded cable, 2 x twisted pair, Min. cross section: 0,22 mm (AWG 24). Examples: LiYCY 2 x 2 x 0.25 mm ² (AWG 24) or Ethernet CAT5
Max. total cable length (bus cable + sensor cables)	200 m in total (inclusive sensor cables)
Max. number of ECL slaves connected	Units with unique address (1 - 9): 9 Units with address "0": 5
Max. number of Remote Control Units connected	2
Data sent from master	Date Time Outdoor temperature Desired room temperature DHW-priority signal
Data sent from addressed slave controller	Desired flow temperature from each circuit
Data sent from ECA 30 / 31	- Actual and desired room temperature - Function selector mode (ECA 31) Relative humidity

Modbus communication data

Purpose	For SCADA system
Connection	Terminals 34 and 35 in base part. Modbus reference (terminal 36) must be connected. Galvanic isolated (500 V).
Protocol	Modbus RTU
Cable type	Shielded cable, 2 x twisted pair + Signal GND. Min. cross section: 0,22 mm ² (AWG 24). Example: LiYCY 2 x 2 x 0.25 mm ² (AWG 24)
Max. bus cable length	1200 m (dependent on cable type and installation).
Communication speed	Half duplex. 9,6 Kbit/s (default) / 19.2 Kbit/s / 38.4 Kbit/s
Serial mode	8 data bit, even parity and 1 stop bit.
Network	According to the standard Modbus Serial Line Implementation Guide V1.0.

M-bus communication data


Purpose	Connection to heat meters, max. 5 heat meters
Connection	Terminals 37 and 38 in base part. Non-galvanic isolated
M-Bus master according to	DS / EN 1434-3: 1997
Cable type	2 x 0,8 mm ² Example: JY(St)Y 2 x 0.8 mm ² (not twisted pair)
Max. cable length	50 m
Baud rate	300 baud (adjustable)
Update time	60 s (adjustable)
Gateway function	Allows the Leanheat® Monitor to read energy meters directly
Supported heat meters	Infocal 6 and many other marks and types. Information about other heat meters on request.
Transmitted heat meter data	Heat meter type dependent: • Primary flow temperature • Primary return temperature • Actual flow / accumulated flow • Actual heat / power • Accumulated heat energy
Recommendations:	Danfoss recommends 230 V a.c. supplied heat meters

USB communication data

USB CDC (Communication Device Class)	For service purposes (Windows driver is needed, to enable that Windows recognize the ECL as a virtual COM port)
Modbus over USB	Similar to the serial Modbus, but with relaxed timing
Connection, cable type	Standard USB cable (USB AUSB B)

Ethernet communication (Modbus / TCP) data

Purpose	For SCADA system
Connection	RJ45 female connector
Protocol	Modbus / TCP
Cable type	Standard Ethernet cable (CAT 5)
Max. Bus cable length	According to Ethernet standard
Auto cross-over detection	Enabled
Default Ethernet address (IP address)	192.168.1.100
Port number	502 (Modbus / TCP port)
Number of connections	1
Security	Must be provided by Ethernet infrastructure

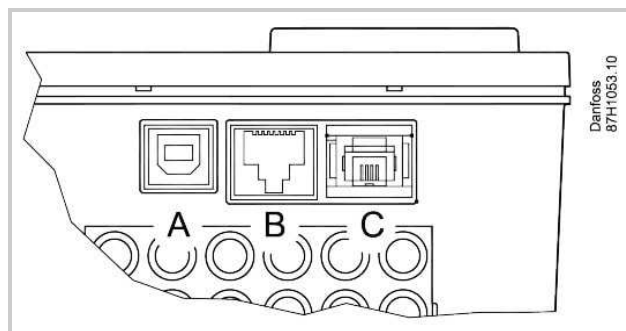

- A port: USB (type B female plug)
 B port: Ethernet (RJ45, female plug)
 C port: ECL Application Key

Language list

Bulgarian	Estonian	Latvian	Slovak
Croatian	Finnish	Lithuanian	Slovenian
Czech	French	Polish	Spanish
Danish	German	Romanian	Swedish
Dutch	Hungarian	Russian	
English	Italian	Serbian	


The selected language + English is uploaded at application upload.

Comparison with ECL Comfort 210 / 296

	ECL Comfort 310	ECL Comfort 210	ECL Comfort 296
M-bus communication	Yes	No	Yes
Modbus connection	Yes, galvanic isolated	Yes, non-galvanic isolated	Yes, galvanic isolated
Ethernet	Yes, RJ45 connection, Modbus / TCP. For SCADA solutions and Leanheat® Monitor	No	Yes, RJ45 connection, Modbus / TCP. For SCADA solutions and Leanheat® Monitor
Inputs	10	8	8
Relay outputs	6	4	4
Valve actuator outputs	3 x 3-point	2 x 3-point	2 x 3-point
Extension of inputs / outputs	Yes, ECA 32, placed in base part. • 6 inputs • 2 pulse inputs • 3 analogue outputs (0 - 10 V) • 4 relays Alternative, ECA 35: • 2 inputs • 2 pulse inputs • 3 analogue outputs (0 - 10 V) • 4 PWM outputs • 4 relays	No	No
Application keys	A2xx and A3xx	A2xx	A2xx
Front dimensions (W x H, mm)	220 x 110	220 x 110	144 x 96
Supply voltage	230 V and 24 V	230 V	230 V

Installation

Wiring - 230 V a.c.

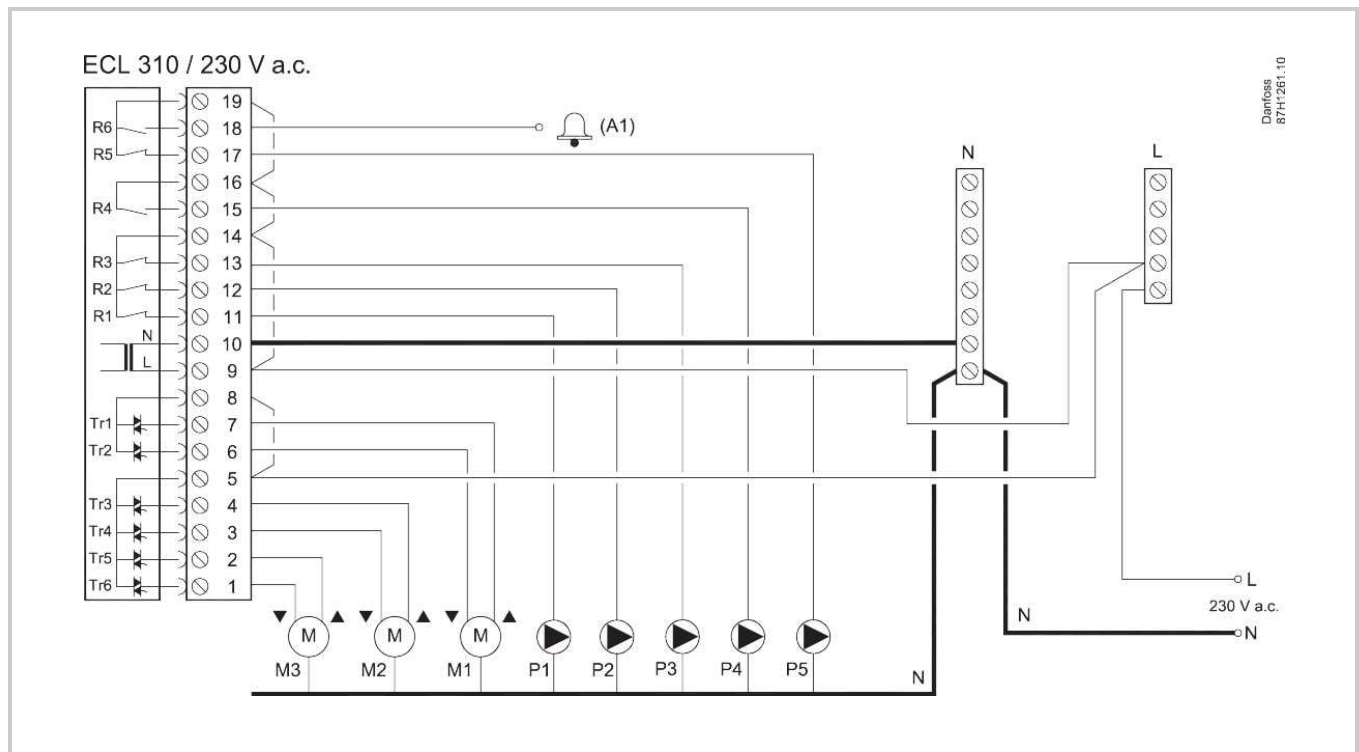


ECL Comfort 310 wiring example

Supply voltage	230 V a.c. - 50 Hz
Voltage range	207 to 244 V a.c. (IEC 60038)
Power consumption	5 VA
Max. load on relay outputs	4(2) A - 230 V a.c. (4 A for ohmic load, 2 A for inductive load)
Max. load on triac outputs for actuators	0.2 A - 230 V a.c.



Wiring - 24 V a.c.

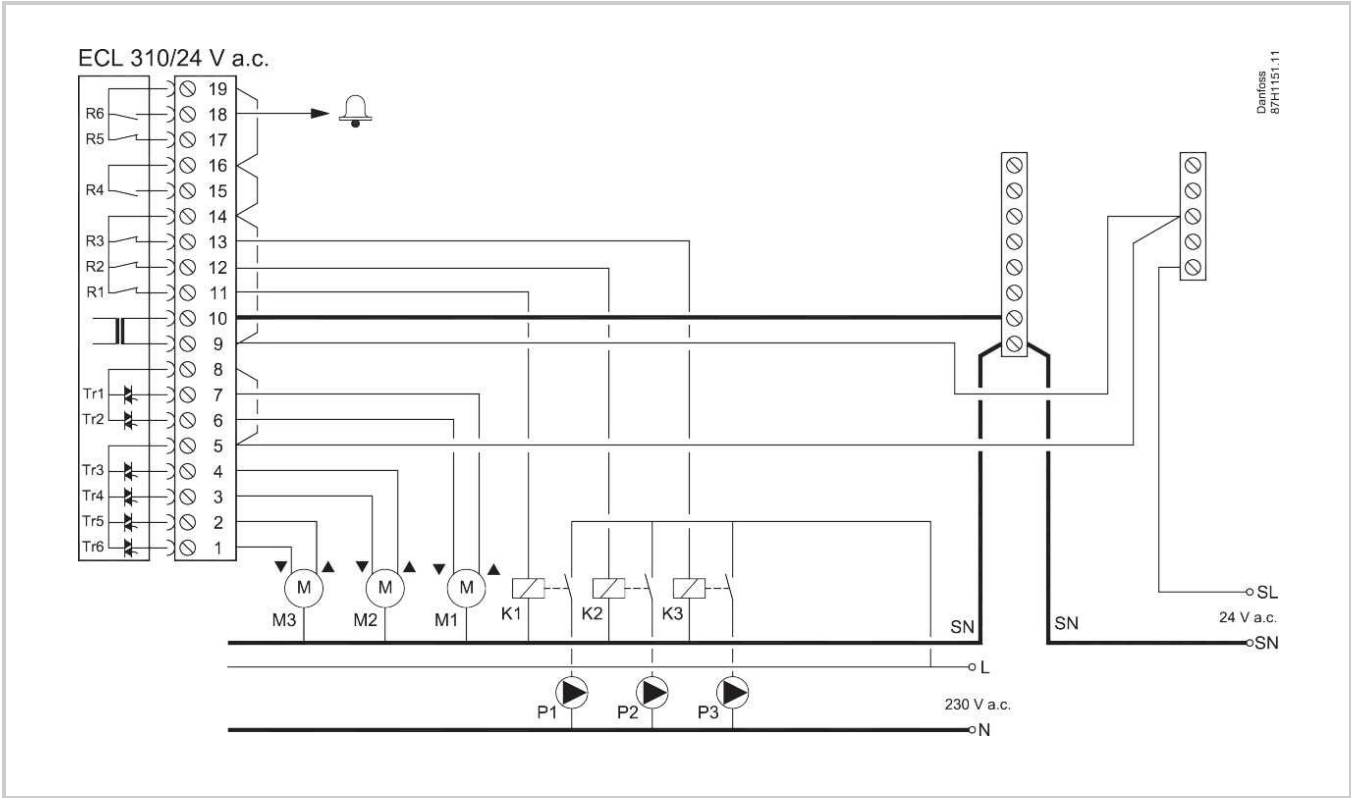


ECL Comfort 310 wiring example


Do not connect 230 V a.c. powered components to a 24 V a.c. power supplied controller directly.
Use auxilliary relays (K) to separate 230 V a.c. from 24 V a.c.

Supply voltage	24 V a.c. - 50 Hz
Voltage range	21.6 to 26.4 V a.c. (IEC 60038)
Power consumption	5 VA
Max. load on relay output	4(2) A - 24 V a.c. (4 A for ohmic load, 2 A for inductive load)
Max. load on triac outputs for actuators	1 A - 24 V a.c.

Wiring - input

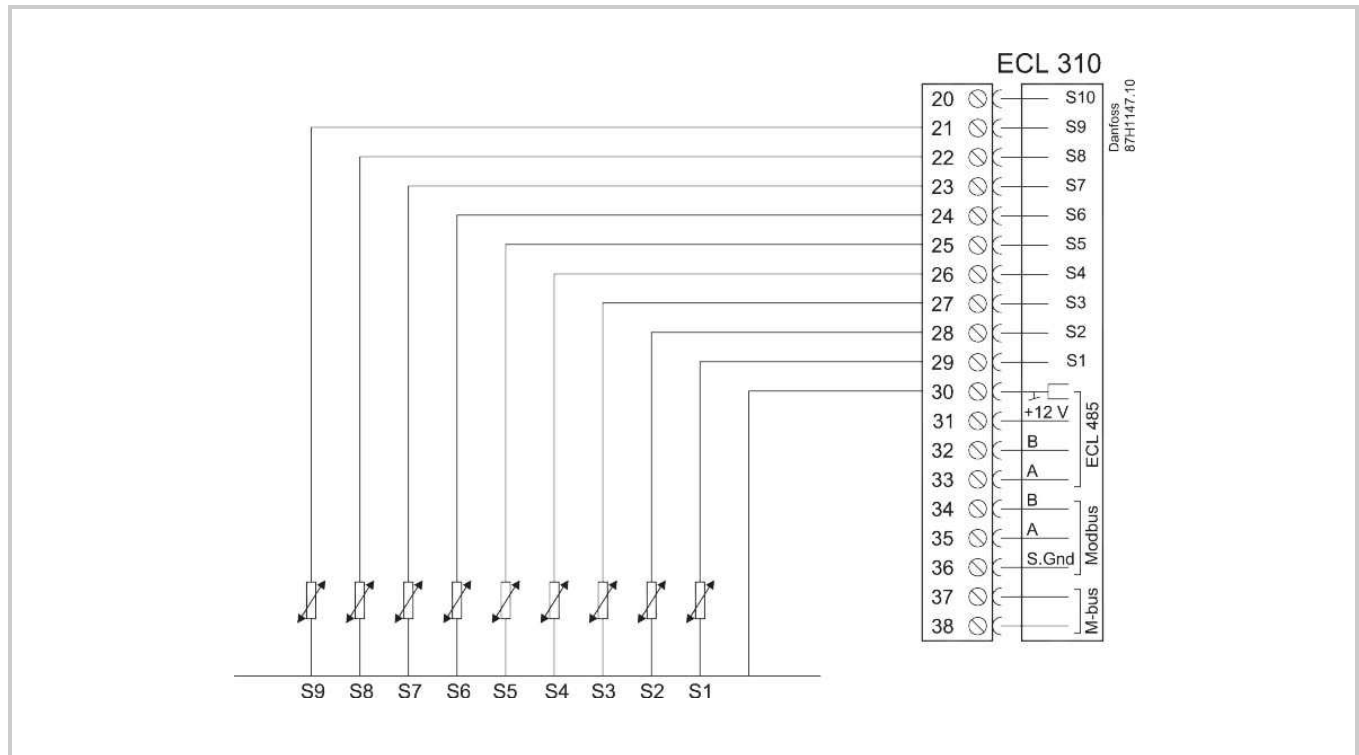


Wiring - ECA 30 / 31 Remote Control Unit

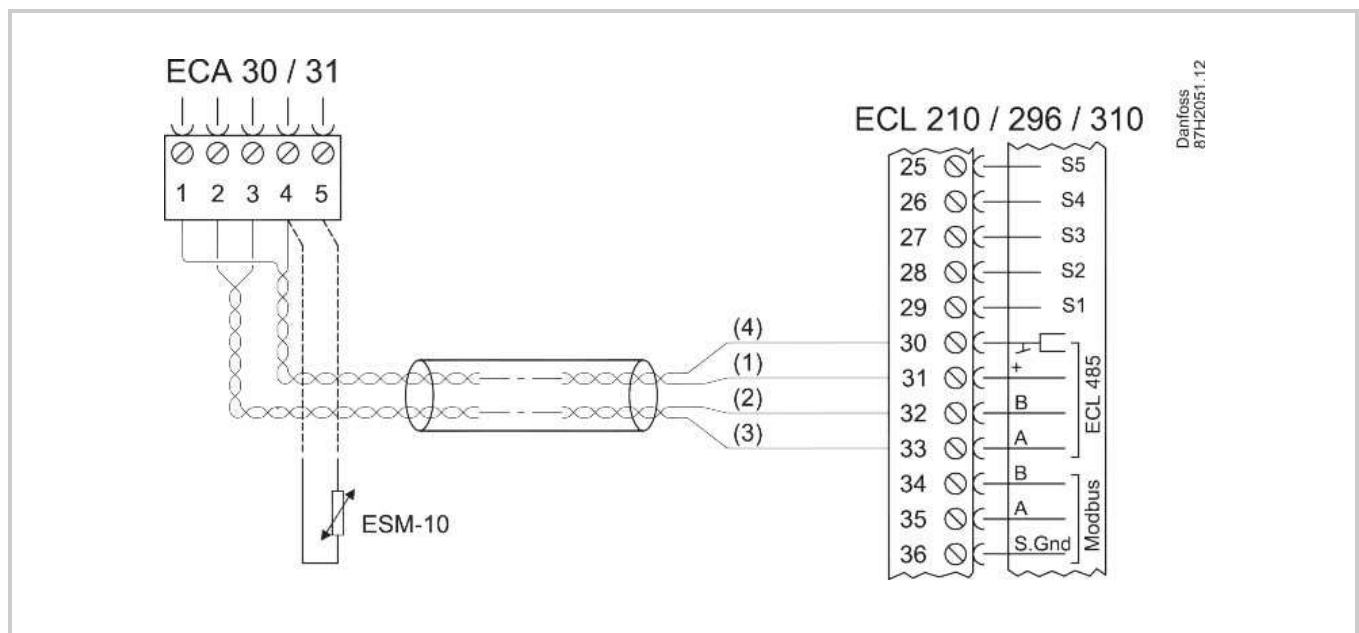

Wiring of ECL Comfort 310 / 310B and ECA 30 / 31


Supply voltage	From ECL 485 communication bus
Power consumption	1 VA
External room temperature sensor	Pt 1000 (ESM-10), substitutes the built-in room temperature sensor
ECA 31 only	Contains humidity sensor, used for special applications

Base part

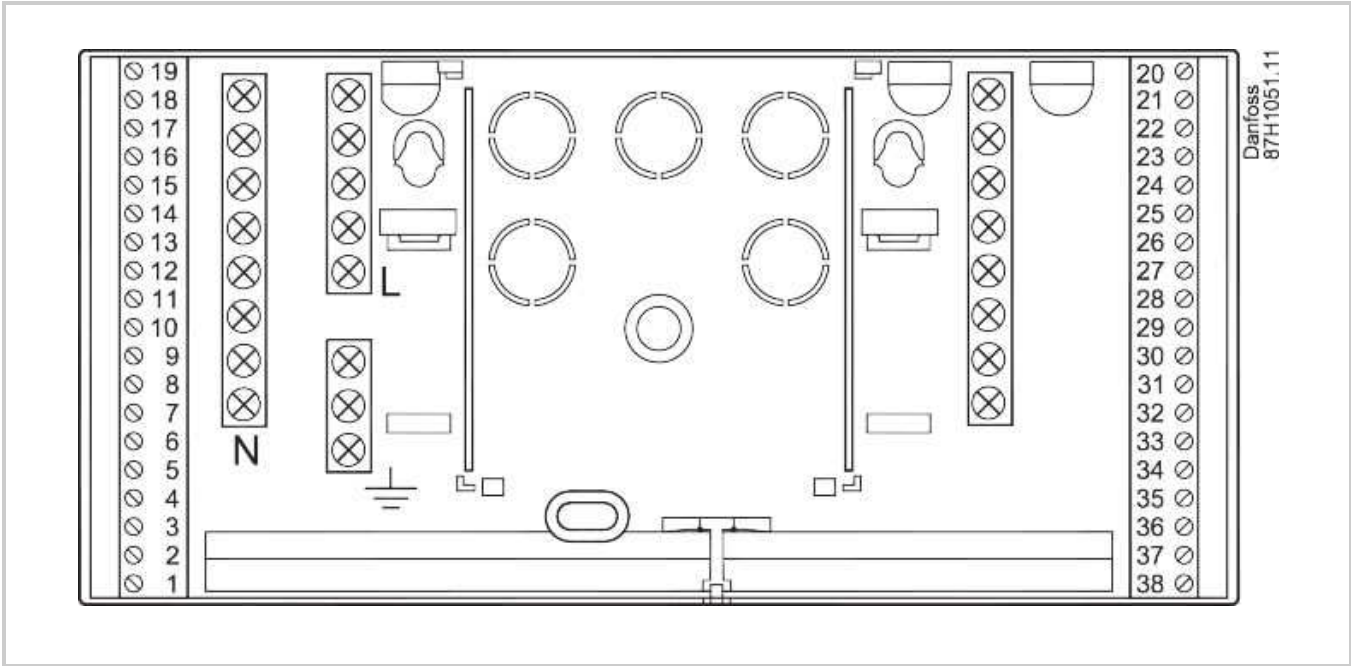

ECL Comfort 310 base part (can be used for ECL Comfort 210 too).

ECA 30 / 31 cut-out for mounting in panel front

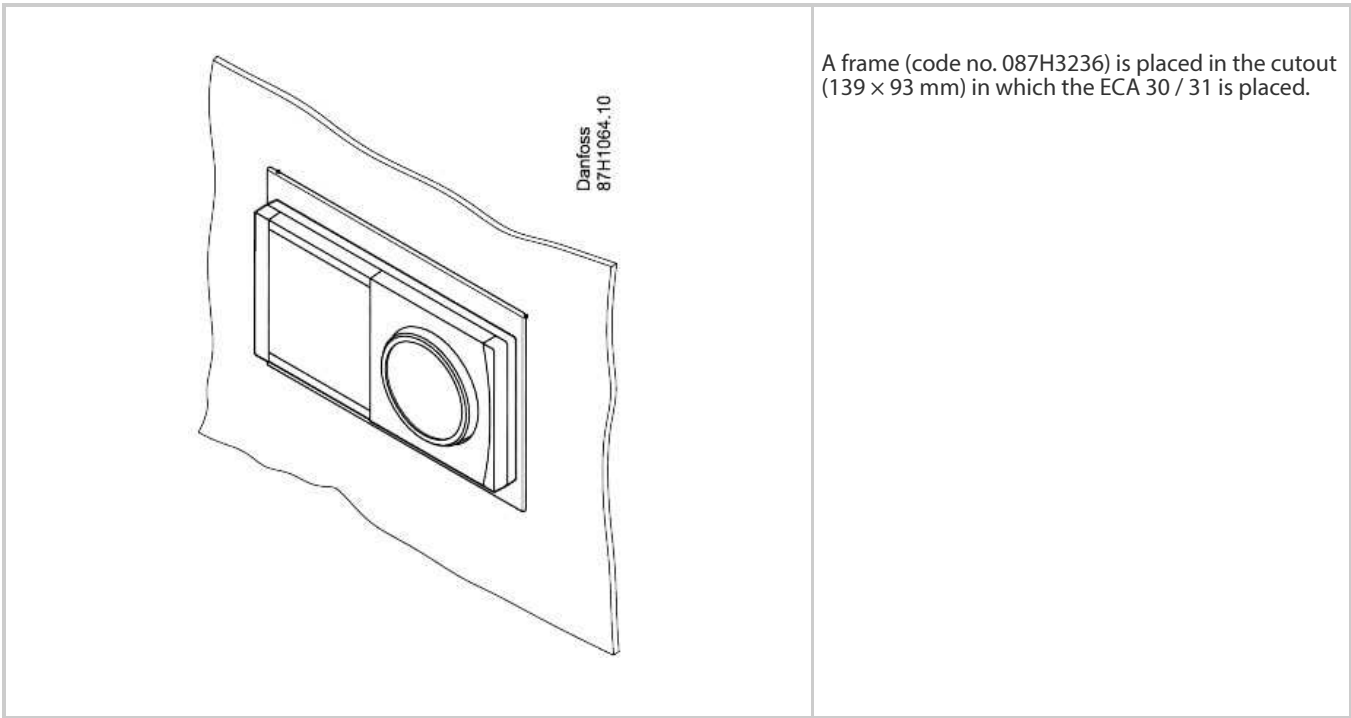

Certificates, declarations and approvals

The list contains all certificates, declarations, and approvals for this product type. Individual code number may have some or all of these approvals, and certain local approvals may not appear on the list.

When you click on the link you will be directed to the latest version of the 'Declaration of Conformity'. Products developed and sold before this date of issue conform to the directives/standards in force at the time of their sale.

Approval type	Title	Certification body	Approval topic
Electrical Safety Certificate	EAC KZ 7100841.01.01.01245	EAC - Eurasian Customs Union	LVD
EU Declaration	Danfoss EU VJAOA502.01	Danfoss	LVD
UA Declaration	UA Controllers 2024-07-25	Danfoss	LVD
Statement of Compliance	Danfoss SoC 240409EN0091101.02	Danfoss	UK PSTI
Manufacturer's Declaration	Manufacturer's declaration 250902EN0801.01	Danfoss	
Manufacturer's Declaration	Manufacturer's declaration 251211EN0801.01	Danfoss	Compliance misc. Standards
Export Control Declaration	Electronic controllers	Danfoss	

Tender text

Electronic controller for heating and domestic hot water applications

1a

- Electronic weather compensator for flow temperature control in heating and domestic hot water installations.
- Turn-push-dial, backlighted graphic display and menu-based operation in local languages.
- The controller can operate multiple application uploaded by means of application software keys.

1b

- Heat curve setting in 6 coordinates or as slope.
- Flow temperature limitations.
- Room temperature compensation and Comfort / Saving periods according to week schedule.
- Holiday schedule.
- Return temperature limitation as a fixed value (DHW) or in relation to outdoor temperature (heating).
- Pumps controlled in relation to heat demand and frost protection.
- Alarm functions and log pictures for all sensors.
- Manuel override of the individual outputs.
- Communication: M-bus (up to 5 meters), Modbus, Ethernet (e.g. internet connection to Leanheat® Monitor), ECL 485 (internal data bus).
- Connection for commissioning / service via PC
- 6 temperature sensor (Pt 1000) inputs.
- 4 application related and configured inputs.
- 6 relay outputs
- 3 pairs of electronic output for noiseless operation of the motorized control valve.

Remote control unit ECA 30 / 31:

- Turn-push-dial, backlighted graphic display
- Integrated room temperature sensor
- Integrated humidity sensor (ECA 31 only)

Extension module ECA 32 enables:

- Additional 6 configurable inputs
- 2 pulse counters
- 4 relay outputs
- 3 analogue outputs

Extension module ECA 35 enables:

- Additional 2 configurable inputs
- 2 pulse counters
- 4 relay outputs
- 3 analogue outputs
- 4 PWM outputs

1c

Main data:

- Supply voltage, 230 V a.c., 50 Hz: ECL 310 and ECL 310 B
- Supply voltage, 24 V a.c., 50 Hz: ECL 310
- Power consumption: max. 5 VA
- Ambient temperature: 0 – 55 °C
- Storage temperature: -40 – 70 °C

2

Product characteristics:

- Protection class: IP 41
- DIN rail adaptor integrated
- Dimension (inclusive base part) L*W*H, 220*110*80 mm
- Ordering code no.: ECL Comfort 310, 230 V: 087H3040
- Ordering code no.: ECL Comfort 310B, 230 V: 087H3050
- Ordering code no.: ECL Comfort 310, 24 V: 087H3044
- Ordering code no.: Base part for ECL Comfort 310 / 310B: 087H3230
- Ordering code no.: ECA 30: 087H3200
- Ordering code no.: ECA 31: 087H3201
- Ordering code no.: ECA 32: 087H3202
- Ordering code no.: ECA 35: 087H3205
- Ordering code no. for application key depends on preferred application

Contact details

Online support

Danfoss offers a wide range of support along with our products, including digital information, software, mobile apps and expert guidance. See the possibilities below.



The Danfoss Design center

Discover the Design Center, our advanced digital platform that streamlines product selection. With integrated tools and enhanced type pages, it's simpler than ever to access product information and documentation, and to select the right products. Check the availability of Danfoss products at partner locations and enjoy seamless transitions from selection to purchase with our basket-to-basket functionality. Whether you're buying from our distributors or directly from the Product Store, the Design Center simplifies your experience. Learn more at: designcenter.danfoss.com.



The Danfoss product store

The Danfoss Product Store is a one-stop shop available 24/7 for our customers, no matter where you are in the world or what area of industry you work in. Browse our catalog, check product details and documentation, view your prices and product availability, and quickly finalize your purchase. Start browsing at: store.danfoss.com.



Danfoss Partner Portal/Product Data tool

Designed to support you with easy access to product data extracts, essential resources, tools, and information. The Partner Portal provides a centralized hub for product documentation, training materials, marketing assets, and technical support, ensuring you have everything you need to succeed and grow your business with Danfoss. The Partner Portal is available 24/7 at: partner.danfoss.com and is ready to support your business.



Find technical documentation

Find technical documentation you need to get your project up running. Get direct access to our official collection of data sheets, certificates and declarations, manuals and guides, 3D models and drawings, case stories, brochures, and much more. Start searching now at: documentation.danfoss.com.



Danfoss Learning

Danfoss Learning is a free online learning platform. It features courses and materials specifically designed to help engineers, installers, service technicians, and wholesalers better understand the products, applications industry topics, and trends that will help you do your job better. Find your local Danfoss website here: learning.danfoss.com.



Get local information and support

Local Danfoss websites are the main sources for help and information about our company and products. Find product availability, get the latest regional news, or connect with a nearby expert - all in your own language. Find your local Danfoss website here: danfoss.com.

Danfoss A/S

Climate Solutions . danfoss.com . +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues description, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the products. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.
