Sensata Technologies

| LN SERIES AC OUTPUT LOW NOISE SOLID STATE RELAYS

The LN Series of panel mounted Solid State Relays offer reliable back-to-back SCR switching up to 75 Amps at 528 VAC, coupled with a patented trigger circuit design which allows the SSR to switch resistive loads with minimal electromagnetic noise generated, ideal for use in commercial, residential and medical applications.

UL recognized and TUV certified, the LN series offers superior performance in applications that demand reliable switching and low emitted noise.





PRODUCT SELECTION

Output Voltage	25 A	50 A	75 A
24-280 VAC	LND2425	LND2450	LND2475
48-528 VAC	LND4425	LND4450	LND4475



Output Voltage (1)

Description	LND24XX	LND44XX
Operating Voltage (47-63Hz) [V _{RMS}]	24-280	48-528
Transient Overvoltage [Vpk] ⁽²⁾	500	800
Maximum Off-State Leakage Current @ Rated Voltage [mA _{RMS}]	1	1
Zero Crossing Level Maximum [Vpk]	2	0
Minimum Off-State dV/dt @ Maximum Rated Voltage [V/µsec]	50	00
		Page 1

Output ⁽¹⁾

Description	LNDXX25	LNDXX50	LNDXX75
Load Current, LC A IEC62314 @ Ue=480VAC, 40°C $[A_{RMS}]^{(3)}$	25	50	75
Minimum Load Current [mA _{RMS}]		100	
Maximum 1 Cycle Surge Current (50/60Hz) [Apk]	239/250	597/625	1145/1200
1 Second surge current (Apk. Ta=25°C) 50/60 Hz	85	150	225
$\begin{array}{l} \mbox{Maximum On-State Voltage Drop @ Rated} \\ \mbox{Current [V_{rms}]} \end{array}$	1.3	1.25	1.15
Maximum 1/2 Cycle I ² t for Fusing (50/60Hz) [A ² sec]	285/259	1770/1621	6560/5976
Thermal Resistance Junction to Case (Rjc) [°C/W]	0.8	0.45	0.27
Maximum Power Dissipation @Rated Current [W]	32.5	62.5	86.25
Recomended Heat Sink for Rated Current @40°C [°C/W]	2	1	0.7
Minimum Power Factor (at Maximum load)		0.7	

Input ⁽¹⁾

Description	LND24XX	LND44XX		
Control Voltage Range [VDC] (4)	4.8 - 32			
Maximum Reverse Voltage [VDC]	32			
Minimum Turn-On Voltage [VDC]	4.8			
Minimum Turn-Off Voltage [VDC]	1.1			
Minimum Input Current (for on-state) [mA]	8	15		
Maximum Input Current [mA]	16 27			
Nominal Input Impedance [Ω]	Current Regulated			
Maximum Turn-On Time	1/2 Cycle			
Maximum Turn-Off Time	1/2 0	Cycle		


General ⁽¹⁾

Description	Parameters
Dielectric Strength, Input to Output (50/60Hz) [V _{RMS}]	3500
Dielectric Strength, Input/Output to Case (50/60Hz) [V _{RMS}]	4000
Minimum Insulation Resistance (@ 500 VDC) [Ω]	10 ⁹
Maximum Capacitance, Input/Output [pF]	12
Ambient Operating Temperature Range [°C]	-40 to 80
Ambient Storage Temperature Range [°C] ⁽⁵⁾	-40 to 100
Weight (typical) [oz/g]	2.6/74.9

Housing Material	UL94 V-0
Baseplate Material	Aluminum
Input Terminal Screw Torque Range [lb-in/ Nm]	13-15/1.5-1.7
Load Terminal Screw Torque Range [lb-in/ Nm]	18-20/2-2.2
SSR Mounting Screw Torque Range [lb-in/ Nm]	18-20/2-2.3
Humidity per IEC60068-2-78	93% non-condensing
LED Input Status Indicator	Green
Overvoltage Category	III
Impulse Withstand Voltage according to IEC 60664-1	6kV




THERMAL DERATE INFORMATION

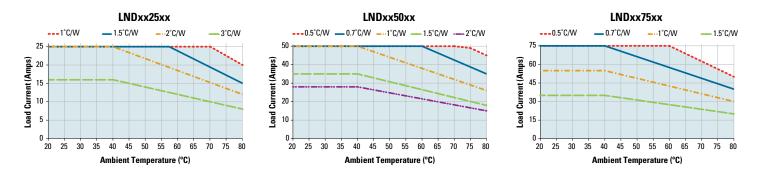





INPUT CURRENT INFORMATION⁽¹⁾

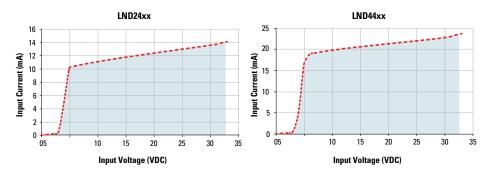








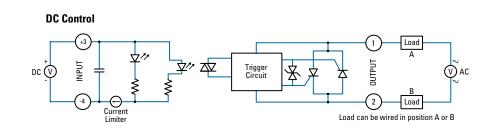

SURGE CURRENT INFORMATION

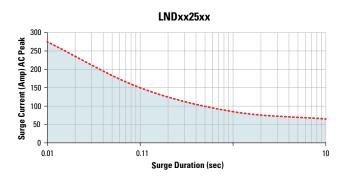


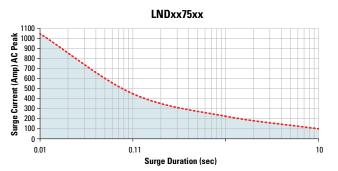

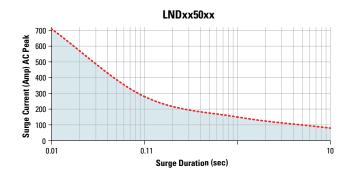

--- Single Pulse ⁽⁶⁾

CONDUCTED RADIOFREQUENCY EMISSION TEST

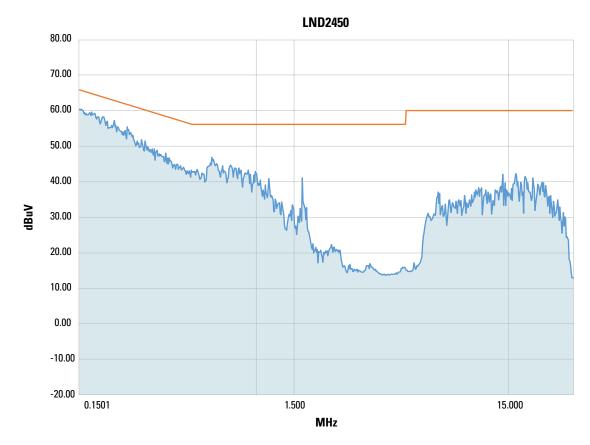



(1) All parameters at 25°C unless otherwise specified.

GENERAL NOTES

- ⁽²⁾ Output will self trigger beyond 450-600 Vpk for LND24XX or 900-1200 Vpk for LND44XX models, not suitable for capacitive loads.
- ⁽³⁾ Heat sinking required, see derating curves.
- ⁽⁴⁾ Increase minimum voltage by 1 V for operations from -20 to -40°C.
- ⁽⁵⁾ No freezing or condensation allowed.
- ⁽⁶⁾ For single surge pulse Tc=25°C; Tj=125°C.
- ⁽⁷⁾ Load can be wired to either SSR output terminal 1 or 2.



INSTALLATION INSTRUCTIONS

Mounting on Heat Sinks

Select adequate heat sink (see thermal derating curves).

"Be sure to use a thermal pad or thermal compound (0.006 - 0.008 in layer thickness recommended) SSR and the selected heat sink.

thickness recommended) between the SSR and the selected heat sink."

Before applying full torque tighten down both screws until they contact the baseplate. Then, tighten them to 20 lb-in (2.2 Nm).

For optimal thermal performance heat sink fins should be oriented vertically to promote natural convection airflow.

Mounting on Panels

Locate the panel section on which the SSR will be mounted. Panel mount surface must provide adequate heat sinking capability, uncoated, clean, flat (0.004 in/in recommended) and preferably aluminum.

Be sure to use a thermal pad or thermal compound (0.006 - 0.008 in layer thickness recommended) between the SSR and the panel.

SSR mounting slots have a diameter of 0.2 in (5.0 mm). Two screws are needed (not included) to mount the SSR onto panel. Choose screw length considering the mounting surface hole depth and that the SSR baseplate thickness is 0.125 in (3.2 mm).

Before applying full torque tighten down both screws until they contact the baseplate. Then, tighten them to 20 lb-in (2.2 Nm).

	Recommended Torque and Wire Sizes					
Terminal	Max. Screw Torque [Ib-in (Nm)]	Wire Size (Solid / Stranded)	Wire Pull-Out Strength (lb)[N]			
		20 AWG (0.75 mm2) [minimum]	25 [111]			
Output	18-20 (2.0-2.2)	2 x 10 AWG (6 mm2) 80 [35	80 [355]			
		2 x 8 AWG (10 mm2) [maximum]	90 [400]			
Laurat		28 AWG (0.09 mm2) [minimum]	2.2 [9.8]			
Input	13-15 (1.5-1.7)	2 x 12 AWG (4 mm2) [maximum]	22 [98]			



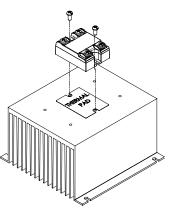



fig. 1 SSR mounted on HS053 heat sink




MECHANICAL SPECIFICATIONS

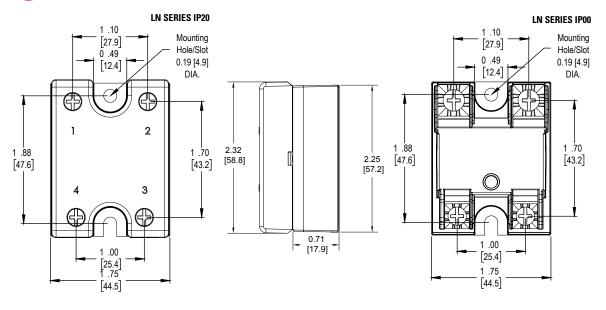

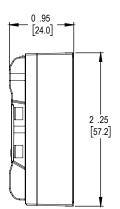

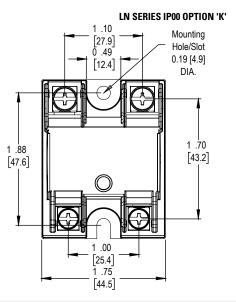

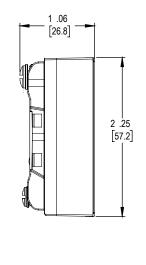



LN - D - 44 - 75 - K -	С - Н
Series	
LN = Low Noise Solid State Relay	
Control Voltage	
D = 4.8-32 VDC	
Operating Voltage	
24 = 24-280 VAC 44 = 48-528 VAC	
Rated Load Current	
25 = 25A 50 = 50A 75 = 75A	
Termination	
Blank = Screw & Clamps K = Installed standoffs with screws for PC Board mounting (IPOO only)	
Protective Cover	
Blank = Not included (IP00) C = Included (IP20)	
Thermal Pad	
Blank = Not included H = Included	 Required for valid part number For options only and not required for valid part number



ACCESSORIES

Recommended Accessories						
J)			\diamond			
Hardware Kit	Heat Sink Part No.	Thermal Resistance [°C/W]	Thermal Pad	Lug Terminal		
НК1 НК4	HS501DR HS301 / HS301DR HS251 HS201 / HS201DR HS202 / HS202DR HS172 HS151 / HS151DR HS122 / HS122DR HS103 / HS103DR HS101 HS073 HS072 HS053	5 3 2.5 2 1.7 1.5 1.2 1 1 0.7 0.7 0.5	HSP-1 HSP-2	TRM0 TRM6		



Approvals (Tested and Certified According To)				
c 🔊 us E116950				
UL 508 and C22.2 No.14	EN 62314			

	Conformances					Enviro	onmental
Vibration Resistance IEC 60068-2-6	Shock Resistance IEC 60068-2-27	Electromagnetic Interference IEC 60947-4-3 (See Table 1)	Electromagnetic Compatibility IEC 61000-6-2 (See Table 1)	Resistances to heat and fire	C€	Rohis	50
Amplitude	Peak Acceleration:	Conducted Disturbances	IEC 61000-4-2 (ESD)	IEC 60335-1,	Directive	Directive	GBT 26572-
Range: 10-55 Hz, Displacement		CISPR 11	IEC 61000-4-4 (Burst)	Section 30	Section 30 2006/95/ EC	2011/65/EU	2011
0.75mm	11115.		IEC 61000-4-5 (Surge)				

	Table 1. Elect	romagnetic Compatibi	lity / Electromagnetic Inter	ference				
Generic Standard	Specific Standard	٦	Performance					
	Electrostatic Discharge	8kV air discharge		Criterion A				
	IEC 61000-4-2		6kV contact discharge		Criterion A			
	Fast transients (burst)	Output	2kV, 5kHz, 10	DOkHz	Criterion B			
	IEC 61000-4-4	Input	1kV, 5kHz, 10	DOkHz	Criterion B			
IEC 61000-6-2			1kV Line to N	1kV Line to Neutral	Criterion B			
Immunity for Industrial			Output	2kV Line to Earth		Criterion B		
Environments	Surge		Criterion B					
	IEC 61000-4-5		500V Line to Neutral		Criterion B			
					Input	1kV Line to	Earth	Criterion B
			1kV Neutral t	o Earth	Criterion B			
		Frequency, MHz	Quasi-peak, dB(uV)	Average, dB(uV)				
IEC 60947-4-3 Environment B Low	Conducted	0.15 to 0.5	66 to 56	56 to 46	Class B Group 1 & Group 2			
voltage domestic,		0.5 to 5	56	46				
commercial and light industrial installations		5 to 30	60	50	0100p 2			
muustilai mstanations		240VAC @4	0A & 440VAC @35A with Resisti	ve Load				





RISK OF MATERIAL DAMAGE AND HOT ENCLOSURE

- The product's side panels may be hot, allow the product to cool before touching
- Follow proper mounting instructions including torque values
- Do not allow liquids or foreign objects to enter this product

Failure to follow these instructions can result in serious injury, or equipment damage.



HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Disconnect all power before installing or working with this equipment
- Verify all connections and replace all covers before turning on power
- Failure to follow these instructions will result in death or serious injury.

Page 9

CONTACT US

+44 (1202) 416170

Asia Pacific

ext 2808

+1 (877) 502 5500 - Option 2

Europe, Middle East & Africa

sales.isasia@list.sensata.com

Rest of Asia +886 (2) 27602006

sales.crydom@sensata.com

ssr-info.eu@sensata.com

China +86 (21) 2306 1500

Japan +81 (45) 277 7117

Korea +82 (31) 601 2004

India +91 (80) 67920890

Americas

Sensata Technologies, Inc. ("Sensata") data sheets are solely intended to assist designers ("Buyers") who are developing systems that incorporate Sensata products (also referred to herein as "components"). Buyer understands and agrees that Buyer remains responsible for using its independent analysis, evaluation and judgment in designing Buyer's systems and products. Sensata data sheets have been created using standard laboratory conditions and engineering practices. Sensata has not conducted any testing other than that specifically described in the published documentation for a particular data sheet. Sensata may make corrections, enhancements, improvements and other changes to its data sheets or components without notice.

Buyers are authorized to use Sensata data sheets with the Sensata component(s) identified in each particular data sheet. HOWEVER, NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER SENSATA INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY THIRD PARTY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT, IS GRANTED HEREIN. SENSATA DATA SHEETS ARE PROVIDED "AS IS". SENSATA MAKES NO WARRANTIES OR REPRESENTATIONS WITH REGARD TO THE DATA SHEETS, EXPRESS, IMPLIED OR STATUTORY, INCLUDING ACCURACY OR COMPLETENESS. SENSATA DATA SHEETS ANY WARRANTY OF TITLE AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUIET ENJOYMENT, QUIET POSSESSION, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS WITH REGARD TO SENSATA DATA SHEETS OR USE THEREOF.

All products are sold subject to Sensata's terms and conditions of sale supplied at www.sensata.com SENSATA ASSUMES NO LIABILITY FOR APPLICATIONS ASSISTANCE OR THE DESIGN OF BUYERS' PRODUCTS. BUYER ACKNOWLEDGES AND AGREES THAT IT IS SOLELY RESPONSIBLE FOR COMPLIANCE WITH ALL LEGAL, REGULATORY AND SAFETY-RELATED REQUIREMENTS CONCERNING ITS PRODUCTS, AND ANY USE OF SENSATA COMPONENTS IN ITS APPLICATIONS, NOTWITHSTANDING ANY APPLICATIONS-RELATED INFORMATION OR SUPPORT THAT MAY BE PROVIDED BY SENSATA.

Mailing Address: Sensata Technologies, Inc., 529 Pleasant Street, Attleboro, MA 02703, USA.

www.sensata.com

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Sensata:

 LND2475
 LND2450C
 LND2425CH
 LND4475CH
 LND2425H
 LND2450CH
 LND2425
 LND2450
 LND2425
 LND2450H
 LND2425H
 LND2425CH
 LND2450CH
 LND2475C
 LND2475CH
 LND2450CH
 LND2475C
 LND2475CH
 LND2475C
 LND2475C