Replacing the Blade on XMU04

A CAUTION: This document is intended to be a supplement to the instruction manual. Reference the instruction manual before installing or remove the blades.

▲ CAUTION: Always be sure that the tool is switched off and the battery cartridge is removed before carrying out any work on the tool.

▲ CAUTION: When replacing the shear blades, always wear gloves and attach the blade cover so that your hands and face do not directly contact the blades.



Release the protusions on the grass receiver from the height adjustment grooves on the tool.

- 1. Push forward on the **III** to slide the grass receiver towards the front of the tool.
- 2. Pull grass receiver downwards to release the hinge and remove from tool.

STEP 3: Flip the Crank



1. Remove the crank from the tool and flip it over.

- Referencing the above red line, adjust the 3 pins to line up with the alignment line
- 3. Reinsert the crank with Crank Side 2 facing out.

STEP 5: Replace the Undercover




Place the undercover by lining the \square^{\cap} with the \blacktriangle on the tool. Confirm that the lock lever is in the groove of the undercover. Then, while pressing the undercover in, turn the undercover clockwise until the \square aligns with the \blacktriangle on the tool.



- 1. Press in the lever lock
- Turn the undercover counter-clockwise until the

 ∩ aligns
 with the ▲ on the lever lock. Remove the undercover.
- 3. Remove grass shear blades

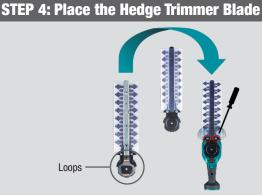

- 1. Ensure the loops on the hedge trimmer blade are aligned with each other and centered with the hole on the base plate.
- 2. Place the hedge trimmer blade flush with the housing. The center pin will insert into the hole on the base plate.
- 3. Tighten the (2) screws on the hedge trimmer blade to attach.

