


Ensure the Footrest assembly swings freely up and down, Electrical connections are firmly attached, and air hoses are secure. Remove the foot pads to increase foot roller intensity, if desired.


Zipper the closure between the Footrest and Chair Body

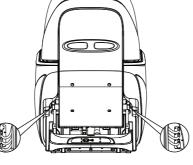


Plug the chair back into a grounded 110V

Double check that all air hoses are still firmly connected in the back of the chair under the arm panels. You can see the connections in the back of the chair, underneath the arm panels when fully upright.

electrical outlet.

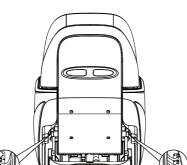


Final Check:

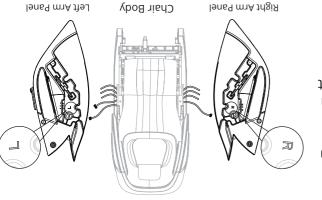

Isne9 mrA thgi9

(B) (A) S

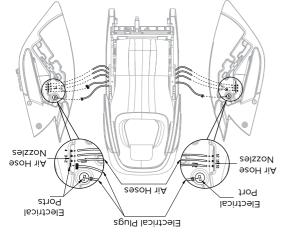

the chair. a soft surface for Place the chair body on Ζ :z dais


to the correct side of the right and place next the left arm panel from assembly. Determine

.) bns 8 ,A the chair body; locations arm panel attaches to Note the 3 locations each Ξ :E qat2

number on the air hose Locate the corresponding hose has a number. body and note that each each side of the chair Locate the air hoses off :7 da12

two wires on the left side. wire on the right side and off the chair body. One Locate the electrical plugs the numbers on each. to the nozzles by matching Firmly connect the hoses nozzles of each arm panel.

.hod corresponding electrical Firmly clip each into the

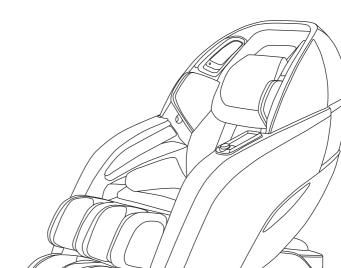






sleivotut-yldməzze\moo.zriedo9gezzemetoyA.www Before assembling your chair, watch an assembly video at:

Alternatively, **scan the QR code** to go directly to the URL above.



contents are accounted for. Carefully check box contents to the detail below, making sure all

at 800 242-0761. Do not return to the place of purchase. If anything is missing, please contact Kyota Massage Chairs

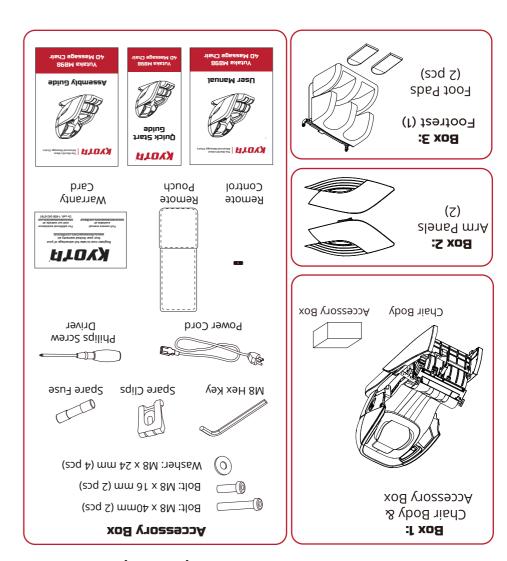

power switch

Power on the remote and select AUTO program to start a session.

Review chair for smooth operation. If things are not operating correctly, review all assembly steps. Call Kyota support at 800-242-0761 if you need live US-based support.

You are done; time for a Massage!



Register your product at www.kyotamassagechairs.com/ warranty/registration to ensure it is in our system. This will simplify the warranty process should you ever need it.

Alternatively, **scan the QR code** to go directly to the URL above.



72 Stard Road, Seabrook, NH 03874 | (800)-242-0761 | www.kyotamassagechairs.com

Yutaka M898 4D Massage Chair

Assembly Guide



Step 5:

Step 7:

Carefully lift each arm panel and place the arm panel hook on the chair body rail to support the arm panel. Make sure the air hoses and electrical wires remain connected and not pinched.

Locate the long, silver

M8 Bolts (2), Washers

from the Accessory Box.

(2) and hex key tool

Fasten this bolt and


Velcro flap just below

the shoulder air bag

do not tighten yet.

(Position B) until snug;

washer under the

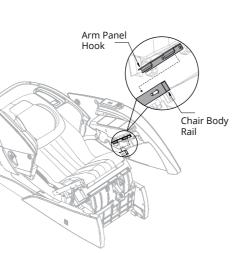

Long Bolt:

M8 x 40

Position B

Washer


M8 x 24


Step 6:

Next, locate the Pin in position A on the arm panel and secure it under the pin retainer on the chair body in position A from **step 3**. Make sure that the hook and the pin are firmly in place before moving onto the next step.

Step 8:


Locate the shorter, black M8 Bolts (2) and Washers (2) from the Accessory Box. Fasten this bolt and washer in Position C. When secured, tighten both positions C and B on both arms.

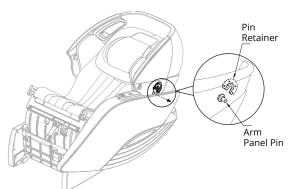

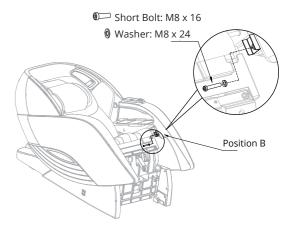

5tep 10:

Plug the remote control cord into the remote control port located on the front right of the chair body and fasten. Ensure the **arrow** on the remote control cord lines up with the **arrow** on the remote control port before inserting. Screw on metal ring to fasten. Do not force.

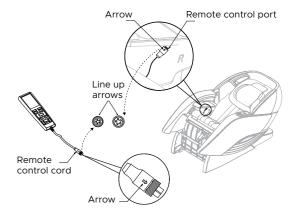


cc cc tr ct tr ct

Step 11:

Connect the power cord to a grounded 110V electrical outlet. Power on the main power switch on the side of the chair body. Press the red power button on the remote control, once to turn it on and once more to bring the chair into an upright position. Locate Footrest and position it in front of the main chair body.

Main Power Switch


Step 13:

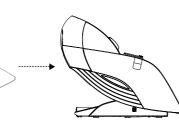




Step 12:

Unplug chair from electrical source. Connect the footrest by attaching the three electrical plugs from the footrest into their respective ports on the body of the chair. Ensure the thumb release is facing up and push in until it clips. Slide the air hose onto the air nozzle.

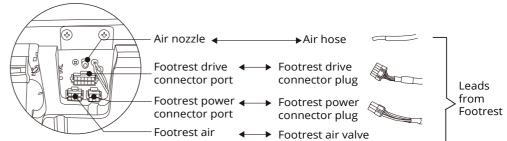

Step 9:

Locate the power cord, remote pouch and remote control from the Accessory Box. Plug the power cord into the power cord port on the back side of the base of the chair. Attach the velcro from the back of the remote pouch to the velcro strip located on the underside of the right arm panel.

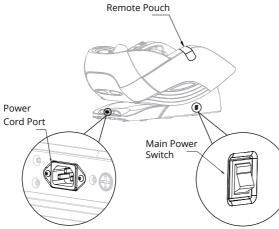



connector port

connector plug



Before attaching the footrest to the chair body, remove the clips on the chair body pins by sliding up. (If Clips are missing, there are spare clips in the Accessory Box)

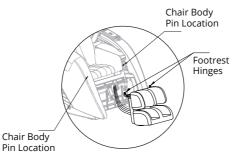

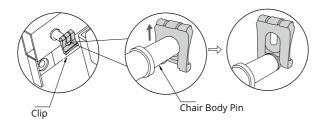

Step 14:

Lift the footrest and slide one side of the footrest hinge completely onto the corresponding chair body pin. To secure, fasten clip over chair body pin by sliding on. Carefully align the other footrest hinge over the remaining chair body pin and center the footrest. Fasten the remaining clip over the chair body pin to secure both sides of the footrest.

