




Zipper the closure between the Footrest and Chair Body

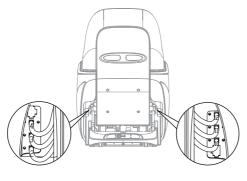



Double check that all airhose and electrical wires are still firmly connected in the back of the chair under the armrests. You can see the connections in the back of the chair, underneath the arms when fully upright.

Final Check:

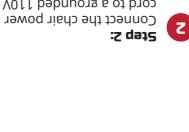


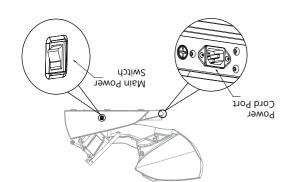

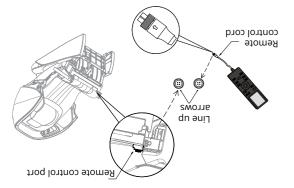



Asin Power Switch

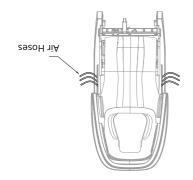

power switch to on. of the chair. Flip the main the back side of the base into the respective port on electrical outlet and plug it VOII bebnuorg a of broo

Ensure the arrow on the the chair body and fasten. located on the front right of into the remote control port Plug the remote control cord ε :E q9j2


Do not force. Screw onmetal ring to fasten. control port before inserting. with the arrow on the remote remote control cord lines up

7 :7 də12

turn off main power switch. reclined. Once fully reclined, until the chair back is fully hold the **back adjust** button power button, then press and control by pressing the red recline, turn on the remote If the chair is not already in full

5 :2 q972

further into the frame. the arm panels, push them gnillsteni elidw nemt gnidoniq the chair body. To avoid Locate air hoses on the side of

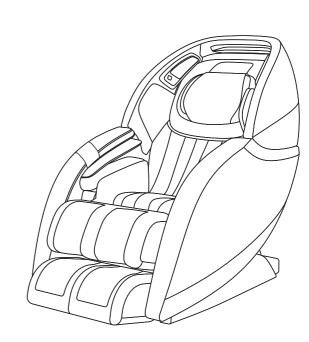



SCAN CODE




Alternatively, scan the QR code to go directly to the URL above.

L :L q972


contents are accounted for. Carefully check box contents to the detail below, making sure all

at 800 242-0761. Do not return to the place of purchase. If anything is missing, please contact Kyota Massage Chairs

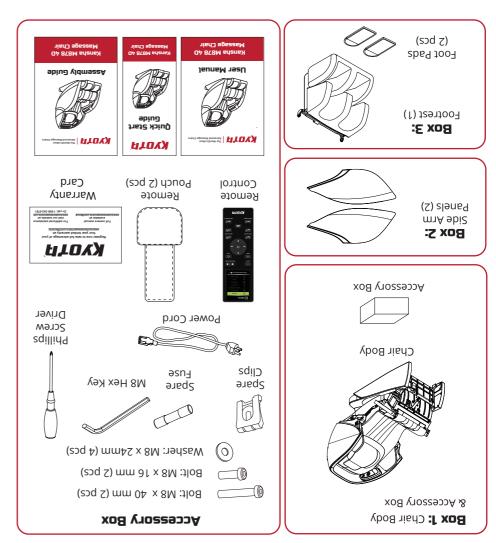



intensity, if desired.



Review chair for smooth operation. If things are not operating correctly, review all assembly steps. Call Kyota support at 800-242-0761 if you need live US-based support.

If you wish to use an APP to control the chair, download from the Apple or Google app store and follow pairing instruction found within the APP.

You are done; time for a Massage!

Assembly Guide



Register your product at www.kyotamassagechairs.com/ warranty/registration to ensure it is in our system. This will simplify the warranty process should you ever need it.

Alternatively, scan the QR code to go directly to the URL above.



72 Stard Road, Seabrook, NH 03874 | (800)-242-0761 | www.kyotamassagechairs.com

Kansha M878 4D Massage Chair


Version 1.2



Step 7:

Step 6: 6

Determine the left arm panel from the right and place next to the correct side of the chair. Note the locations of the arm panel clip, chair body rail, arm panel pin and the chair body hook.

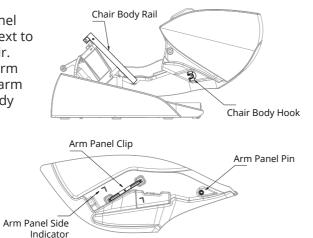


Step 8:

Step 10:

8

10

Ensure the arm panel clip remains on the chair body rail as you lift up the front of the arm panel slightly. Place your free hand on the back of the arm panel pushing it in towards the chair body, then push down on the front of the arm panel and slide the arm back so that the chair body hook aligns with the arm panel pin. Make sure that the hook and the pin are firmly in place before moving onto the next step.

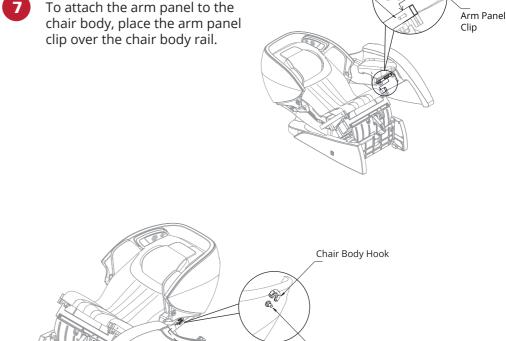

Chair Body Rail




Next, locate the screw holes underneath the shoulder airbags. Pull back the Velcro cover and insert the long silver screw and washer. Tighten by hand, then finish the whole side with the Allen wrench. Close velcro back up.

• M8 x 40 (Long Bolt) M8 x 24 (Washer)

Arm Panel Pin




Turn the main power on. Press the red power button on the remote, once to turn it on and once more to bring the chair into an upright position.

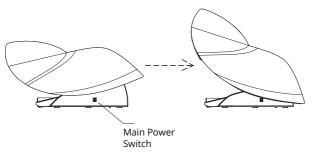


Step 12: 12

To finish each arm, locate the air hoses you previously tucked into the chair body frame and connect to the air nozzles located on the back of the arm panel. Make sure to connect the corresponding hoses to their nozzles by matching the numbers. Repeat on other side.

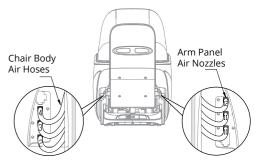

Step 13: 13

Remove the footrest from its packaging and position it in front of the main chair body. Connect the footrest by attaching the three white plugs from the footrest into their respective ports on the body of the chair. Ensure the thumb release is facing up and push in until it clips. Slide the air hose onto the white air nozzle.










Step 14:

Before attaching the footrest to the chair body, Remove the clips on the chair body pins by sliding up. (If Clips are missing, there are spare clips in the Accessory Box)

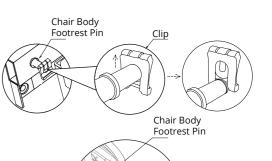

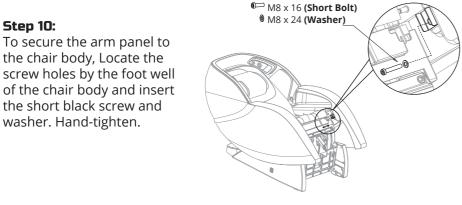


Step 10:



15

Step 15:

Lift the footrest and slide one side of the mounting bracket completely onto the chair body pin. Fasten the clip over the pin to secure. Carefully align the other side of the mounting bracket with the remaining pin and slide it on too. Make sure to center the footrest, then fasten the remaining clip over the pin to secure both sides of the footrest.

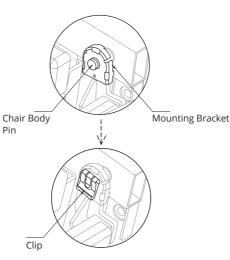

Step 16:

16

Remove the remote control pouch from the accesory box. Attach the velcro from the back of the remote control pouch to the velcro strip located on the underside of the right arm rest.

