

In-Use Screen

After a Massage program is selected, In-use screen displays all settings to that program.

1 Time left  
2 4D intensity level  
3 Active airbags  
4 Active rollers  
5 Bluetooth connected  
6 Indicators  
7 Back-roller position & direction

Intelligent Voice Control

To activate the voice control feature on your remote: **Menu > Setting > Voice > On.**

Touch the button on the left speaker, or say "Switch to voice mode" to complete voice control activation.

Use the voice control commands below:  
(Once you've activated voice control, give a command within 5 seconds, or you will have to re-activate the voice function.)

- Power On
  - Switch Off
  - Activate Massage
  - Sports Refresh
  - Extension
  - Rest & Sleep
  - Working Relief
  - Neck & Shoulder
- Waist & Spine
  - Airbag Massage
  - Deep Shiatsu
  - Healthy Breath
  - Massage Extend
  - Zero Gravity
  - Start Heat
  - Heat Off

Share a photo and tag us:

@infinity\_chairs

@Infinitymassagechairs

@Infinitymassagechairs

Don't forget to use #infinitymassagechairs

INFINITY®

72 Stard Road, Seabrook, NH 03874  
603-910-5000  
www.infinitymassagechairs.com

Version 1.2

INFINITY  
MASSAGE CHAIRS

Quick Start Guide

Evo Max™  
4D Massage Chair

INFINITY®

Multi-Functional Screen

Use the directional buttons below to navigate these menu screens. Then press OK to select.

**Power** – Powers up the remote or returns the chair to the exit position and powers down remote.


**Home** – Shortcut to the home page of all menu screens.

**OK** – After navigating to the command desired on the display, push OK to select.

**Zero Gravity** – Press for Zero Gravity 1, press again for Zero Gravity 2, press again to restore recline.

**Foot Roller** – Press to turn off Foot Reflexology Rollers, press again to resume Foot Reflexology Rollers.

**Footrest** – Press and hold up arrow to bring foot rest up, press and hold down arrow to bring foot rest down

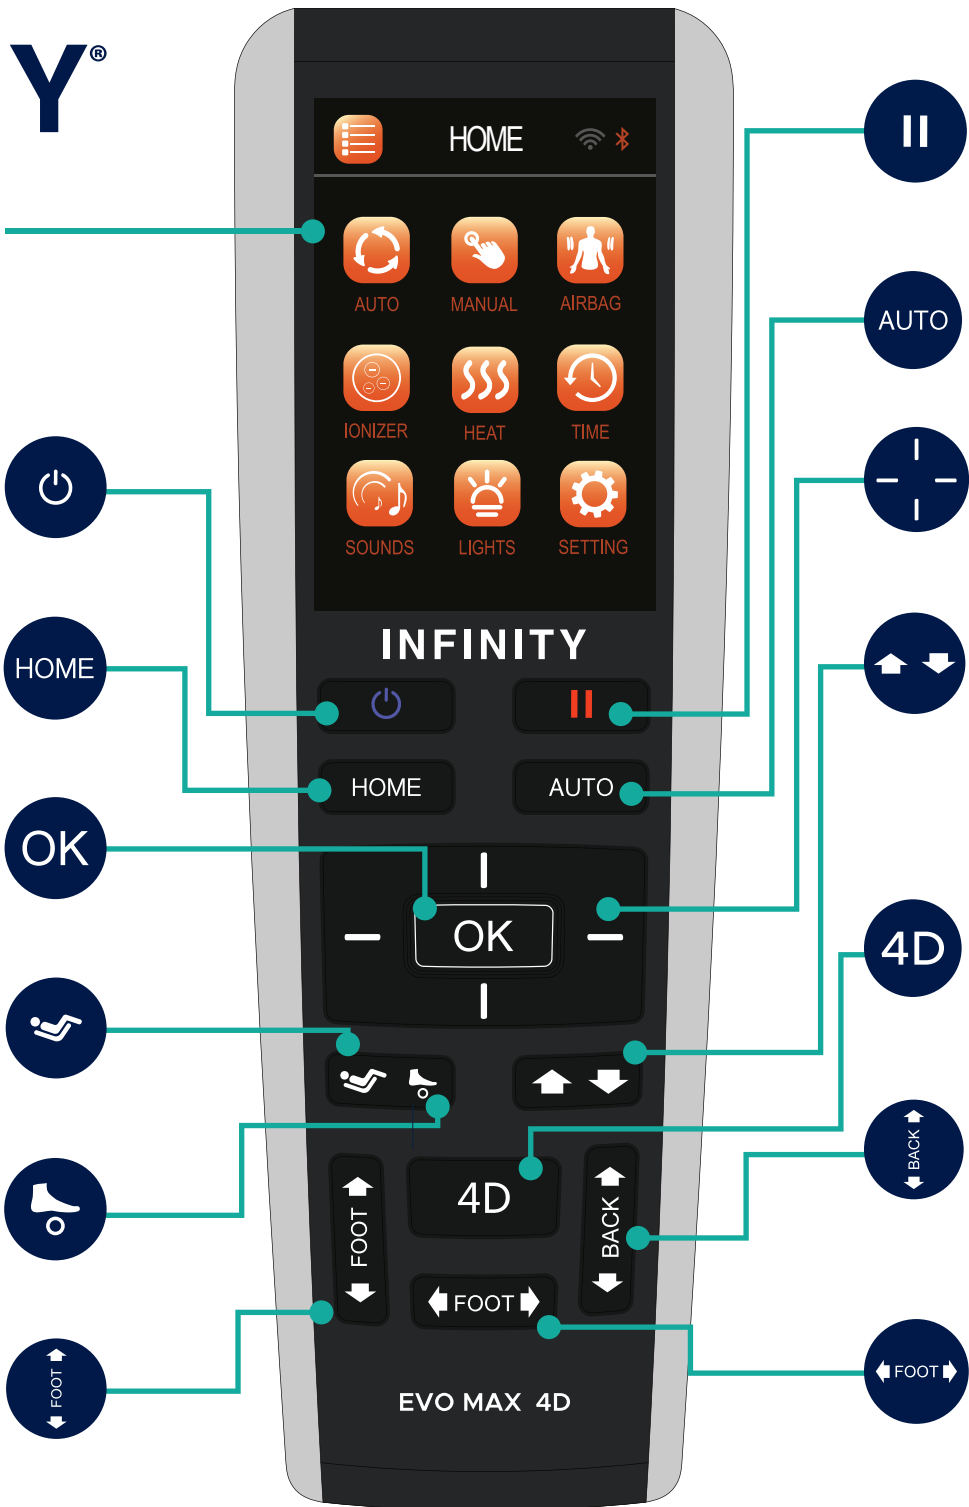

**Pause** – Press pause to immediately stop all massage chair activity, press again to resume

**Auto** – Shortcut to the Auto Programs menu screen

**Directional Button** – Press up, down, left or right to navigate the display screen

**Back Adjustment** – Back mechanism position adjustment; press and hold up to raise, press and hold down to lower. Use during initial body scan fine tuning or in manual point or partial zone mode

**4D** – Press to increase or decrease 4D intensity of back mechanism. In-use screen displays intensity dial

**Seat Back Position** – Press and hold down arrow to recline the seat back, press and hold the up arrow to upright the seat back

**Leg Length** – Press and hold right arrow to extend the leg length adjustment, press and hold the left arrow to retract the leg length adjustment