

## In-Use Screen



After a Massage program is selected, you will be taken to the **Body Scanning screen**. Here you can use the arrows to adjust the back mechanism up and down to match your specific shoulder height. After the countdown timer has elapsed, your massage will start.



- 1 Zero Gravity Recline
- 2 Speakers Active
- 3 Active Airbags
- 4 Active Rollers
- 5 Indicators
- 6 Massage Timer Adjustment
- 7 Back Roller Position
- 8 Main Menu Navigation

### Massage Timer Adjustment

Use this control to adjust the massage duration. Tap the orange “+” symbol to increase the time in **5-minute** intervals, or tap the “-” symbol to decrease it. Each tap changes the timer by 5 minutes.

After adjusting your shoulder height, you will be taken to the **In-use screen** where you can observe all current settings and session information. To personalize your massage to your exact needs, swipe left on the touch screen to be taken to the Custom Selections screen.




Swipe Left from In-use screen

Use this screen to customize your massage with full control over duration, airbag intensity, rollers, and heat. To return to the In-use screen, swipe right or tap the left arrow. If the control panel lock is on, the screen will stay here; slide it off to go back.

## Quick Access Control Panel

The Quick Access Panel allows you to turn the chair on and off, pause your massage, control chair angles, select and store your favorite massage programs, turn on heat, ambient lights, and take health measurements.

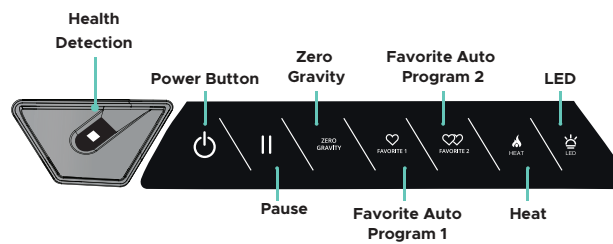

**Health Detection** - Select “Health” from main menu then press and hold the health sensor with your right thumb for a personalized massage experience that measures certain health values and provides an intelligent massage experience tailored for you.

**Power Button** - Press and hold of power button turns massage chair on and off.

**Pause** - Press to pause massage program. Press again to resume massage program.

**Zero Gravity** - Press to enter Zero Gravity position 1, press again to enter Zero Gravity position 2, press again to return to upright position.

**Favorite Programs (1-2)** - Press and hold to set current massage program as favorite. Once set, press to start the favorite massage program.

**Heat** - Press to turn on lumbar heat. Press again to increase heat level. Press again to turn heat off.

**LED** - Press to turn on or off the ambient light.

## Share a photo and tag us:

@infinity\_chairs

@infinitymassagechairs

@Infinitymassagechairs

Don't forget to use #infinitymassagechairs

# INFINITY

72 Stard Road, Seabrook, NH 03874 | 603-910-5000  
www.infinitymassagechairs.com

Version 1.2

# INFINITY

MASSAGE CHAIRS

## Quick Start Guide

**ULTRA IMPERIAL®**  
Syner-D® Massage Chair




Alternatively, scan the QR code to watch a remote tutorial video.


# INFINITY

**Home Screen** - After turning on your chair, this is the first screen you will see on your tablet. Use this screen to navigate all menu options.


**Body Scan** - Slide off to disable TrueFit® Body Scanning for all auto and manual programs for the next selected massage session. Body scanning will automatically turn back on after the massage session ends or after the chair resets.

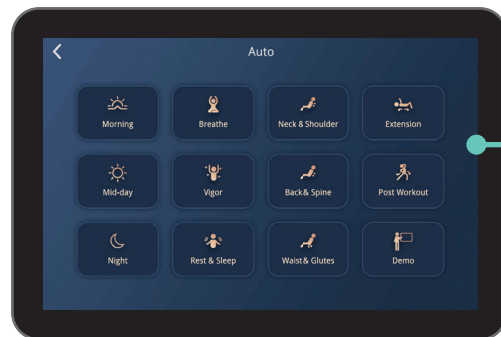



**Auto Programs** - Select from 12 pre-set auto programs. To select simply tap the auto program you wish to run.

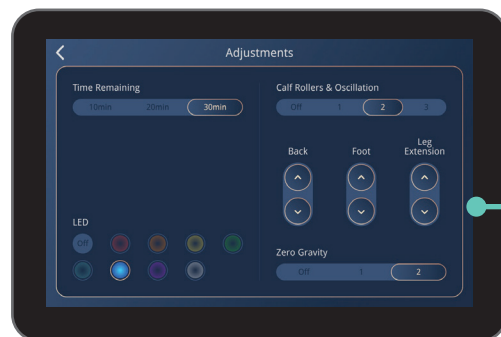


**Adjustments** - While your massage program is running, use this screen to make adjustments to time, lighting, the calf rollers and oscillation or chair angles. To turn lights off simply de-select the activated light color.

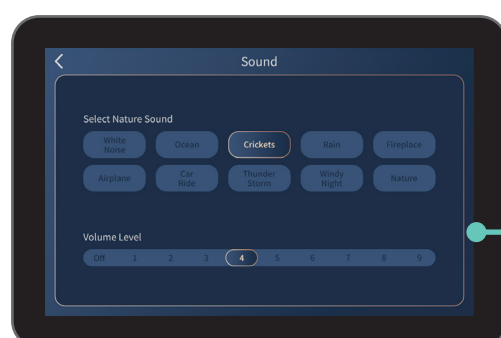

**Sound** - Use this screen to select and control the SootheMe® Sound Therapy feature of your chair. The selected sound will play from the Harman/Kardon speakers. To turn SootheMe® Nature Sounds off, de-select the activated sound.

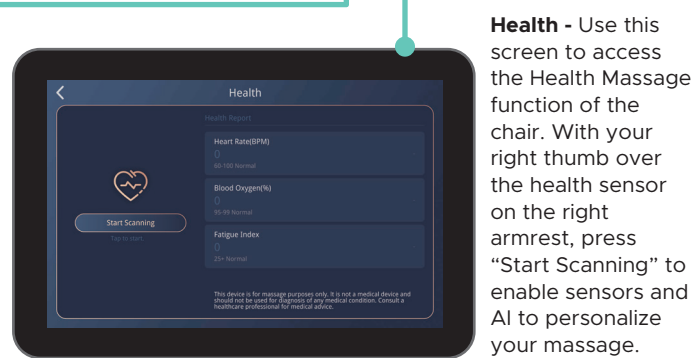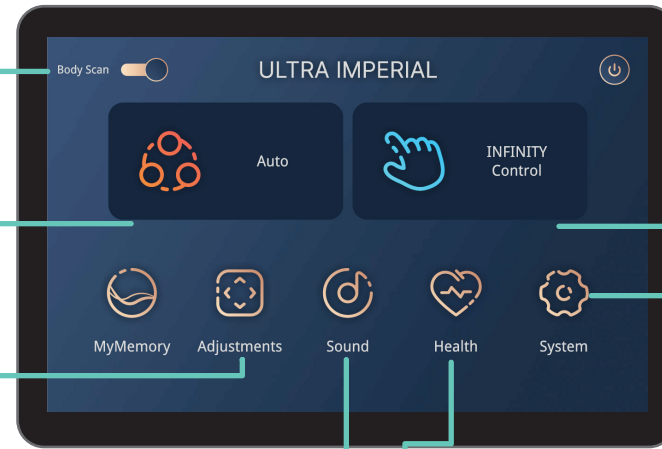

**Health** - Use this screen to access the Health Massage function of the chair. With your right thumb over the health sensor on the right armrest, press “Start Scanning” to enable sensors and AI to personalize your massage.

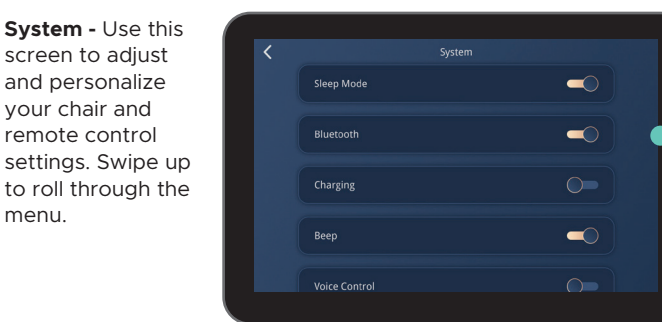

**System** - Use this screen to adjust and personalize your chair and remote control settings. Swipe up to roll through the menu.



**Infinity Control** - Use this screen to fully customize your own massage and find the perfect treatment for you. Slide the **Control Panel Lock** (top right corner) to prevent the screen from reverting to the In-Use screen, allowing continuous adjustments. Slide off to unlock. After setting up selections you can tap **MyMemory** and **Save** the program to 1 of 3 Memory slots for recall later.

**Up / Down** - selects which massage mechanism to make adjustments to. “Up” for the top of the mech and “Bottom” for the mech below it.

**Technique** - controls the massage technique of the selected back mechanism.

**Focus Zone** - controls the range of motion of the selected mechanism, **Whole** travels the entire range of the mechanism, **Partial** travels a short distance and reverses direction for focused relief, **Point** stops on the track for targeted relief.

**Adjust** - Partial and Point location can be fine tuned using the arrow up or arrow down buttons.

**Width** - increase or decrease width of selected mechanism. (Width can't be adjusted when in Kneading, or Sync modes).

**Maximum 4D level** - increase or decrease the depth intensity of the 4D level.

**Speed** - increase or decrease speed of the selected mechanism. (massage speed can't be adjusted when in Shiatsu Manual mode).

**Air Settings** - select your desired airbag region and it's maximum airbag intensity.

**Back Heat** - turn on back heat and control intensity.

**Arm Rollers** - turn on and control the speed of the arm rollers.

**Foot Rollers** - turn on total sole foot reflexology rollers and control the speed of the rollers.

**Calf Rollers & Oscillation** - turn on and control the speed of calf rollers & calf oscillation.