



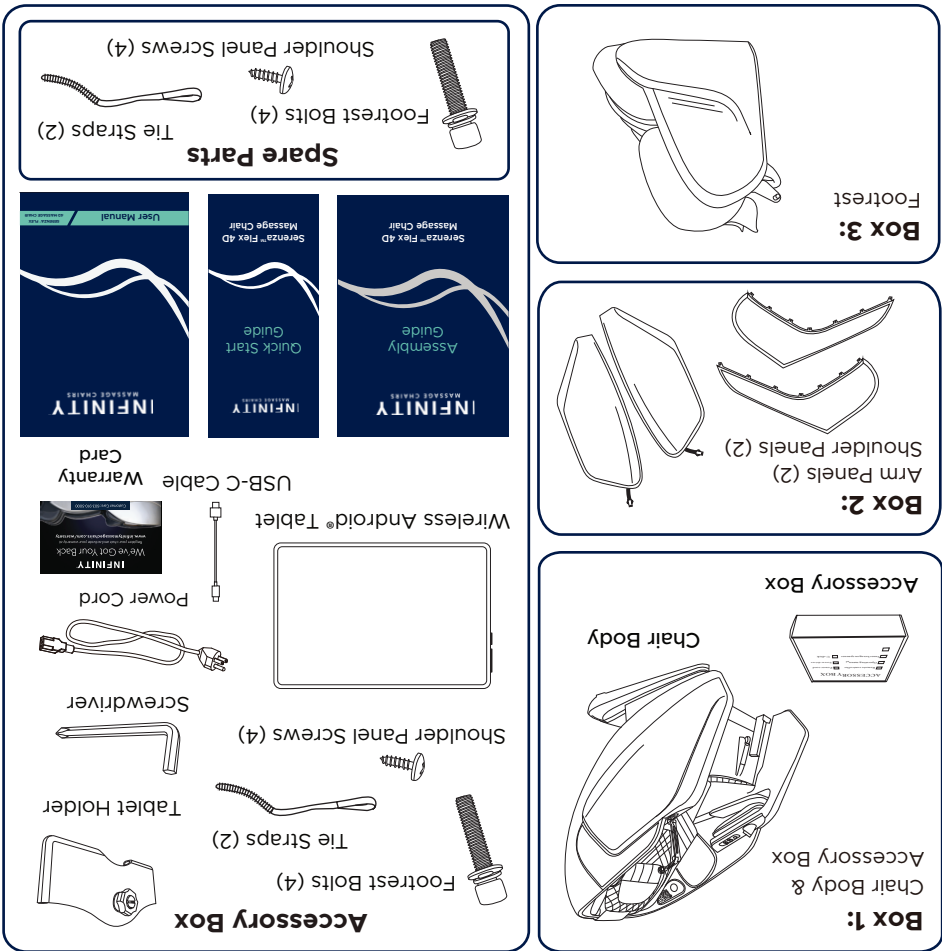

If anything is missing, please contact INFINITY at 603-910-5000. Do not return to the place of purchase.

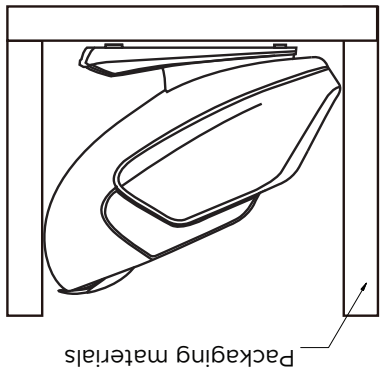


Step 2: Remove all packaging materials from the chair. Inspect the chair and accessories to ensure there is no visible damage and all components are present. Before assembly, carefully unpack all contents from the box. Use the list below to confirm each component is present and accounted for.

Step 12: Before using the massage chair's tablet functionality, please review the **Initial Tablet Set-Up** guide included in your accessory box. This guide provides instructions for connecting your chair to the tablet, Wi-Fi network, and Bluetooth® devices.

Once the setup process is complete, proceed to the **Quick Start Guide** to learn how to select an Auto Program, complete a TrueFit® Body Scan, and begin enjoying your massage experience.

If you wish to use an App to control your chair, download the **"Serenza Flex 4D"** App from the Apple or Google App store and follow pairing instructions found within the App.

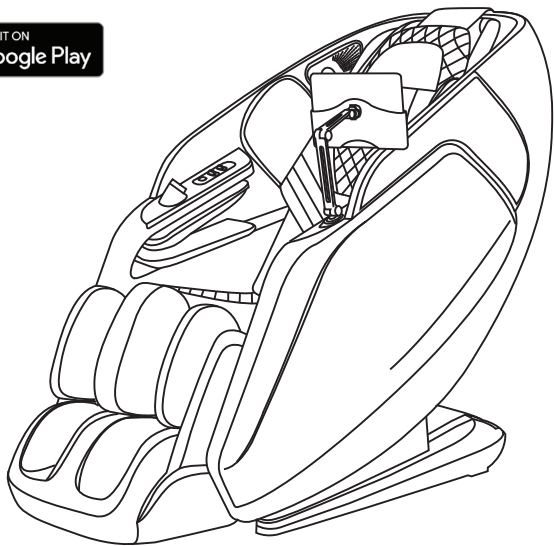

SCAN CODE

Register your product at www.infinitymassagechairs.com/warranty to ensure it is in our system. This will simplify the warranty process should you ever need it.

Alternatively, scan the QR code to go directly to the URL above.


INFINITY

72 Stard Road, Seabrook, NH 03874

(603) 910-5000

www.infinitymassagechairs.com

Version 1.1

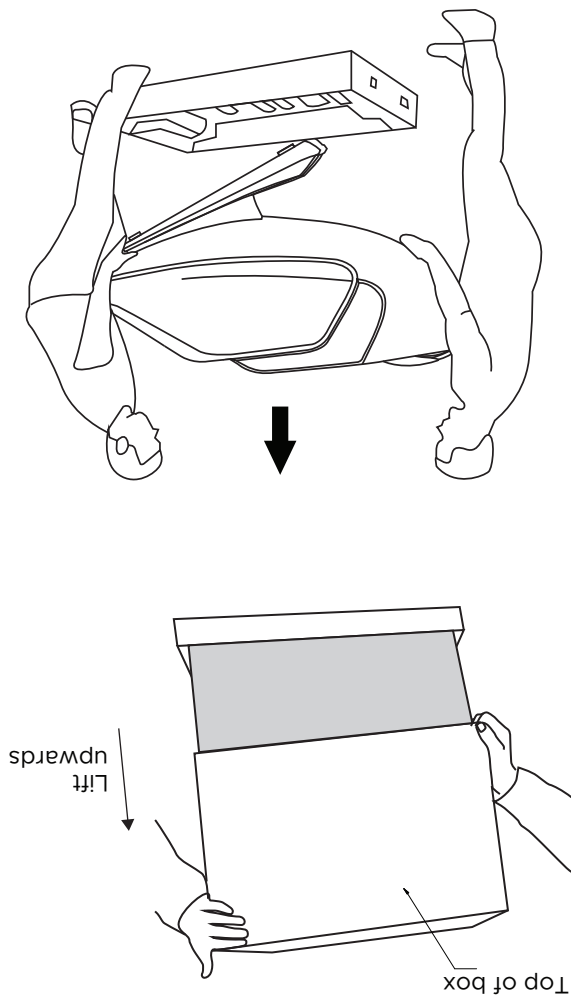

Step 1: Cut the tie straps and lift the box straight upward to remove it from the box base.

SCAN CODE



Before assembling your chair, watch an assembly video at: www.infinitymassagechairs.com/assembly-tutorials
Alternatively, scan the QR code to go directly to the URL above.

INFINITY
MASSAGE CHAIRS


Assembly
Guide

**Serenza™ Flex 4D
Massage Chair**


INFINITY

MASSAGE CHAIRS


- Step 4:** Unbox the shoulder panels and place them beside the chair. Position the correct shoulder panel above each armrest and press in firmly until it clicks into place. Secure each shoulder panel using two screws per side. Repeat for the opposite side.

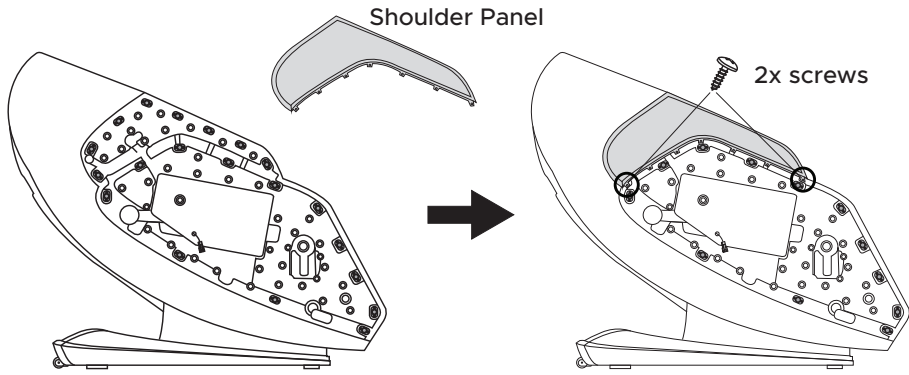


- Step 6:** Locate the air hose and electrical plug on the back of the footrest. Position the footrest near the chair base, connect the electrical plug to the matching port, then attach the air hose to the air nozzle and push firmly until fully secured.

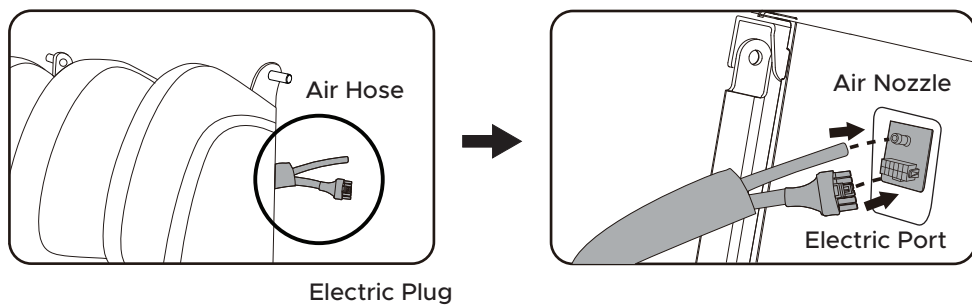


- Step 5:** Locate the electric plug on the arm panel and the matching electric port on the chair body. Connect the electric plug and port, pushing until it snaps into place. Align the compression fasteners on the panel with the receiver sockets all around the panel. Push in firmly until snapped into place. Continue all the way around the panel, until connected.. Repeat on the opposite side.

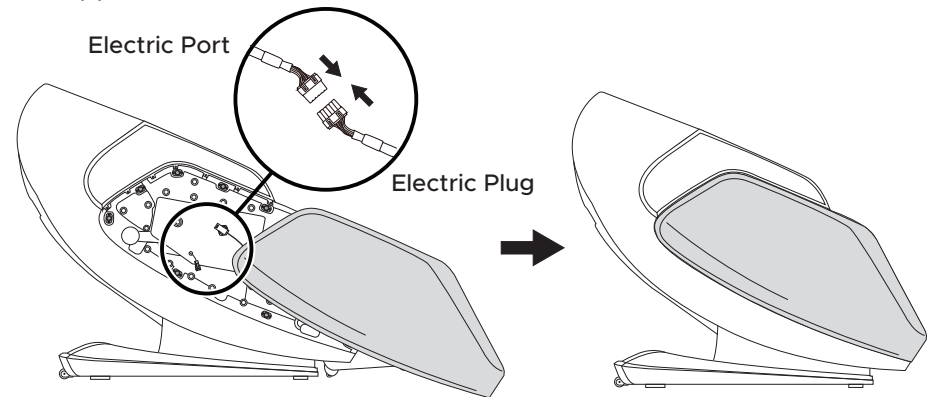


- Step 7:** Unscrew the bolts and lift off the Mounting Brackets prior to placing the footrest side axles in place. Position the footrest so the side axles align with the mounting base on both sides, ensuring they are fully seated. Place the mounting bracket back over the side axles, then reinstall and tighten the bolts until secure.

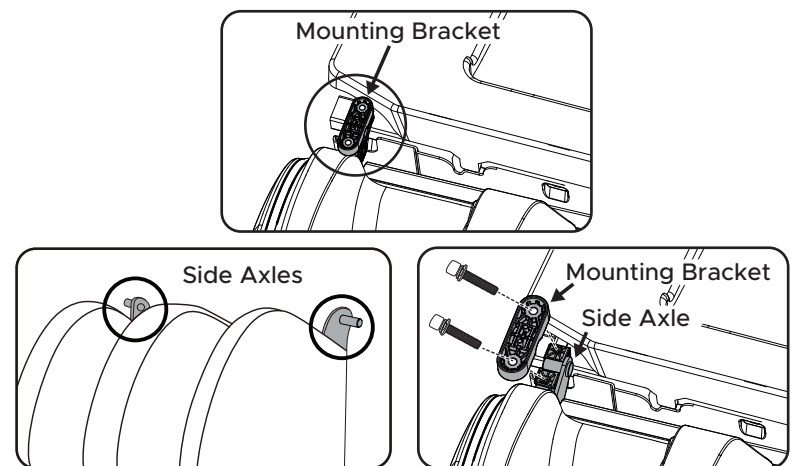


- Step 8:** Locate the zipper between the footrest and seat pad. Align both sides of the zipper and pull the zipper tab across until fully closed and secured.

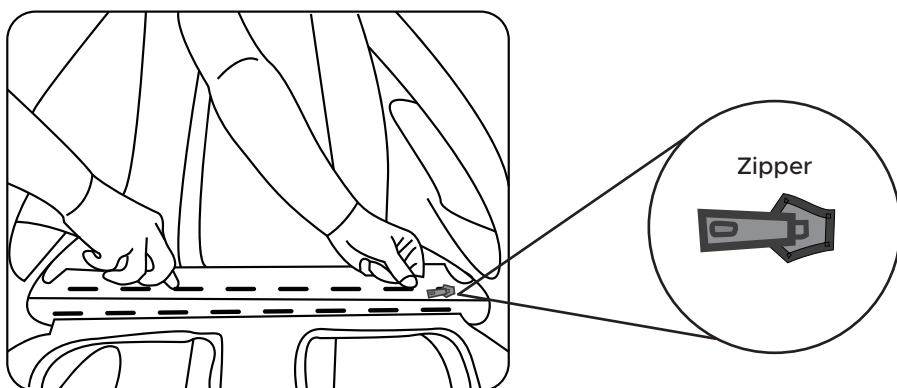

- Step 9:** Remove the nut from the tablet holder (1). Slide the nut onto the ball joint (2), press the tablet holder onto the ball joint (3), then tighten the nut until the tablet holder is securely fastened (4).

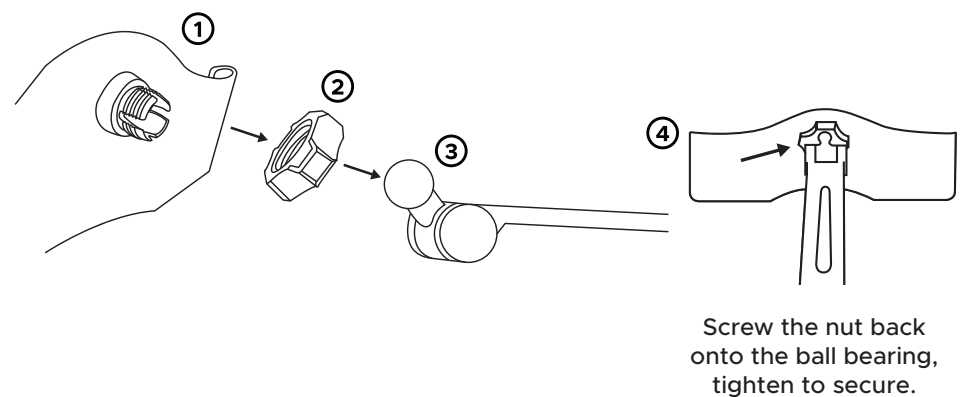

- Step 10:** Connect the provided USB-C cable to the wireless tablet. Place the tablet into the tablet holder, then route the USB-C cable down the holder's support arm. Secure the cable to the support arm using the provided tie strips. Finally, connect the USB-C cable to the female pigtail connector located near the front left arm airbag assembly. Ensure there is enough cable slack to allow the tablet holder to move freely without placing tension on the cable.

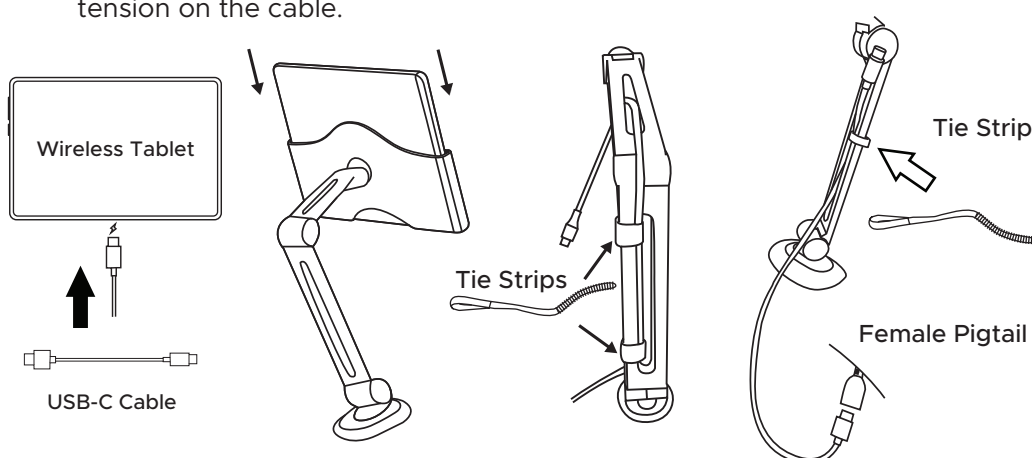

- Step 11:** Plug the power cord into a 120V grounded outlet, then connect the other end to the chair's power inlet located at the lower rear of the chair. Turn the power switch on the base of the chair to the (I) position to power on the chair.

