


Switching Temperature Units

For the 3801-50 and 3802-50 DIGITAL HiTESTERS, the temperature unit is set to Celsius (°C) at the time of purchase. To switch to units of Fahrenheit (°F), change the settings with the following procedure.


1. In order to display the Power On Option setting screen, hold down the **SHIFT** key while turning the function switch.
2. Hold down the **○** key.
3. Press the **RANGE** key or the **DUAL** key to select the temperature unit.
4. Press the **Hz** key to reset.
5. Hold down the **SHIFT** key to enter the measurement screen. Otherwise, turn the function switch to OFF to finish setup.

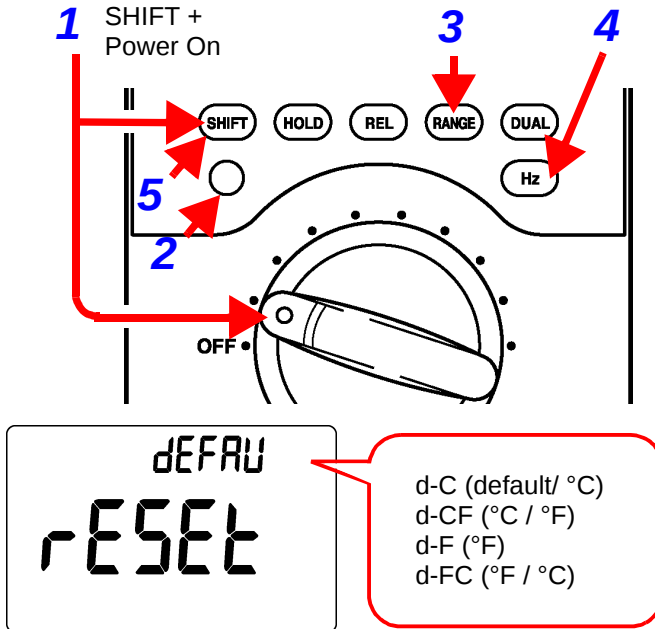


Temperature Display

Set the function switch to TEMP, and the temperature display is displayed.


°F is selected

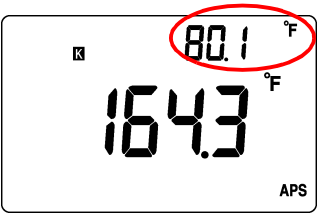


°C is selected

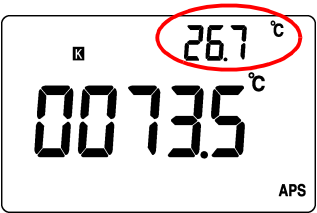

°C/°F is selected

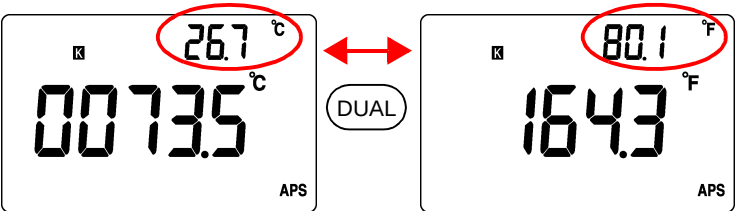

°F/°C is selected

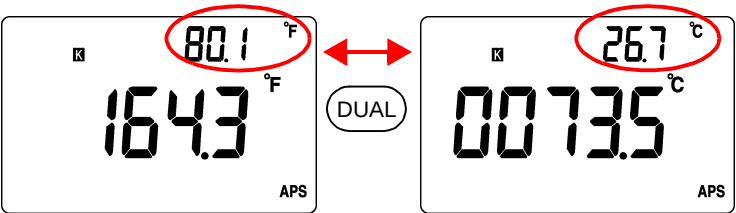

Thermocouple Type	Range	Accuracy
K	-200.0 to 1372.0°C (-328.0 to 2502.0°F)	± 0.3%rdg. ± 3°C (± 0.3%rdg. ± 6°F)
J (Model 3801-50 only)	-210.0 to 1200.0°C (-346.0 to 2192.0°F)	