





# RESISTANCE METER RM3544/RM3544-01/RM3548

Component measuring instruments







# Easy to use with high precision Resistance Meters for Production Lines and MRO

The Resistance Meters RM3544/RM3544-01/RM3548 can measure the winding resistance of devices such as motors and transformers, the contact resistance of power contacts (relays and switches), and the DC resistance of fuses, resistors, and substrates such as conductive rubber and sheets. It does so quickly and at a high level of precision using four-terminal measurement.

The RM3544/RM3544-01 is well suited to use for adjustment and testing on production lines as well as acceptance inspections, while the RM3548 comprises a portable solution for measuring resistance values ranging in magnitude from microohms to megohms, making it ideal for use in production, maintenance, repair and operation of large equipment.











# Perform resistance measurement with an ideal combination of equipment depending on your component or equipment and test conditions.

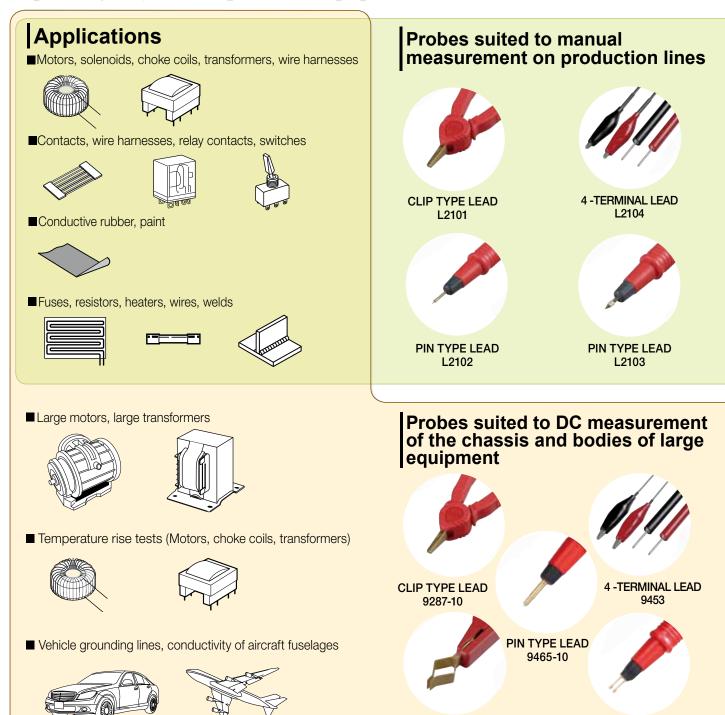

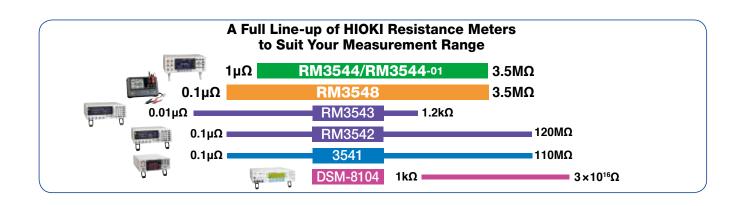

LARGE CLIP TYPE LEAD 9467 PIN TYPE LEAD

# Robust specifications in a compact package

# **High-precision bench-top** resistance meter

for both manual operation and integration with automatic lines



# RESISTANCE METER RM3544/RM3544-01

Basic accuracy: 0.02%

Max.resolution :  $\mathbf{1}\mu\Omega$ 

Max.measurable current: 300mA

- Measure from 0.000 m $\Omega$  (@ 300 mA) to 3.5 M $\Omega$
- Probe for guard jack use and increased measurement current yield an instrument that's more resistant to noise.
- Optional LED COMPARATOR ATTACHMENT and high-volume judgment tones combine to ensure PASS/FAIL judgments are communicated reliably in the noisy environment of the production floor.
- EXT I/O interface with NPN/PNP support can accommodate a variety of automated production lines (-01 model).

# High-precision portable resistance meter

measures from  $\mu\Omega$  to  $M\Omega$ 



# RESISTANCE METER RM3548

Basic accuracy: 0.02%

Max.resolution :  $\mathbf{0.1}\mu\Omega$ 

Max.measurable current : 1A


- Measure from 0.0  $\mu\Omega$  (@ 1 A) to 3.5  $M\Omega$
- Easily record up to 1,000 data points in memory simply by applying the instrument's probes.
- Smoothly capture temperature-rise test data using interval measurement.
- Portable design is ideal for maintenance and testing of large equipment.

# Temperature correction

Generally, the resistance of cooper wiring changes with temperature by 0.4% per degree Celsius. The RM3544/RM3544-01/RM3548 provides a temperature correction function to convert the observed resistance value Rt at the current temperature t to the resistance value Rto at the reference temperature t0.

\*Requires temperature sensor (Z2001 or Z2002).

Reference temperature setting range:-10 °C to 99.9 °C Temperature coefficient setting range:-9,999 ppm to +9,999 ppm

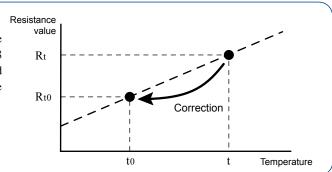

# **Easy-to-use RESISTANCE METER**

suits both manual operation and integration with automatic lines



# Features

- ■Simple, intuitive functions, screens, and operation for applications, including on production lines and in acceptance inspections
- High-durability probes with guard jack and increased measurement current for noise-resistant\*1 measurement
- Quickly identifiable PASS/FAIL judgments with sound and light

\*1 Compared to previous model (3540).

# High-precision specs in a compact package

# Convenient range options

Measure from 0.000 m $\Omega$  to 3.5000 M $\Omega$  1µ $\Omega$  max. resolution, 0.02% basic accuracy Max.measurable current of 300mA

As inverter-equipped power supply equipment uses increasingly high currents and frequencies, increasingly low-resistance and low-loss inductors are being used in their circuitry, prompting a need for the ability to measure lower resistance levels with a high level of stability. With a resolution of 1  $\mu\Omega$ , the RM3544/RM3544-01 satisfies these needs.

Electronic components make extensive use of high-resistance substrates such as conductive sheets and rubber, and the RM3544/RM3544-01 delivers the ability to measure up to  $3.5 \, \mathrm{M}\Omega$ .

Moreover, the instrument's maximum resolution of 0.02% allows it to be used in testing current detectors with a precision of 0.1%.

# No warmup period or zero adjustment

The RM3544/RM3544-01 has no warmup time, meaning it's ready to use for measurement as soon as you turn it on. Accuracy is guaranteed immediately after the instrument is powered up (assuming temperature and humidity conditions that satisfy the accuracy guarantee conditions).

#### ● Footprint of just 215 × 166 mm

Compared to previous the previous model (HIOKI 3540), the RM3544/RM3544-01 takes up approximately 25% less installation space. The smaller footprint creates work space in front of the instrument, and its compact size allows it to be easily and unobtrusively embedded in other equipment.



# High-durability probes

HIOKI offers a line of probes designed to accommodate the full range of measurement targets. Flex resistance has been dramatically improved (based on HIOKI comparisons).

# Advanced functionality that's as easy to use as it is easy to understand

## Measurement jacks with guard jack

By connecting a probe to the guard jack, you can minimize the effects of external noise on measurements.



## Simple control over basic settings

Range and measurement speed can be controlled directly.

## Loud, user-selectable judgment tones

High-volume judgment tones of at least 85 dB inform the operator of test results, ensuring that they remain audible even in the vicinity of noisy machinery. The ability to choose from various tones ensures operators won't confuse judgment results on lines where multiple RM3544 units are in use.

#### **LED COMPARATOR ATTACHMENT (Option)**

The LED Comparator Attachment indicates judgment results with green and red LEDs, eliminating the need to look at the instrument's screen and increasing work efficiency. Since the lamps do not light up when the measurement leads are open, the attachment can also be used to verify the connection status.





Green light IN state

Red light HI/LO state

# Material- and temperature-independent temperature correction function

The temperature correction function can be used to convert resistance values that vary with the ambient temperature to a reference value at a reference temperature using the Temperature Sensor Z2001 and a user-specified resistance temperature coefficient.



#### Scaling

The scaling function can be used to convert resistance values into physical properties such as length.

Conversion formula :  $Rs = A \times R + B$ A, B : Constants, R : Measurement value Rs : Resistance value

#### **Intuitive, graphical LCD**

# Panel save and load functionality for up to 10 sets of parameters


Panel save and load functionality provides the ability to save and subsequently load up to 10 sets of instrument setting conditions for range, comparator, and other parameters. Naming each set of panel data lets you make setup changes among production lots and lines smoothly and effortlessly.

#### Comparator Function

The comparator function compares measured values to a previously set reference value or range and then displays and outputs the judgment result. The RM3544-01 can also output comparator results via its EXT I/O interface.

# Acquiring measurement results (data)(RM3544-01)

## ■ RM3544-01 rear panel

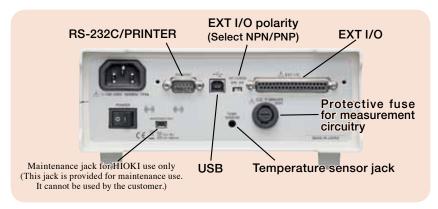

\*The RM3544 does not include EXT I/O or communications interfaces (RS-232C or USB).

### Connecting the instrument to a computer via RS-232C or USB

- The full range of RM3544-01 functionality can be controlled from a computer, which can also be used to acquire measurement results.
   (This capability does not include turning the instrument on and off or configuring certain interface settings.)
- By connecting the instrument to a commercially available RS-232C printer, it you can print measured values, including judgment results.
- The keyboard-class USB interface enables the RM3544-01 to automatically output measured values. This capability allows measured values to be input into applications such as spreadsheets and text editors without the need to install a special USB driver on the computer.
- Use HIOKI freeware to download data to a computer, perform interval measurement, conduct a communications test, load acquired data into Excel, and output acquired data as a CSV file in response to a trigger signal. Freeware can be downloaded from the HIOKI website.

# Communications monitor function for smooth system development


The communications monitor function displays communications data (received commands and sent data) on the screen, providing valuable support for programming of programmable logic controllers (PLCs).

# Universal power supply for robust accommodation of supply voltage fluctuations and automatic power supply frequency detection (RM3544/RM3544-01)

Measuring in sync with the power line frequency is important for achieving accurate measurements. To avoid measurement problems due to incorrect settings, the power line frequency is automatically sensed and selected (50 or 60 Hz).

The universal AC input (90 to 264 V) is practically unaffected by voltage fluctuations, so stable measurements are possible even in poor power environments.



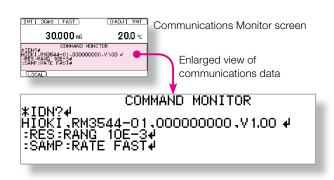



# **Easy integration into automatic testing equipment (RM3544-01)**

# High-speed, comprehensive productivity support

- The RM3544-01 delivers the speed demanded by automatic testing equipment at a sophisticated level. The entire process from the start of measurement to outputting of the judgment result takes as little as 18 ms. One cycle of operation, lasting from measurement to judgment output, completes within this time.
- The RM3544-01 supports RS-232C data communications at up to 115.2 kbps.
- The instrument's USB interface can also be used.
- The EXT I/O output mode can be switched between judgment mode and BCD mode.


# Functionality for verifying the EXT I/O connection status and testing EXT I/O

In addition to allowing you to check EXT I/O signal input on the instrument's screen, this functionality allows you to turn output signals on or off as desired. This capability simplifies verification work during PLC programming.

## ●Handler (EXT I/O) interface

The handler interface (EXT I/O) is isolated from measurement circuitry, control circuitry, and the protective ground (chassis ground), providing a high level of noise resistance.


#### ■ Example of Typical EXT I/O Timing (EOM output hold)

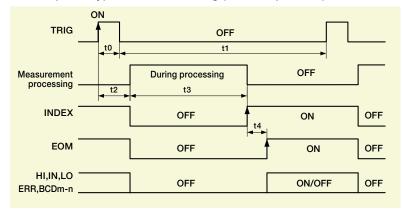


- t0: Trigger pulse ON time (0.1 ms or more)
- t1 : Trigger pulse OFF time (1 ms or more)
- t2: Measurement start time (max. 1 ms)
- t3: Capture processing time; FAST(50Hz): 20.0 ms, FAST(60Hz): 16.7 ms, MEDIUM: 100 ms, SLOW: 400 ms
- t4 : Calculation time ; 1 ms

#### ■ EXT I/O Input and Output Circuits

A switch on the rear panel is used to toggle the input signal polarity between NPN (sink output support) and PNP (source output support) settings depending on the PLC common polarity.

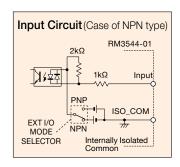

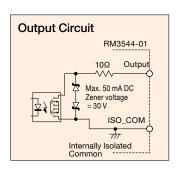


#### Measurement time\*1

	Measurement speed (ms)			
FAST		MED	SLOW	
50Hz	60Hz	IVIED	SLOW	
21	18	101	401	

Tolerance: ±10% ±2ms

\*1 With TC set to ON and the comparator set to ON



EXT I/O test function screen

When designing a control system using the EXT I/O interface, be sure to read the instruction manual and check the necessary technical information.

#### Example of Typical

#### ● Input Signals

TRIG : External trigger

0ADJ : Zero-Adjust

PRINT : Print

KEY LOCK : Key-Lock

BCD\_LOW : Lower digit specification when

set to BCD output

LOAD0 to LOAD3 : Panel number to load IN0, IN1 : General-purpose input pins

Output Signals

HI, IN, LO : Comparator Hi, IN, LO EOM : End of Measurement INDEX : End of Import

ERR : Measurement Fault Output
HILO : Outputs HI or LO when set to

BCD output.

BCDm-n : Outputs the nth bit of the mth

digit when set to BCD output.

OUT0 to OUT2 : General-purpose output pins

when set to judgment mode RNG\_OUT0 to : Outputs range information when

RNG\_OUT0 to : Outputs range information will RNG\_OUT3 set to BCD output.

ISO\_5V : Internally Isolated 5 V
ISO\_COM : Internally Isolated Common

#### ■ EXT I/O Electrical Specifications

#### Inputs:

Photocoupler isolation: Non-voltage contact inputs (support for current sink output)
Input ON: Residual voltage: Max. 1 V @4 mA
Input OFF: Open Max. 100 µA

#### Outputs

Photocoupler-isolated open drain output (no-polarity) DC30Vmax, DC50mAmax/ch Residual voltage: Max. 1 V @50 mA, or 0.5 V @10 mA

#### Internal isolated power supply:

Output voltage: Sink output support: 5.0V±10%, Source output support: -5.0V±10% Max. output current: 100mA

# **High-precision portable RESISTANCE METER** measures from $\mu\Omega$ to $M\Omega$



# **Features**

- High-precision specs in a portable package (high accuracy of 0.02% rdg.)
- Design is ideal for maintenance and testing/measurement of large equipment.
- No warmup period or zero adjustment required.
- Dramatically improved overvoltage resistance (protection up to 70 V DC)

# High-precision specs in a portable package

Expansive range options


Measure from 0.0  $\mu\Omega$  to 3.5000  $M\Omega$  $0.1\mu\Omega$  max. resolution, 0.02% basic accuracy Max.measurable current of 1A


Continuity and resistance measurement in large transformers, motors, and power supply equipment


The RM3548 uses a high current of 1 A to measure lower resistance values more reliably at a resolution of 0.1  $\mu\Omega$  in applications including measuring resistance in large transformers and motors as well as wiring, busbars and connections in power supply equipment.

# Verification of continuity of ground lines in automobiles and fuselage welds and caulking in aircraft

The RM3548 can be used to check ground connections\* in automobiles and fuselage welds and caulking in aircraft using a measurement current of 300 mA (300 m $\Omega$ range).

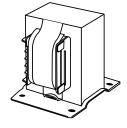

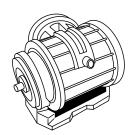



# Portable, easy to use, and easy to understand

# Design is ideal for maintenance and testing/measurement of large products

The included strap can be looped around the neck to support the instrument, leaving the operator's hands free to hold probes for measurement. The meter uses eight AA alkaline batteries, which provide enough power for approximately 10 hours of testing under normal operating conditions. (Operating times vary with measurement conditions.)

## Auto-hold and auto-memory functionality

The RM3548 features auto-hold and auto-memory functionality to automatically hold and record data simply by placing the probes in contact with the desired measurement location. This functionality allows measured values to be recorded automatically as soon as they stabilize without the need for the user to operate any switches.

#### LED COMPARATOR ATTACHMENT

By installing the LED COMPAR-ATOR ATTACHMENT close to a probe, you can capture judgment results without moving your eyes away from the measurement location and probe.







Red light HI/LO state

# Offset Voltage Compensation(OVC)

Thermal EMF occurs at the contact point of different metals. This voltage affects measurements, and if large enough, can cause measurement errors. The offset voltage compensation function minimizes the effect of thermal EMF to maintain measurement accuracy. Particularly when measuring low resistances where the detection voltage is small, and during low-power resistance measurements, OVC is essential to maintain accuracy.

# Length conversion function

By setting a resistance value per meter, it is possible to convert resistance values into lengths. This capability is useful when managing cable inventory or estimating PCB pattern lengths.



## No zero adjustment

Accuracy is defined without any need to perform zero-adjustment. Measurement can be performed as soon as the instrument is turned on.

## Dramatically improved overvoltage resistance

Protection is provided against overvoltage input of up to 70 V, preventing damage caused by connecting the instrument to an electrical charge or by the effects of the counter-EMF from inductance.



Circuit protection detection state (Alerts the operator to overvoltage input with a screen display and an audible warning.)

# Acquire measured values recorded in the instrument's memory over a USB connection


By connecting the RM3548 to a computer with a USB cable\*, you can download measured values stored in the instrument's memory. \*Since the RM3548 provides a mass storage class (read-only) USB interface, there is no need to install special driver software on the computer

# ■ Temperature conversion function and interval measurement: Useful in temperature-rise testing

Temperature increase ( $\Delta t$ ) is obtained and displayed by converting resistance measurements and ambient temperature. The maximum temperature increase needs to be determined when current is applied especially for verifying motor windings or transformers. The interval measurement function can be used to take measurements at a user-specified interval from the start of measurement. Since measured values can be recorded in the instrument's memory, the maximum temperature can be easily estimated.

\*The temperature conversion function cannot be used simultaneously with the temperature correction function and length conversion function.

- When a motor or coil has thermally stabilized at room temperature, measure the resistance (r<sub>0</sub>) and ambient temperature (t<sub>0</sub>) before applying current
- ② Excite the coil, and when the temperature increase appears to saturate, remove the excitation.
- 3 After removing excitation, determine the temperature (Δt₁ to Δt₁) from the resistance (rt) measured at each specific time (t), and the ambient temperature.
- **4** Project the curve through the collected temperature data ( $\Delta t_1$  to  $\Delta t_n$ ) to estimate the maximum temperature increase ( $\Delta t_1$ ).

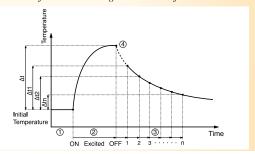

# Measurement accuracy

- Resistance measurement accuracy
- Conditions of guaranteed accuracy
- Temperature & humidity: 23 °C ±5 °C, 80% rh or less (non-condensating)
- Guaranteed Accuracy Period: 1 year
- From 0°C to 18°C and from 28°C to 40°C, add (temperature coefficient ±[1/10 measurement accuracy] / °C).

### RM3544/RM3544-01

Accuracy =  $\pm$ (% rdg. + % f.s.)

(f.s. = calculated 30,000 dgt., where 0.010% f.s. = 3 dgt.)

(Example) 0.020 + 0.007 ...... 0.020% rdg. + 0.007% f.s.

Range	Max. measurement display*1,*2	FAST	MED/SLOW	Measurement Current*3	Open-Circuit Voltage
$30 \mathrm{m}\Omega$	35.000 mΩ	0.030+0.080	0.030+0.070	300mA	
$300 \mathrm{m}\Omega$	350.00 mΩ	0.025+0.017	0.025+0.014	300mA	
3Ω	3.500 0 Ω	0.025+0.017	0.025+0.014	30mA	
30Ω	35.000 Ω	0.020+0.010	0.020+0.007	10mA	
300Ω	350.00 Ω	0.020+0.010	0.020+0.007	1mA	5.5Vmax.
3kΩ	3.500 0 kΩ	0.020+0.010	0.020+0.007	1mA	
30kΩ	35.000 kΩ	0.020+0.010	0.020+0.007	100μΑ	
300kΩ	350.00 kΩ	0.040+0.010	0.040+0.007	5μΑ	
3ΜΩ	3.500 0 MΩ	0.200+0.010	0.200+0.007	500nA	

<sup>\*1</sup> For negative values, to -10% f.s.

## ●RM3548

Accuracy =  $\pm$ (% rdg. + % f.s.)

(f.s. = calculated 30,000 dgt., where 0.010% f.s. = 3 dgt.)

(Example) 0.020 + 0.007 ...... 0.020% rdg. + 0.007% f.s.

Range	Max. measurement display*4,*5	Accuracy*6	Measurement Current*7	Open-Circuit Voltage
$3m\Omega$	3.500 0 mΩ	$0.100 + 0.200 \ (0.100 + 0.020)$	1A	
$30 \mathrm{m}\Omega$	35.000 mΩ	$0.100 + 0.020 \ (0.100 + 0.010)$	IA.	
300mΩ	350.00 mΩ	$0.100 + 0.010 \ (0.100 + 0.010)$	300mA	
300m22	350.00 m22	$0.020 + 0.020 \ (0.020 + 0.010)$	100mA	
3Ω	3.500 0 Ω	$0.020 + 0.007 \ (0.020 + 0.007)$	100mA	
30Ω	35.000 Ω	$0.020 + 0.007 \ (0.020 + 0.007)$	10mA	5.5Vmax.
300Ω	350.00 Ω	$0.020 + 0.007 \ (0.020 + 0.007)$	1mA	
3kΩ	3.500 0 kΩ	0.020 + 0.007	IIIIA	
30kΩ	35.000 kΩ	0.020 + 0.007	100μΑ	
300kΩ	350.00 kΩ	0.040 + 0.007	5μΑ	
3ΜΩ	3.500 0 MΩ	0.200 + 0.007	500nA	

<sup>\*4</sup> For negative values, to -10% f.s.

$$\frac{-\alpha_{to}\Delta t}{1+\alpha_{to}\times(t+\Delta t-t_0)} \times 100 \quad [\%]$$

to : Reference temperature. [ ${}^{\circ}C$ ]

 $t: Ambient \ temperature. \ [^{o}C]$ 

 $\Delta t$  : Temperature. measurement accuracy

αto: Temperature. coefficient at to is [1/°C]

# **●**Temperature measurement accuracy

- Temperature Sensor Z2001 (for RM3544/RM3544-01)
- Temperature Sensor Z2002 (for RM3548)

Range of guaranteed accuracy	-10.0 to 99.9 °C
Display refresh rate	Approx. 2 s
Guaranteed accuracy period	1 year

- Temperature Sensor Z2001 and RM3544/RM3544-01 combined accuracy
- Temperature Sensor Z2002 and RM3548 combined accuracy

t: Temperature measurement values [°C]

Temperature	Accuracy
-10.0 °C to 9.9 °C	$\pm (0.55 + 0.009 \times  \text{t-}10 ) ^{\circ}\text{C}$
10.0 °C to 30.0 °C	± 0.50 °C
30.1 °C to 59.9 °C	$\pm (0.55 + 0.012 \times  \text{t-30} ) ^{\circ}\text{C}$
60.0 °C to 99.9 °C	$\pm (0.92 + 0.021 \times  t-60 )$ °C

Standalone instrument accuracy: ± 0.2 °C

<sup>\*2</sup> The maximum display range is 99,999dgt.

<sup>\*3</sup> Measurement current accuracy is ±5%.

<sup>\*5</sup> The maximum display range is the same as the maximum measurement range.

<sup>\*6</sup> Measurement accuracy values assume offset voltage correction (OVC) is ON.

<sup>\*7</sup> Measurement current accuracy is ±5%.

<sup>\*</sup> During temperature correction, the value calculated below is added to the rdg. error for resistance measurement accuracy:

Product warranty: 1 year

# RM3544/RM3544-01/RM3548 Specifications

		RM3544/RM3544-01	RM3548		
Measurement typesResistance measurement: $0.000m\Omega$ ( $30m\Omega$ range) to 3.500 $0M\Omega$ ( $3M\Omega$ range), 9 range Temperature measurement (thermistor): -10.0 to 99.9°C		$3.500  0 \text{M}\Omega  (3 \text{M}\Omega  \text{range}), 9  \text{ranges}$	Resistance measurement: $0.0000 m\Omega$ ( $3m\Omega$ range) to $3.500 0 M\Omega$ ( $3M\Omega$ range), $10$ range Temperature measurement (thermistor): $-10.0$ to $99.9$ °C		
Measurement method		4-terminal direct current (constant current), banana plug,with guard terminal	4-terminal direct current (constant current), banana plug		
Rai	nge switching	Auto or Manual			
Ten	perature correction	Reference temperature setting range: -10°C to 99.9°C, Temperature	ture coefficient setting range: -9,999 ppm/°C to +9,999 ppm/°C		
Zer	ro-adjustment	Within -3% to 50% f.s. of each range. (f.s.= 30,000 dgt.)	Within ±3% f.s. of each range (f.s.= 30,000 dgt.)		
Triç	gger	RM3544: Internal trigger, RM3544-01: Internal or external	Internal trigger		
Mea	asurement speed	FAST (50Hz:21 ms, 60Hz:18 ms) / MED (101 ms) / SLOW (401 ms)	Fixed		
Dis	play refresh rate	N/A	Without OVC: approx. 100ms, With OVC: approx. 230ms		
Del	lay	N/A	Internal fixed value: / 10 to 1000ms (7 settings)		
Functions		Temperature correction, comparator (ABS/REF%), key-lock (OFF, menu lock, all lock), display digit count selection function (5 digits/4 digits), automatic power supply frequency settings (AUTO/50Hz/60Hz), scaling, judgment sound setting, auto hold	Temperature correction, temperature conversion, offset voltage compensation (OVC), comparator (ABS/REF%), length conversion, judgment sound setting, auto hold, auto power save (APS)		
Measurement fault detection functions		Over-range detection, current fault detection, fuse trip detection	Over-range detection, current fault detection, circuit protection detection function, fuse trip detection		
Ave	eraging	OFF, 2 to 100 averaging iterations (variable in 1-iteration steps)	OFF, 2/5/10/20 averaging iterations		
Dai	nel store,	10	9		
	nel load	Panel save parameters: resistance measurement ranges, measurement speed, average, comparator, judgment sound, scaling, temperature correction(TC), auto hold, zero-adjust			
Memory storage		N/A	Manual, Auto memory, interval memory Number of blocks: 10 Number of recordable data points: (manual/auto) Up to 1,000,		
Inte	erfaces	RM3544-01: EXT I/O, Communication interface	Communication interface		
	mmunication erfaces	RM3544-01: Select from RS-232C, PRINTER(RS-232C), or USB	USB		
	Communication function	Remote function, communications monitor function, data output function	N/A		
	RS-232C	Bit rates: 115,200 / 38,400 / 19,200 / 9,600 bps	N/A		
	USB	Class: CDC (COM mode), HID (USB keyboard mode)	Class: USB mass storage class (read-only)		
	Printer	Operation: Prints at PRINT signal or PRINT key input. Printed data: Resistance measurement values, temperature measurement values, judgment results, measurement conditions Interval: ON/OFF Interval times: 1 to 3,600 s (variable in 1 s steps) Number of print columns per row: 1 or 3	N/A		

# **■**General specifications

	RM3544/RM3544-01	RM3548	
Operating temperature and humidity	0 to 40°C, 80% rh or less (non-condensating)		
Storage temperature and humidity	-10 to 40°C, 80% rh or less (non-condensating)		
Operating environment	Indoors, Pollution Degree 2, up to 2,000 m ASL		
Power supply	Rated supply voltage: 100 to 240 VAC ±10% Rated supply frequency: 50/60 Hz	DC1.5V × 8 (LR6 alkaline battery × 8)	
Continuous operating time	N/A	1 s measurements over 10 s in 3 m $\Omega$ range: Approx. 10 hours (when using new alkaline batteries)	
Rated power consumption	15 VA	5 VA	
Insulation withstand potential	1.62 kV AC for 1 min. (with 10 mA cutoff current) between all mains supply terminals and protective ground, interfaces, and measurement jacks	N/A	
Dimensions	Approx. $215W \times 80H \times 166D \text{ mm} (8.46\text{"W} \times 3.15\text{"H} \times 6.54\text{"D})$ (without projections)	Approx. $192W \times 121H \times 55D \text{ mm}$ (7.56"W × 4.76"H × 2.17"D) (without projections)	
Mass	RM3544: Approx. 0.9 kg (31.7 oz) RM3544-01:Approx. 1.0 kg (35.3 oz)	Approx. 0.77 kg (27.2 oz.)	
Accessories	RM3544: Power cord ×1, CLIP TYPE LEAD L2101 ×1, instruction manual ×1, extra fuse ×1 RM3544-01: Power cord ×1, CLIP TYPE LEAD L2101 ×1, male EXT I/O connector ×1, instruction manual ×1, application disc ×1, USB cable (A-to-B type) ×1, extra fuse ×1	CLIP TYPE LEAD 9287-10 ×1, TEMPERATURE SENSOR Z2002 ×1, LR6 alkaline battery ×8, instruction manual ×1, USB cable(A-to-mini B type) ×1, strap ×1, extra fuse ×1	
Applicable standards	Safety: EN61010 EMC: EN61326, EN61000-3-2, EN61000-3-3	Safety: EN61010 EMC: EN61326	

#### Model Configurations and Options




#### **RESISTANCE METER RM3544**


(Accessories: Power cord x1, CLIP TYPE LEAD L2101 x1, instruction manual x1, extra fuse ×1)

#### **RESISTANCE METER RM3544-01**

(EXT I/O. with communication interface)

(Accessories: Power Cord x1, CLIP TYPE LEAD L2101 x1, male EXT I/O connector x1, instruction manual ×1, applications disc ×1, USB cable (A-to-B type) ×1, extra fuse ×1)

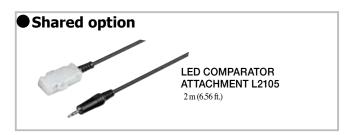


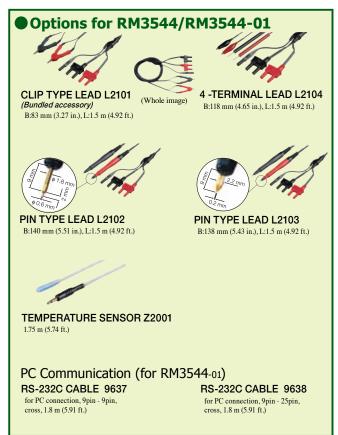



#### **RESISTANCE METER RM3548**

(Accessories: CLIP TYPE LEAD 9287-10 ×1, TEMPERATURE SENSOR Z2002 ×1, LR6 alkaline battery ×8, instruction manual ×1, USB cable (A-to-mini B type) ×1, strap ×1, extra fuse ×1)



\*Since the L2101 to L2104 leads can be separated into two units, length A is not noted





**HEADQUARTERS:** 

81 Koizumi, Ueda, Nagano, 386-1192, Japan TEL +81-268-28-0562 FAX +81-268-28-0568 HIOKI SINGAPORE PTE. LTD.: http://www.hioki.com/E-mail: os-com@hioki.co.jp

 HIOKI USA CORPORATION:
 HIOKI KOREA CO., LTD.

 TEL +1-609-409-9109
 FAX +1-609-409-9108
 TEL +82-42-936-1281
 FA

 http://www.hiokiusa.com / E-mail: hioki@hiokiusa.com
 E-mail: info-kr@hioki.co.jp
 E-mail: info-kr@hioki.co.jp

# HIOKI (Shanghai) SALES & TRADING CO., LTD.: TEL +86-21-63910090 FAX +86-21-63910360

http://www.hioki.cn / E-mail: info@hioki.com.cn

#### HIOKI INDIA PRIVATE LIMITED:

TEL +91-731-6548081 FAX +91-731-4020083 E-mail: info@hioki.in

TEL +65-6634-7677 FAX +65-6634-7477 E-mail: info@hioki.com.sg

HIOKI KOREA CO., LTD.: TEL +82-42-936-1281 FAX +82-42-936-1284

DISTRIBUTED BY

Note: Company names and Product names appearing in this catalog are trademarks or registered trademarks of various companies.

