


To Protect Your Warranty, Use Only ENERPAC Hydraulic Oil.

Enerpac recommends that all kit components be installed to insure optimum performance of the repaired unit.

Item 14:
 Set relief valve at 700 bar [10,000 psi] max.
 Torque to 14-16 Nm [10-12 Ft. lbs]

Item 16:
 Set by-pass valve to 14-19 bar [200-275 psi] max.
 Torque to 14-16 Nm [10-12 Ft. lbs]

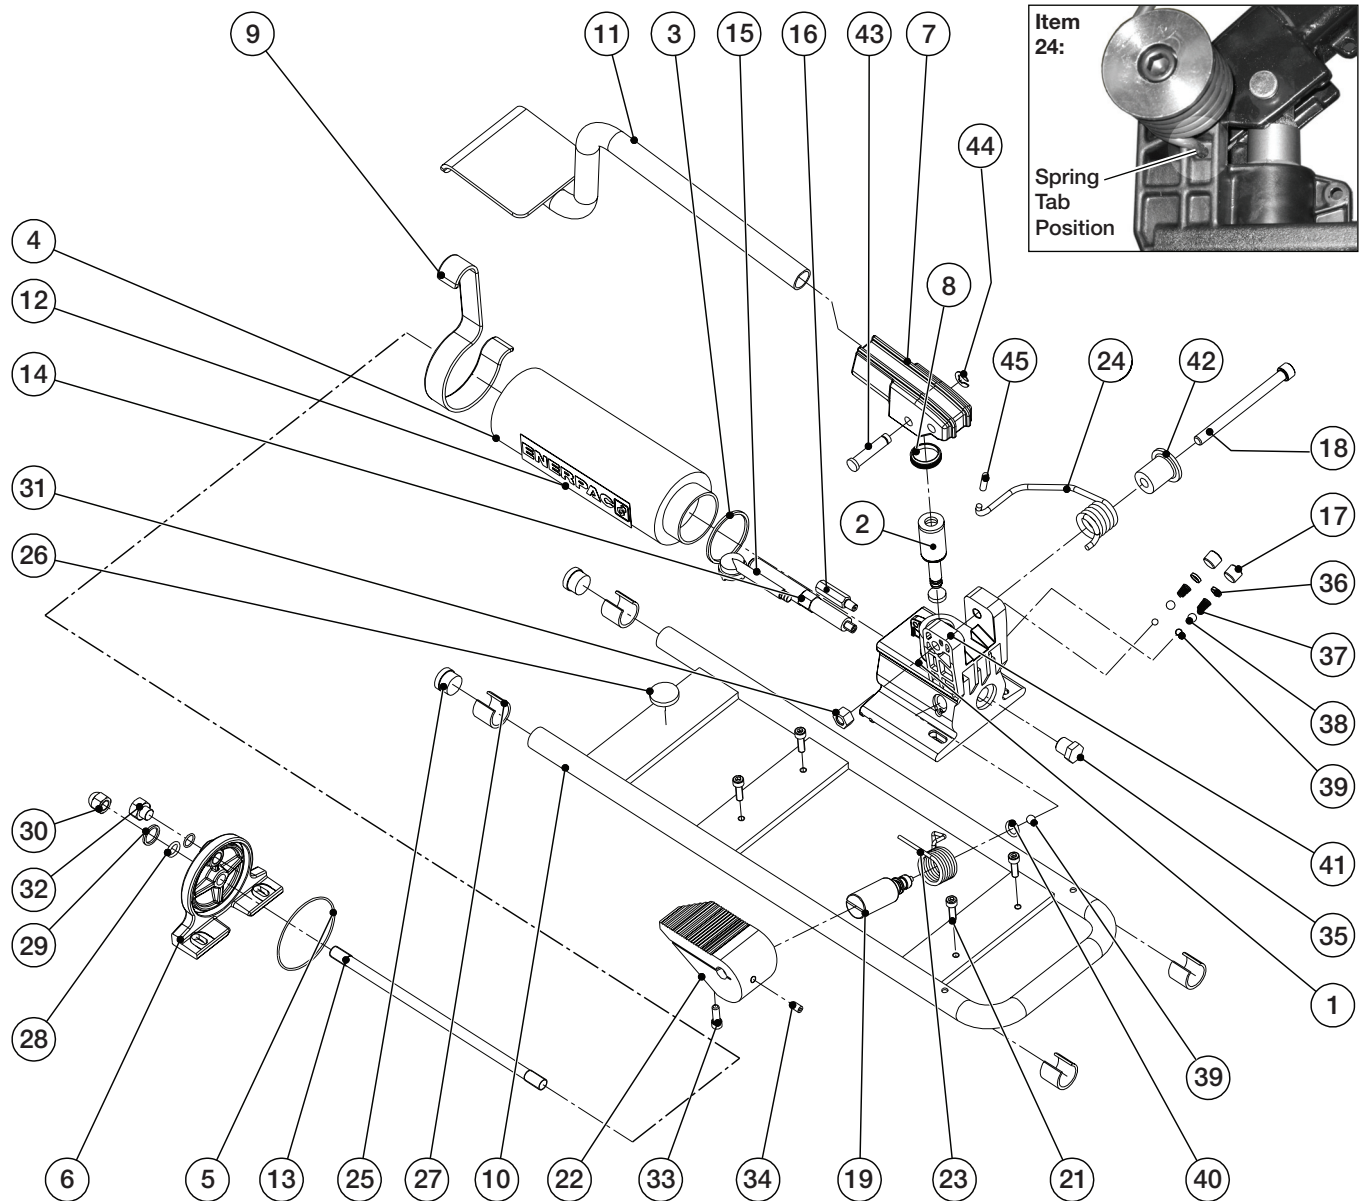

Item 30:
 Torque to 20 Nm [15 Ft. lbs]

Repair Parts List for Model P-392FP, Date Code "A" (Refer to Figure on Opposite Side)							
Item	Part Number	Qty.	Description	Item	Part Number	Qty.	Description
1	(Not Sold Separately)	1	Base	24	DC6648110 ★	1	Return Spring
2	CR333040SR	1	Plunger Assembly (includes items 43 and 44)	25	DC6645886	2	Plug, Plastic
3	B1135517 ★	1	Gasket	26	DC6649108	1	Pad, Rubber
4	DA10945025	1	Reservoir, Yellow	27	DC6644885	4	Foot, Rubber
5	B1246503 ★	1	O-Ring	28	B1009503 ★	1	O-Ring
6	DC362020	1	End Cap	29	DA10722108 ★	1	Washer
7	(see item #11) *	1	Beam	30	CL341055	1	Nut, Acorn
8	DC7364776 ★	1	Wiper	31	C428120	1	Nut
9	P392FP104	1	Handle Retainer	32	B1018006	1	Plug
10	U042192903	1	Frame	33	B1008028	1	Capscrew
11	U042192902	1	Pedal and Handle Assy.	34	BC2506027K	1	Set Screw, Knurl Grip
12	G423026 ★	2	Decal, Enerpac	35	R515245-2	1	Plug
13	DC1017149	1	Tie Rod	36	DA3702020 ★	2	Spring Cap
14	DA8802900SR	1	Relief Valve	37	DA1176210 ★	2	Spring
15	DA3729900SR	1	Oil Filter	38	B1009016 ★	2	Ball, 5/16"
16	DA5493900SR	1	Bypass Valve	39	B1006016 ★	3	Ball, 7/32"
17	CN815006	2	Pipe Plug	40	B1111203 ★	1	O-Ring
18	DC7354028 ★	1	Beam Pin	41	B1119803 ★	1	O-Ring
19	DA10946010	1	Valve Spindle	42	DC6642186	1	Spring Spacer
21	B1007028	4	Capscrew	43	DC106061SR1	1	Cross Pin
22	DA10955218	1	Foot Pedal	44	DA1177349 ★	1	Retaining Ring
23	DA10906310 ★	1	Torsion Spring	45	DA10952020 ★	1	Spring Cap

★ Items included as part of Repair Kit P392FPK1. * Beam included only with item #11 (Not sold separately).

◆ internet: www.enerpac.com

The Netherlands, Belgium, Luxembourg, Central and Eastern Europe, Baltic States, Greece, Turkey and CIS countries
ENERPAC B.V.
Galvanistraat 115
6716 AE Ede
P.O. Box 8097
6710 AB Ede
The Netherlands
T +31 318 535 911
F +31 318 535 848
sales-nl@enerpac.com

Enerpac Integrated Solutions B.V.
Opaalstraat 44
7554 TS Hengelo
P.O. Box 421
7550 AK Hengelo
The Netherlands
T +31 74 242 20 45
F +31 74 243 03 38
integratedsolutions@enerpac.com

South Africa and other English speaking African countries
Enerpac Africa Pty Ltd.
No. 5 Baurnia Avenue
Cambridge Office Park
Block E
Highveld Techno Park
Centurion 0157
South Africa
T: +27 12 940 0656

United Kingdom and Ireland
ENERPAC UK Ltd.
5 Coopies Field
Morpeth, Northumberland
NE61 6JR, England
T +44 (0)121 50 50 787
F +44 (0)121 50 50 789
sales-uk@enerpac.com

USA, Latin America and Caribbean
ENERPAC
P.O. Box 3241
Milwaukee WI 53201 USA
T +1 262 293 1800
F +1 262 293 7036
User inquiries:
T +1 800 433 2766
Distributor inquiries/orders:
T +1 800 558 0630
F +1 800 628 0490
Technical inquiries:
techservices@enerpac.com
sales-us@enerpac.com

All Enerpac products are guaranteed against defects in workmanship and materials for as long as you own them.

For the location of your nearest authorized Enerpac Service Center, visit us at www.enerpac.com

◆ e-mail: info@enerpac.com

Italy
ENERPAC S.p.A.
Via Canova 4
20094 Corsico (Milano)
T +39 02 4661 111
F +39 02 4660 1288
sales-it@enerpac.com

Japan
Applied Power Japan LTD KK
Besshocho 85-7
Kita-ku, Saitama-shi 331-0821, Japan
T +81 48 662 4911
F +81 48 662 4955
sales-jp@enerpac.com

Middle East, Egypt and Libya
ENERPAC Middle East FZE
Office 423, LOB 15
P.O. Box 18004, Jebel Ali, Dubai
United Arab Emirates
T +971 (0)4 8872686
F +971 (0)4 8872687
sales-usa@enerpac.com

Russia
Rep. office Enerpac
Russian Federation
Admiral Makarova Street 8
125212 Moscow, Russia
T +7 495 98080 91
F +7 495 98090 92
sales-ru@enerpac.com

Southeast Asia, Hong Kong and Taiwan
Actuant Asia Pte Ltd.
83 Joo Koon Circle
Singapore 629109
T +65 68 63 0611
F +65 64 84 5669
Toll Free: +1800 363 7722
sales-sg@enerpac.com

South Korea
Actuant Korea Ltd.
3Ba 717, Shihwa Industrial Complex
Jungwang-Dong, Shihung-Shi,
Kyunggi-Do
Republic of Korea 429-450
T +82 31 434 4506
F +82 31 434 4507
sales-kr@enerpac.com

Spain and Portugal
ENERPAC SPAIN, S.L.
Avda. Los Frailes, 40 - Nave C & D
Pol. Ind. Los Frailes
28814 Daguano de Arriba
(Madrid) Spain
T +34 91 884 86 06
F +34 91 884 86 11
sales-es@enerpac.com

Sweden, Denmark, Norway, Finland and Iceland
Enerpac Scandinavia AB
Fabriksgratan 7
412 50 Gothenburg
Sweden
T +46 (0) 31 799 0281
F +46 (0) 31 799 0010
scandinavianinquiries@enerpac.com

Australia and New Zealand
Actuant Australia Ltd.
Block V Unit 3
Regents Park Estate
391 Park Road
Regents Park NSW 2143
(P.O. Box 261) Australia
T +61 (0)2 9743 8988
F +61 (0)2 9743 8648
sales-au@enerpac.com

Brazil
Power Packer do Brasil Ltda.
Rua Luiz Lawrie Reid, 548
09930-760 - Diadema (SP) - Brazil
T +55 11 5525 2311
Toll Free: 0800 891 5770
vendasbrasil@enerpac.com

Canada
Actuant Canada Corporation
6615 Ordan Drive, Unit 14-15
Mississauga, Ontario L5T 1X2
T +1 905 564 5749
F +1 905 564 0305
Toll Free:
T +1 800 268 4987
F +1 800 461 2456
customer.service@actuant.com

China
Actuant (China) Industries Co. Ltd.
No. 6 Nanjing East Road,
Taicang Economic Dep Zone
Jiangsu, China
T +86 0512 5328 7500
F +86 0512 5335 9690
Toll Free: +86 400 885 0369
sales-cn@enerpac.com

France, Switzerland, North Africa and French speaking African countries
ENERPAC
Une division d'ACTUANT France S.A.
ZA de Courtabœuf
32, avenue de la Baltique
91140 VILLEBON / YVETTE
France
T +33 1 60 13 68 68
F +33 1 69 20 37 50
sales-fr@enerpac.com

Germany and Austria
ENERPAC GmbH
P.O. Box 300113
D-40401 Düsseldorf
Wilstätterstrasse 13
D-40549 Düsseldorf, Germany
T +49 211 471 490
F +49 211 471 49 28
sales-de@enerpac.com

India
ENERPAC Hydraulics Pvt. Ltd.
No. 1A, Peenya Industrial Area
IInd Phase, Bangalore, 560 038, India
T +91 80 40 792 777
F +91 80 40 792 792
sales-in@enerpac.com

121313