


Peltier-cooled incubator IPP400plus

Microbiology, zoology, food, cosmetics or pharma industry: the energy-saving cooled incubator with Peltier elements heats up and cools down seamlessly in one system.



With the help of our model selection, with dimensioned model sketches and extensive technical data for download, you will find your perfect Peltier-cooled incubator. For large volumes in conjunction with rapid temperature changes, the Memmert compressor-cooled incubator is recommended. Flexibility and technical features of our appliances meet all possible needs. Put us to the test!

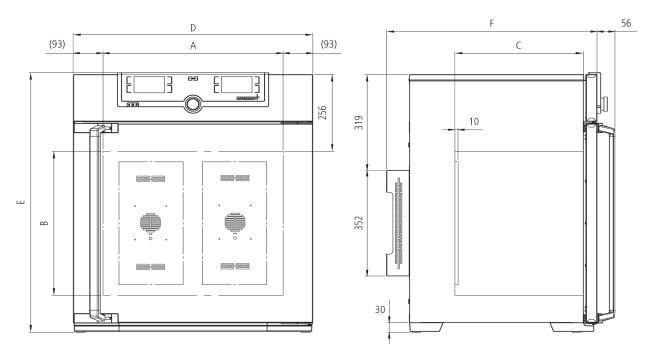

error	Temperature	
Temperature 2 Pt100 sensors DIN Class A in 4-wire-circuit for mutual monitoring, taking over functions in case of a error Control technology ControlCOCKPIT TwinDISPLAY. Adaptive multifunctional digital PID-microprocessor controller with 2 high-definition TFT-colour displays. Language setting German, English, Spanish, French, Polish, Czech, Hungarian Timer Digital backwards counter with target time setting, adjustable from 1 minute to 99 days Function HeatBALANCE adapting the distribution of the heating performance of the upper and lower heating circuit from -50 % to +50 % Function SetpointWAIT the process time does not start until the set temperature is reached Calibration three freely selectable temperature values adjustable parameters temperature (Celsius or Fahrenheit), programme time, time zones, summertime/wintertime Ventilation Convection forced ventilation by Peltier fan Communication Documentation Programming AtmoCONTROL software on a USB stick for programming, managing and transferring programmes via Ethernet interface or USB port Safety Temperature control over- and undertemperature monitor TWW, protection class 3.3 or adjustable temperature limiter TWB, protection class 2, selectable on display AutoSAFETY additionally integrated over- and undertemperature protection "ASF", automatically following the setpoint value at a preset tolerance range, alarm in case of over- or undertemperature, heating function is switched off in case of over-temperature, cooling function in case of undertemperature.	Working temperature range	from 0°C to +70°C
Control technology ControlCOCKPIT TwinDISPLAY. Adaptive multifunctional digital PID-microprocessor controller with 2 high-definition TFT-colour displays. Language setting German, English, Spanish, French, Polish, Czech, Hungarian Timer Digital backwards counter with target time setting, adjustable from 1 minute to 99 days Function HeatBALANCE adapting the distribution of the heating performance of the upper and lower heating circuit from -50 % to +50 % Function SetpointWAIT the process time does not start until the set temperature is reached Calibration three freely selectable temperature values adjustable parameters temperature (Celsius or Fahrenheit), programme time, time zones, summertime/wintertime Ventilation Convection forced ventilation by Peltier fan Communication Documentation programme stored in case of power failure Programming AtmoCONTROL software on a USB stick for programming, managing and transferring programmes via Ethernet interface or USB port Safety Temperature control over- and undertemperature monitor TWW, protection class 3.3 or adjustable temperature limiter TWB, protection class 2, selectable on display AutoSAFETY additionally integrated over- and undertemperature protection "ASF", automatically following the setpoint value at a preset tolerance range, alarm in case of over- or undertemperature, heating function is switched off in case of overtemperature, cooling function in case of undertemperature.	-	0.1 °C
TwinDISPLAY. Adaptive multifunctional digital PID-microprocessor controller with 2 high-definition TFT-colour displays. Language setting German, English, Spanish, French, Polish, Czech, Hungarian Timer Digital backwards counter with target time setting, adjustable from 1 minute to 99 days Function HeatBALANCE adapting the distribution of the heating performance of the upper and lower heating circuit from -50 % to +50 % Function SetpointWAIT the process time does not start until the set temperature is reached Calibration three freely selectable temperature values adjustable parameters temperature (Celsius or Fahrenheit), programme time, time zones, summertime/wintertime Ventilation Convection forced ventilation by Peltier fan Communication Documentation programme stored in case of power failure Programming AtmoCONTROL software on a USB stick for programming, managing and transferring programmes via Ethernet interface or USB port Safety Temperature control over- and undertemperature monitor TWW, protection class 3.3 or adjustable temperature limiter TWB, protection class 2, selectable on display AutoSAFETY additionally integrated over- and undertemperature protection "ASF", automatically following the setpoint value at a preset tolerance range, alarm in case of over- or undertemperature, heating function is switched off in case of overtemperature, cooling function in case of undertemperature	Temperature	2 Pt100 sensors DIN Class A in 4-wire-circuit for mutual monitoring, taking over functions in case of an error
TFT-colour displays. Language setting German, English, Spanish, French, Polish, Czech, Hungarian Timer Digital backwards counter with target time setting, adjustable from 1 minute to 99 days Function HeatBALANCE adapting the distribution of the heating performance of the upper and lower heating circuit from -50 % to +50 % Function SetpointWAIT the process time does not start until the set temperature is reached Calibration three freely selectable temperature values adjustable parameters temperature (Celsius or Fahrenheit), programme time, time zones, summertime/wintertime Ventilation Convection forced ventilation by Peltier fan Communication Documentation programme stored in case of power failure Programming AtmoCONTROL software on a USB stick for programming, managing and transferring programmes via Ethernet interface or USB port Safety Temperature control over- and undertemperature monitor TWW, protection class 3.3 or adjustable temperature limiter TWB, protection class 2, selectable on display AutoSAFETY additionally integrated over- and undertemperature protection "ASF", automatically following the setpoint value at a preset tolerance range, alarm in case of over- or undertemperature, heating function is switched off in case of overtemperature, cooling function in case of undertemperature	Control technology	
Timer Digital backwards counter with target time setting, adjustable from 1 minute to 99 days Function HeatBALANCE adapting the distribution of the heating performance of the upper and lower heating circuit from -50 % to +50 % Function SetpointWAIT the process time does not start until the set temperature is reached Calibration three freely selectable temperature values adjustable parameters temperature (Celsius or Fahrenheit), programme time, time zones, summertime/wintertime Ventilation Convection forced ventilation by Peltier fan Communication Documentation programme stored in case of power failure Programming AtmoCONTROL software on a USB stick for programming, managing and transferring programmes via Ethernet interface or USB port Safety Temperature control over- and undertemperature monitor TWW, protection class 3.3 or adjustable temperature limiter TWB, protection class 2, selectable on display AutoSAFETY additionally integrated over- and undertemperature protection "ASF", automatically following the setpoint value at a preset tolerance range, alarm in case of over- or undertemperature, heating function is switched off in case of overtemperature, cooling function in case of undertemperature	ControlCOCKPIT	
Function HeatBALANCE adapting the distribution of the heating performance of the upper and lower heating circuit from -50 % to +50 % Function SetpointWAIT the process time does not start until the set temperature is reached Calibration three freely selectable temperature values adjustable parameters temperature (Celsius or Fahrenheit), programme time, time zones, summertime/wintertime Ventilation Convection forced ventilation by Peltier fan Communication Documentation programme stored in case of power failure Programming AtmoCONTROL software on a USB stick for programming, managing and transferring programmes via Ethernet interface or USB port Safety Temperature control over- and undertemperature monitor TWW, protection class 3.3 or adjustable temperature limiter TWB, protection class 2, selectable on display AutoSAFETY additionally integrated over- and undertemperature protection "ASF", automatically following the setpoint value at a preset tolerance range, alarm in case of over- or undertemperature, heating function is switched off in case of overtemperature, cooling function in case of undertemperature	Language setting	German, English, Spanish, French, Polish, Czech, Hungarian
Function SetpointWAIT the process time does not start until the set temperature is reached Calibration three freely selectable temperature values adjustable parameters temperature (Celsius or Fahrenheit), programme time, time zones, summertime/wintertime Ventilation Convection forced ventilation by Peltier fan Communication Documentation programme stored in case of power failure Programming AtmoCONTROL software on a USB stick for programming, managing and transferring programmes via Ethernet interface or USB port Safety Temperature control over- and undertemperature monitor TWW, protection class 3.3 or adjustable temperature limiter TWB, protection class 2, selectable on display AutoSAFETY additionally integrated over- and undertemperature protection "ASF", automatically following the setpoint value at a preset tolerance range, alarm in case of over- or undertemperature, heating function is switched off in case of overtemperature, cooling function in case of undertemperature	Timer	Digital backwards counter with target time setting, adjustable from 1 minute to 99 days
Calibration three freely selectable temperature values adjustable parameters temperature (Celsius or Fahrenheit), programme time, time zones, summertime/wintertime Ventilation Convection forced ventilation by Peltier fan Communication Documentation programme stored in case of power failure Programming AtmoCONTROL software on a USB stick for programming, managing and transferring programmes via Ethernet interface or USB port Safety Temperature control over- and undertemperature monitor TWW, protection class 3.3 or adjustable temperature limiter TWB, protection class 2, selectable on display AutoSAFETY additionally integrated over- and undertemperature protection "ASF", automatically following the setpoint value at a preset tolerance range, alarm in case of over- or undertemperature, heating function is switched off in case of overtemperature, cooling function in case of undertemperature	Function HeatBALANCE	
adjustable parameters temperature (Celsius or Fahrenheit), programme time, time zones, summertime/wintertime Ventilation Convection forced ventilation by Peltier fan Communication Documentation programme stored in case of power failure Programming AtmoCONTROL software on a USB stick for programming, managing and transferring programmes via Ethernet interface or USB port Safety Temperature control over- and undertemperature monitor TWW, protection class 3.3 or adjustable temperature limiter TWB, protection class 2, selectable on display AutoSAFETY additionally integrated over- and undertemperature protection "ASF", automatically following the setpoint value at a preset tolerance range, alarm in case of over- or undertemperature, heating function is switched off in case of overtemperature, cooling function in case of undertemperature	Function SetpointWAIT	the process time does not start until the set temperature is reached
Ventilation Convection forced ventilation by Peltier fan Communication Documentation programme stored in case of power failure Programming AtmoCONTROL software on a USB stick for programming, managing and transferring programmes via Ethernet interface or USB port Safety Temperature control over- and undertemperature monitor TWW, protection class 3.3 or adjustable temperature Imiter TWB, protection class 2, selectable on display AutoSAFETY additionally integrated over- and undertemperature protection "ASF", automatically following the setpoint value at a preset tolerance range, alarm in case of over- or undertemperature, heating function is switched off in case of overtemperature, cooling function in case of undertemperature	Calibration	three freely selectable temperature values
Communication Documentation programme stored in case of power failure Programming AtmoCONTROL software on a USB stick for programming, managing and transferring programmes via Ethernet interface or USB port Safety Temperature control over- and undertemperature monitor TWW, protection class 3.3 or adjustable temperature limiter TWB, protection class 2, selectable on display AutoSAFETY additionally integrated over- and undertemperature protection "ASF", automatically following the setpoint value at a preset tolerance range, alarm in case of over- or undertemperature, heating function is switched off in case of overtemperature, cooling function in case of undertemperature	adjustable parameters	temperature (Celsius or Fahrenheit), programme time, time zones, summertime/wintertime
Communication Documentation programme stored in case of power failure Programming AtmoCONTROL software on a USB stick for programming, managing and transferring programmes via Ethernet interface or USB port Safety Temperature control over- and undertemperature monitor TWW, protection class 3.3 or adjustable temperature limiter TWB, protection class 2, selectable on display AutoSAFETY additionally integrated over- and undertemperature protection "ASF", automatically following the setpoint value at a preset tolerance range, alarm in case of over- or undertemperature, heating function is switched off in case of overtemperature, cooling function in case of undertemperature	Ventilation	
Programming AtmoCONTROL software on a USB stick for programming, managing and transferring programmes via Ethernet interface or USB port Safety Temperature control over- and undertemperature monitor TWW, protection class 3.3 or adjustable temperature limiter TWB, protection class 2, selectable on display AutoSAFETY additionally integrated over- and undertemperature protection "ASF", automatically following the setpoint value at a preset tolerance range, alarm in case of over- or undertemperature, heating function is switched off in case of overtemperature, cooling function in case of undertemperature	Convection	forced ventilation by Peltier fan
AtmoCONTROL software on a USB stick for programming, managing and transferring programmes via Ethernet interface or USB port Safety Temperature control over- and undertemperature monitor TWW, protection class 3.3 or adjustable temperature limiter TWB, protection class 2, selectable on display AutoSAFETY additionally integrated over- and undertemperature protection "ASF", automatically following the setpoint value at a preset tolerance range, alarm in case of over- or undertemperature, heating function is switched off in case of overtemperature, cooling function in case of undertemperature	Communication	
Safety Temperature control over- and undertemperature monitor TWW, protection class 3.3 or adjustable temperature limiter TWB, protection class 2, selectable on display AutoSAFETY additionally integrated over- and undertemperature protection "ASF", automatically following the setpoint value at a preset tolerance range, alarm in case of over- or undertemperature, heating function is switched off in case of overtemperature, cooling function in case of undertemperature	Documentation	programme stored in case of power failure
Temperature control over- and undertemperature monitor TWW, protection class 3.3 or adjustable temperature limiter TWB, protection class 2, selectable on display AutoSAFETY additionally integrated over- and undertemperature protection "ASF", automatically following the setpoint value at a preset tolerance range, alarm in case of over- or undertemperature, heating function is switched off in case of overtemperature, cooling function in case of undertemperature	Programming	
AutoSAFETY additionally integrated over- and undertemperature protection "ASF", automatically following the setpoint value at a preset tolerance range, alarm in case of over- or undertemperature, heating function is switched off in case of overtemperature, cooling function in case of undertemperature	Safety	
setpoint value at a preset tolerance range, alarm in case of over- or undertemperature, heating function is switched off in case of overtemperature, cooling function in case of undertemperature	Temperature control	
Autodiagnostic system for fault analysis	AutoSAFETY	setpoint value at a preset tolerance range, alarm in case of over- or undertemperature, heating
	Autodiagnostic system	for fault analysis

visual and acoustic

Alarm

Heating concept

Peltier	Heating and cooling performance distribution by individual control of the Peltier elements in the upper and lower row
Peltier	energy-saving Peltier heating-/cooling system integrated in the rear (heat pump principle)

Standard equipment

Door	fully insulated stainless steel door with 2-point locking (compression door lock)
Internals	2 stainless steel grid(s), electropolished
Scope of delivery	incl. works calibration certificate for +10°C and +37°C
Door	inner glass door

Stainless steel interior

Volume	384 I
Dimensions	w _(A) x h _(B) x d _(C) : 640 x 1200 x 500 mm
Max. number of internals	14
Max. loading of chamber	200 kg
Max. loading per internal	20 kg

Textured stainless steel casing

Dimensions	w _(D) x h _(E) x d _(F) : 824 x 1720 x 756 mm
Housing	rear zinc-plated steel

Electrical data

Voltage Electrical load	230 V, 50/60 Hz approx. 1100 W
Electrical load	арргох. 1100 м
Voltage	115 V, 50/60 Hz
Electrical load	approx. 1100 W

Ambient conditions

Set Up	The distance between the wall and the rear of the appliance must be at least 15 cm. The clearance from the ceiling must not be less than 20 cm and the side clearance from walls or nearby appliances must not be less than 5 cm.
Ambient temperature	16 °C to 40 °C
Humidity rh	max. 70 %, non-condensing
Altitude of installation	max. 2,000 m above sea level
Overvoltage category	II
Pollution degree	2

Packing/shipping data

Transport information	The appliances must be transported upright
Customs tariff number	8419 8998
Country of origin	Federal Republic of Germany
WEEE-RegNo.	DE 66812464
Dimensions approx incl. carton	w x h x d: 93 x 193 x 93 cm
Net weight	approx. 157 kg
Gross weight carton	approx. 210 kg

Standard units are safety-approved and bear the test marks

