


# GL412 and GL422 – Button combinations

**Sensitivity Selection**  
Wind mode (Default) and High sensitive (S)

Same coloured solid lines indicate the buttons have to be pressed simultaneously

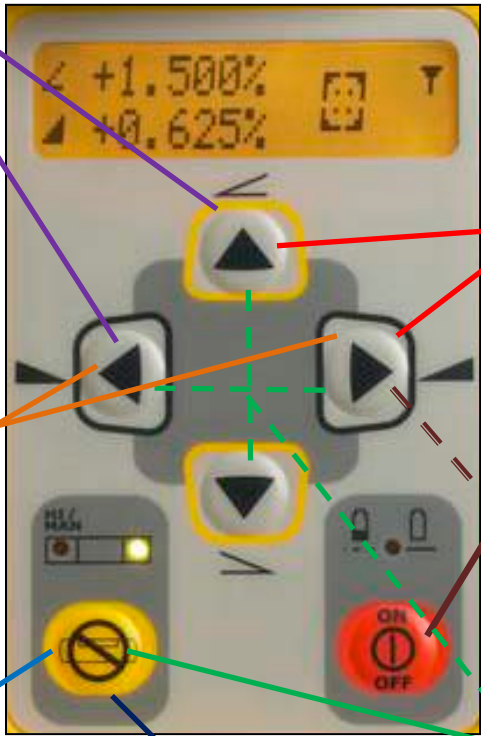

**Rotation Speed**  
300, 600 and (0 rpm – GL422)

**Fine alignment** of the stopped beam with sighting guides (GL422)

**Pairing Laser with Remote control**  
Turn off both units then press and hold the right arrow and turn on

**Standby Mode On/Off**  
Press and hold 3 seconds

**Mask Mode**  
First, one arrow button then within <1 sec the manual button

Press and release 2 times to enter **Manual Grade Match** (GL422), use up and down buttons for matching grade until you get on-grade; press and release once to go back full automatic mode