



Assembly Instructions

To purchase parts or accessories, please contact us at
www.spectrumfurniture.com
1-800-235-1262
 Thank you for purchasing Spectrum products!


Before you begin, please make sure all parts and proper quantities are included. Any parts damaged during shipment must be reported within 15 days of receipt. To report information regarding damages or if you have any questions, please call 1-800-235-1262.



(1) 0112504
shelf bracket



(1) 0112503
12"W x 8-1/2"D shelf



(1) 0112502
6-1/2"W x 8-1/2"D shelf



(4) 059534
1/4-20 x 30mm
JC bolt



(4) 026059
1/4 flat washer




(6) 041943
1/4-20 locknut



(1) 025039
4mm hex wrench

The InVision camera mount comes with two different shelf sizes to accommodate multiple camera and video devices. The mount can also be located in two different positions: above the monitor for group teleconferencing, or below the monitor for face-to-face conferencing.

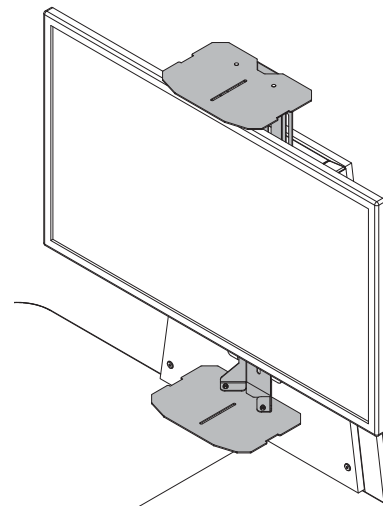

Camera Mount for InVision™ Media Collaboration Table #37108




Tools Required



4mm hex wrench
(included)



7/16" or adjustable wrench

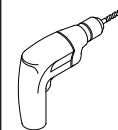

drill with 3/8" drill bit

1. Camera mount assembly

- A. Choose one shelf (large or small) that fits your specific camera.
- B. Attach the bracket to the shelf as shown with (2) 1/4-20 locknuts and tighten securely. **Figure 1.**

Touchboards

205 Westwood Ave, Long Branch, NJ 07740
 Phone: 866-94 BOARDS (26273) / (732)-222-1511
 Fax: (732)-222-7088 | E-mail: sales@touchboards.com

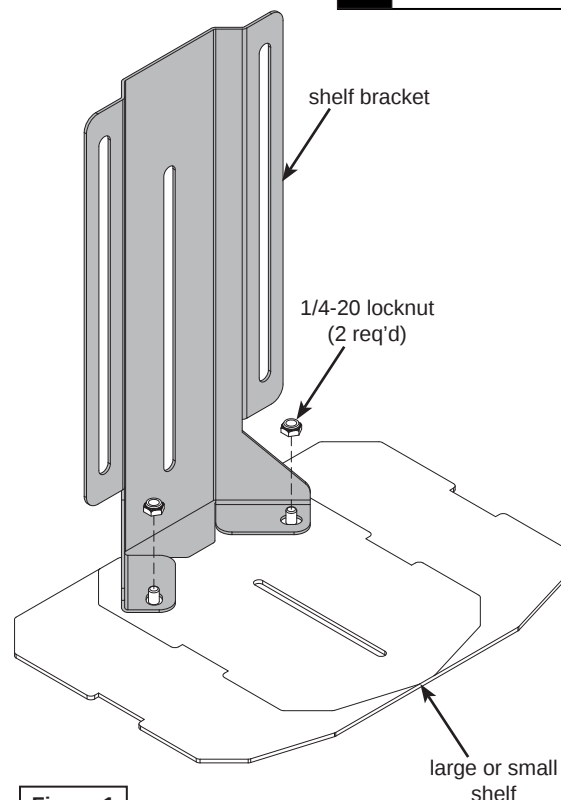


Figure 1

Installation below monitor

While the camera mount can be installed below the monitor with the monitor still installed, Spectrum recommends the monitor be temporary lifted off the monitor mount to simplify installation and prevent monitor damage.

- A. Using two people, carefully lift the monitor off the monitor mount and set aside.
- B. Remove the display stand back panel by removing the (6) 1/4-20 x 30mm JC bolts (retain these bolts) and set aside. **Figure 2.**
- C. Locate the two 3/8" holes in the display stand front panel. These holes do not go all the way through the panel so they will need to be drilled out. **Figure 3.**
- D. Using a drill with a sharp 3/8" drill bit, slowly drill through the display stand panel at the two 3/8" hole locations. **Figure 3.**
- E. Orient the assembled camera mount as shown with the display stand front panel. Using the center slot, align the shelf bracket with the two centered mounting holes and install (2) 1/4-20 x 30mm JC bolts with (2) 1/4-20 locknuts (not shown) and (2) 1/4 washers (not shown) on the back. **Figure 4.**
- F. Carefully lift the monitor back onto the monitor mount.
- G. Adjust the camera mount to sit below the installed monitor with enough clearance for your camera, then tighten the bolts securely. **Figure 5.**
- H. Install camera onto the shelf.
- I. Route cords through the display stand front panel grommets.
- J. After all electrical connections are made, re-attach the display stand back panel with the (6) 1/4-20 x 30mm JC bolts and tighten securely.

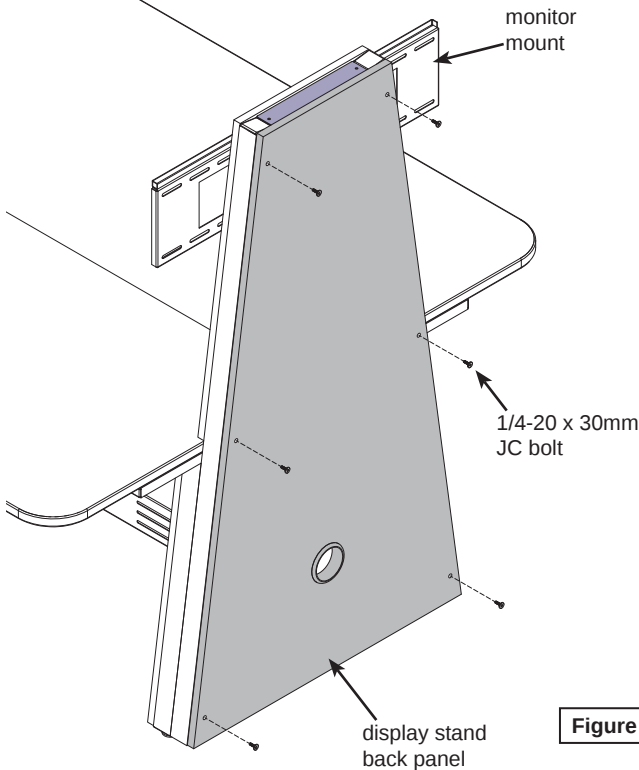


Figure 2

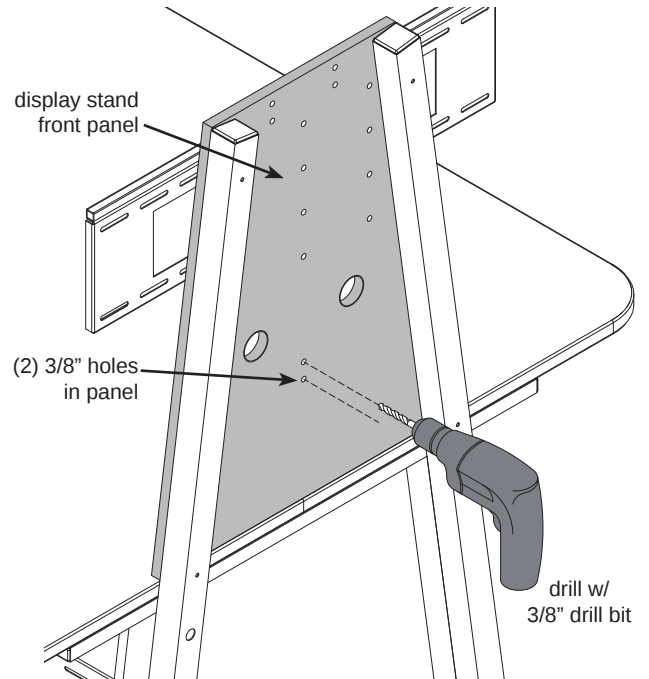


Figure 3

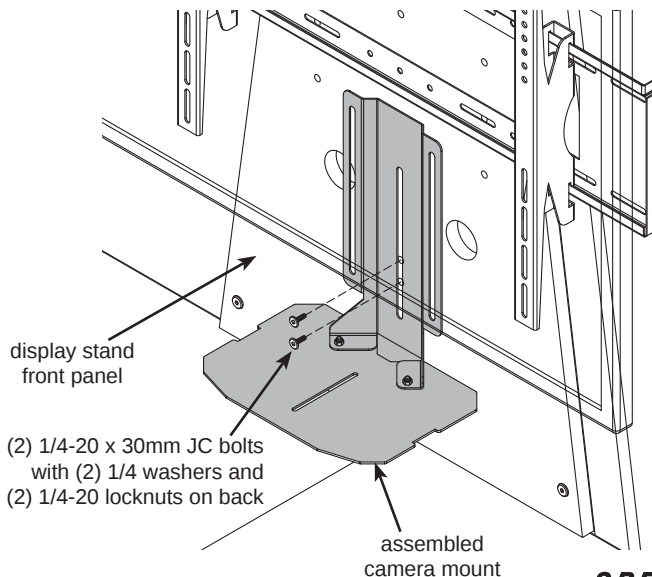


Figure 4

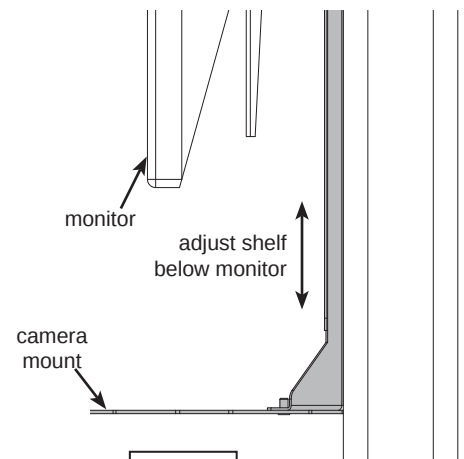


Figure 5

Installation above monitor

While the camera mount can be installed above the monitor with the monitor still installed, Spectrum recommends the monitor be temporary lifted off the monitor mount to simplify installation and prevent monitor damage.

- A. Using two people, carefully lift the monitor off the monitor mount and set aside.
- B. Remove the display stand back panel by removing the (6) 1/4-20 x 30mm JC bolts (retain these bolts) and set aside. **Figure 6.**
- C. Remove the screws attaching the angled filler to the back panel. **Figure 7.**
- D. Flip the angle around and re-attach to the panel with the cutout side facing up as shown. **Figure 7.**

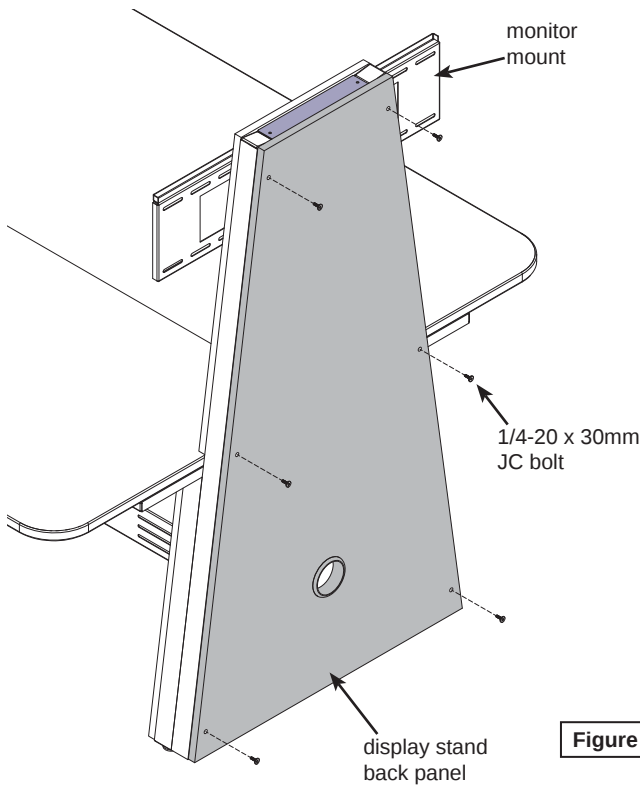


Figure 6

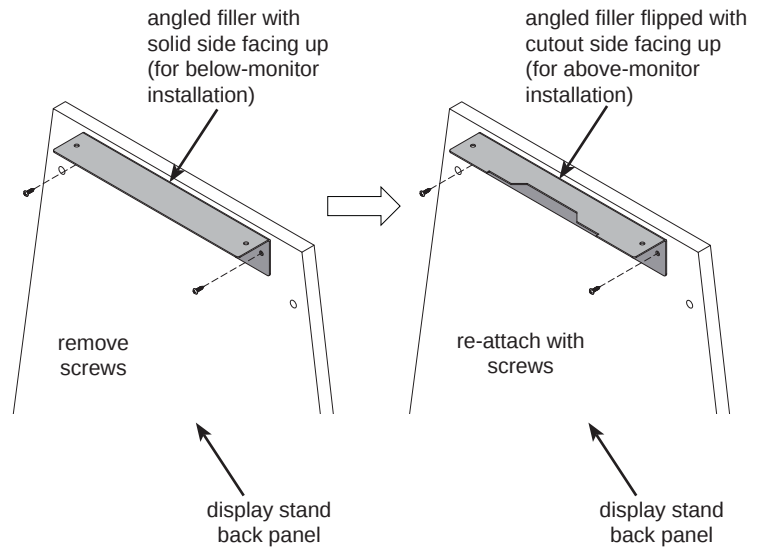


Figure 7

- E. Locate the four 3/8" holes on top of the display stand front panel. These holes do not go all the way through the panel so they will need to be drilled out. **Figure 8.**
- F. Using a drill with a sharp 3/8" drill bit, slowly drill through the display stand panel at the four 3/8" hole locations. **Figure 8.**

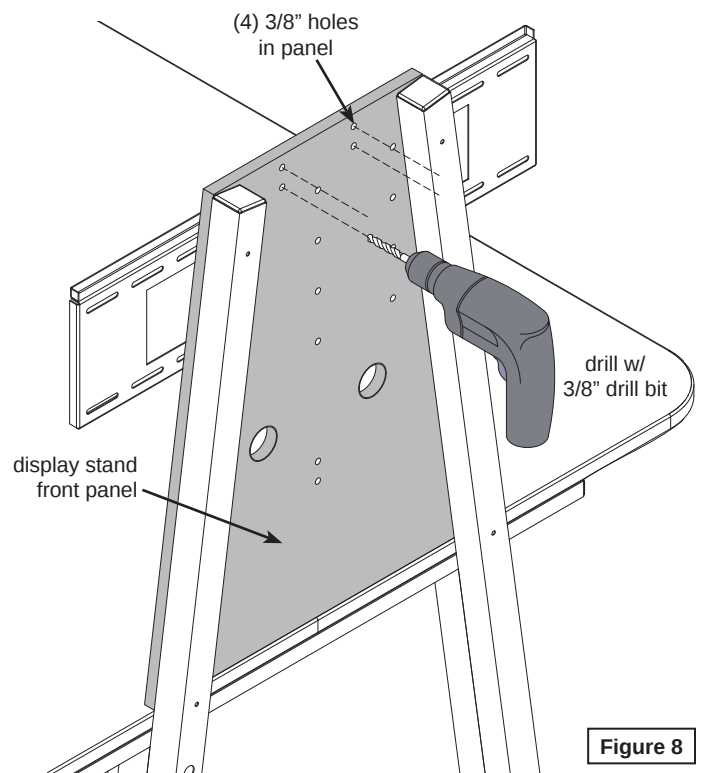



Figure 8

- G. Orient the assembled camera mount as shown in **Figure 9**.
- H. Using the outer slots, attach the camera mount to the back side of the display stand front panel with (4) 1/4-20 x 30mm JC bolts, (4) 1/4 washers, and (4) 1/4-20 locknuts. Do not tighten fasteners completely yet.
- I. Carefully lift the monitor back onto the monitor mount.



205 Westwood Ave, Long Branch, NJ 07740
 Phone: 866-94 BOARDS (26273) / (732)-222-1511
 Fax: (732)-222-7088 | E-mail: sales@touchboards.com

Figure 9

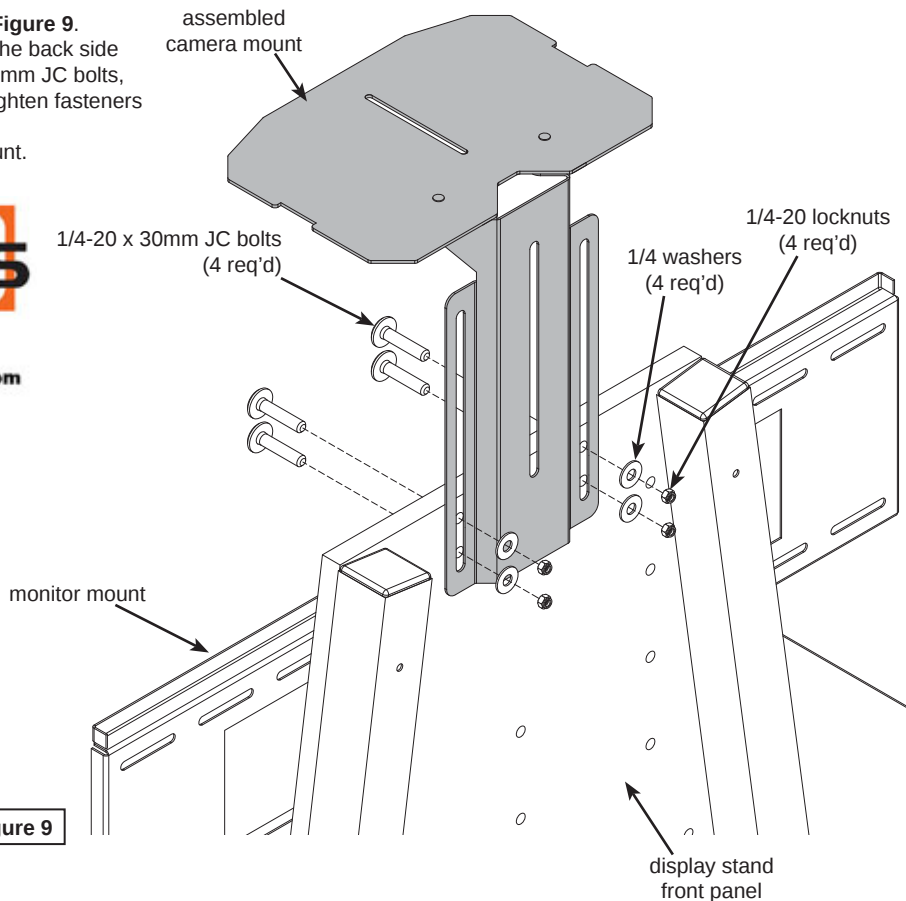

- J. Adjust the camera mount to sit just above the installed monitor then tighten the shelf fasteners securely. **Figure 10**.
- K. Install your camera on the shelf and route cords down behind the monitor and through the display stand front panel grommets.
- L. After all electrical connections are made, re-attach the display stand back panel with the (6) previously removed 1/4-20 x 30mm JC bolts and tighten securely. **Figure 11**.

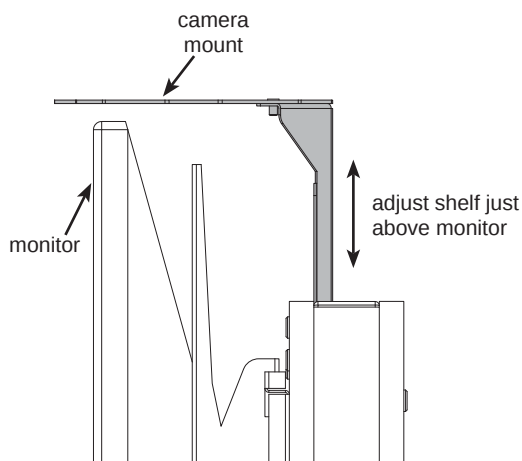


Figure 10

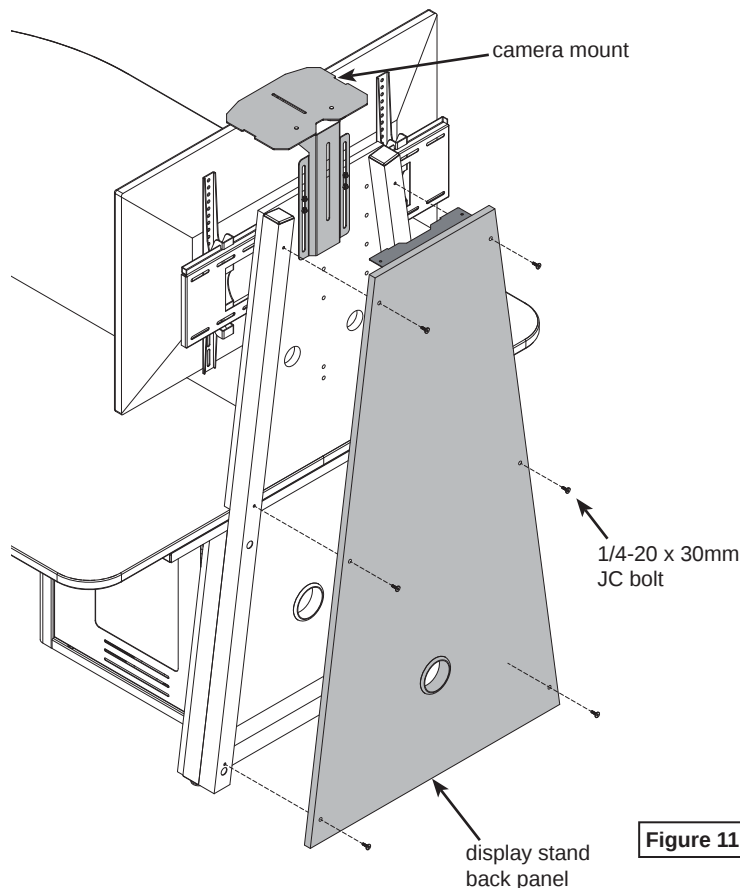


Figure 11