Keysight Technologies U8903B Analog Audio Analyzer

Demo Guide





Table of Contents

Demonstration Preparation
Demo 1. Performing Basic Audio Measurements
Demo 2. Generating a Frequency Response Plot Using
the Sweep Function
Demo 3. Performing Spectrum Analysis Using the
FFT Graph Function and 1.5 MHz Bandwidth Option 5
Demo 4. Combining Tests Using the Test Sequence
Application
Related Literature

Demonstration Preparation

The following hardware and license configurations on the Keysight Technologies, Inc. U8903B audio analyzer are required in order to perform the demonstrations provided in this application note:

Item	Notes
U8903B-STD option	Two analog generator channels plus two analog analyzer channels
N3431A option	1.5 MHz wide bandwidth
U8903B firmware revision	3.2.3.0 and above (Press the [System] button to check Firmware revision)
BNC cable	Optional to connect from generator to analyzer

In the demonstration instructions, keystrokes surrounded by [] represent front panel keys of the instruments, while keystrokes surrounded by { } represent soft-keys (refer to Figures 1a and 1b). The use of > indicates a series of keystrokes.



Figure 1a. Front panel hardkeys



1b. Functional softkeys

Demo 1. Performing Basic Audio Measurements

Objective

 Perform the basic audio measurement functions such as frequency, Vac, THD+N ratio, and SINAD. (A maximum of four measurement functions can be turned on and viewed on the U8903B front panel.)

Instructions	Keystrokes
Set the U8903B to its default settings	Press [Preset] Select {To Factory Settings} Select "Yes" by pressing [Enter] Select {Return}
Select the generator	Select the generator window by pressing [▼] or [▲] Press [1] to select generator AG1
Generate 1 kHz, 1 Vrms tone (see Figure 2)	Select {Waveform Config} > {Amplitude} Press [1] > {Vrms} > {Return} Toggle the [ON/OFF] button to ON Set the frequency to 1 kHz if needed (the default is 1 kHz) Select {Return}

Analog	Gener	ator Wav	eform C	onfig			€ J
AGI) Vrms		equency .0000 kHz		ON	Amplitude
	0.0000			aveform ine			Frequency 1000.0 Hz
							DC Offse
	UnBall		600 Ω		Float		0.0000 ∨
AAI	1.AC V			Frequency		OFF	
	None	Range	Auto	Connector	Ureal		
HPF Weighting	None	Samples Average	32768	Impedance Coupling	100 kΩ		
DeEm	None	Ext. Gain	0.000 dB	Bandwidth			
							Return

Figure 2. 1 kHz, 1 Vrms generation

Instructions	Keystrokes
Set the analyzer to perform the four measurements	Highlight the analyzer window by pressing [▼] or [▲] Press [1] to select analyzer AA1
Set up measurement function No. 3	Select {Function} > {Function No} Press [▼] to select {3} > [Enter] Select {Meas Func} Use [▼] and select {THD+N Ratio} Select {Unit} > {%} > [Enter]
Set up measurement function No. 4	Select {Function} > {Function No} Press [▼] to select {4} > [Enter] Select {Meas Func} Use [▼] and select {SINAD} Press [Enter] Select {Return}
Set analyzer input (There are two options to do this)	
Option 1. Use a BNC cable	Connect Channel 1 on the generator to Channel 1 on the analyzer
Option 2. Loopback internally	Select {Input Config} > {Connector} > {Loopback} > [Enter] > {Return}
Turn on the analyzer channel	Toggle [ON/OFF] to ON
Refer to Figure 3 for results	



Figure 3. Analog analyzer measurement

Demo 2. Generating a Frequency Response Plot Using the Sweep Function

Objectives

- Plot a frequency response graph using the U8903B Sweep function.
- Use U8903B's capability to plot up to four different charts.

Instructions	Keystrokes
Go to the Sweep Function menu	Press [Sweep]
Set Channel setting	Use [▲] and select {Settings} Select {Channel} > {Source} > {1} > {Measure} >
	{1} > {Return}
Set the AG1	Use $[lacktrianglet]$ and select the AG window
	Ensure it is set to AG1, if not:
	Select {Waveform Config} > {Amplitude} > [1] >
	{Vrms} > {Return}
	Ensure the amplitude is set to 1 Vrms
Set the AA1	Use [▶] and select the AA window
	Ensure it is set to AA1, if not, press [1]
	Change Function 2 to THD level measurement
	Select (Function) > (Function No)
	Press [▼] and select 2 > [Enter]
	Select {Meas Func}
	Use [▼] and select {THD Level}
	Press [Enter] > {Return}
Start the sweep function	Toggle [ON/OFF] to ON
To view the various plot	Select {Plot Settings} > {Y Data}
chart results	Use $[lacktrianglet]$ or $[lacktrianglet]$ to select the required plot

Notes

- Sweeping will start immediately and change to plot view when completed.
- Refer to Figures 4 to 7 for results.
- To get back to the plot view from the Sweep menu, select {Plot View}.

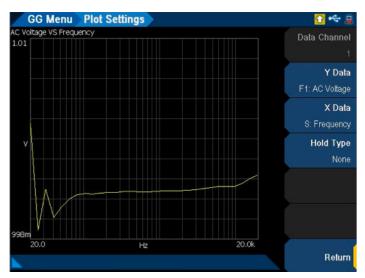


Figure 4. AC voltage vs. frequency

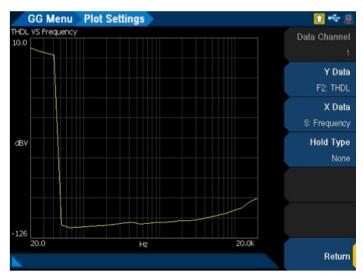


Figure 5. THD level vs. frequency

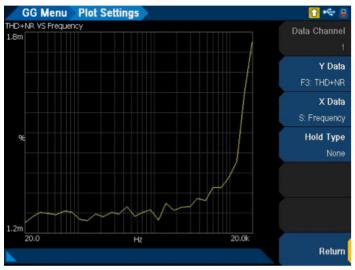


Figure 6. THD ratio (%) vs. frequency

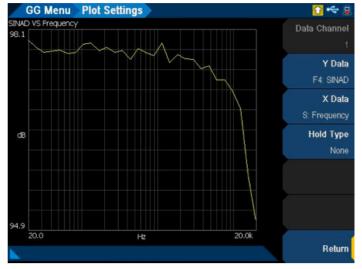


Figure 7. SINAD vs. frequency

Demo 3. Performing Spectrum Analysis Using the FFT Graph Function and 1.5 MHz Bandwidth Option

Objectives

- Use the FFT graph (frequency domain) functions and the 1.5 MHz analysis bandwidth option.
- Use the marker function to search to fundamental and harmonics.
- Use the zoom function.

Instructions	Keystrokes
Go back to the Standard View menu	Press [Menu] > {Standard View} or Press [Generator/Analyzer]
Turn on the AG1 and AA1	Select the AG1 window and toggle [ON/OFF] to ON Select the AA1 window and toggle [ON/OFF] to ON
Switch to Frequency Spectrum mode	Press [Graph] The FFT graph shown in Figure 8 should appear Toggle [On/Off] button to ON
Perform AutoScale (optional) to get the graph to properly fit into the display (Refer to Figures 8 and 9)	Press [Scale] > {AutoScale} > {Return}
Make peak measurement using the FFT graph	Press [Peak Search] > {Max Peak} Select {Return}

Notes

- The M1 measurement result is shown in Figure 10.
- Trying to perform {Next Peak} might not yield result because the threshold upper limit setting is too high.

Instruction (optional)	Keystrokes
To reduce the upper threshold limit	Press [Peak Search] > {Threshold} Select {Peak Thes} > [+/-] > [1] > [3] > [0] > [Enter] Select {Return}

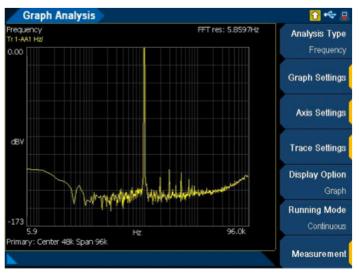


Figure 8. FFT plot (before AutoScale)

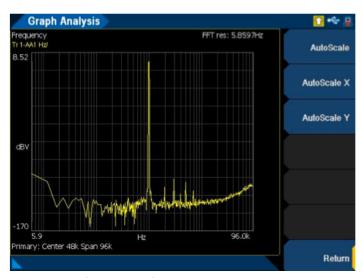


Figure 9. FFT plot (after AutoScale)

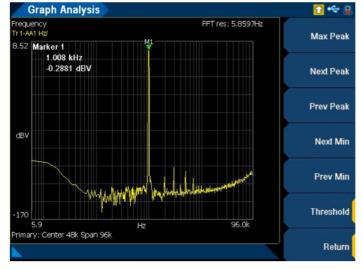


Figure 10. Peak search on FFT graph

Instructions	Keystrokes
Turn on the 1.5 MHz-wide analysis bandwidth to view more harmonics	Press [Generator/Analyzer] to go back to the Standard View menu Select the AA1 window > {Input Config} Select {Bandwidth} and change it to {1.5 MHz} (as shown in Figure 11)
Go back to FFT graph	Press [Graph]
Change the X axis (Frequency) to view	Select {Axis Settings} > {Right} >[1] > {MHz} >{Return}
Increase the FFT sample size for better resolution	Select {Graph Settings} >{Sample Size} > {524288} > {Return}

Note

- The acquisition rate will slow down after increasing the sample size (refer to Figures 12 and 13).

Instructions	Keystrokes
Turn on the zoom function (shown in Figure 14)	Press [Zoom] Press [Shift] > [Zoom] to adjust the zoom window Turn the knob to adjust the zoom ratio (the size of the red square window) Use [▶] or [◄] to move the zoom window To go back to FFT graph press [Zoom]

Note

 The U8903B screen is split into two windows in the zoom view. The top window is a normal graph window, and the bottom window displays a magnified representation of the traces in the top window.

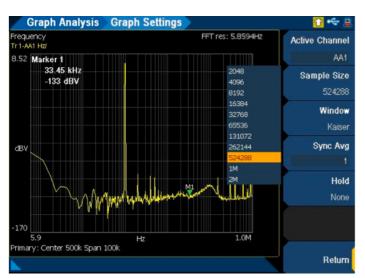


Figure 13. FFT with 524288 sample size



Figure 11. 1.5 MHz analysis bandwidth

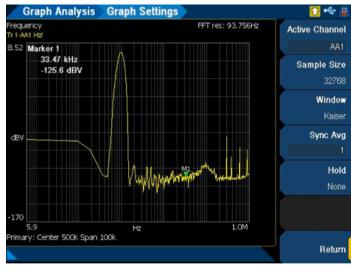


Figure 12. FFT with 32768 sample size

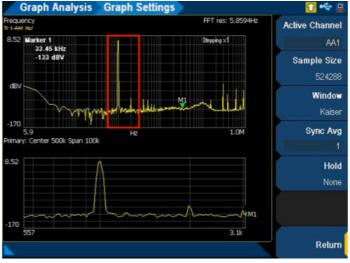


Figure 14. Zoom function and display

Demo 4. Performing Combined Tests Using the Test Sequence Application (TSA)

Objectives

- Use the TSA function to create a series (up to 20 test sequences) of automated audio measurements.
- Add and combine two tests and execute them in sequence without external programming scripts.
- Learn how to extract the test report and save it in a Microsoft Word file.

Instructions	Keystrokes
Go to the Test Sequence Application menu	Press [Menu] Use [▼] and select {Test Seq App}
Set the IO configuration	Use [▼] and select {IO Configuration} Press [Enter]
Set up Output configuration (Figure 15)	Use [▼] and select {Output Configuration} > {Channels} Use [▼] to select {1} > [Enter]
Set up Input configuration (Figure 15)	Use [▼] Select {Input Configuration} > {Channels} Use [▼] and select {1} Press [Enter] > {Connector} Use [▼] to change to {Loopback} Press [Enter] Select {Return} to go back to TSA main menu

Instructions	Keystrokes
Add frequency sweep measurement (shown in Figures 16 and 17)	Select {Return} to go to TSA main menu Select {Add Measurement} Use [▼] and select {Stepped Freq. Sweep} Press [Enter] or select {Settings} Select {Waveform Config} > {Amplitude} Press [1] > {Vrms} Press {Return} twice

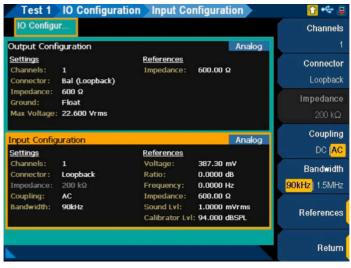


Figure 15. Output configuration (top) IO configuration (bottom)



Figure 16. Add stepped frequency sweep

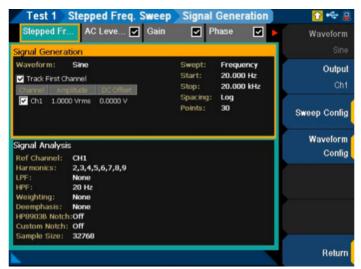


Figure 17. Stepped frequency sweep settings

Instructions	Keystrokes
Add stepped level sweep test sequence (shown in Figure 18)	Select {Return} to go to TSA main Select {Add Measurement} Use [▼] and select {Stepped Level Sweep} Select {Return} to go back to the TSA main

Instructions	Keystrokes
Start the TSA test sequence	Press the [ON/OFF] button Select the {Start Test App}

Instructions	Keystrokes
View the TSA test results	Select the required test item (Stepped Freq. Sweep) Press [Enter] Use [▶] or [◄] to scroll through the test results as shown in Figure 20

Instructions	Keystrokes
View the TSA test report summary	Select {Return} to go to TSA main Use [▲] or [▼] and select the {Report} tab Use [▶] or [◄] to scroll through the report pages as shown in Figure 21

Notes

- The TSA test report can be saved to an external data storage device such as a USB thumb drive.
- The TSA report can be saved in Microsoft Word format.



Figure 20. Stepped freq. sweep test results



Figure 18. Add stepped level sweep

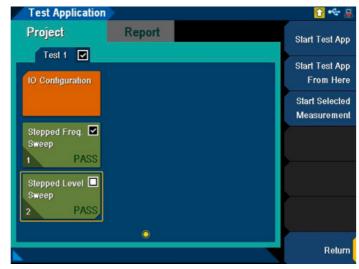


Figure 19. TSA test completed



Figure 22. TSA report

Related Literature

Keysight U8903B Performance Audio Analyzer, configuration guide http://literature.cdn.keysight.com/litweb/pdf/U8903-90055.pdf

Keysight U8903B Audio Analyzer, user guide http://literature.cdn.keysight.com/litweb/pdf/U8903-90045.pdf

Keysight U8903B Audio Analyzer, data sheet http://literature.cdn.keysight.com/litweb/pdf/5991-4551EN.pdf

www.keysight.com/find/u8903b

Evolving Since 1939

Our unique combination of hardware, software, services, and people can help you reach your next breakthrough. We are unlocking the future of technology. From Hewlett-Packard to Agilent to Keysight.







myKeysight

myKeysight

www.keysight.com/find/mykeysight

A personalized view into the information most relevant to you.

http://www.keysight.com/find/emt_product_registration

Register your products to get up-to-date product information and find warranty information.

KEYSIGHT SERVICES Accelerate Technology Adoption. Lower costs.

Keysight Services

www.keysight.com/find/service

Keysight Services can help from acquisition to renewal across your instrument's lifecycle. Our comprehensive service offerings—onestop calibration, repair, asset management, technology refresh, consulting, training and more—helps you improve product quality and lower costs.



Keysight Assurance Plans

www.keysight.com/find/AssurancePlans

Up to ten years of protection and no budgetary surprises to ensure your instruments are operating to specification, so you can rely on accurate measurements.

Keysight Channel Partners

www.keysight.com/find/channelpartners

Get the best of both worlds: Keysight's measurement expertise and product breadth, combined with channel partner convenience.

www.keysight.com/find/u8903b

For more information on Keysight Technologies' products, applications or services, please contact your local Keysight office. The complete list is available at: www.keysight.com/find/contactus

Americas

Canada (877) 894 4414 Brazil 55 11 3351 7010 Mexico 001 800 254 2440 United States (800) 829 4444

Asia Pacific

Australia 1 800 629 485 800 810 0189 China Hong Kong 800 938 693 India 1 800 11 2626 0120 (421) 345 Japan Korea 080 769 0800 1 800 888 848 Malaysia Singapore 1 800 375 8100 0800 047 866 Taiwan Other AP Countries (65) 6375 8100

Europe & Middle East

For other unlisted countries: www.keysight.com/find/contactus

Opt. 3 (IT)

0800 0260637



United Kingdom

(BP-9-7-17)

www.keysight.com/go/quality Keysight Technologies, Inc. DEKRA Certified ISO 9001:2015 Quality Management System

