

LEMIPTWNM3 Emergency Lighting

3HR NON MAINTAINED EMERGENCY TWINSPOT



SPECIFICATIONS:

- **Input Voltage:** AC220-240V 50/60Hz
- **Emergency Duration:** >3 Hours
- **Recharge Time:** 24 Hours
- **Operating Environmental Temperature:** 0°C - 25°C
- **Battery:** LEMIPTWNM3BAT-06







ENSURE ELECTRICAL SUPPLY IS DISCONNECTED/ ISOLATED BEFORE COMMENCING INSTALLATION

NOTE - To comply with regulations, installation must be carried out by qualified electrician and in accordance with the current IEE Wiring Regulations (BS7671) and Building Regulations

State	Color	LED indication	Status	Comment
	Green	Permanent green	Charging Mode Fully Charged	AC mode
	Green	Fast flashing green (0.1 sec on, 0.1 sec off)	Function test underway	
	Green	Slow flashing green (1 sec on, 1 sec off)	Duration test underway	
	Red	Permanent red	Load failure	Open circuit/ Short circuit Led failure (emergency mode)
	Red	Slow flashing red (1 sec on, 1 sec off)	Battery failure	Battery failed the duration test or function test / No battery
		Green and red off	DC mode	Battery operation (emergency mode)

OPERATION

The luminaire should be connected to the mains supply for a minimum of 24 hours before operating in emergency mode as the batteries need to be fully charged before they will provide their full rated duration.

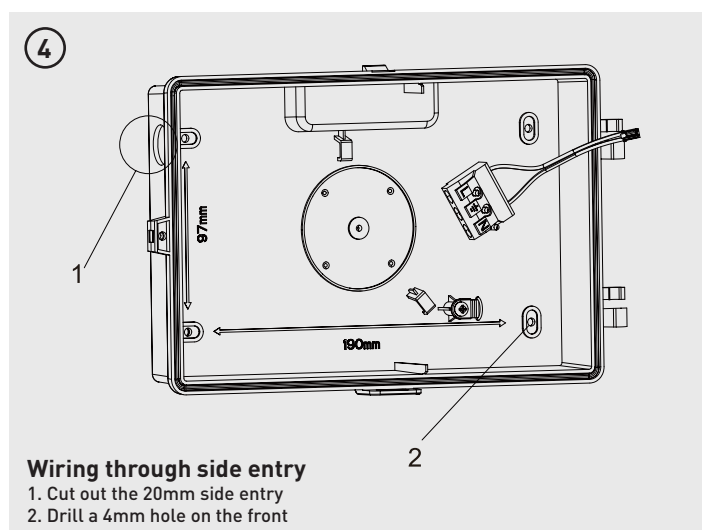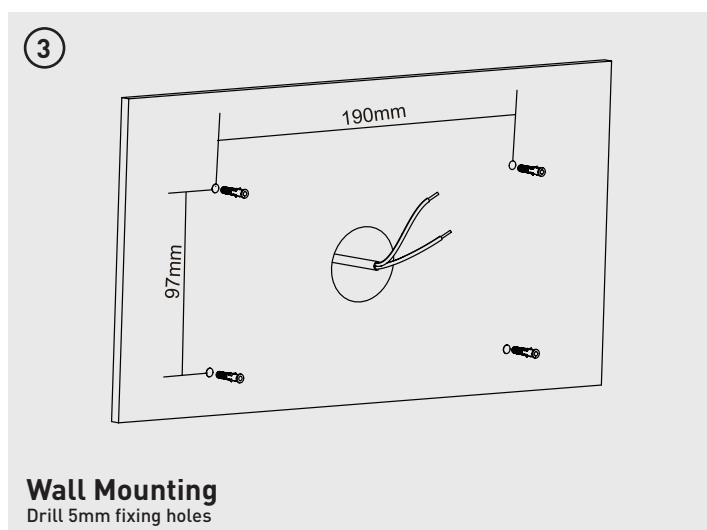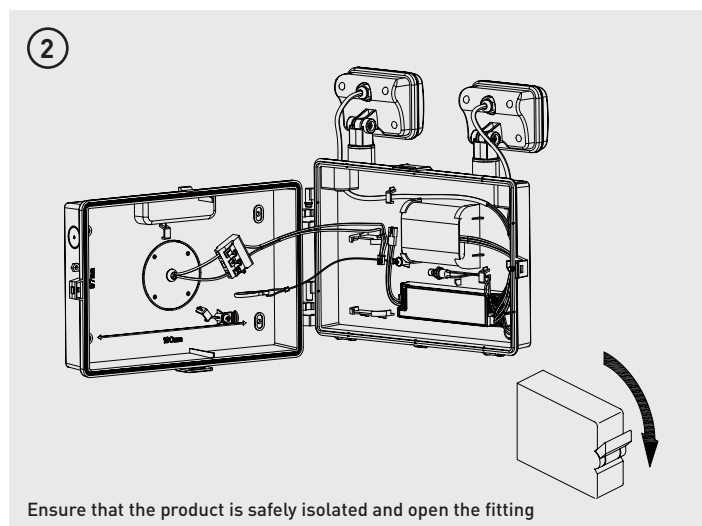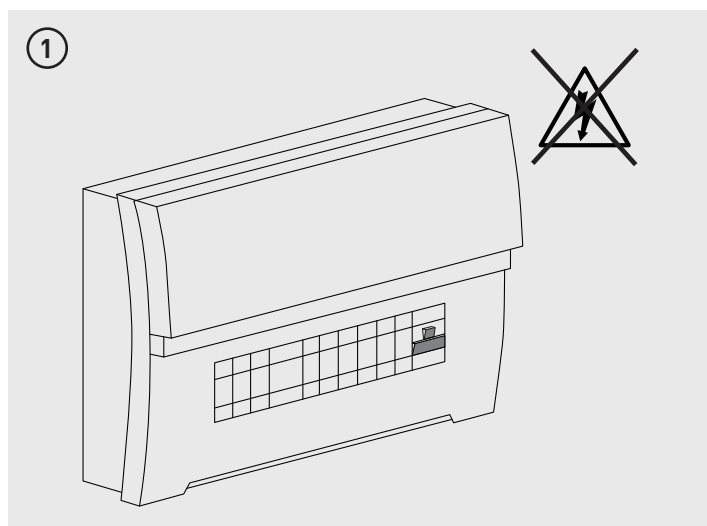

Tech Help Line

UK - 0330 0249 279

Non UK - +44 (0)1952 238 100

Supplied by LUCECO

Stafford Park 1, Telford,
Shropshire, England, TF3 3BD

Visit our website at www.luceco.com

Servicio de asistencia telefónica

UK - 0330 0249 279


Non UK - +34 93 829 55 74

(EU) Luceco SE

C/Robinadora 1-5 08302 Mataró
Barcelona, Spain

Visite nuestra web en www.luceco.com


5

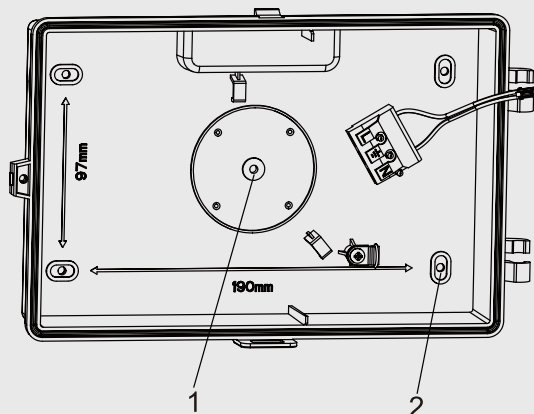

Wiring through rear entry


1. Punch a Ø4mm hole in the centre
2. Punch a Ø4mm hole in the base

6

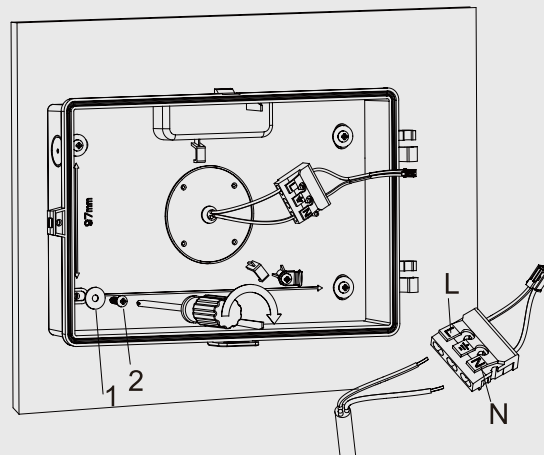


1. Insert Gasket
2. Secure the base plate with screws
3. Connect the mains to the terminal (N: Blue L: Brown)

7

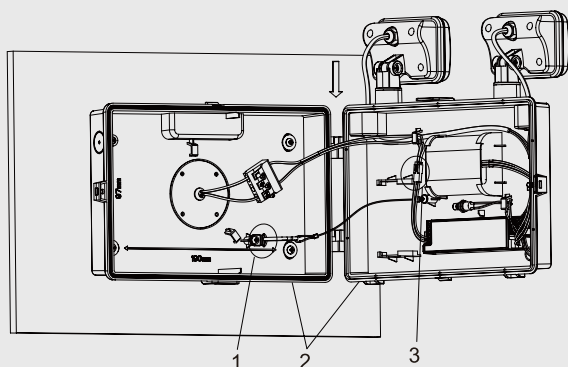


1. Fasten the safety wire
2. Bring together the front and rear plates
3. Connect the male and female terminals

8

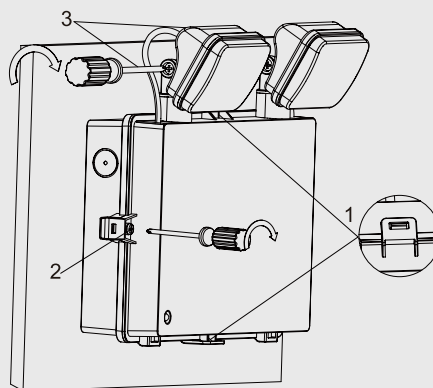

1. Fasten the buckles
2. Lock the product with the screws
3. Adjust the proper lighting angle of the lamp head and tighten the screws


10

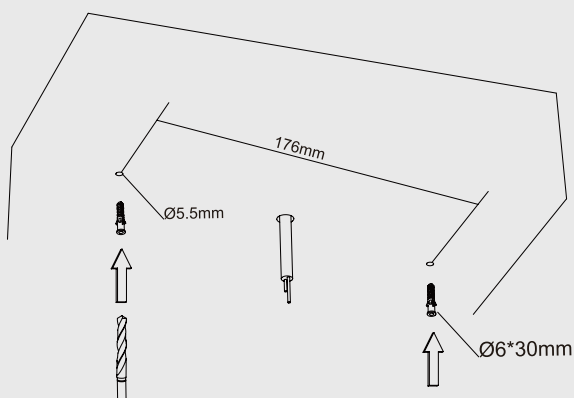

Ceiling Mounting - Optional with additional accessories

Drill 5mm hole in the ceiling and insert a Ø6*30mm expansion rubber plug

11

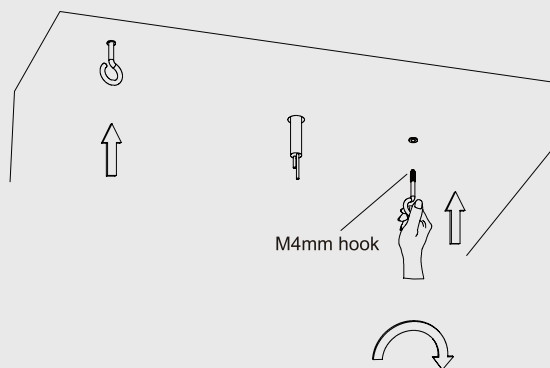

Secure the hook in the expansion plug

Tech Help Line

UK - 0330 0249 279

Non UK - +44 (0)1952 238 100

Supplied by LUCECO

Stafford Park 1, Telford,
Shropshire, England, TF3 3BD

Visit our website at www.luceco.com

Servicio de asistencia telefónica

UK - 0330 0249 279


Non UK - +34 93 829 55 74

(EU) Luceco SE

C/Bohinadora 1-5 08302 Mataró
Barcelona, Spain


Visite nuestra web en www.luceco.com

12

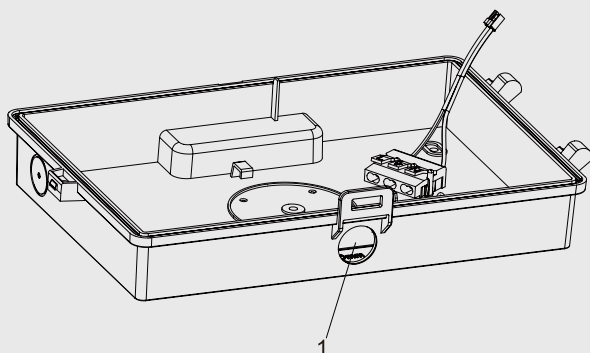

Make a Ø20mm hole on the side

14

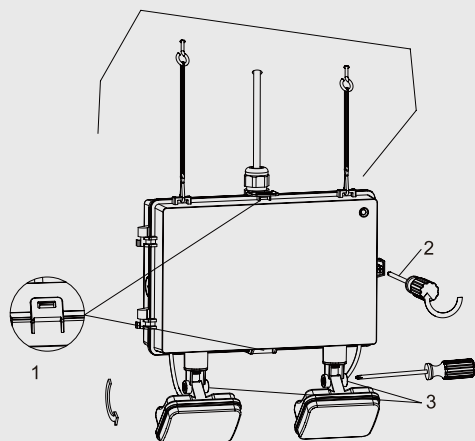


1. Fasten the buckles
2. Lock the product with the screws
3. Adjust the proper lighting angle of the lamp head and tighten the screws


16

Mode change switch located on emergency module

17

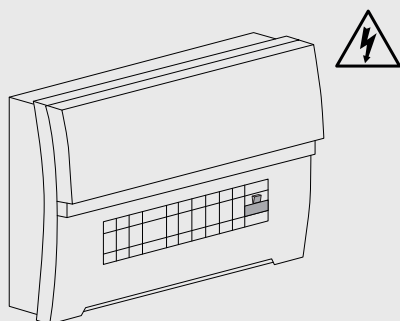

13

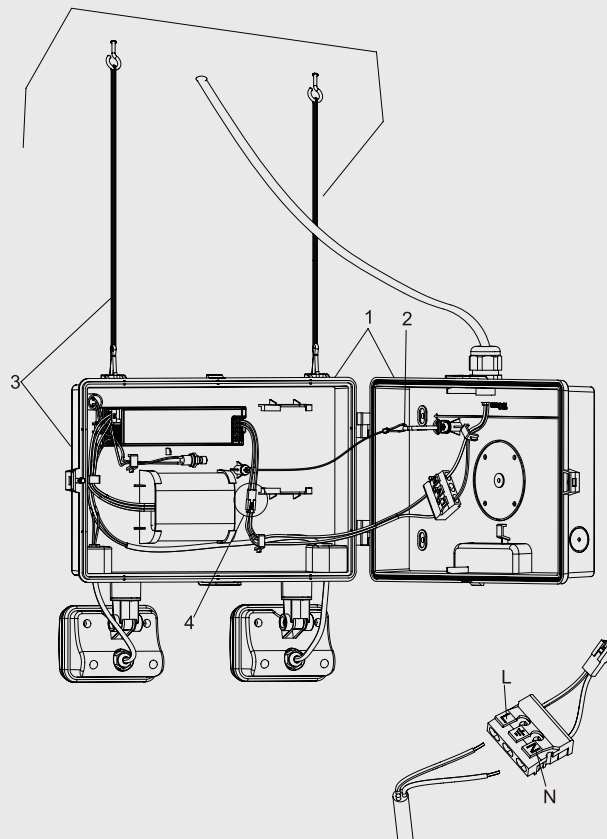

1. Bring together the front and rear plates
2. Lock the safety wire
3. Connect the chain to the product
4. Connect the mains power to the terminal (L: Black N: Blue)

Tech Help Line

UK - 0330 0249 279

Non UK - +44 (0)1952 238 100

Supplied by LUCECO

Stafford Park 1, Telford,
Shropshire, England, TF3 3BD

Visit our website at www.luceco.com

Servicio de asistencia telefónica

UK - 0330 0249 279

Non UK - +34 93 829 55 74

(EU) Luceco SE

C/Bohinadora 1-5 08302 Mataró
Barcelona, Spain

Visite nuestra web en www.luceco.com

LEMIPTWNM3 Emergency Lighting

3HR NON MAINTAINED EMERGENCY TWINSPOt

RECOMMENDED
ROUTINE PROCEDURE

The following test is designed to ensure the continued protection of your premises and occupants. Because of the possibility of a failure of the normal lighting supply occurring shortly after a period of testing, all tests should, whenever possible, be undertaken at times of least risk, e.g. during daylight hours.

ONCE A DAY

Visual inspection of battery charge LED.

ONCE A MONTH

Each unit should be energized from its battery for about 30 seconds by simulation of a failure of the normal lighting supply to ensure the lamp operates in the emergency condition.

ONCE A YEAR

Each unit should be energized from it's battery for a 3 hour discharge test.

ROUTINE TEST RECORD

		First Year		Second Year		Third Year		Fourth Year		Fifth Year	
Month	Test	Signed	Date	Signed	Date	Signed	Date	Signed	Date	Signed	Date
1	Function										
2	Function										
3	Function										
4	Function										
5	Function										
6	Function										
7	Function										
8	Function										
9	Function										
10	Function										
11	Function										
12	Function										