

## 28" (71 cm) DOUBLE LOCKING STOWABLE PEDESTAL MOUNT USE WITH MAGMA MARINE KETTLE GRILLS

The double locking mechanism ensures a secure fit for your boat or home application. The pedestal locks into the mounting base and the grill locks to the pedestal. The grill is instantly removable from the pedestal with a simple push-button release. The pedestal also is instantly removable from the mounting base with a push-button release that allows the pedestal to be unthreaded and removed for storage. The low profile threaded twist-lock surface mount base just 5/8" tall and 7" diameter with a 5-3/4" bolt pattern. There is no need to cut a hole in your deck. Made of durable aluminum with a brushed satin finish, it is perfect for swim platforms, boat decks, pontoon boats, or at home on the patio, balcony, or deck.


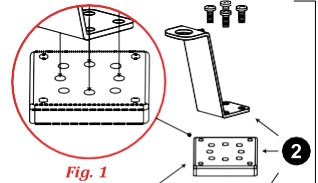


Fig. 1

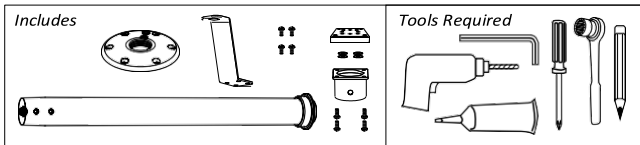

**PEDESTAL BASE PLATE ATTACHMENT FASTENERS NOT INCLUDED**  
Recommended fasteners: #14 oval head self-tapping screws or 1/4"-20 oval head machine screws. Fastener style depends on attachment location or material.

### INSTALLATION

1. Pedestal base; remove black push button spring lock assembly from base and set aside for later use. **NOTE:** The grill mounting bracket is installed to the grey aluminum mounting pad diagonally at a 45° angle (see Fig. 1). Fully attach pedestal tube to base plate; with top lock button hole facing forward, place assembly in best aesthetic position exactly as you wish to use it (grill's back parallel to back or sides of boat or patio is usually best appearance). Mark one hole in each side of base and remove for drilling. Drill holes for screws or bolts depending on application (not provided). Replace base and loosely screw or bolt down base and reinstall pedestal to ensure correct positioning. When position is correct, remove pedestal, mark and drill remaining holes. Install black push button spring lock assembly into base plate, add bedding compound, and screw or bolt base down in permanent position.
2. Using a Phillips head screwdriver and 7/16" socket wrench with the supplied 1/4"-20 x 1" pan head screws, flat washers, and lock-nuts, attach grill mounting bracket diagonally (see Fig. 1) to the grey aluminum mounting pad (flat side towards mounting bracket).
3. Attach black pedestal cap to grey aluminum mounting pad using supplied 1/4"-20 x 1/2" pan head screws with bracket and lock button hole facing forward.
4. Install pedestal tube to pedestal base and attach black pedestal cap/grill mounting bracket assembly to pedestal tube. Tubes locking button will engage into black cap. Once mount is assembled, thread grill onto mounting bracket assembly and adjust grill so handle is facing forward (see grill assembly instructions for grill adjustment instructions).

