



INFINITY PLUS WALL UNIT

150 - 600 Wall (1 Door, Solid Top) - Fitting Guide

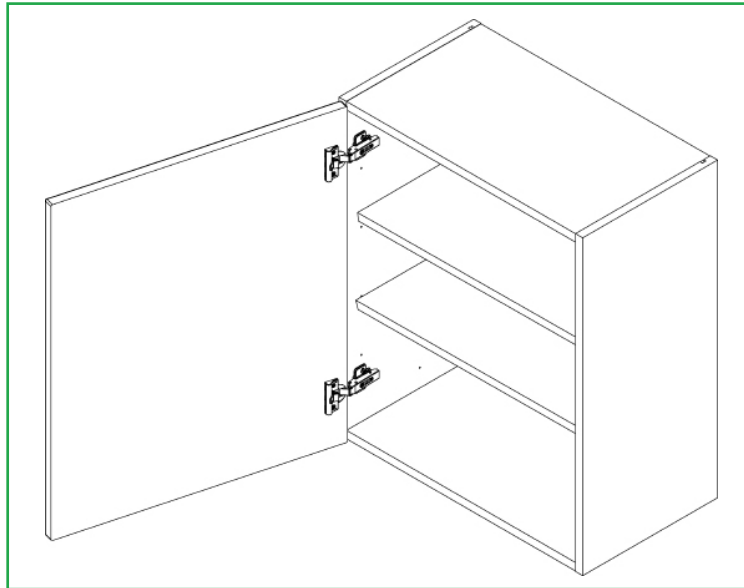

Units Parts

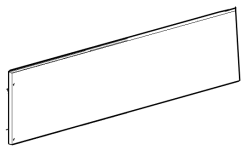

2x Shelf



4x30mm
screws



4x20mm
screws




8x15mm
screws



2x Corner
Gusset Plate




2x Hanging
Bracket Cover
Caps



2x Door
Buffers



2x Wall
Hanging
Bracket



1x Wall
Hanging Plate
Snap
off (x2)



8x Shelf
Support

Tools Required



Drill



Screwdriver



Clamp



Spirit Level



Tape Measure



Before installing any wall cabinets, ensure the wall construction is strong enough to support the weight of the fully loaded unit and that appropriate fixings are used. Wall cabinets must be fully secured using all supplied hanging brackets and corner gussets, as specified in the installation guide.


If you are unsure, seek professional advice before proceeding.

Remember to take care when unpacking. Please keep your workspace clean, clear and tidy when working. This will help keep all items safe from any damages. Any un-needed cardboard or plastic should be flattened down and placed in the bin.

A minimum of two people will be needed to lift the unit.

Removing the frontal


Before installing the unit, remove the frontal by pulling the release catch.

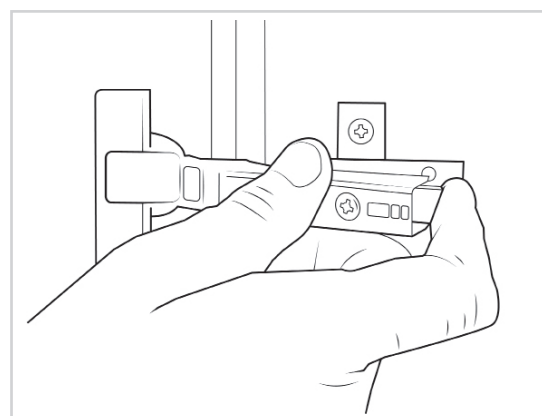



Removing the fittings

Remove all content so the unit is empty.

All fittings should be kept on a clean and level surface.

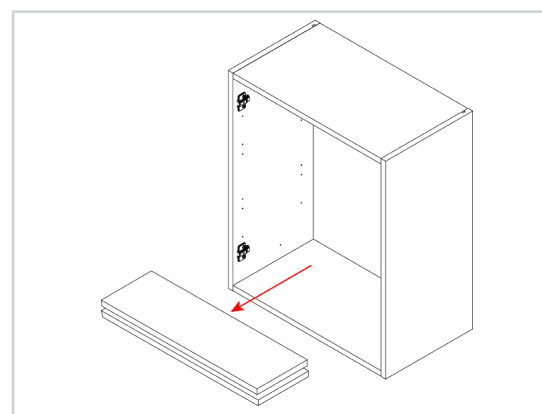


The next few steps will take place on the back of the wall unit.

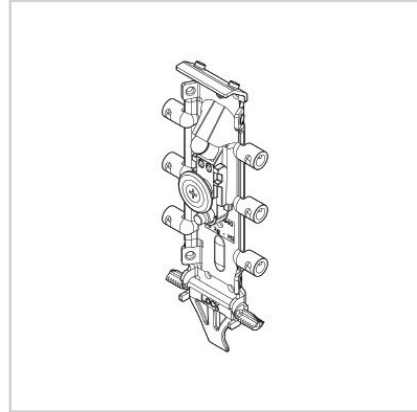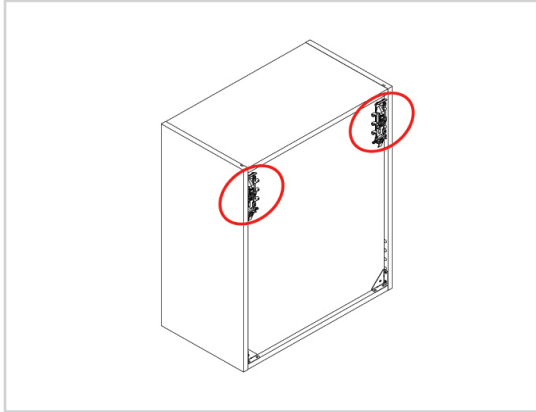


Installing the wall hanging bracket


Insert the hanging bracket into pre-drilled holes.


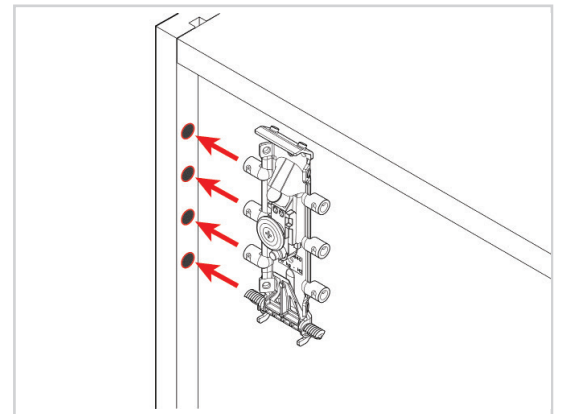


Rotate the locking lever down **180 degrees**.

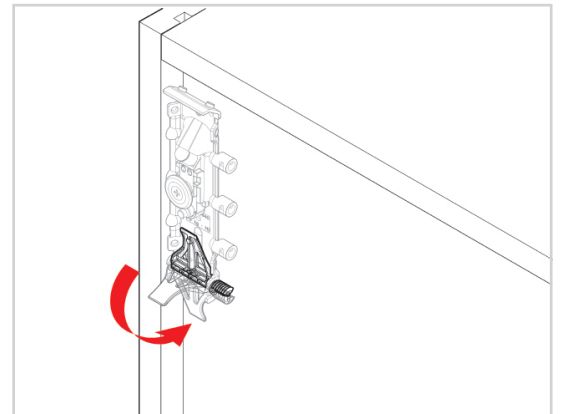


Secure with provided **2x20mm** screws per bracket.

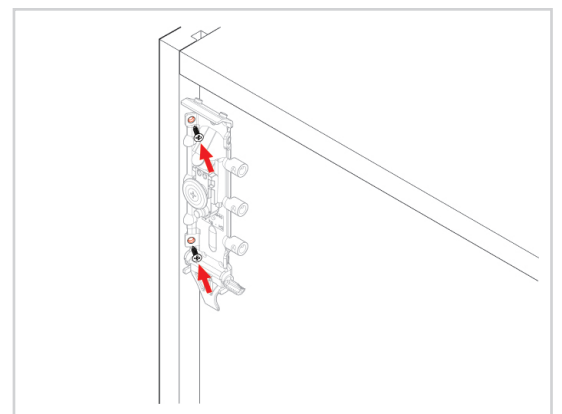

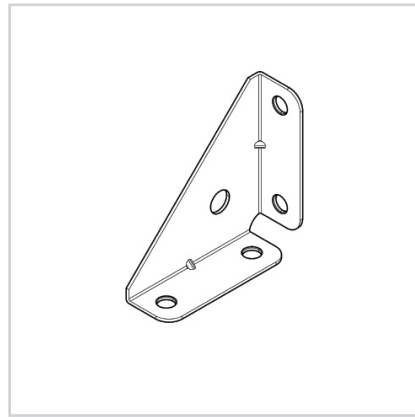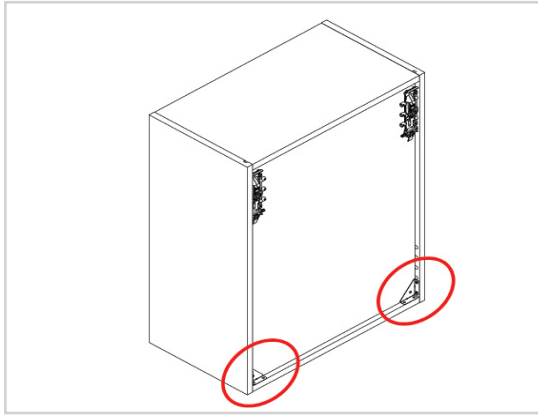


Installing the corner gussets

Secure the corner gussets to both the bottom corners of the wall unit using **4x15mm** screws per gussets.

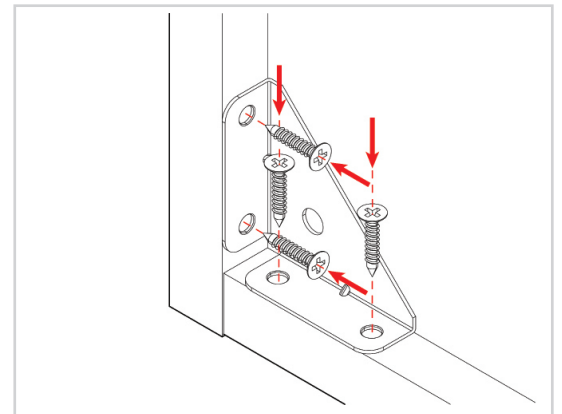

Creating the pilot holes


Drill small pilot hole through the back panel of the unit through the gusset.

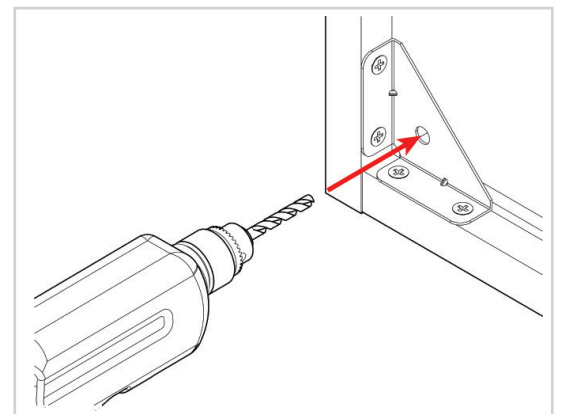


Finding the fixing point for the wall brackets

The fixing point for the wall hanging brackets are **125mm** below the top of the units.

Draw a line on the wall **125mm** below the top line of the unit (Already marked).

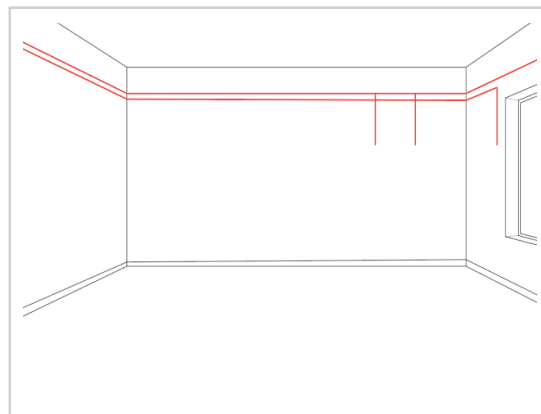


Draw a vertical line **20mm** inside either side of the pre marked wall unit positions.

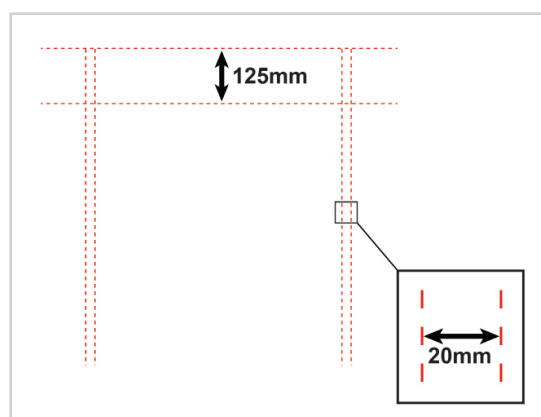

Snapping the wall hanging plate

Bend the wall hanging plate down the middle until it snaps into two pieces.

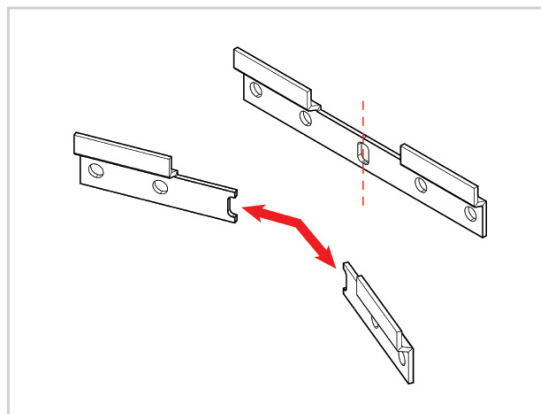

No screws or wall plugs are provided for attaching the unit to the wall. This is due to variations in wall construction.


Before drilling into the wall you MUST check for any hidden services or pipework within the walls.

Attaching the wall hanging bracket to the wall

Position the **2x** hanging brackets as shown and mark the holes onto the wall.

Remove the hanging bracket, then drill holes into the wall of an appropriate size for the for the wall plug require.

Attach the hanging bracket onto the wall by screwing through the holes on the hanging bracket into the holes on the wall.

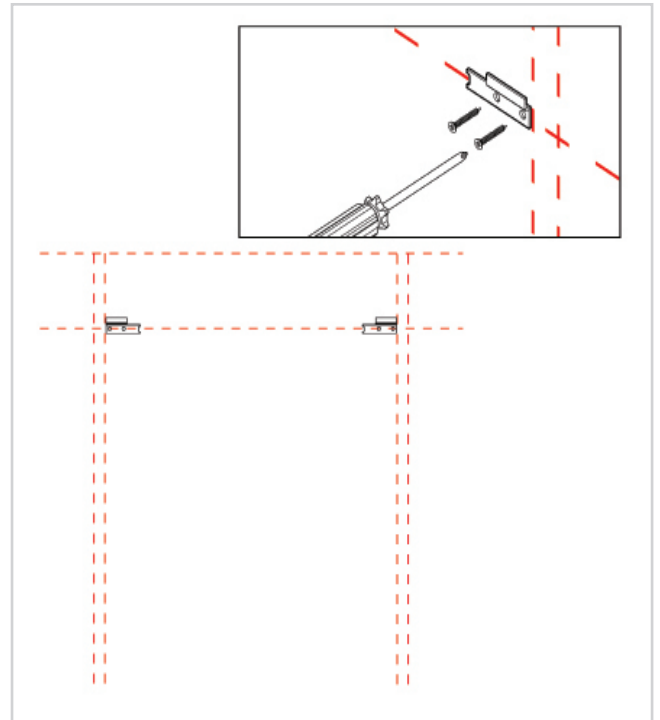


In order for to complete the steps below the red screw found on the wall unit on the hanging bracket will need to be screwed all the way out.

Lifting the unit into place

Lift the unit against the wall slightly higher than its finished height. Lower the unit down onto the wall hanging bracket.

Before releasing the unit, gently tug it to ensure it is securely supported by the hanging brackets.

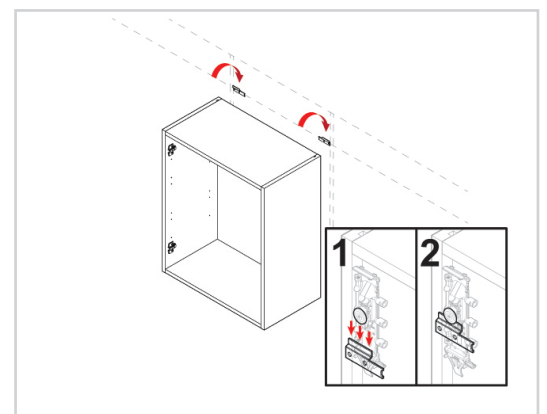

Adjusting the wall brackets

Using the points below to adjust the unit to suit.


Place the cover cap once adjustments have taken place.

A- Rotate the screw clockwise to move the unit up. Anti-clockwise for down.

B- Adjust the depth using centre screw.

C- Screw the red screw until it touches the plate to lock in position.

Place cover caps over the wall brackets.

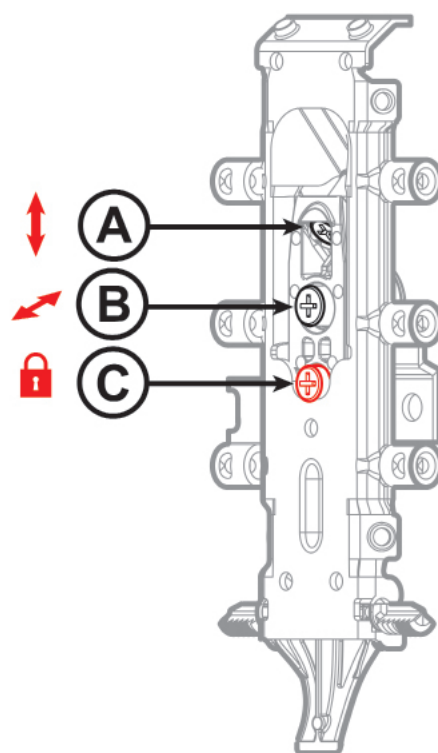

Double check units are level after adjustments.
Use a spirit level to ensure the units are level front to back, left to right and diagonally.


No screws or wall plugs are provided for attaching the unit to the wall. This is due to variations in wall construction.

Before drilling into the wall you **MUST** check for any hidden services or pipework within the walls.

Fixing the wall unit to the wall

Fix the unit to the wall through the gussets using the appropriate wall plug to attach to the wall.

Use cover cap to conceal the screws.

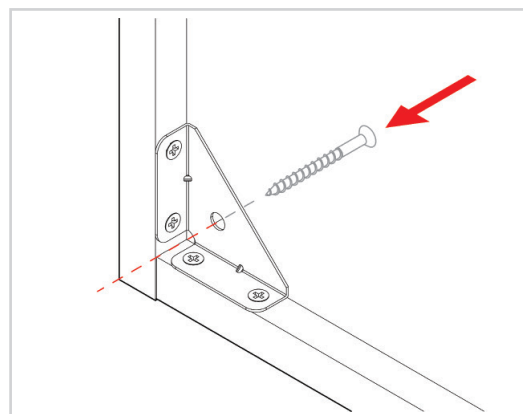


Securing to adjacent units

Clamp together the two units, checking the front edges are level and flush.

Using the screws provided, **1x30mm** screw should be fixed into each corner of the carcass side.

The screws can be concealed by placing them behind the shelf or behind the hinge plates. The cover caps can be used to hide any visible screw heads that remain.

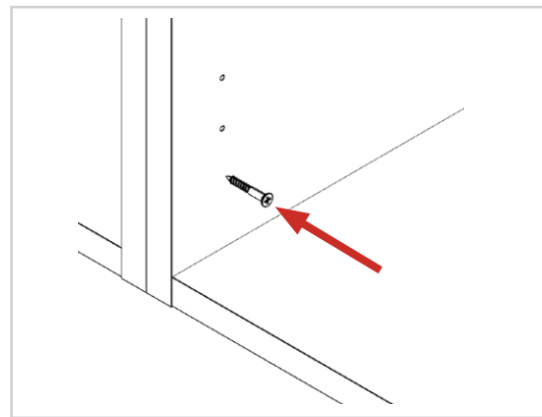


Placing the shelf into position

Position the shelf pegs into the pre-drilled holes.


Place the shelves into position so the pin of the shelf peg is inserted into the pre-drilled holes.

The shelves will touch the back panel when installed, if there is a gap between the back panel and shelf then the shelf has been installed back to front and the shelf needs to be rotated.

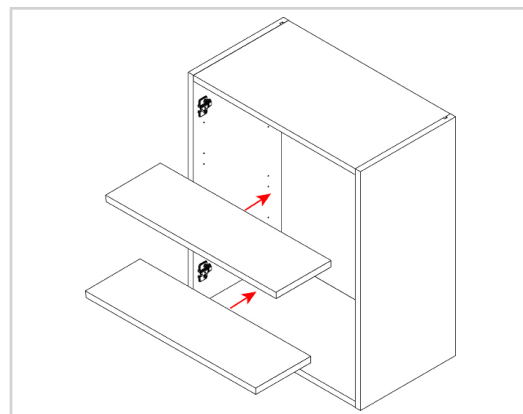


Attaching the frontal

The frontal should be re-attached to the unit by clipping the hinges onto the hinge plates. The bar of the hinge needs to be positioned into the hooks on the hinge plate. Then the rear of the hinge pushed to the hinge plate until it clicks.

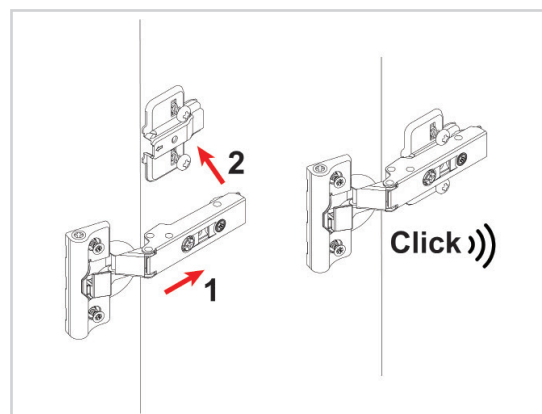


Adding the door buffers

Position **1x** door buffer at the top and bottom corners of the carcass, as illustrated in the image.

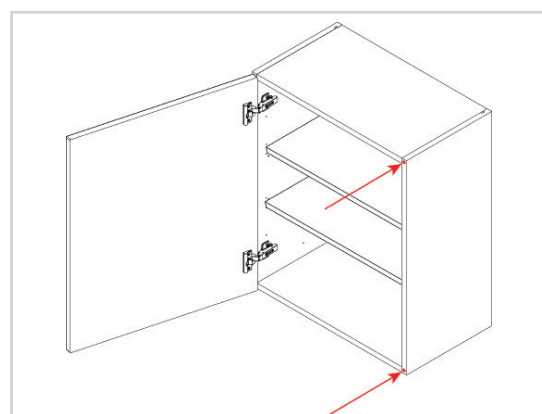

Removing the hinge cover cap

Use a flathead screwdriver to remove the hinge cover cap by inserting it into the slot of the cover cap and twisting.

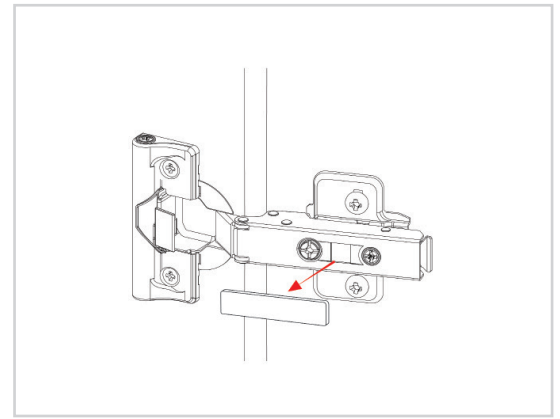


Adjusting the hinge

To adjust the hinges, use a screwdriver as required at points 1 and 2.

Point 1 - Will adjust the frontals left and right.

Point 2 - Will adjust the frontals in and out.

To move the hinges up or down, loosen the screws A and B. Manoeuvre the door, then re-tighten the screws.

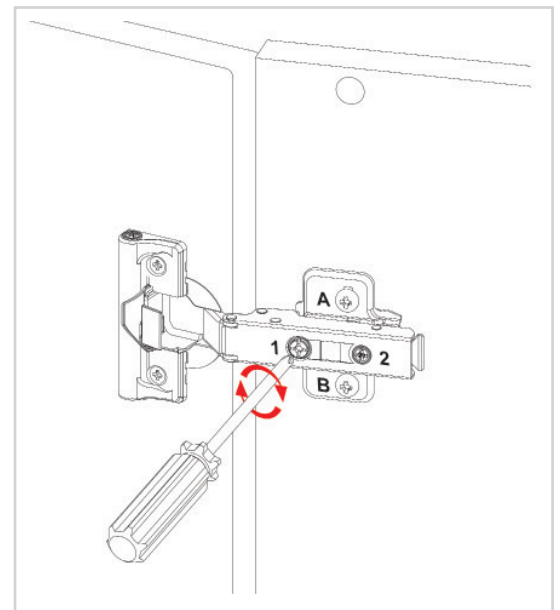


Altering the soft-close

Fit the hinge cover caps to the hinges by pressing down to secure.

Adjust the soft-close to suit (if required).

The soft-close is adjusted by turning the screw at the top of the hinge clockwise or anti-clockwise.

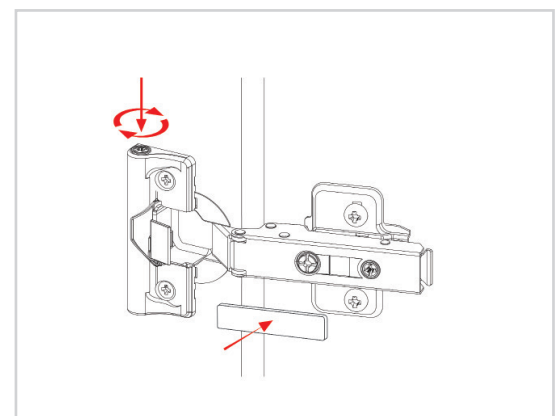

Cleaning the unit

Finally, the unit should be thoroughly cleaned to remove any debris that may have accumulated during the installation.

