


Installing and Removing the Drawer Frontal

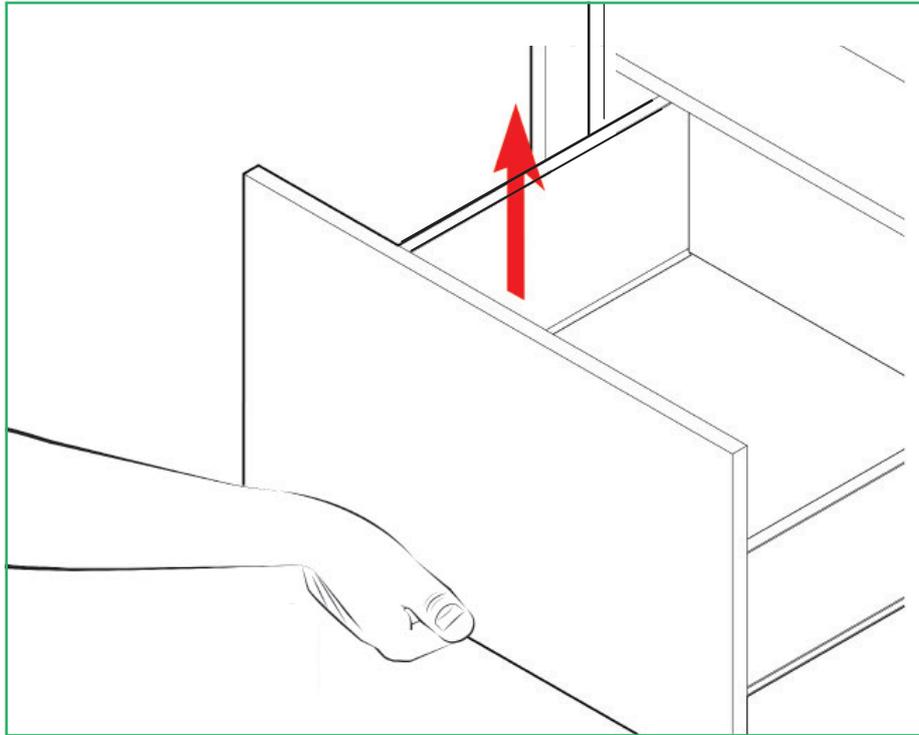

Page
1-4

Vogue, Eay-Fit Soft Close, Infinity and Linea Drawer


Page
5-7

Infinity Plus and Milano Drawer

Removing the old drawer frontal


Removing the drawer frontal

Remove the drawer/s by pulling the drawer all the way out, and then pulling the front of the drawer upwards.

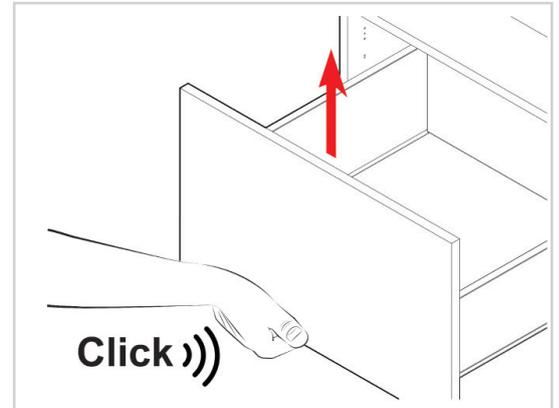

Removing the drawer cover caps


To remove the drawer cover cap found at the side of the drawer, use a flathead screwdriver in the groove of the cover cap to take the cap off.

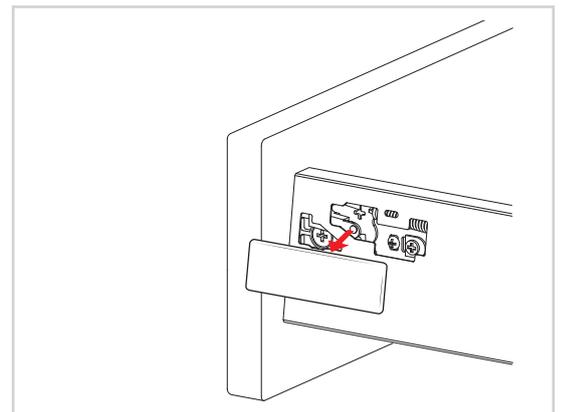

Attaching the hinges to the frontal

Using a screwdriver return the release mechanism.


Screw while applying downward pressure to release.

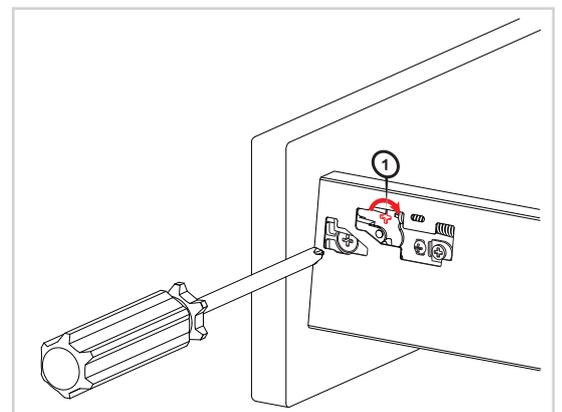

Removing the fixing

Unscrew the **3** screws from each of the frontal fixings.

Keep the screws and frontal fixings as these will be attached to the new frontal.

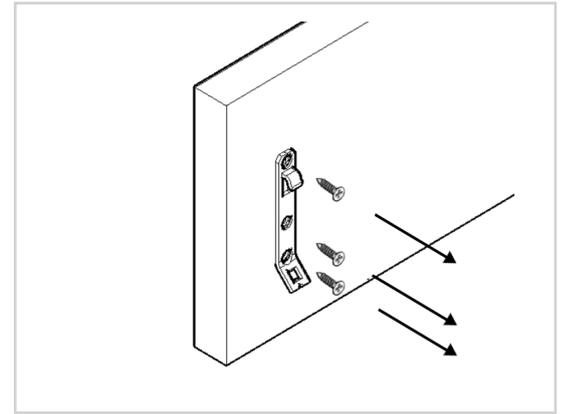


Remember to take care when unpacking. Please keep your workspace clean, clear and tidy when working. This will help keep all items safe from any damages. Any un-needed cardboard or plastic should be flattened down and placed in the bin.

Attaching the new drawer frontal


Attaching the frontal fixing

Attach the frontal fixings to the new drawer frontal using **3x15mm** screws per bracket using the screw hole positions as shown on both sides.

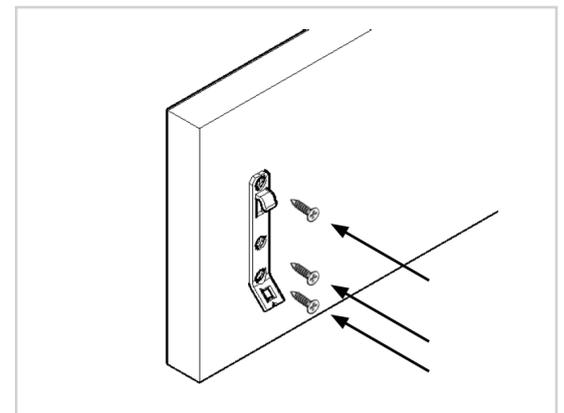

Attaching the drawer frontal


Attach the drawer front by pushing the frontal onto the sides, aligning the drawer mechanism with the fixings.

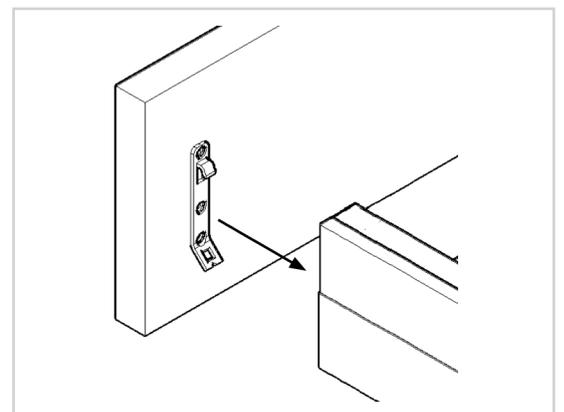

Inserting the drawers

Slide the drawer onto the runners, make sure the runner mechanism and the drawer sides' groove line up.

Push the drawer back into the unit after it has been positioned on the runners; you should hear a click.

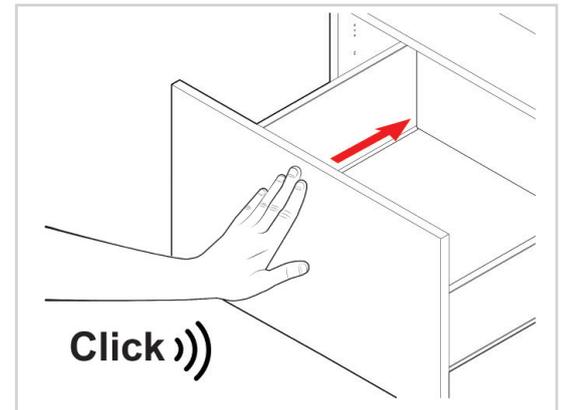

Adjusting the hinges and cover caps


Adjust hinges to suit. As shown in the image.

Point 1 - Will adjust the frontal left and right.

Point 2a - Will adjust the frontal up and down.


Point 2b - Will adjust the frontal tighten once in position.

Point 3 - Will adjust the frontal releasing fixing clip. Screw while applying downward pressure to release.

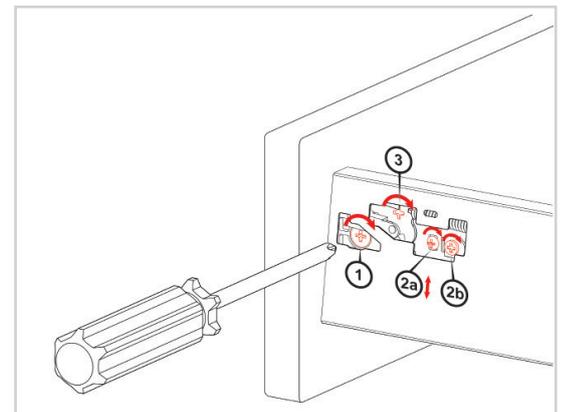

Fitting the drawer cover caps


Fit the drawer cover caps over the drawer side adjustment.

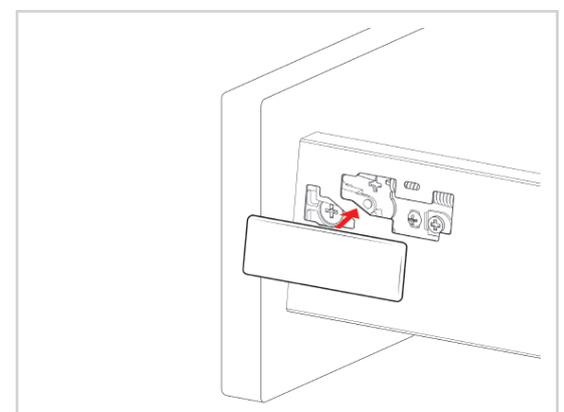

Removing the old drawer frontal



Removing the drawer

Remove the drawer/s by pulling the drawer all the way out, and then pulling the front of the drawer upwards.

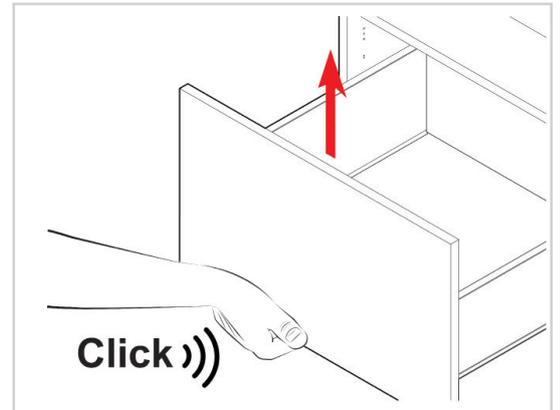

Removing the drawer frontal


To remove the drawer frontal press the fixing clips in. The clips are located on the underside of the drawer. Holding the fixing clips pushed in pull the frontal away from the mechanism.

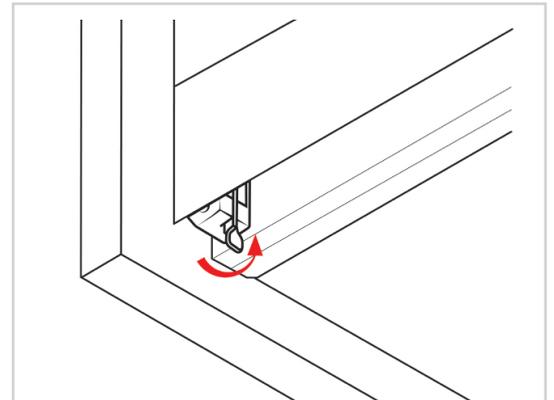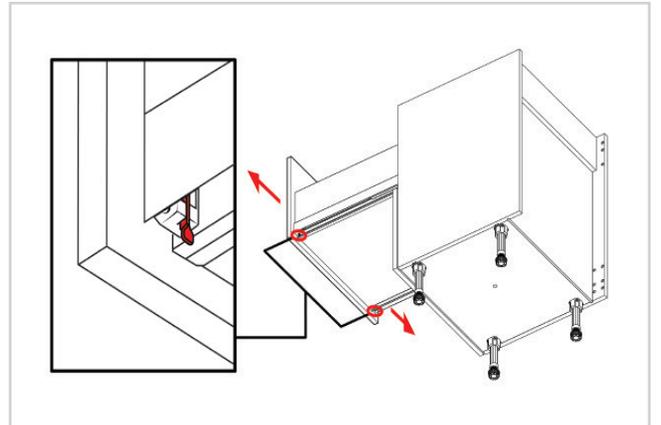

Removing the fixing

Unscrew the **3** screws from each of the frontal fixings.

Keep the screws and frontal fixings as these will be attached to the new frontal.

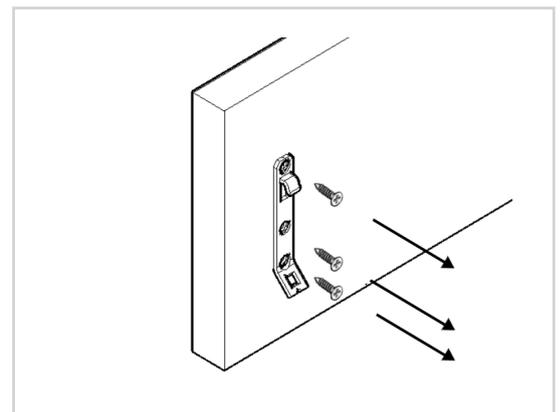


Remember to take care when unpacking. Please keep your workspace clean, clear and tidy when working. This will help keep all items safe from any damages. Any un-needed cardboard or plastic should be flattened down and placed in the bin.

Attaching the new drawer frontal


Attaching the frontal fixing

Attach the frontal fixings to the new drawer frontal using **3x15mm** screws per bracket using the screw hole positions as shown on both sides.

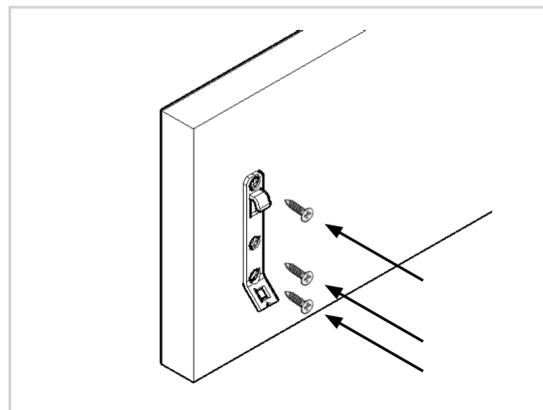

Attaching the drawer frontal


Attach the drawer front by pushing the frontal onto the sides, aligning the drawer mechanism with the fixings.

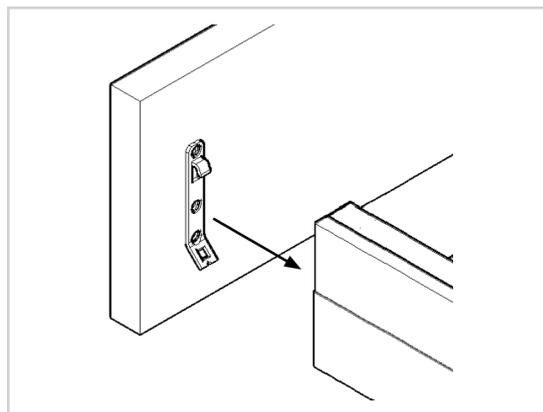

Inserting the drawers

Slide the drawer onto the runners, make sure the runner mechanism and the drawer sides' groove line up.

Push the drawer back into the unit after it has been positioned on the runners; you should hear a click.

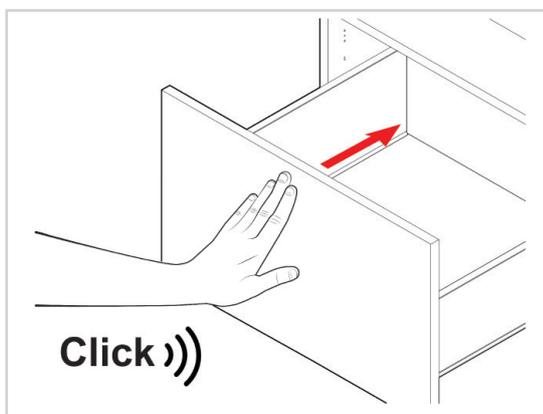





Adjusting the frontal horizontally

Use the fixing clips, which are found under the drawer's front, to adjust the drawers.

Step 1 - Press the fixing clips half way to meet the runners on the underside of the drawer.

Step 2 - Slide the drawer to the left or right to adjust.

Step 3 - To lock the frontal in place, by releasing the fastening clips on both side of the drawer.

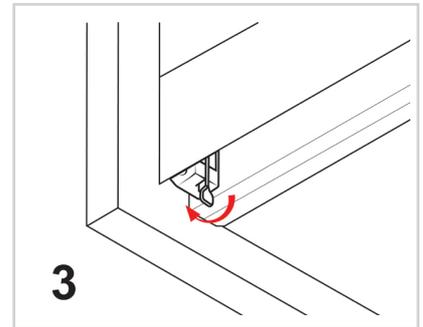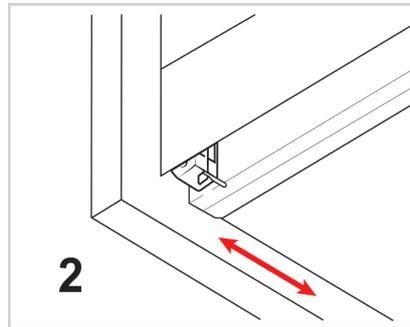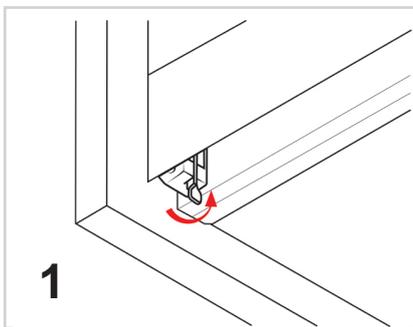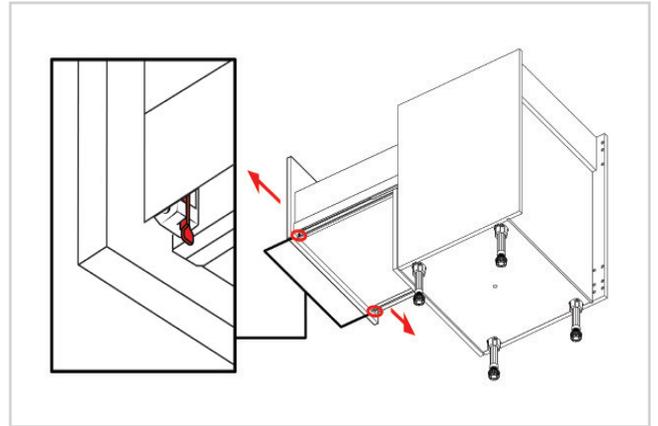

Adjusting the frontal height

To adjust the height of the frontal, use a screwdriver as required at **points 1** and **2**.

Step 1 - Loosen both of the screws at **point 1**.

Step 2 - Turn the screw at **point 2** to adjust the frontal's height.

Step 3 - Once in the desired position re-tighten the screws at **point 1**.

