




San Julio 4-Hole Deck mount Bath mixer with c-Spout and handshower


ROHL Country Bath Collection

A2104LM (Metal Levers) A2104LP (Porcelain Levers) A2104XM (Cross Handles)

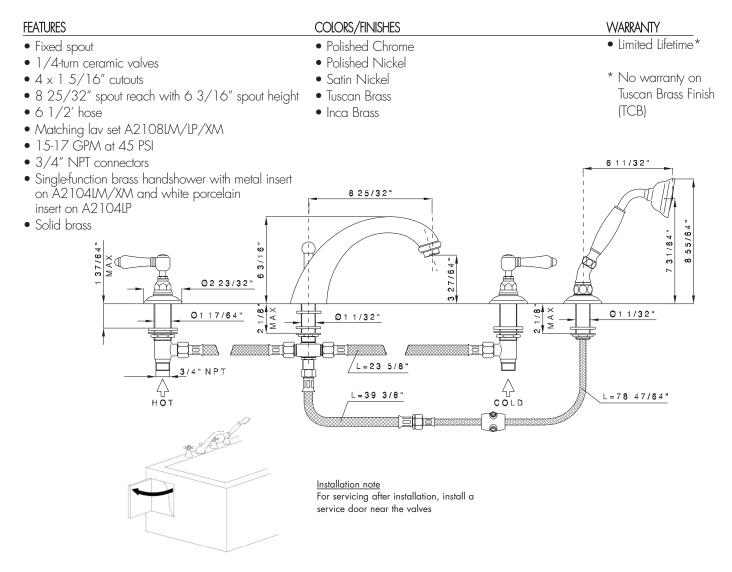



A2104LM Spare Parts

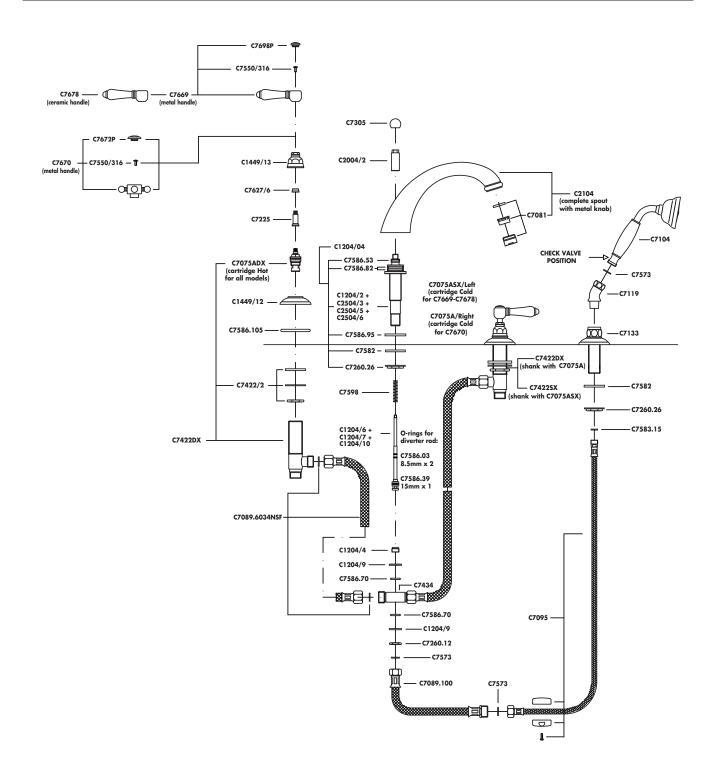




www.rohlhome.com

A2104LM Spare Parts

INSTALLATION AND CARE & MAINTENANCE GUIDE Installation guide

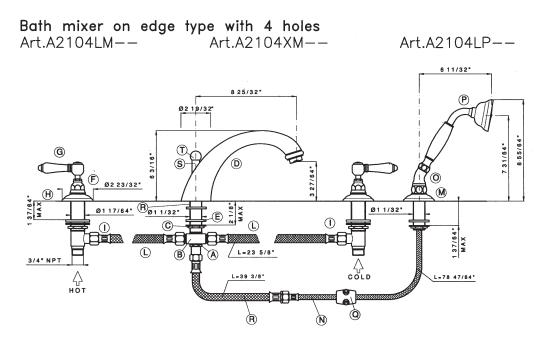

Installation must comply with local plumbing codes

a – Preparation
Flush out the pipework to remove any foreign matter.
The hot supply should be on the left when viewed from the front of the fitting.
b – Assembly
- Disassemble the nut (A), the two holes cross (B) and the fixing kit (C).
- Introduce the spout shank (R) in the hole of the deck, placing the rubber washer (E), between
the base of the shank and the deck.
- Fix the shank (R) placing, before the washer and then the metal nut with disk.
- Introduce the spout body (D) in the spout shank (R) and fix it, placing before the block
connection (S) and then the knob (T).
- Assemble the two hole cross (B) placing, before the metal ring and then the O-Ring washer.
- Fix the two holes cross (B) placing, before the O-Ring and then the metal ring and the nut (A).
- Unscrew the cover valve (F) and extract the handle set (G). Unscrew the cap (H).
- Assemble the valve body (I), placing before the metal nut with disk and then the rubber washer.
- Introduce the valve body (I) in the hole of the deck and fix it, placing before the o-ring washer
and then the cap (H).
- Assemble the handle set (G) screwing the cover valve (F). ATTENTION: Be sure that the handle has no play.
- Unscrew the cap (H) just to get in touch with the cover valve (F).

- Lock the valve body (I) underside with the brass nut.



www.rohlhome.com

Installation Instructions

	ATTENTION
	Maximum fixing nut torque value = 10 lbf.ft.
- Repeat	this procedure for the cold valve.
- Connec	t the hot and cold valve body (I) to the two holes cross (B) using the flexible hoses (L)
and pla	acing the washer between the two parts.
•	w the fixing kit of the shower holder on bath edge (M).
	ice the shower holder in the hole of the deck and fix it, placing before the rubber washer
	en the metal disk and the nut.
	t the nylon flex hose (N) to the stainless steel hose (R), placing the washer
	• • • • • • •
	n the two parts. It the stainless steel hose (R) to the spout (D) with the hexagonal nut, placing the washer
	n the two parts.
	ice the other end of hose in the shower holder (M).
	ct the hose to the curved joint (0), placing the washer between the two parts.
	ct the hand shower (P) to the curved joint (0), placing the washer between the two parts.
	ble counterweight (Q) at the nylon flex hose (N).
	ct hot and cold water supplies to side valve inlet.
 Ensure 	all connections are firmly tightened.
c –]	Before use
Turn on	the Hot and Cold supplies to the faucet.
	n temperature for Hot water supply to the faucet is 145° F.
	recommended pressure is 15 psi – Maximum recommended pressure is 75 psi.
	ne installation carefully for leaks.
	r building work is to be carried out in the vici of the faucet, it should be covered to
	paint, adhesive, etc. from damaging the surface.
•	
Care	and use for finishes
Country	Bath Products are all authentic finishes that have not been coated with any product.
spotting soft bru 409 or	ach use, pat the fixture down to remove any excess water. This will prevent any water or mineral build—up. Use only soft liquid soap and water to clean the surface. Use a ush to clean any gaps. Avoid any products that have ammonia or alcohol like Windex, Fantastik. These products can damage the finish leaving black or white spots. Never use usive product like Softscrub, Comet, Ajax or Bon Ami.
For dee	p polishing we recommend Bruno's Wax for all finishings.
of the	Brass is a living finish and has no warranty. It will lighten with use. To extend the life finish, apply Bruno's Wax by patting it on, letting it dry and patting it off. Never rub or s finish.
	G: the use of cleaning products not recommended might irreparably harm the surfaces of the which in such case are not covered by our warranty.
Limes	scale
The fauc	et is fitted with an aeration device in the Hot/Cold water outlet.
	need occasional cleaning especially in hard water areas.
	accomplished by unscrewing the outlet in a counter clockwise direction, dismantling and
leaving t	he inner screen mesh immersed over night in vinegar or lemon juice. use chemical descaling liquids for this purpose.

www.rohlhome.com



Installation Instructions

ATTENTION

READ THESE INSTRUCTIONS BEFORE INSTALLATION AND USE OF ALL FAUCETS AND WALL VALVES

INSTALLATION and WARRANTY INSTRUCTIONS TECHNICAL INFORMATION

All flexible hoses are designed and manufactured for use with water in exposed locations only. **Do not expose** to household cleaners, chlorine, cloride, hydrochloric acid or other corrosive chemicals.

- All connections with threads M10x1 male must be hand tighten. Do not over tighten. Over tightening may cause damage to the hose.

All faucets washers and o-rings are designed and manufactured for use with water. **Do not expose** to household cleaners, chlorine, cloride, hydrochloric acid or other corrosive chemicals.

Faucets are designed for use with the tempratures and pressures listed below:

- minimum cold water supply 50 °F
- maximum hot water supply 145 °F
- minimum pressure 15 psi
- maximum pressure 75 psi
- maximum fixing torque value = 10 lbf.ft.

Please note: The recommended best pressure for best performance is between 40 psi and 60 psi. More pressure than 60 psi or less pressure than 40 psi may affect the diverting action in side spray faucets.

- Do not use any Rohl Country/ Nicolazzi faucet with sulphorous water.
- The minimum temperature for all faucets is 50 degrees F. Below 50 degrees F will void the warranty.
- □ When available, filter systems must be placed between hot and cold supply lines and the faucet. Improper use or non-use of filters may make diverting faucets with hand sprays perform poorly.
- Don't modify faucet and their components
- □ Use only original spare parts if there are replacements to be ordered.
- □ Installation must be made by authorized plumbers or installers. Improper installation or diagnosis of problems is not covered by the warranty.
- □ Yearly maintenance of cleaning and flushing is recommended.

Operation and use of any faucet or wall valve that do not conform to these technical instructions will void the warranty.