



This exploded view diagram illustrates the assembly of a refrigerator door. The main components are shown in their relative positions, with numbered callouts (001-064) identifying each part. The door panel (001) is shown on the left, with internal components like the handle (015) and hinge (016) visible. The door frame (002) is shown on the right, with internal components like the hinge (016) and handle (015) visible. The diagram includes callouts for various screws (003, 004, 005, 006, 007, 008, 009, 010, 011, 012, 013, 014, 015, 016, 017, 018, 019, 020, 021, 022, 023, 024, 025, 026, 027, 028, 029, 030, 031, 032, 033, 034, 035, 036, 037, 038, 039, 040, 041, 042, 043, 044, 045, 046, 047, 048, 049, 050, 051, 052, 053, 054, 055, 056, 057, 058, 059, 060, 061, 062, 063, 064) and other hardware (001, 002, 003, 004, 005, 006, 007, 008, 009, 010, 011, 012, 013, 014, 015, 016, 017, 018, 019, 020, 021, 022, 023, 024, 025, 026, 027, 028, 029, 030, 031, 032, 033, 034, 035, 036, 037, 038, 039, 040, 041, 042, 043, 044, 045, 046, 047, 048, 049, 050, 051, 052, 053, 054, 055, 056, 057, 058, 059, 060, 061, 062, 063, 064). Letters C, D, and E indicate specific assembly points or steps.


External outfitting N-0751M-DV

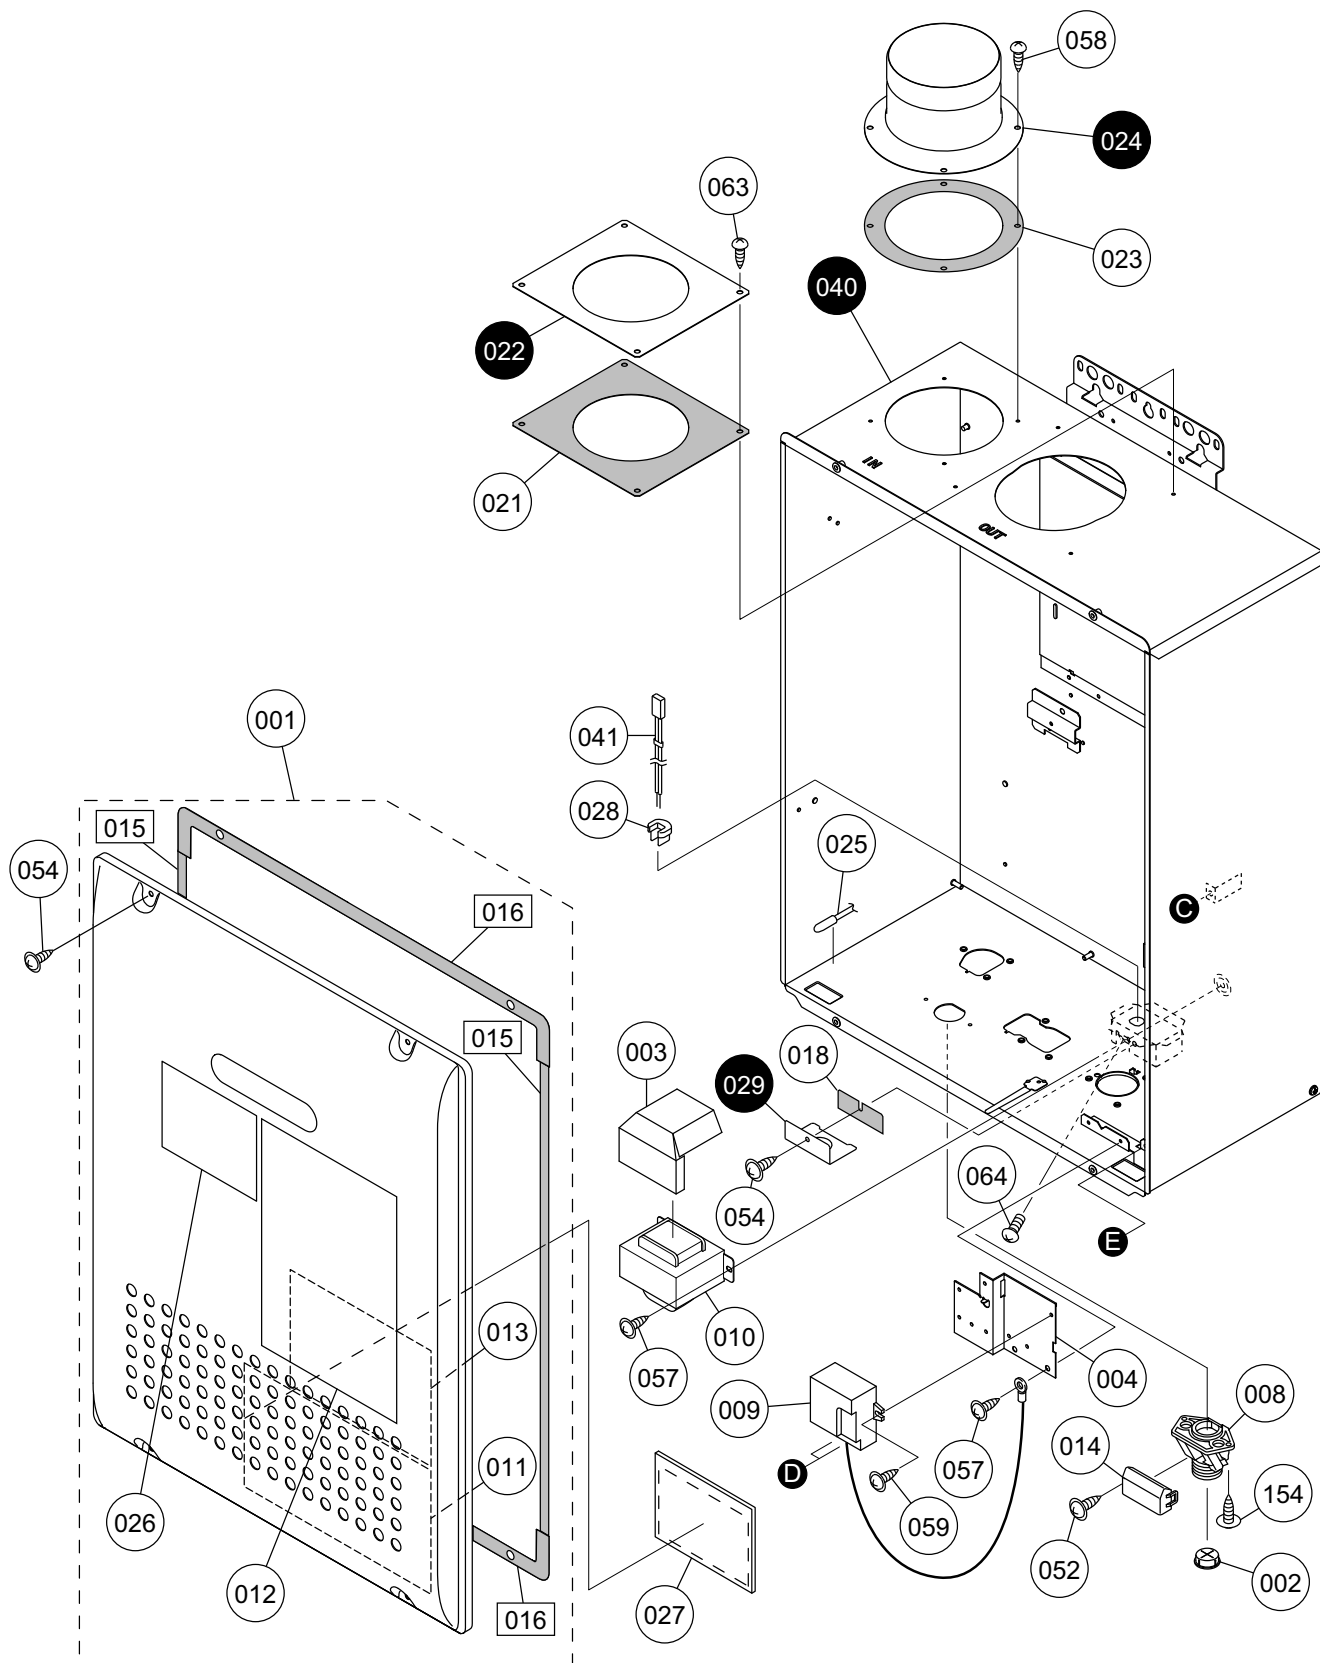

External outfitting N-0751M

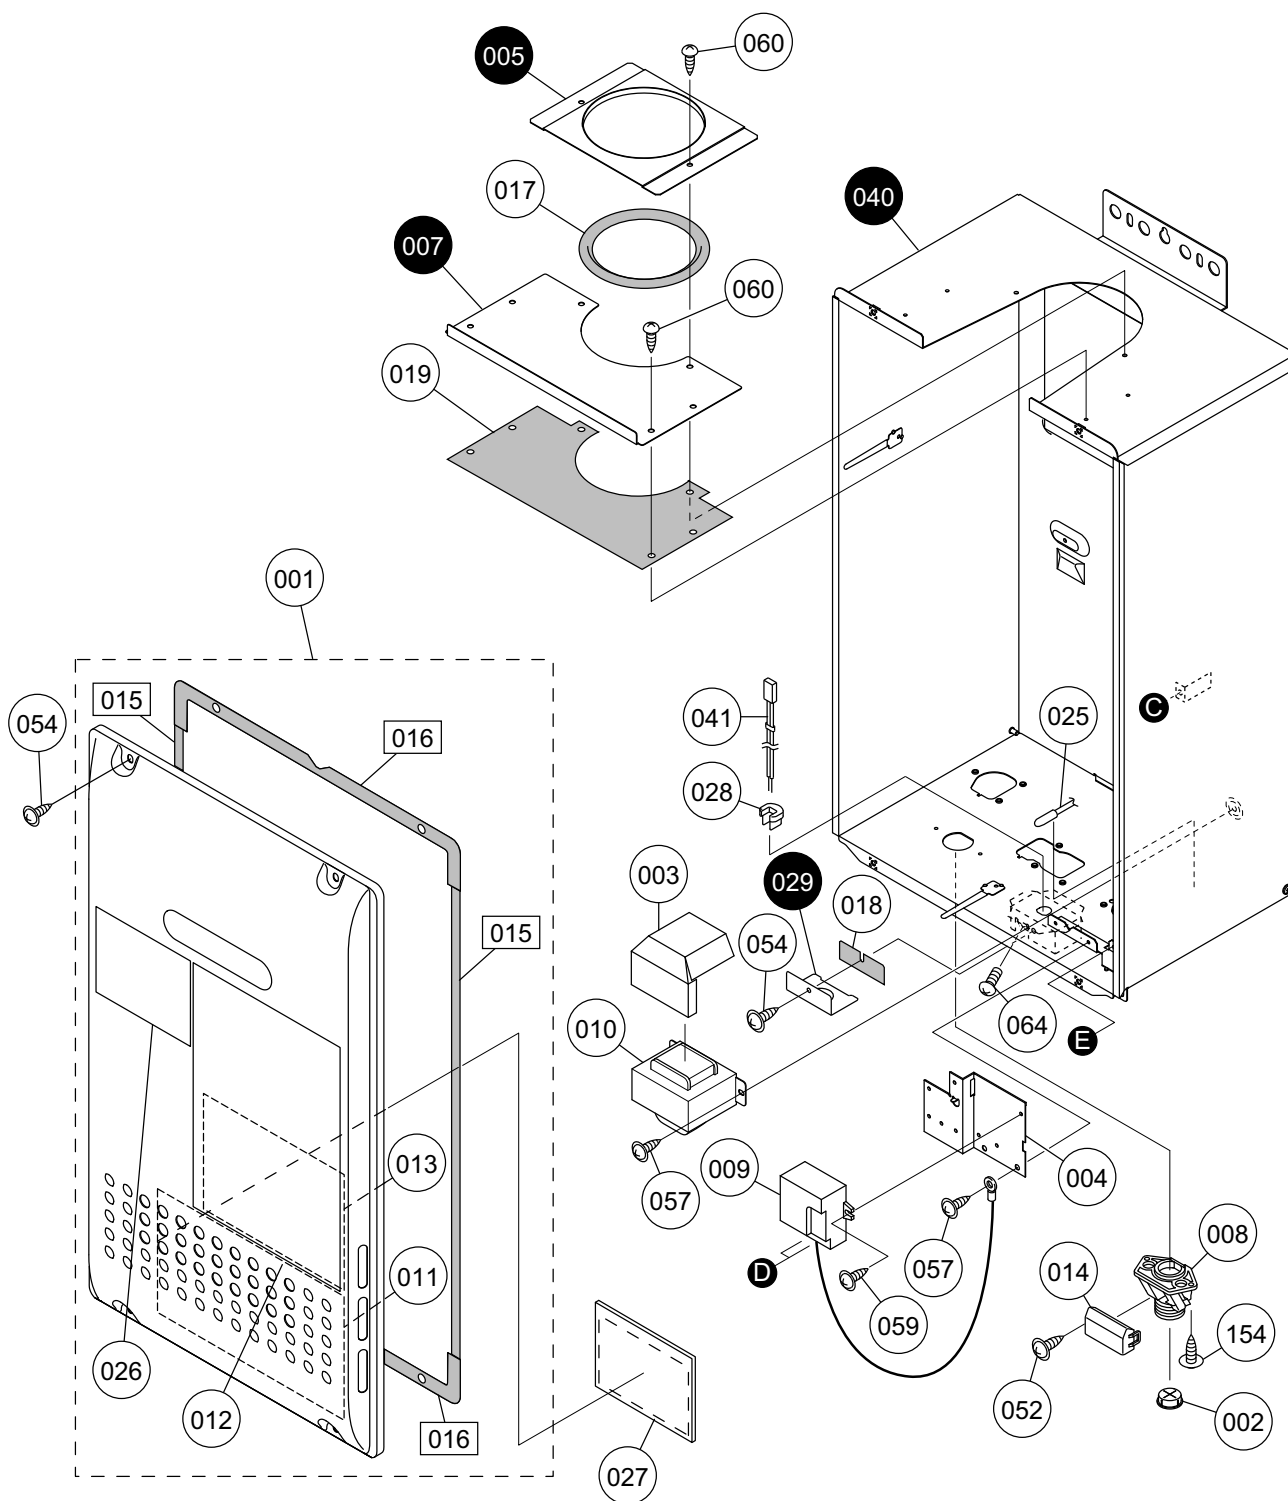


External outfitting N-0751M-DVC(CA)

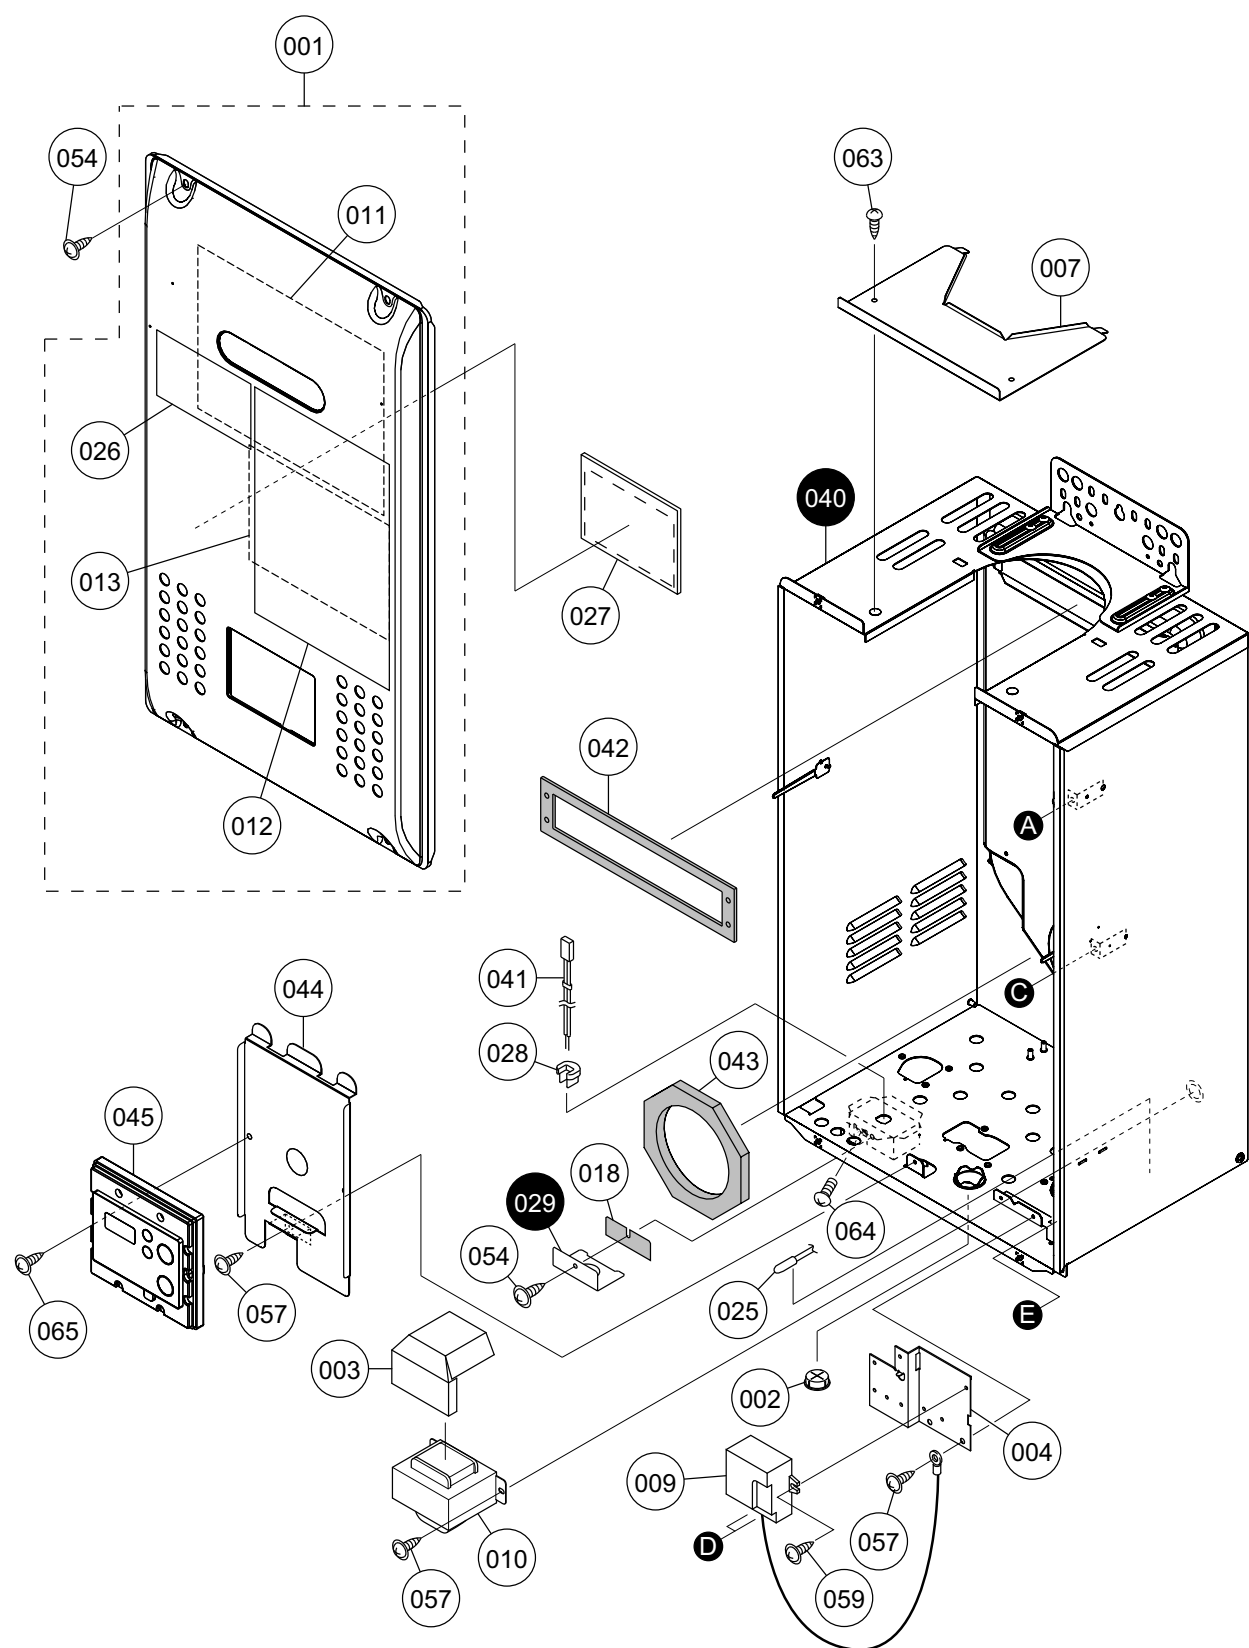

External outfitting N-0751M-OD,0751M-DV,0751M,0751M-DVC(CA)

Part Nos.	Part Names	Order Nos.	Q'ty/unit
001	N-0751M-OD Front set-AS N-0751M-DV Front set-AS N-0751M Front set-AS N-0751M-DVC Front set-AS	SKC7444 SKC7445 SKC7446 SKE7369	1<0751M-OD> 1<0751M-DV> 1<0751M> 1<0751M-DVC(-CA)>
002	Grommet CXP	CXPA026	1
003	Transformer cover ELV	ELVA055	1
004	Mounting plate for terminal block DZT	DZTA006	1
005	Case top cover 2 EDL	EDLA005	1<0751M>
007	Case top cover ELV	ELVA006	1<0751M>
	Case top cover FFA ELV	ELVA099	1<0751M-DVC(-CA)>
008	External connection terminal block set DNS	DNSA026	1<0751M-OD> 1<0751M-DV> 1<0751M>
009	Current leakage safety device DTJ	DTJJ015	1
010	Transformer EDN	EDNJ006	1
011	Connection diagram label ELV	ELVK001	1
012	Caution label ENG ELV	ELVK003	1
013	Caution label FRE ELV	ELVK006	1
014	External connection terminal block cover DNS	DNSA025	1<0751M-OD> 1<0751M-DV>
015	Front packing L AAP	AAPL017	1<0751M> 2<0751M-OD> 2<0751M-DV> 2<0751M>
016	Front packing 1 EAA	EAA002	2<0751M-OD+ 0751M>
	Front packing S AAP	AAPL015	2<0751M-DV>
017	Exhaust cylinder packing EDL	EDLL002	1<0751M>
018	Junction box cover packing ENW	ENWL005	1
019	Case top packing ELV	ELVL004	1<0751M>
021	Exhaust cover packing DCG	DCGL014	1<0751M-DV>
022	Exhaust cover FF100 EHK	EHKF242	1<0751M-DV>
023	Intake pipe packing EHK	EHKL084	1<0751M-DV>
024	Intake pipe ELE	ELEF001	1<0751M-DV>
025	Air thermistor BWC	BWCH003	1
026	Rating plate 2 OD (W) ELV	ELVK009	1<0751M-OD>
	Rating plate 2 DV (FF) ELV	ELVK010	1<0751M-DV>
	Rating plate 2 H ELV	ELVK004	1<0751M>
	Rating plate 2 DVC(FFA) ELV	ELVK025	1<0751M-DVC(-CA)>
027	Parts list label set ELV-A	ELVK062	1
028	Cord bushing SR-5P-4	SAE6198	1
029	Junction box cover ENW	ENWA015	1
040	Case SET OD ELV-A	ELVA322	1<0751M-OD>
	Case SET DV ELV-A	ELVA323	1<0751M-DV>
	Case SET ELV-A	ELVA321	1<0751M>
	Case SET FFA ELV	ELVA081	1<0751M-DVC(-CA)>
041	Conduit 92-120V ENJ	ENJJ020	1
042	Duct packing ELV	ELVL014	1<0751M-DVC(-CA)>
043	Fan Suction packing ELV	ELVL013	1<0751M-DVC(-CA)>
044	Mounting plate for remote controller ELV	ELVA100	1<0751M-DVC(-CA)>
045	RC-7649M Body USA Unit QME	QMEJ008	1<0751M-DVC>
	RC-7650M Body ENG Unit QXU	QXUJ005	1<0751M-DVC-CA>
052	Cross recessed round-head collar P TIGHT screw 4X12		<0751M-OD> <0751M-DV> <0751M>
054	Cross recessed truss type3 EVERTIGHT tapping screw with PW 4X12		
056	Cross recessed bind machine screw M3.5X6		
057	Cross recessed round-head collar N-tapping screw 4X8		
058	Cross recessed round-head collar N-tapping screw 4X10		
059	Cross recessed round-head collar N-tapping screw 4X12		
060	Cross & straight recessed truss type3 S TIGHT tapping screw 4X10		<0751M>
063	Cross recessed truss N-tapping screw with PW 4X12		<0751M-DV> <0751M-DVC(-CA)>
064	Cross recessed truss machine screw M4X8		
065	Cross recessed round-head collar type3 EVERTIGHT tapping screw 4X18		<0751M-DVC(-CA)>


Combustion unit and gas route N-0751M-OD,0751M-DV,0751M,0751M-DVC(CA)

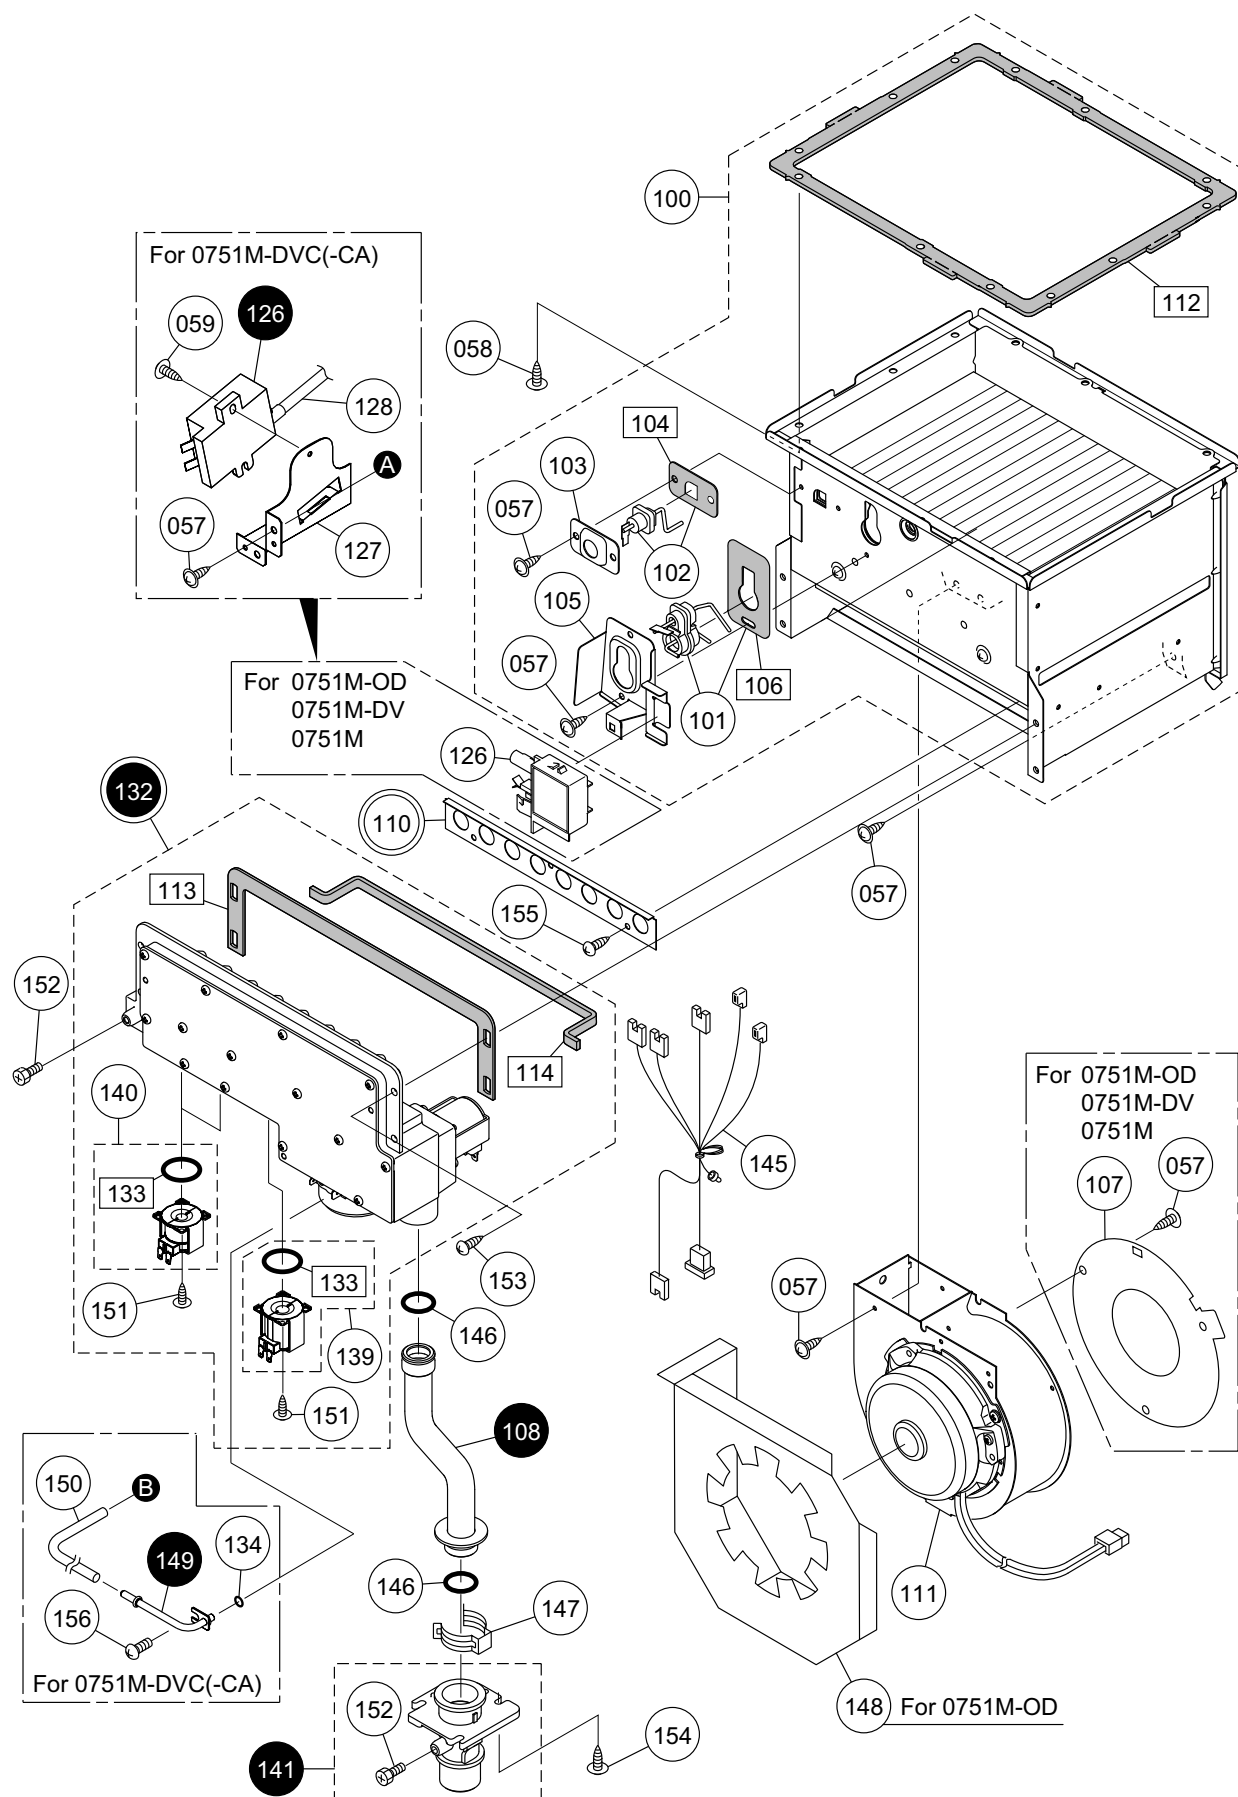


Combustion unit and gas route N-0751M-OD,0751M-DV,0751M,0751M-DVC(CA)

Part Nos.	Part Names	Order Nos.	Q'ty/unit
100	Combustion tube set ELV SET-V	SKC7447	1
101	Ignition plug ELV & packing EHK SETV	SKC7448	1
102	Flame rod ELV & packing DJP SETV	SKC7449	1
103	Sensor fixing plate DJP	DJPC012	1
104	Sensor packing DJP	DJPL004	1
105	Mounting plate for Plug H EGL	EGLC035	1
106	Plug packing H EHK	EHKL002	1
107	Bell-mouth ϕ 48 CRU	CRUC046	1<0751M-OD> 1<0751M-DV> 1<0751M>
108	Manifold pipe ELV	ELVE007	1<0751M-OD> 1<0751M-DV> 1<0751M>
	Manifold pipe FFA ELV	ELVE009	1<0751M-DVC(-CA)>
110	Main damper 11-13 ELV	ELVC051	1<0751M-OD>
	Main damper 9-13 ELV	ELVC053	1<0751M-DV NGA>
	Main damper 9-10 ELV	ELVC055	1<0751M-DV LPG>
	Main damper 13 ELV	ELVC052	1<0751M NGA>
	Main damper 11 ELV	ELVC054	1<0751M LPG> 1<0751M-DVC(-CA) LPG>
111	Main damper 9-13H ELV	ELVC057	1<0751M-DVC(-CA) NGA>
	Fan motor 100 EJA (EGN) SET-AS	SKC7470	1<0751M-OD> 1<0751M-DV> 1<0751M>
	Fan motor 110 ELV SET-AS	SKE7391	1<0751M-DVC(-CA)>
112	Suction air joint packing ELV	ELVL001	1
113	Manifold seal packing top ELV	ELVL003	1
114	Manifold seal packing bottom ELV	ELVL007	1
126	Igniter EHE	EHEJ003	1<0751M-OD> 1<0751M-DV> 1<0751M>
	Igniter AGV	AGVJ007	1<0751M-DVC(-CA)>
127	Mounting plate for igniter DTJ	DTJA015	1<0751M-DVC(-CA)>
128	High-voltage cord 470	SAC1229	1<0751M-DVC(-CA)>
132	Gas mech. manifold 29 ELV SET-AS	SKC7457	1<0751M-OD NGA>
	Gas mech. manifold 20 ELV SET-AS	SKC7456	1<0751M-DV NGA> 1<0751M NGA> 1<0751M-OD LPG> 1<0751M-DV LPG> 1<0751M LPG>
	Gas mech. manifold 21 ELV SET-AS	SKE7372	1<0751M-DVC(-CA) LPG>
	Gas mech. manifold 33 ELV SET-AS	SKE7373	1<0751M-DVC(-CA) NGA>
133	O-ring JASO 2030 type 1	SAA6044	3
134	O-ring P4	2100908	1<0751M-DVC(-CA)>
139	Solenoid S16 CRU SET-V	SBB7213	1
140	Solenoid S09L EBT SET-V	SBP7501	2
141	Gas fitting 20A SET ELV	ELVE021	1
145	Gas mech. harness ELV	ELVJ018	1
146	O-ring P18	2110903	2
147	Quick fastener 16B	6340407	1
148	Fan case waterproof cover ELV	ELVA060	1<0751M-OD>
149	Feed back pipe S EHK	EHKA046	1<0751M-DVC(-CA)>
150	Silicone tube ID3.5XT1 ELV	ELVL018	1<0751M-DVC(-CA)>
151	Cross recessed round-head SPAK machine screw with guide M4X12		
152	Cross recessed hexagon head machine screw M4X8		
153	Cross recessed round-head type3 EVERTIGHT tapping screw 5X16		
154	Cross recessed round-head collar type3 EVERTIGHT tapping screw 4X12		
155	Cross recessed round-head N-tapping screw 4X8		
156	Cross recessed round-head P TIGHT screw 4X6		<0751M-DVC(-CA)>


Hot-water feed route N-0751M-OD,0751M-DV,0751M

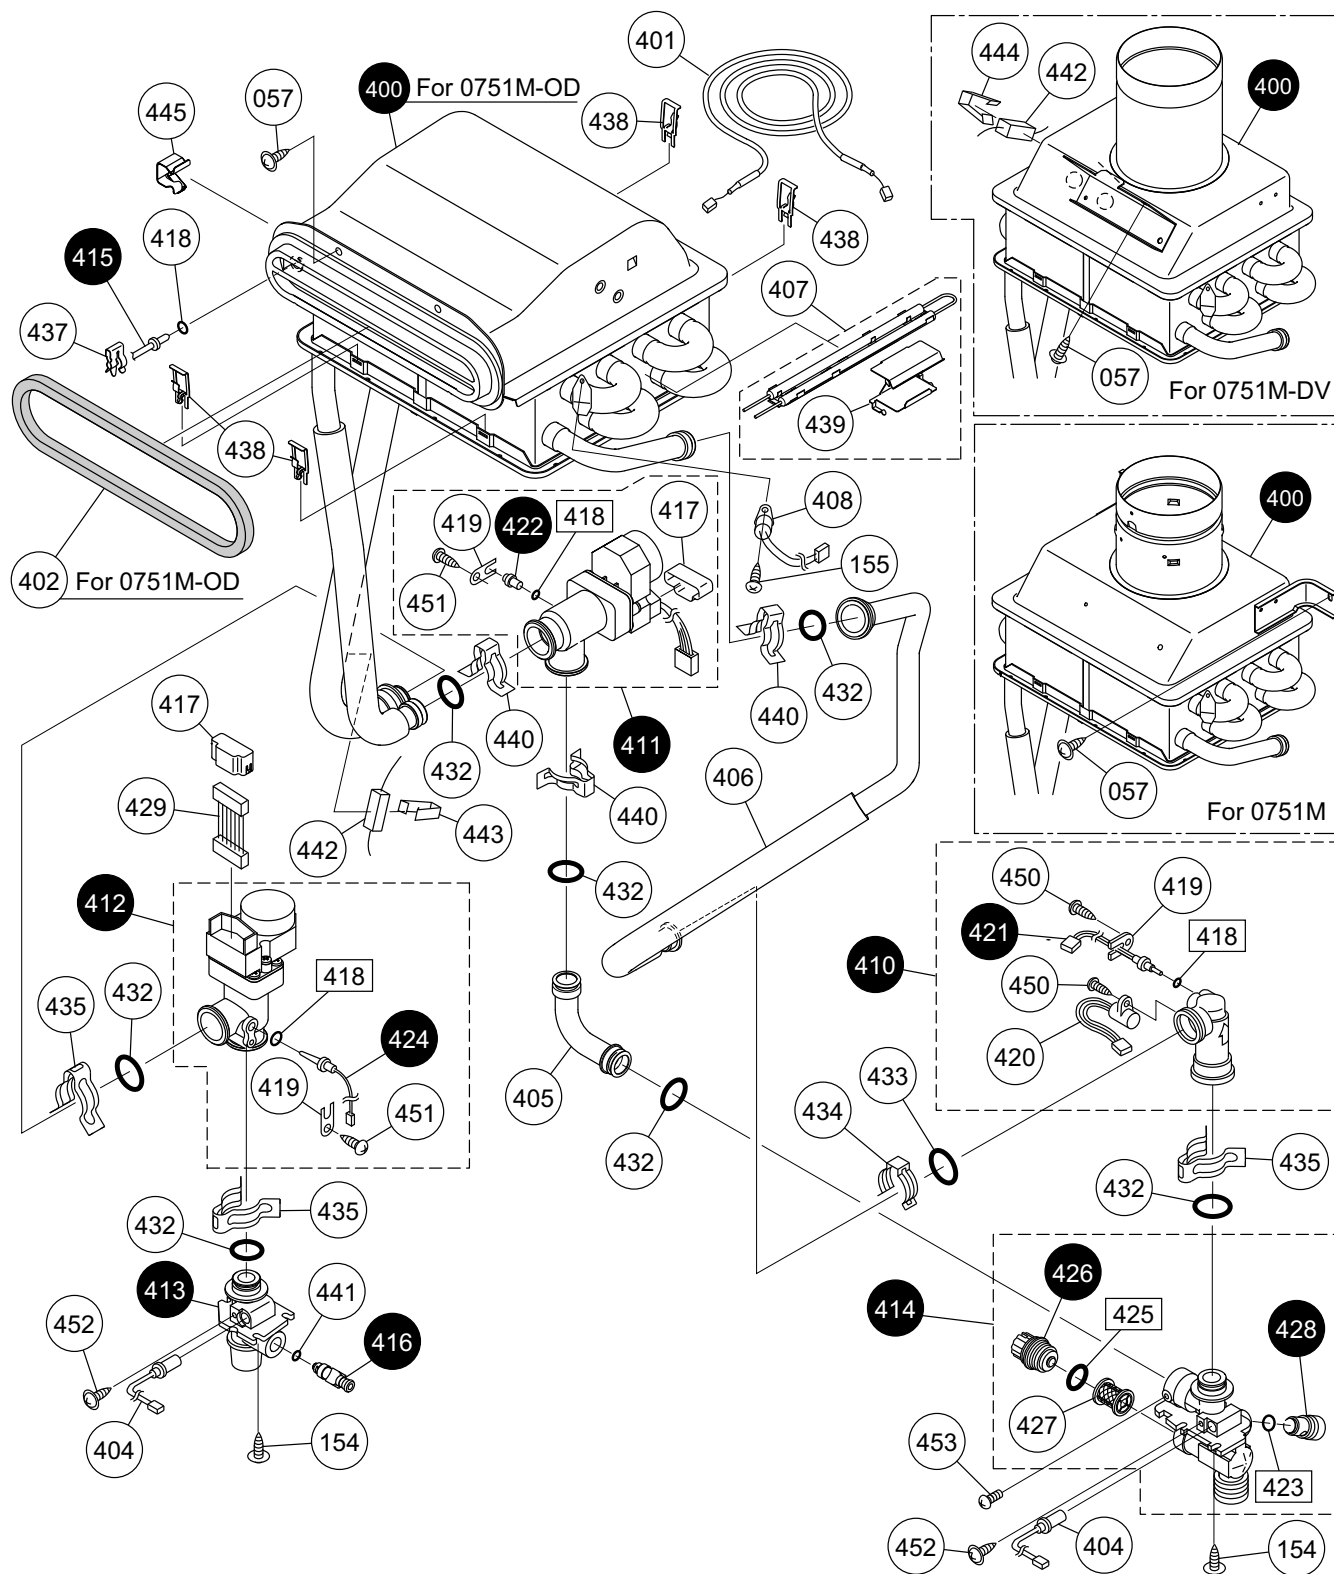


(Thermal fuse rounding procedure)

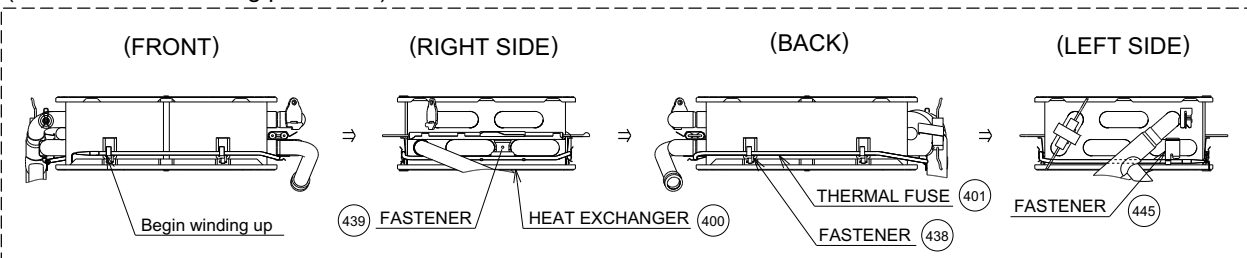

Hot-water feed route N-0751M-DVC(CA)

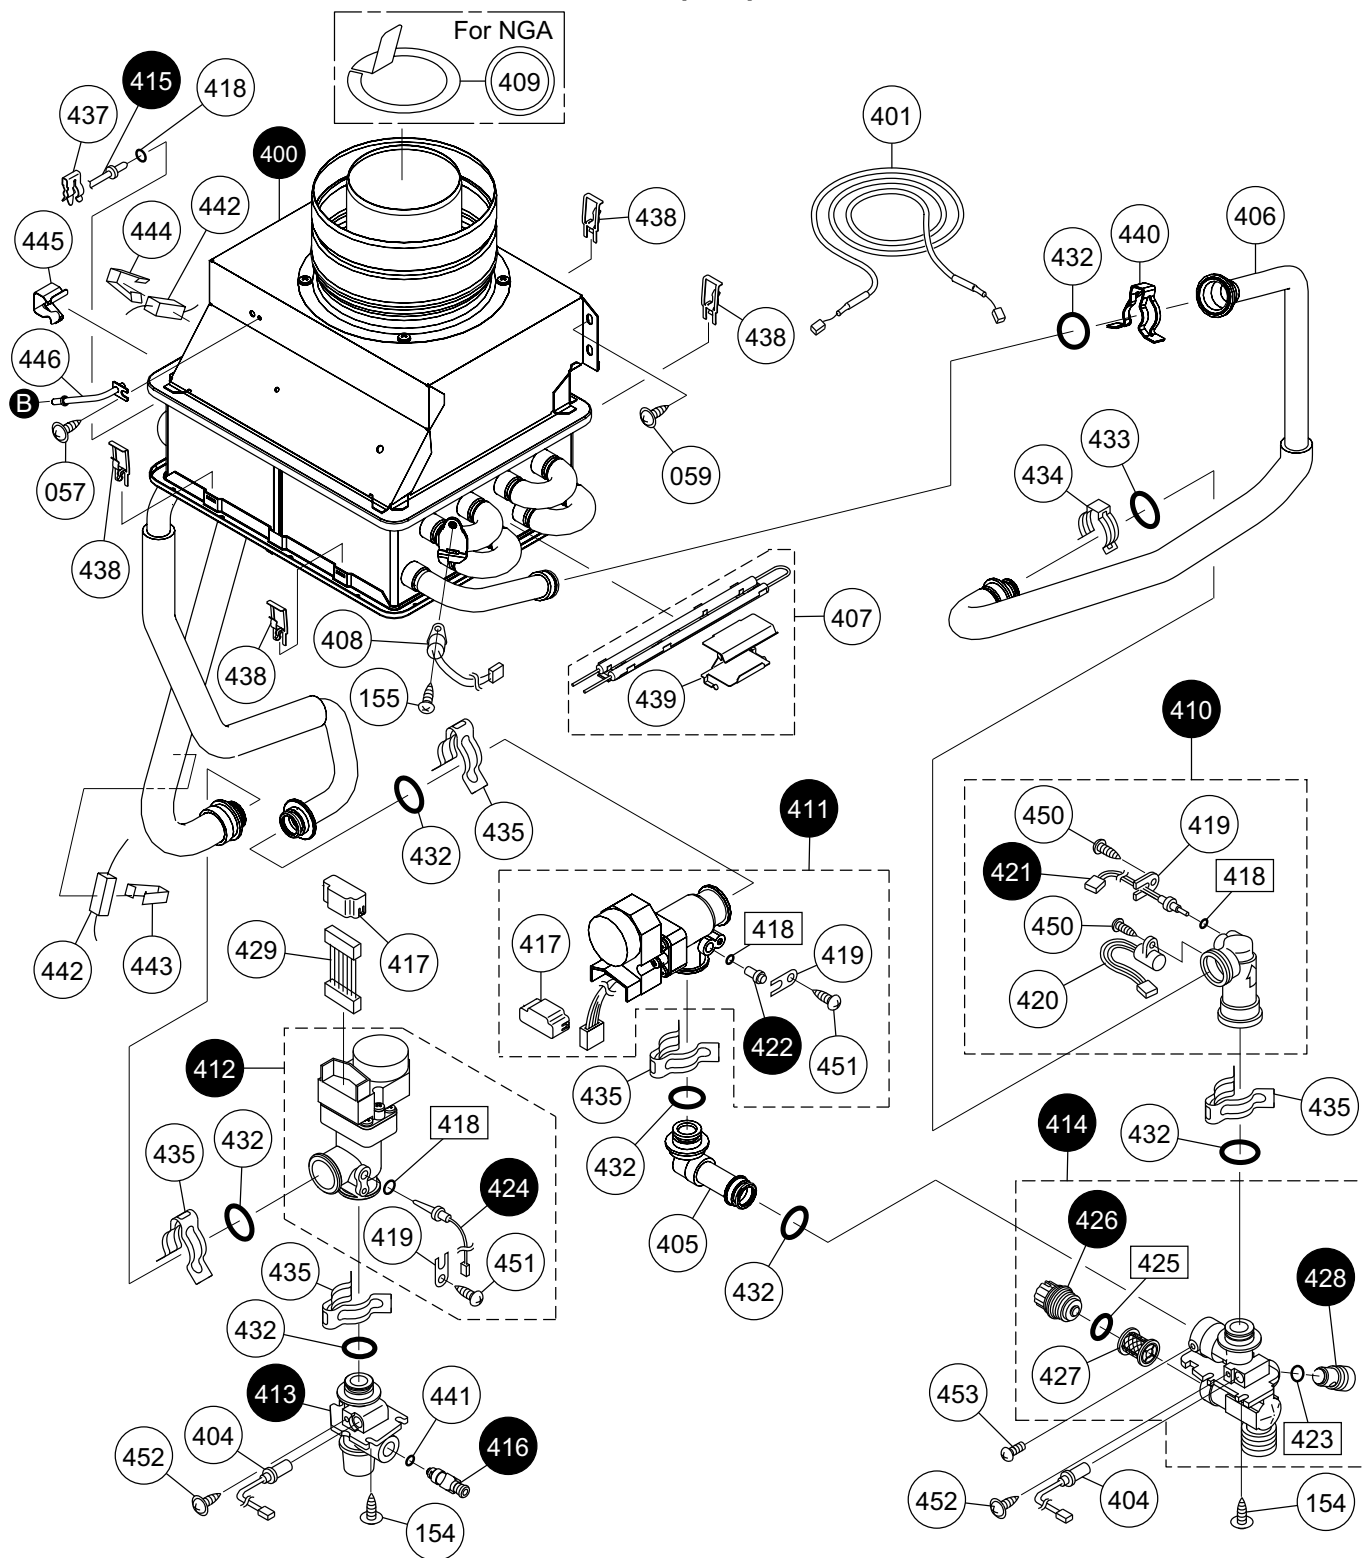

(Thermal fuse rounding procedure)

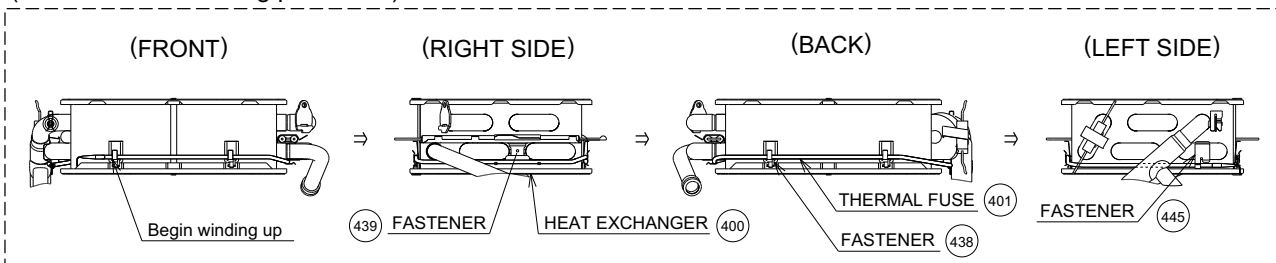


Hot-water feed route N-0751M-OD,0751M-DV,0751M,0751M-DVC(CA)

Part Nos.	Part Names	Order Nos.	Q'ty/unit
400	Heat exchanger & Exhaust box OD ELV SETAS	SKC7450	1<0751M-OD>
	Heat exchanger & Exhaust box DV ELV SETAS	SKC7451	1<0751M-DV>
	Heat exchanger & Exhaust box ELV SET-AS	SKC7452	1<0751M>
	Heat exchanger & Exhaust box FFA ELVSETAS	SKE7370	1<0751M-DVC(-CA)>
401	Thermal fuse ELV SET-V	SKC7453	1
402	Front top packing Q CZR	CZRL001	1<0751M-OD>
404	Freeze preventive heater 3 BGD	BGDH002	2
405	Bypass pipe ELV	ELVD001	1<0751M-OD>
			1<0751M-DV>
			1<0751M>
406	Bypass pipe FFA ELV	ELVD053	1<0751M-DVC(-CA)>
	Water inlet pipe ELV	ELVD010	1<0751M-OD>
			1<0751M-DV>
			1<0751M>
	Water inlet pipe FFA ELV	ELVD051	1<0751M-DVC(-CA)>
407	Freeze preventive heater EBT ELV SETV	SKC7454	1
408	Remaining flame safety device 94 ELV	ELVH002	1
409	Exhaust ring ELV	ELVF060	1<0751M-DVC(-CA) NGA>
410	Water flow sensor set 3 DUV	DUVD019	1
411	Water flow servo set 1 DZT	DZTD010	1
412	Water flow servo set 2 DZT	DZTD011	1
413	Hot-water outlet fitting 20A EHU	EHUD004	1
414	Water inlet fitting 20ASET EJM	EJMD002	1
415	Hot-water thermistor-300 BWC	BWCD096	1
416	Drain cock CRU	CRUD003	1
417	Waterproof cover CZL	CZLD041	2
418	O-ring P4C	1323709	4
419	Thermistor holding plate ALS	ALSD088	3
420	Water outlet magnetic sensor BWC	BWCD090	1
421	Water inlet thermistor-300 BWC	BWCD097	1
422	Shut-off cock AXG	AXGD089	1
423	Hot-water resistant O-ring P9	SAD6635	1
424	Heat exchanger thermistor-300 BWC	BWCD098	1
425	O-ring 16DF BRQ	BRQL008	1
426	Water filter cover DTJ	DTJD006	1
427	Water filter (SUS) EGB	EGBD032	1
428	QMF safety valve A(S)	SAA2811	1
429	Conduit 86 DZT	DZTJ008	1
432	O-ring P16C	3223302	7
433	O-ring P12.5C	3359808	1
434	Quick fastener 12.7	6340202	1
435	Quick fastener 16A	6340300	3<0751M-OD>
			3<0751M-DV>
			3<0751M>
	Quick fastener 16A	6340300	5<0751M-DVC(-CA)>
437	Sensor fastener CRU	CRUD055	1
438	Thermal fuse fastener EGL	EGLH002	4
439	Heater fastener ELV	ELVH018	1
440	Quick fastener 16-25	SAD6593	3<0751M-OD>
			3<0751M-DV>
			3<0751M>
441	Quick fastener 16-25	SAD6593	1<0751M-DVC(-CA)>
	Hot-water resistant O-ring P3	SAD6633	1
442	Freeze preventive heater 2 BGD	BGDH005	1<0751M-OD,0751M>
	Freeze preventive heater 2 BGD	BGDH005	2<0751M-DV>
			2<0751M-DVC(-CA)>
443	Heater fastener 22.2 ELV	ELVL011	1
444	Heater fastener LL CPL	CPLL002	1<0751M-DV>
			1<0751M-DVC(-CA)>
445	Thermal fuse fastener 16 CMN	CMNH003	1
446	Feed back pipe S EHK	EHKA046	1<0751M-DVC(-CA)>
450	Cross recessed round-head P TIGHT screw 4X10		
451	Cross recessed round-head P TIGHT screw 4X10		
452	Cross & straight recessed round-head collar type3 S TIGHT tapping screw 4X8		
453	Cross recessed round-head machine screw M4X8		

Electronic control unit, Remote controller and Attached set N-0751M-OD,0751M-DV,0751M,0751M-DVC(CA)

Electronic control unit

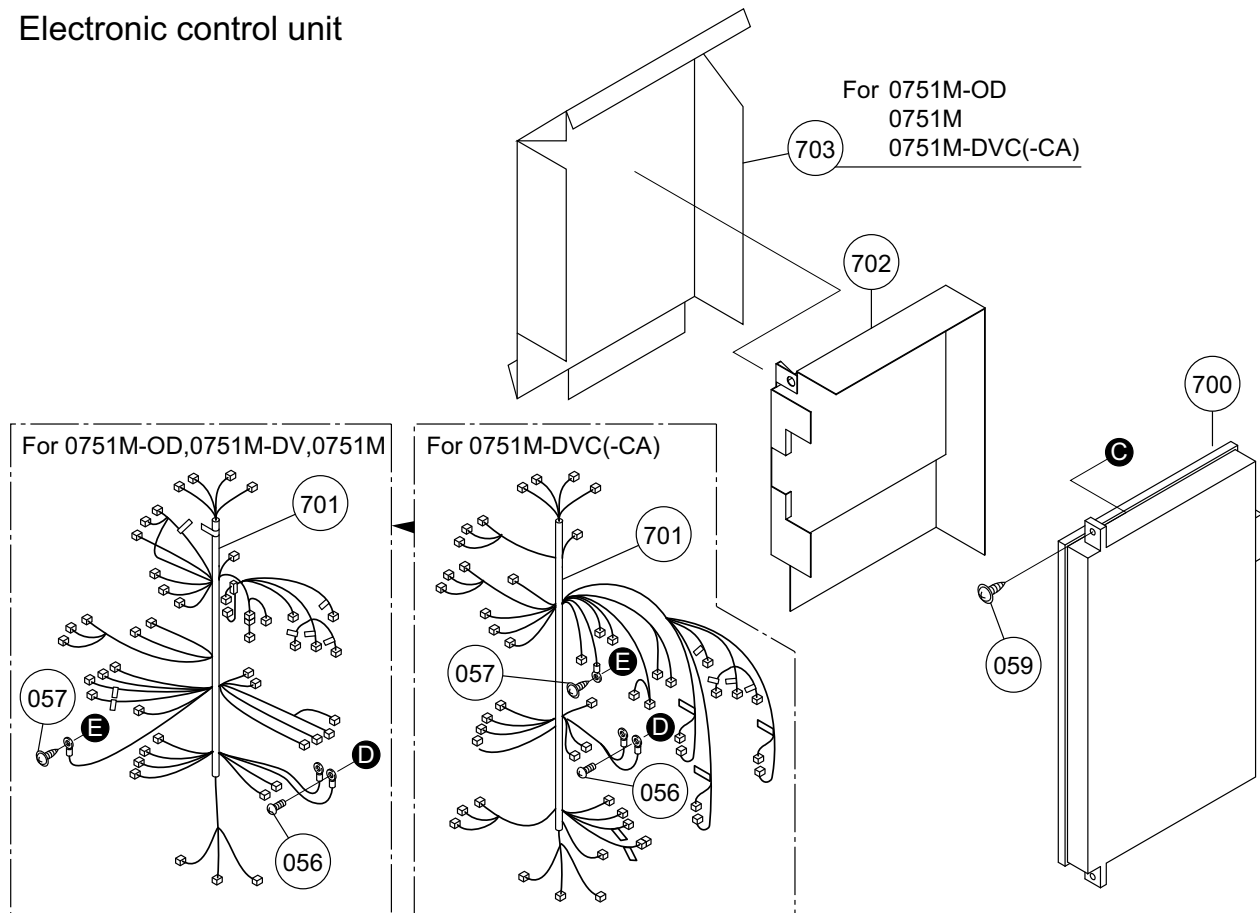


Optional

Remote controller

For 0751M-OD, 0751M-DV, 0751M
RC-7649M-USA

(Temperature: °F Expression
Water Volume: Gallon Expression

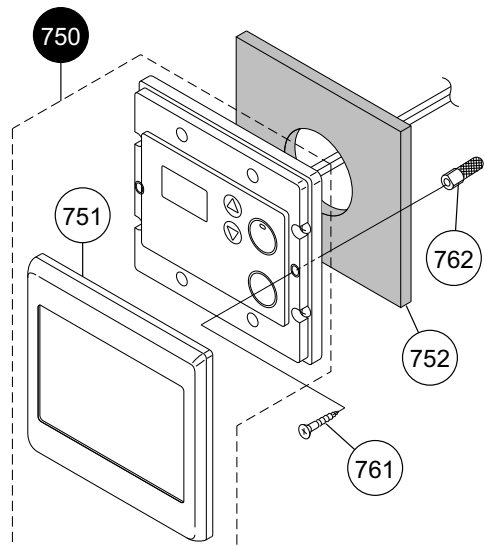


For 0751M-OD, 0751M-DV, 0751M
RC-7650M-ENG (For Canada)


(Temperature: °C Expression
Water Volume: Liter Expression

Attached set


For 0751M-OD, 0751M-DV
0751M

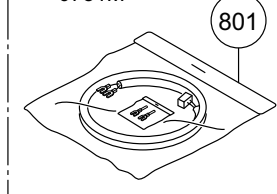

For 0751M-DV, 0751M
0751M-DVC(-CA)

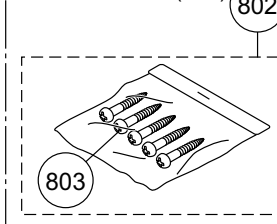

For 0751M-OD

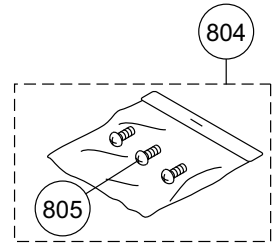

<Special part>

Special part	Special part no.
Owner's guide	888
Installation manual	889

※ To request a French version of the Owner's guide or Installation manual, contact Noritz America.

Electronic control unit, Remote controller and Attached set N-0751M-OD,0751M-DV,0751M,0751M-DVC(CA)

Part Nos.	Part Names	Order Nos.	Q'ty/unit
700	Relay case ELV-C SET-AS	SHA7998	1<0751M-OD> 1<0751M-DV> 1<0751M>
701	Relay case ELW-A SET-AS Harness H ELV	SHA7996 ELVJ002	1<0751M-DVC(-CA)> 1<0751M-OD,0751M>
702	Harness DV ELV Harness FFA ELV	ELVJ012 ELVJ053	1<0751M-DV> 1<0751M-DVC(-CA)>
703	Relay case cover DEK Relay case waterproof cover ELV	DEKA014 ELVA059	1 1<0751M-OD> 1<0751M>
			1<0751M-DVC(-CA)>
750	RC-7649M Body USA QME RC-7650M Body ENG QXU	QMEJ007 QXUJ003	1<0751M-OD> 1<0751M-DV> 1<0751M> 1<0751M-OD canada> 1<0751M-DV canada>
751	M Dressed frame body QME	QMEA003	1<0751M canada> 1<0751M-OD> 1<0751M-DV> 1<0751M>
752	Wall packing QHU	QHUA115	1<0751M-OD>
761	Cross recessed round wood screw 4.1X25		1<0751M-DV> 1<0751M> <0751M-OD> <0751M-DV> <0751M>
762	Oar plug 6X25		<0751M-OD> <0751M-DV> <0751M>
800	N-0751M packing set-V N-0751M-DV packing set-V N-0751M-DVC packing set-V	SKC7455 SKC7340 SKE7371	1<0751M-OD,0751M> 1<0751M-DV> 1<0751M-DVC(-CA)>
801	Remote controller cord S SET EAU	EAUM001	1<0751M-OD> 1<0751M-DV>
802	Screw SET(W)	SAB2753	1<0751M> 1<0751M-DV> 1<0751M> 1<0751M-DVC(-CA)>
803	Cross recessed round-head type 1 tapping screw 5X35		<0751M-DV> <0751M> <0751M-DVC(-CA)>
804	PS3 Screw SET	SAB2286	1<0751M-OD>
805	Cross recessed round-head machine screw M5X12		<0751M-OD>
888	Owner's guide N-0751M-OD Owner's guide N-0751M-DV Owner's guide N-0751M Owner's guide N-0751M-DVC Owner's guide SETN-0751M-DVC	SAR8559 SAR8560 SAR8558 SAR8905 SAV8014	1<0751M-OD> 1<0751M-DV> 1<0751M> 1<0751M-DVC> 1<0751M-DVC-CA>
889	Installation manual N-0751M-OD Installation manual N-0751M-DV Installation manual N-0751M Installation manual N-0751M-DVC Installation manual N-0751MDVC-CA E	SAR8562 SAR8563 SAR8561 SAR8906 SAV8017	1<0751M-OD> 1<0751M-DV> 1<0751M> 1<0751M-DVC> 1<0751M-DVC-CA>
	Installation manual N-0751MDVC-CA F	SAV8018	1<0751M-DVC-CA canada>