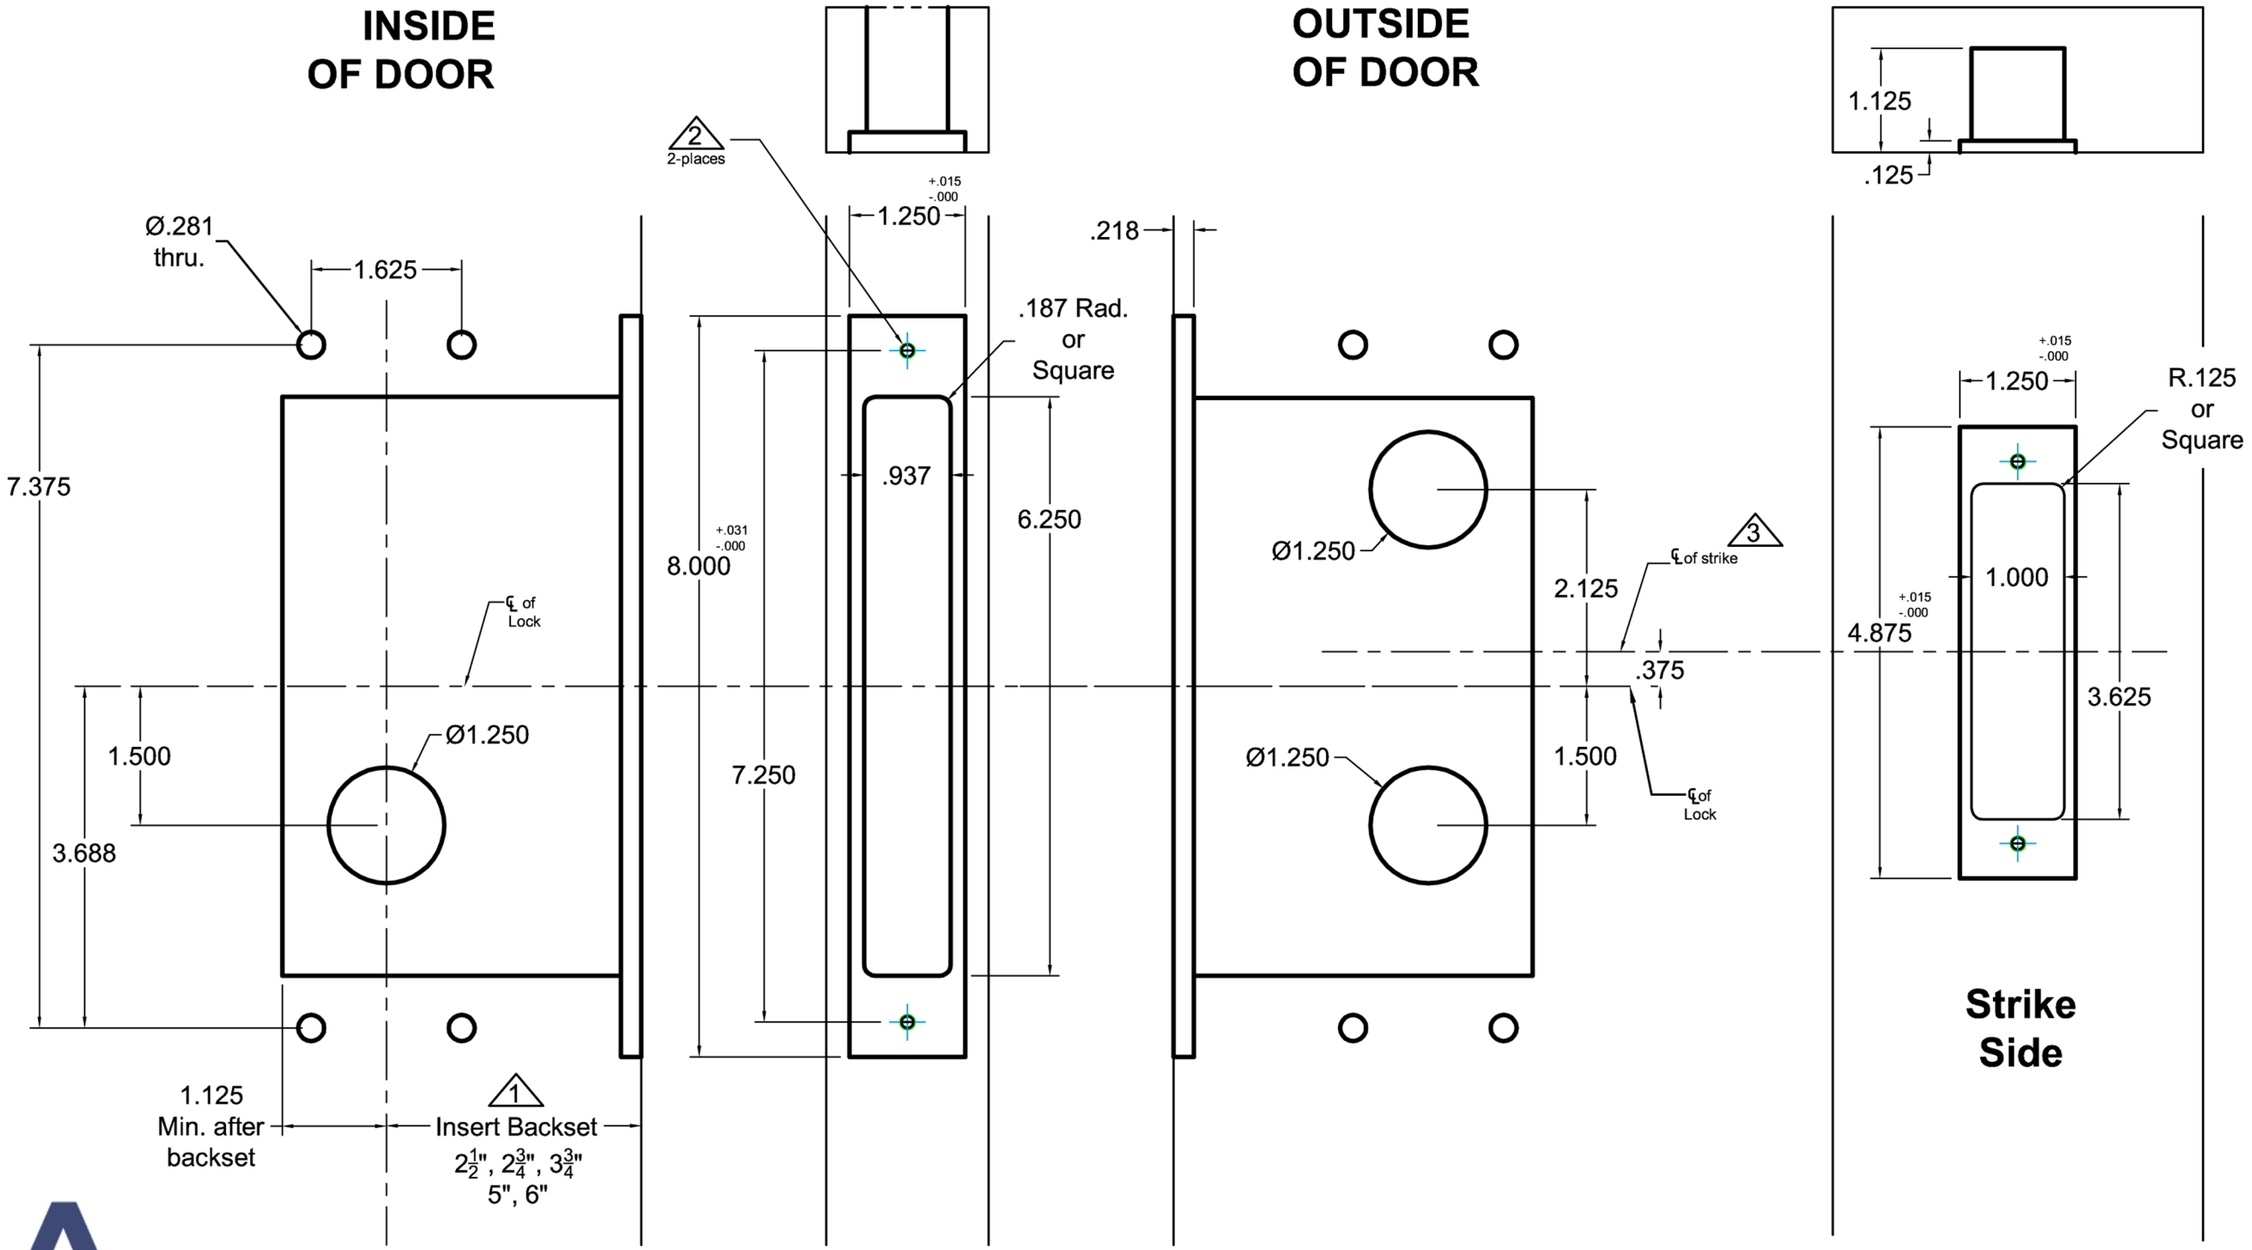

ACCURATE
LOCK & HARDWARE
AMERICAN CRAFTED SINCE 1972

Notes:

1. Insert backset here 2½", 2¾", 3¾", 5", or 6"
2. Prep for #12 wood or 12-24 machine screws
3. Centerline of strike is ⅜" above centerline of lock

Additional Notes:

- a) **Responsibility**: Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See catalog / spec sheets #SL9159ADA for additional lock details

Standard SL9159ADA
All Backsets

T-ALH.SL9159ADA